
DVD PLAYER WITH DELUXE SOUND



The DVD player is a selectable function of the multi-featured audio system. The player unit contains DVD/CD/MP3/AM-FM stereo radio. It also accepts portable audio player inputs and functions as an alarm clock.

The player is connected directly to the TV and can output sound to either the stereo speakers in the TV or to the Deluxe Sound speakers in the lounge area of the coach.

Refer to the manufacturer's user guide provided in your InfoCase for complete feature descriptions and operating instructions.

Provide 12V Power

The TV and DVD player operate on 12-volt DC current.

- Turn ON the Master 12V Power switch (located on underside of cabinet near TV).

NOTE: When the TV is not in use, the Master 12V Power switch should be turned OFF to eliminate drain on the 12-volt house battery.



Master 12V Power Switch
(Located on underside of cabinet near TV)

Connect Deluxe Sound Speakers

- Press the TV/Radio Speaker Selector switch (located near the DVD player) to the TV position to connect speakers to TV and DVD player.



TV/Radio Speaker Selector Switch
(Located near DVD player)

Set TV Video Input

- Turn TV and DVD player ON.
- Press the MODE button on the TV or the SOURCE button on the DVD player remote and select "INPUT 1".

- The TV screen will display the DVD player logo when the correct input is selected.



Play DVD

- Insert DVD face up into slot on lower face of the player.
- The DVD will begin to load automatically. The TV screen will typically display READING or LOADING.

- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the NEXT button on the DVD player remote until you see the main menu screen.



- When the main menu screen appears, press the ENTER button on the DVD player remote or PLAY/PAUSE



- button on DVD player to begin playing the main feature. Use the arrow buttons on the DVD remote to select another feature to play.
- Volume is adjusted with the DVD remote.

Further Information

See the manufacturer's quick reference guide provided in your InfoCase for complete feature descriptions and operating instructions.

Audio-Video System Basic Operation Guide

The logo for ERA, featuring the letters 'ERA' in a bold, italicized, metallic font with a 3D effect and a shadow.

NOTE: See your InfoCase for specific operating guides for audio and video components.



Part No. 161501-12-001
Rev. 1203120206
Copyright 2011 Winnebago Industries, Inc.
All rights reserved.