
DVD PLAYER WITH DELUXE SOUND



The DVD player is a selectable function of the multi-featured audio system. The player unit contains DVD/CD/MP3/AM-FM stereo radio. It also accepts portable audio player inputs and functions as an alarm clock.

The player is connected directly to the TV and can output sound to either the stereo speakers in the TV or to the Deluxe Sound speakers in the lounge area of the coach.

Refer to the manufacturer's user guide provided in your InfoCase for complete feature descriptions and operating instructions.

Connect Deluxe Sound Speakers

- Press the TV/Radio Speaker Selector switch (located near the DVD player) to the TV position to connect speakers to TV and DVD player.



TV/Radio Speaker Selector Switch (Located near DVD player)

Set TV Video Input

- Turn TV and DVD player ON.
- Press the MODE button on the TV or the SOURCE button on the DVD player remote and select "INPUT 1".
- The TV screen will display the DVD player logo when the correct input is selected.



Play DVD

- Insert DVD face up into slot on lower face of the player.
- The DVD will begin to load automatically. The TV screen will typically display READING or LOADING.

- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the NEXT button on the DVD player remote until you see the main menu screen.



- When the main menu screen appears, press the ENTER button on the DVD player remote or PLAY/PAUSE button on DVD player to begin playing the main feature. Use the arrow buttons on the DVD remote to select another feature to play.
- Volume is adjusted with the DVD remote.



TV Sound through Deluxe Sound Speakers -If Equipped

When watching TV programs alone, the TV normally plays sound through its own built-in stereo speakers. If you wish to connect TV stereo sound output to the Deluxe Sound speakers for a richer sound quality, follow these steps:

1. Press the TV/Radio Speaker Selector switch (located near the DVD player) to the TV position to connect speakers to the DVD player.

Continued—

2. Turn the TV ON.
3. Press the AUX button (located just below the display on the face of the DVD player.) This will route the TV stereo sound output through the DVD player and out to the Deluxe Sound speakers.
4. Select TV channels and adjust volume using the TV remote.

Further Information

See the manufacturer's quick reference guide provided in your InfoCase for complete feature descriptions and operating instructions.

Audio-Video System Basic Operation Guide

The logo for Era, featuring the word "Era" in a stylized, italicized, sans-serif font with a metallic or 3D effect.

NOTE: See your InfoCase for specific operating guides for audio and video components.

