SOUND BAR AND CD/ DVD PLAYER

The Sound Bar and CD/DVD player operates from 120-volt AC household current only, so you must have either the shoreline connected, the generator running, or the inverter turned on (if equipped). The TV is connected to the Sound Bar and CD/ DVD player.

To Watch a DVD

- Turn ON the TV, Sound Bar, and DVD player.
- Set TV Input to HDMI3 by using the TV Remote or the Controls on the TV.
- Insert DVD into player. DVD will begin to load automatically. DVD player screen will typically show "LOADING".
- The DVD may load directly to the main title/ menu screen or it may begin to play previews.



You may be able to skip previews if desired by pressing the chapter "advance" button until you see the main menu screen.

• When the main menu screen appears, use the arrow buttons on the DVD player remote to select the desired entry or press the "+" or PLAY buttons on the DVD player remote (or "Play" button on DVD player) to begin playing the feature. • On the DVD player, press the PLAY button.

600



• On the DVD player Remote, press the "+" or PLAY button.

• Volume is adjusted with the DVD player remote or TV remote.

TV Sound through the Sound Bar

When watching TV programs (broadcast, cable, or satellite), the TV normally plays sound through its own builtin stereo speakers. To connect TV sound output to sound bar speakers for a richer sound quality, follow these steps:

- Turn the TV and Sound Bar ON.
- Select the TV channel you wish to watch.
- Set Sound Bar Source to "RCA 3" by using the front panel of the Sound Bar or the Sound Bar Remote until audio is heard.

• On the Sound Bar Remote, press the source button.



• On the Sound Bar, press the source button.



• Turn TV and/or Sound Bar volume up or down.

Turning TV Speakers On/Off

- Press MENU button on the TV remote.
- Select AUDIO option.
- Toggle to TV Speakers to turn speakers on or off.

Further Information

See the manufacturer's user guide provided in your InfoCase for complete feature descriptions and operating instructions.

Audio-Video System Basic Operation Guide



Solei

NOTE: See your InfoCase for specific operating guides for audio and video components.



Part No. 161501-16-016 Rev. 1601151105 Copyright 2015 Winnebago Industries, Inc. All rights reserved.