# DVD PLAYER WITH DELUXE SOUND

#### -If Equipped



The DVD player is a selectable function of the multi-featured audio system. The player unit contains many features including: DVD/CD/MP3 player, AM/FM tuner, USB, and Bluetooth. It also functions as an alarm clock.

This stereo receives Bluetooth streaming audio from Bluetooth enabled audio sources such as a cellphone.

The player is connected directly to the TV and can output sound to either the stereo speakers in the TV or to the Deluxe Sound speakers in the lounge area of the motorhome.

Refer to the manufacturer's user guide provided in your InfoCase for complete feature descriptions and operating instructions.

#### Set TV Video Input

- Turn TV and DVD player ON.
- Press the SOURCE button on the TV or DVD player remote and select "HDMI".
- The TV screen will display the DVD player logo when the



correct input is selected.

### Play DVD

- Insert DVD face up into disc slot.
- The DVD will begin to load automatically. The TV screen will typically display READING or LOADING.
- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the NEXT button on the DVD player remote until you see the main menu screen.
- When the main menu screen appears, press the ENTER button on the DVD player

remote or PLAY/PAUSE button on DVD player to begin playing the main feature. Use the arrow buttons on the DVD remote to select another feature to play.

• Volume is adjusted with the DVD remote.

#### TV Sound through Deluxe Sound Speakers –If Equipped

When watching TV programs alone, the TV normally plays sound through its own built-in stereo speakers. If you wish to connect TV stereo sound output to the Deluxe Sound speakers for a richer sound quality, follow these steps:

1. Turn the TV ON.

2. Press the AUX button and select "HDMI ARC".

This will route the TV stereo sound output through the DVD player and out to the Deluxe Sound speakers.

3. Select TV channels and adjust volume using the TV remote.

### **Further Information**

See the manufacturer's quick reference guide provided in your InfoCase for complete feature descriptions and operating instructions.

## Audio-Video System Basic Operation Guide



NOTE: See your InfoCase for specific operating guides for audio and video components.



Part No. 161501-19-002 Rev. 1901180102 Copyright 2018 Winnebago Industries, Inc. All rights reserved.