 

DVD PLAYER

–If Equipped



The player is connected directly to the TV with a composite video cable (red, yellow, white) or HDMI cable.

Set TV Video Input

- Turn TV and DVD player ON.
- Press the SOURCE button on the TV or the remote to select “VIDEO” input.
- The TV screen will display the DVD player logo when the correct input is selected.



Play DVD

- Press “OPEN/CLOSE” on DVD player to open tray.
- Insert a DVD “face up” on to tray and press “OPEN/CLOSE” to close tray.
- The DVD will begin to load automatically. The TV screen will typically display “Reading” or “Loading”.
- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the chapter “advance” button on the DVD remote until you see the main menu screen.
- When the main menu screen appears, use the arrow buttons on the DVD player remote to select the desired entry or press the “+” or PLAY buttons on the



DVD player remote (or “Play” button on DVD player) to begin playing the feature.

- Volume is adjusted with the DVD remote or TV remote.

Further Information

See the manufacturer’s quick reference guide provided in your InfoCase for complete feature descriptions and operating instructions.

Audio-Video System Basic Operation Guide

Minnie Winnie

Spirit

*NOTE: See your InfoCase for specific
operating guides for audio and
video components.*



Part No. 161501-20-002
Rev. 2001181217
Copyright 2018 Winnebago Industries, Inc.
All rights reserved.