






DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

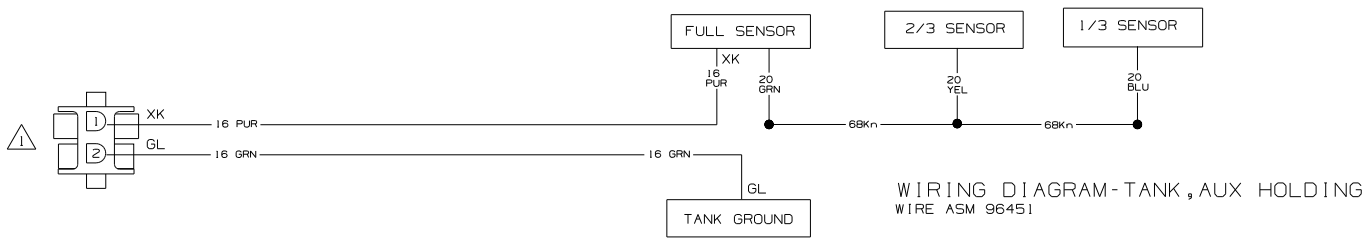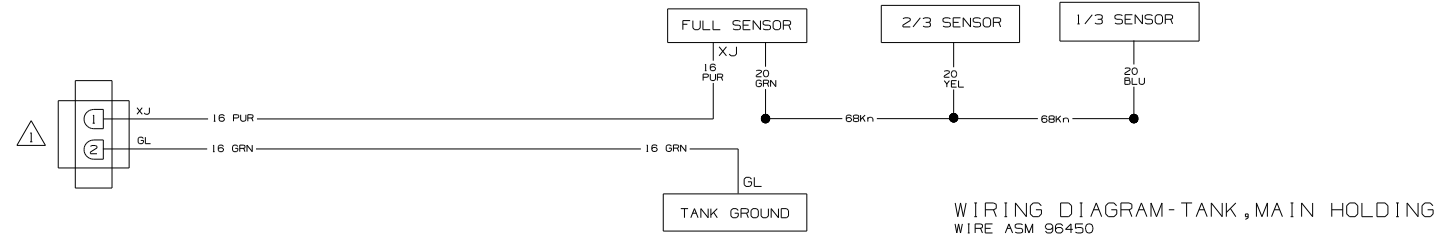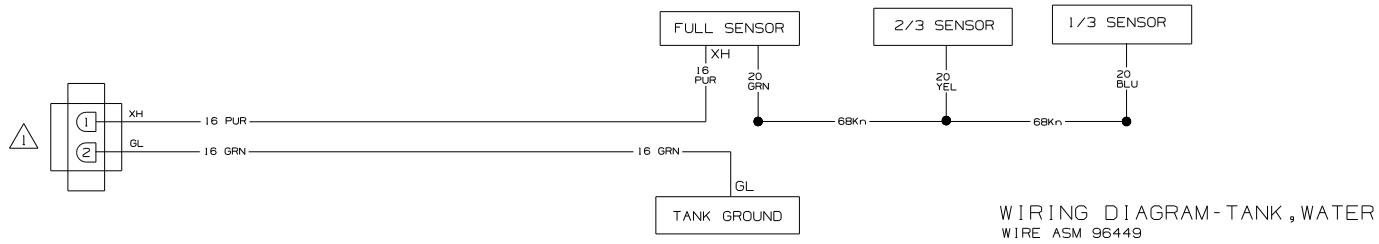

SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.
NOTES:

WINNEBAGO

QTR	ORIG. DATE
CHR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	FIRST USED
W.E.	03 SERIES
QDR	

UNSPECIFIED TOLERANCES ARE:

HOLES (Ø)	+	MATERIAL
ONE-PLACE (X.X)	+	
TWO-PLACE (X.XX)	+	
ANGLE	+	

THIRD ANGLE PROJECTION

DO NOT SCALE DRAWING

TITLE:
WIRING DIAGRAM-HOLDING TANKS

SHEET | OF | 1 | PART NO | 110664

REF: | 1