



**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.






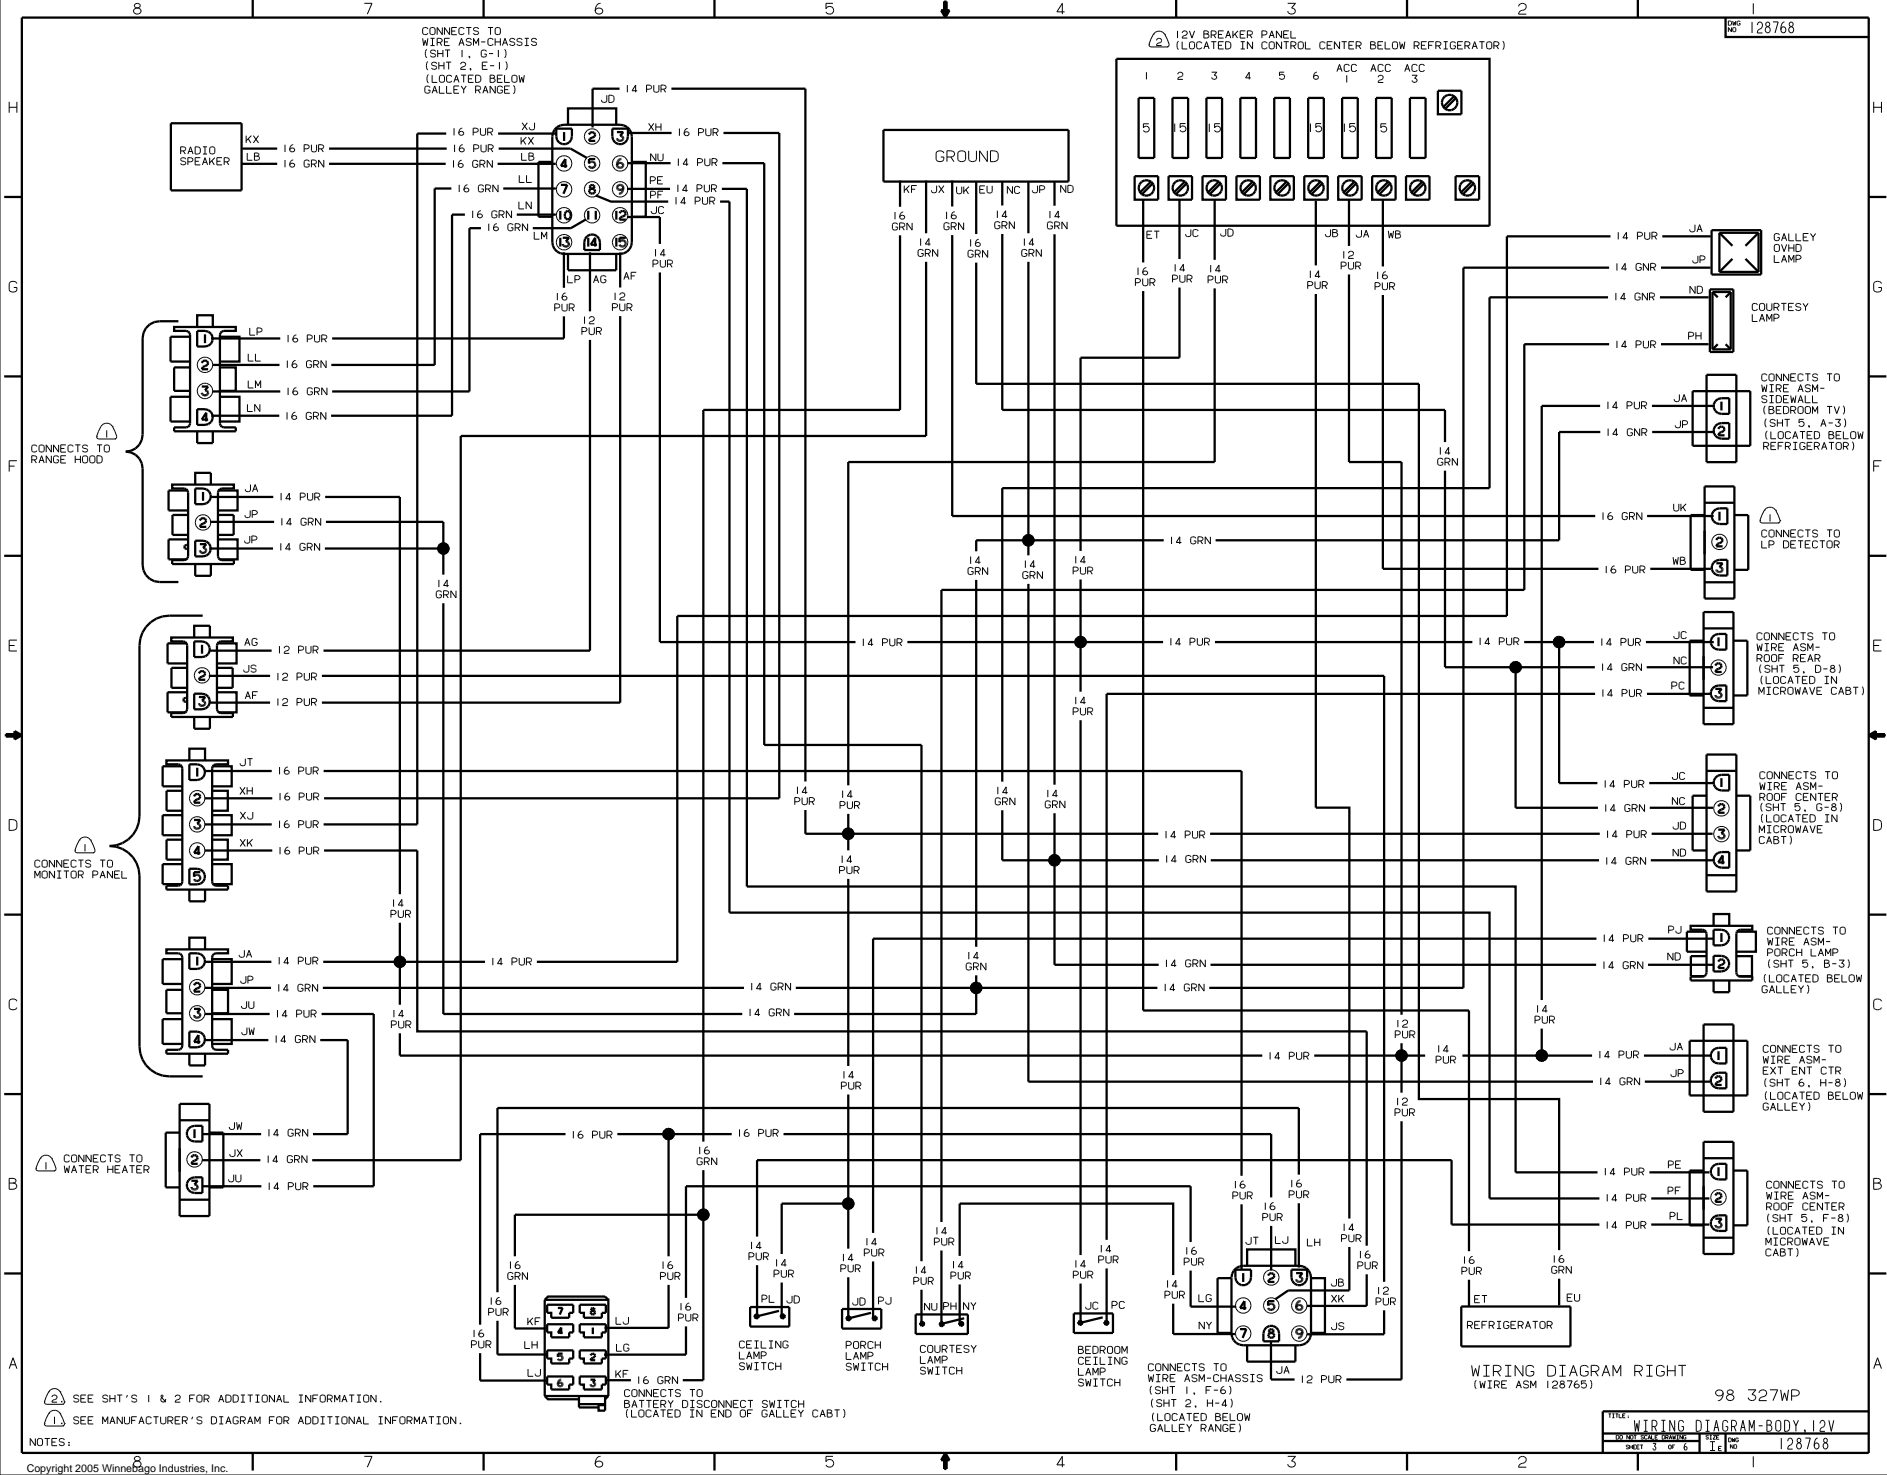


CONNECTS TO WIRE ASM-OVHD (SHT 5, B-8) (SHT 6, D-8) (LOCATED IN LEFT FRONT OVHD)

 
THREMOSTAT




CONNECTS TO FURNACE

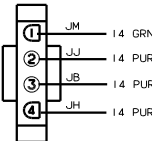

CONNECTS TO WIRE ASM-AUX HOLDING TANK

 


CONNECTS TO WIRE ASM-MAIN HOLDING TANK

 



BATH CEILING LAMP SWITCH



 SHOWER LAMP SWITCH




WATER PUMP

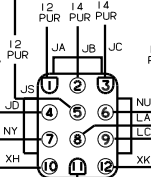 


CONNECTS TO WIRE ASM-CHASSIS (SHT 1, H-3) (SHT 2, H-2) (LOCATED BELOW BATH VANITY)

 
GROUND BAR



 CONNECTS TO WIRE ASM-CHASSIS (SHT 1, H-3) (SHT 2, H-2) (LOCATED BELOW BATH VANITY)



 CONNECTS TO WIRE ASM-EXTERIOR WATER PUMP SWITCH



CONNECTS TO WIRE ASM-WATER TANK

WIRING DIAGRAM-LEFT (WIRE ASM 128422)

98 327WP

SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

TITLE		WIRING DIAGRAM-BODY_12V	
NO. OF SHEETS	DATE	REV.	NO.
4		1	128768
SHEET		4 OF 6	



