



DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

RELEASE	REV A	DATE	DFTR	ADM	DWG NO 121879
REV ZONE	REVISION RECORD			DATE	DR CR

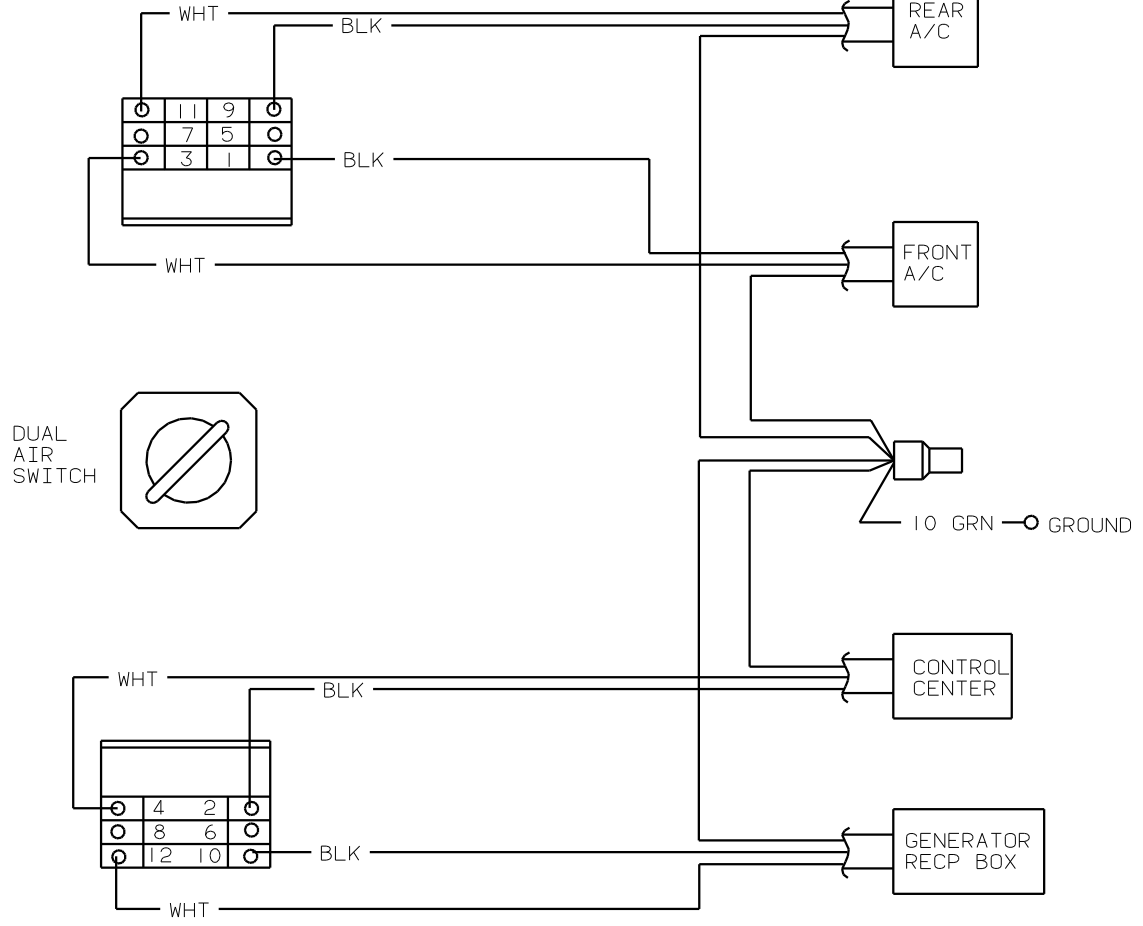

WINNEBAGO.		96 MOTORHOMES	
DFTR	DATE	UNSPECIFIED TOLERANCES ARE	MATERIAL
CHKR	DATE	WHOLE DIM (X) ±	
P E	DATE	ONE-PLACE (X.X) ±	
M E	DATE	TWO-PLACE (X.XX) ±	
DSNR	DATE	ANGLE ±	
		THIRD ANGLE PROJECTION	
LAYOUT NO	TITLE		
DO NOT SCALE DRAWING		WIRING DIAGRAM-DUAL AIR SW	
DIA Ø	SCALE NONE	SIZE I c	DWG NO 121879
ALL DIMENSIONS ARE IN MILLIMETERS		SHEET 1	OF 1

1. SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.

NOTES: