



**DANGER**


**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.



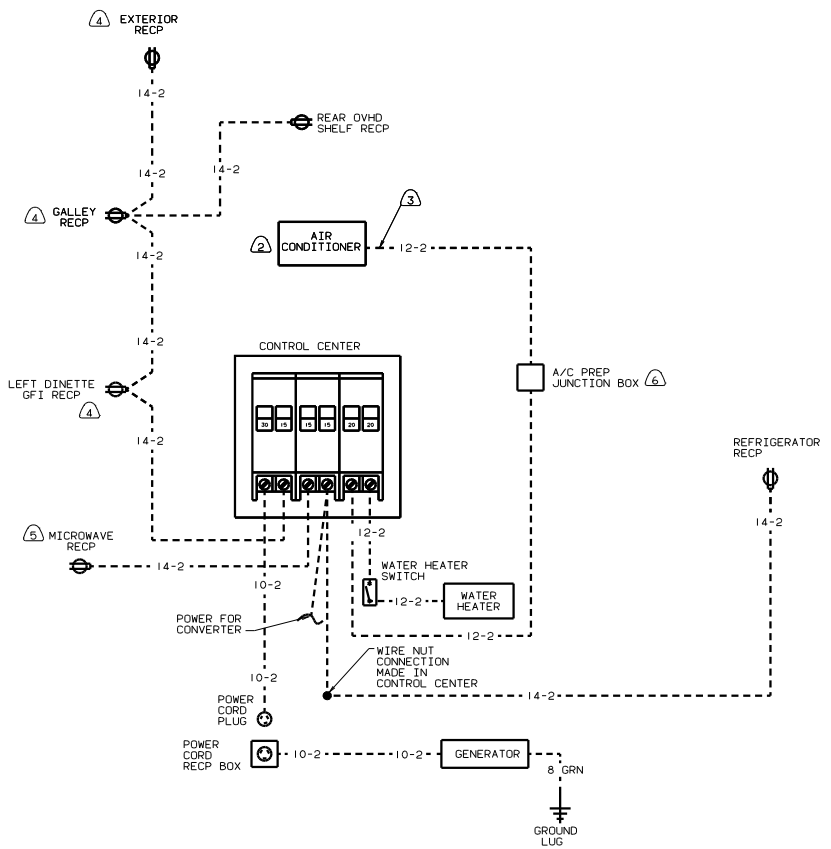

- ⑥ NOT USED WITH FACTORY AIR CONDITIONER.
- ⑤ WIRE ROUTED THRU SIDEWALL.
- ④ PROTECTED BY GFI RECP.
- ③ WIRE ROUTED THRU ROOF.
- ② WITH AIR CONDITIONER.
- ① ALL CIRCUITS PROTECTED BY GFI MAIN BREAKER.

NOTES:

(JAPANESE 110V WIRING)

TITLE: WIRING DIAGRAM-BODY	
DO NOT SCALE DRAWING	REV. NO.
SHEET 2 OF 2	16
	126967