




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

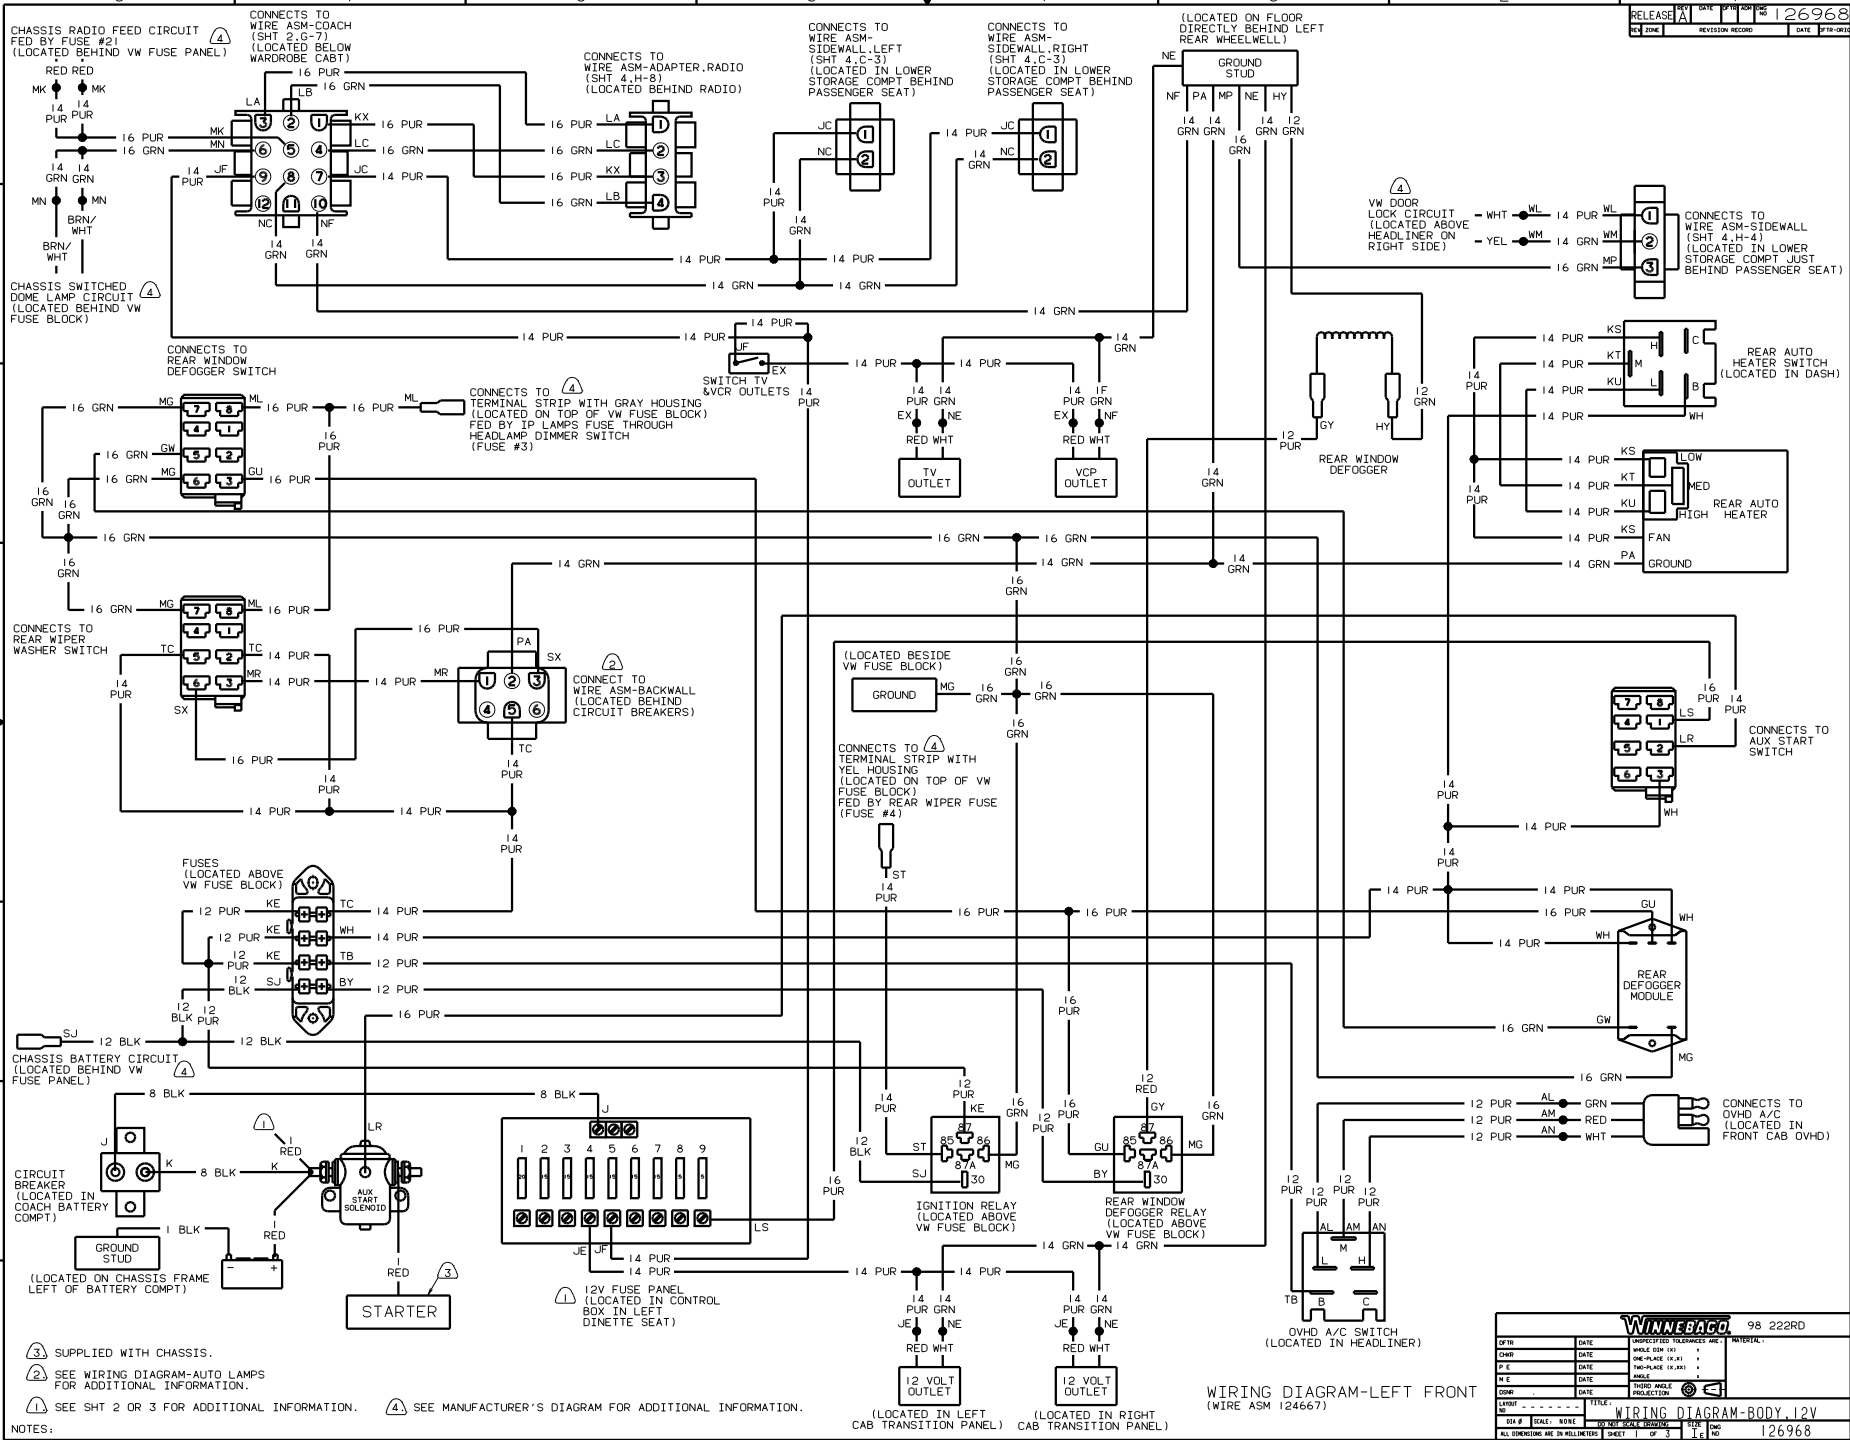


- (3) SUPPLIED WITH CHASSIS.
- (2) SEE WIRING DIAGRAM-AUTO LAMPS FOR ADDITIONAL INFORMATION.
- (1) SEE SHT 2 OR 3 FOR ADDITIONAL INFORMATION.
- (4) SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

WIRING DIAGRAM-LEFT FRONT
(WIRE ASM 124667)

WINNEBAGO		98 222RD
DATE	UNDESIGNATED TOLERANCES ARE:	MATERIAL
DATE	WHOLE OR 1/2	
DATE	ONE-PLACE OR .01	
DATE	TWO-PLACE OR .001	
DATE	THREE-PLACE OR .0001	
DATE	FOUR-PLACE OR .00001	
DATE	FIVE-PLACE OR .000001	
DATE	SIX-PLACE OR .0000001	
DATE	SEVEN-PLACE OR .00000001	
DATE	EIGHT-PLACE OR .000000001	
DATE	NINE-PLACE OR .0000000001	
DATE	TEN-PLACE OR .00000000001	
DATE	ELEVEN-PLACE OR .000000000001	
DATE	TWELVE-PLACE OR .0000000000001	
DATE	THIRTEEN-PLACE OR .00000000000001	
DATE	FOURTEEN-PLACE OR .000000000000001	
DATE	FIFTEEN-PLACE OR .0000000000000001	
DATE	SIXTEEN-PLACE OR .00000000000000001	
DATE	SEVENTEEN-PLACE OR .000000000000000001	
DATE	EIGHTEEN-PLACE OR .0000000000000000001	
DATE	NINETEEN-PLACE OR .00000000000000000001	
DATE	TWENTY-PLACE OR .000000000000000000001	

WIRING DIAGRAM-BODY 12V
SHEET 1 OF 3
DATE: 8/18/03
REV: 1
126968

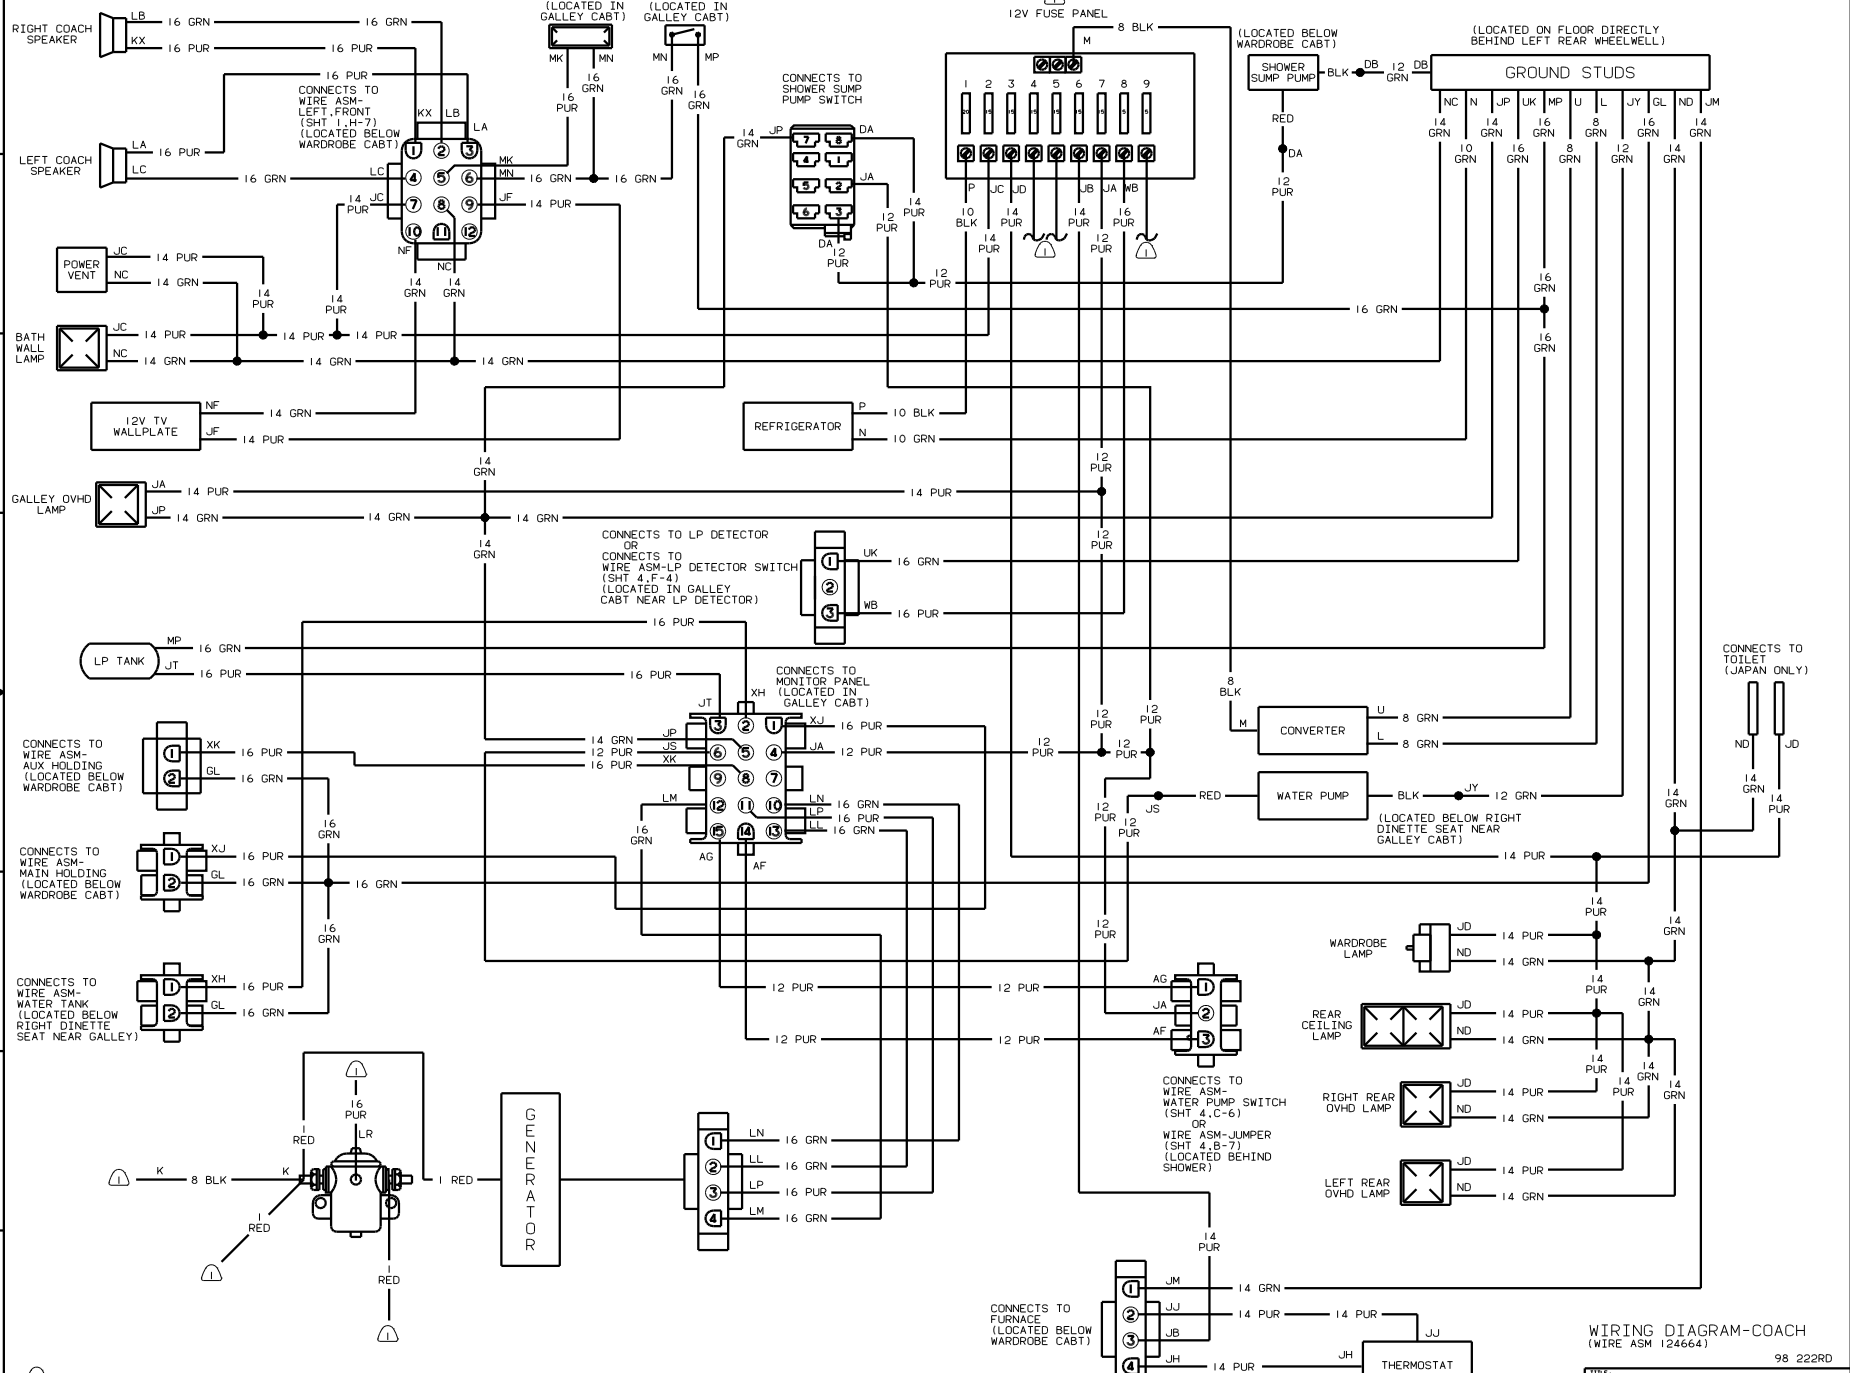


NOTES: SEE SHIT 1 FOR ADDITIONAL INFORMATION.

WIRING DIAGRAM-COACH (WIRE ASM 124664)


98 222RD

TITLE: WIRING DIAGRAM-BODY


30 NO SCALE DRAWING SHEET 2 OF 3 1.6 126968

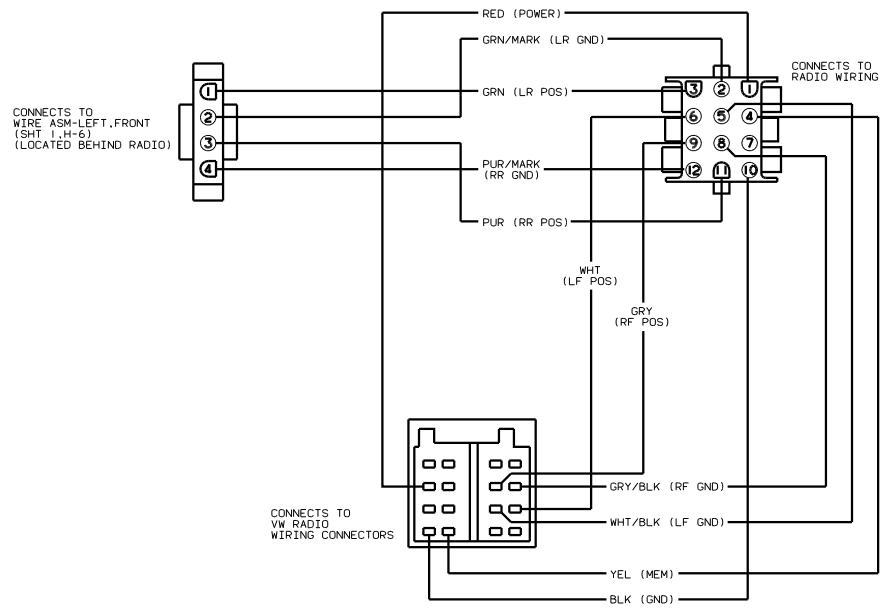


WIRING DIAGRAM-ADAPTER,RADIO
(WIRE ASM 114365)

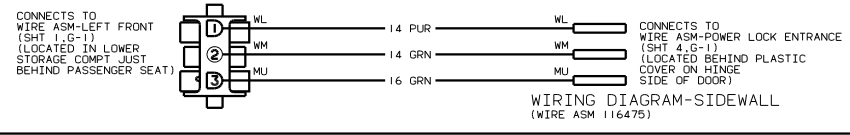


WIRING DIAGRAM-SIDEWALL
(WIRE ASM 116475)

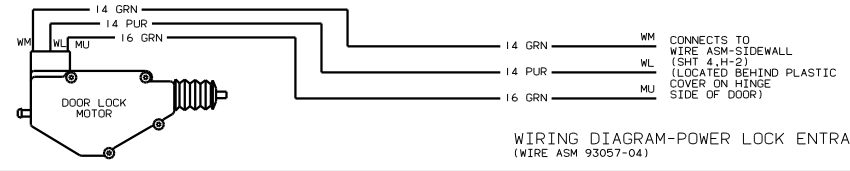


WIRING DIAGRAM-POWER LOCK ENTRANCE
(WIRE ASM 93057-04)

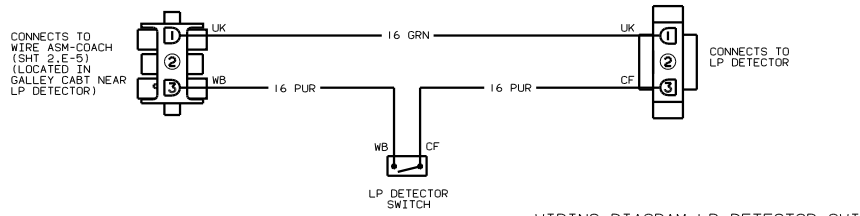

WIRING DIAGRAM-LP DETECTOR SWITCH
(JAPANESE UNITS ONLY)
(WIRE ASM 115733)

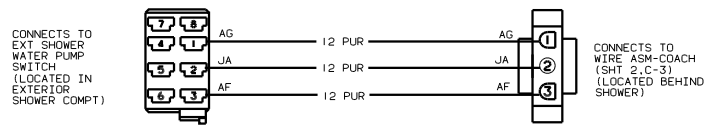

 
WIRING DIAGRAM WATER PUMP, SWITCH
(WIRE ASM 103494-04)
(WITH EXTERIOR SHOWER)




WIRING DIAGRAM-FURNACE GAS LIGHT
(JAPANESE UNITS ONLY)
(WIRE ASM 107574)



WIRING DIAGRAM-SIDEWALL
(WIRE ASM 114745)

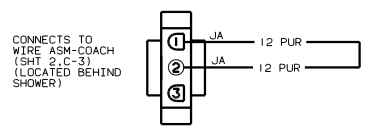

WIRING DIAGRAM-JUMPER
(WIRE ASM 103493)
(WITHOUT EXTERIOR SHOWER)

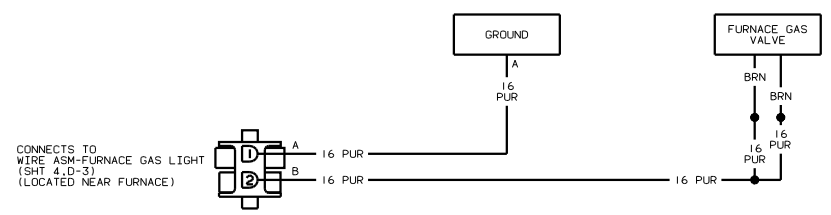

WIRING DIAGRAM-FURNACE GAS VALVE
(JAPANESE UNITS ONLY)
(WIRE ASM 107573)