




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

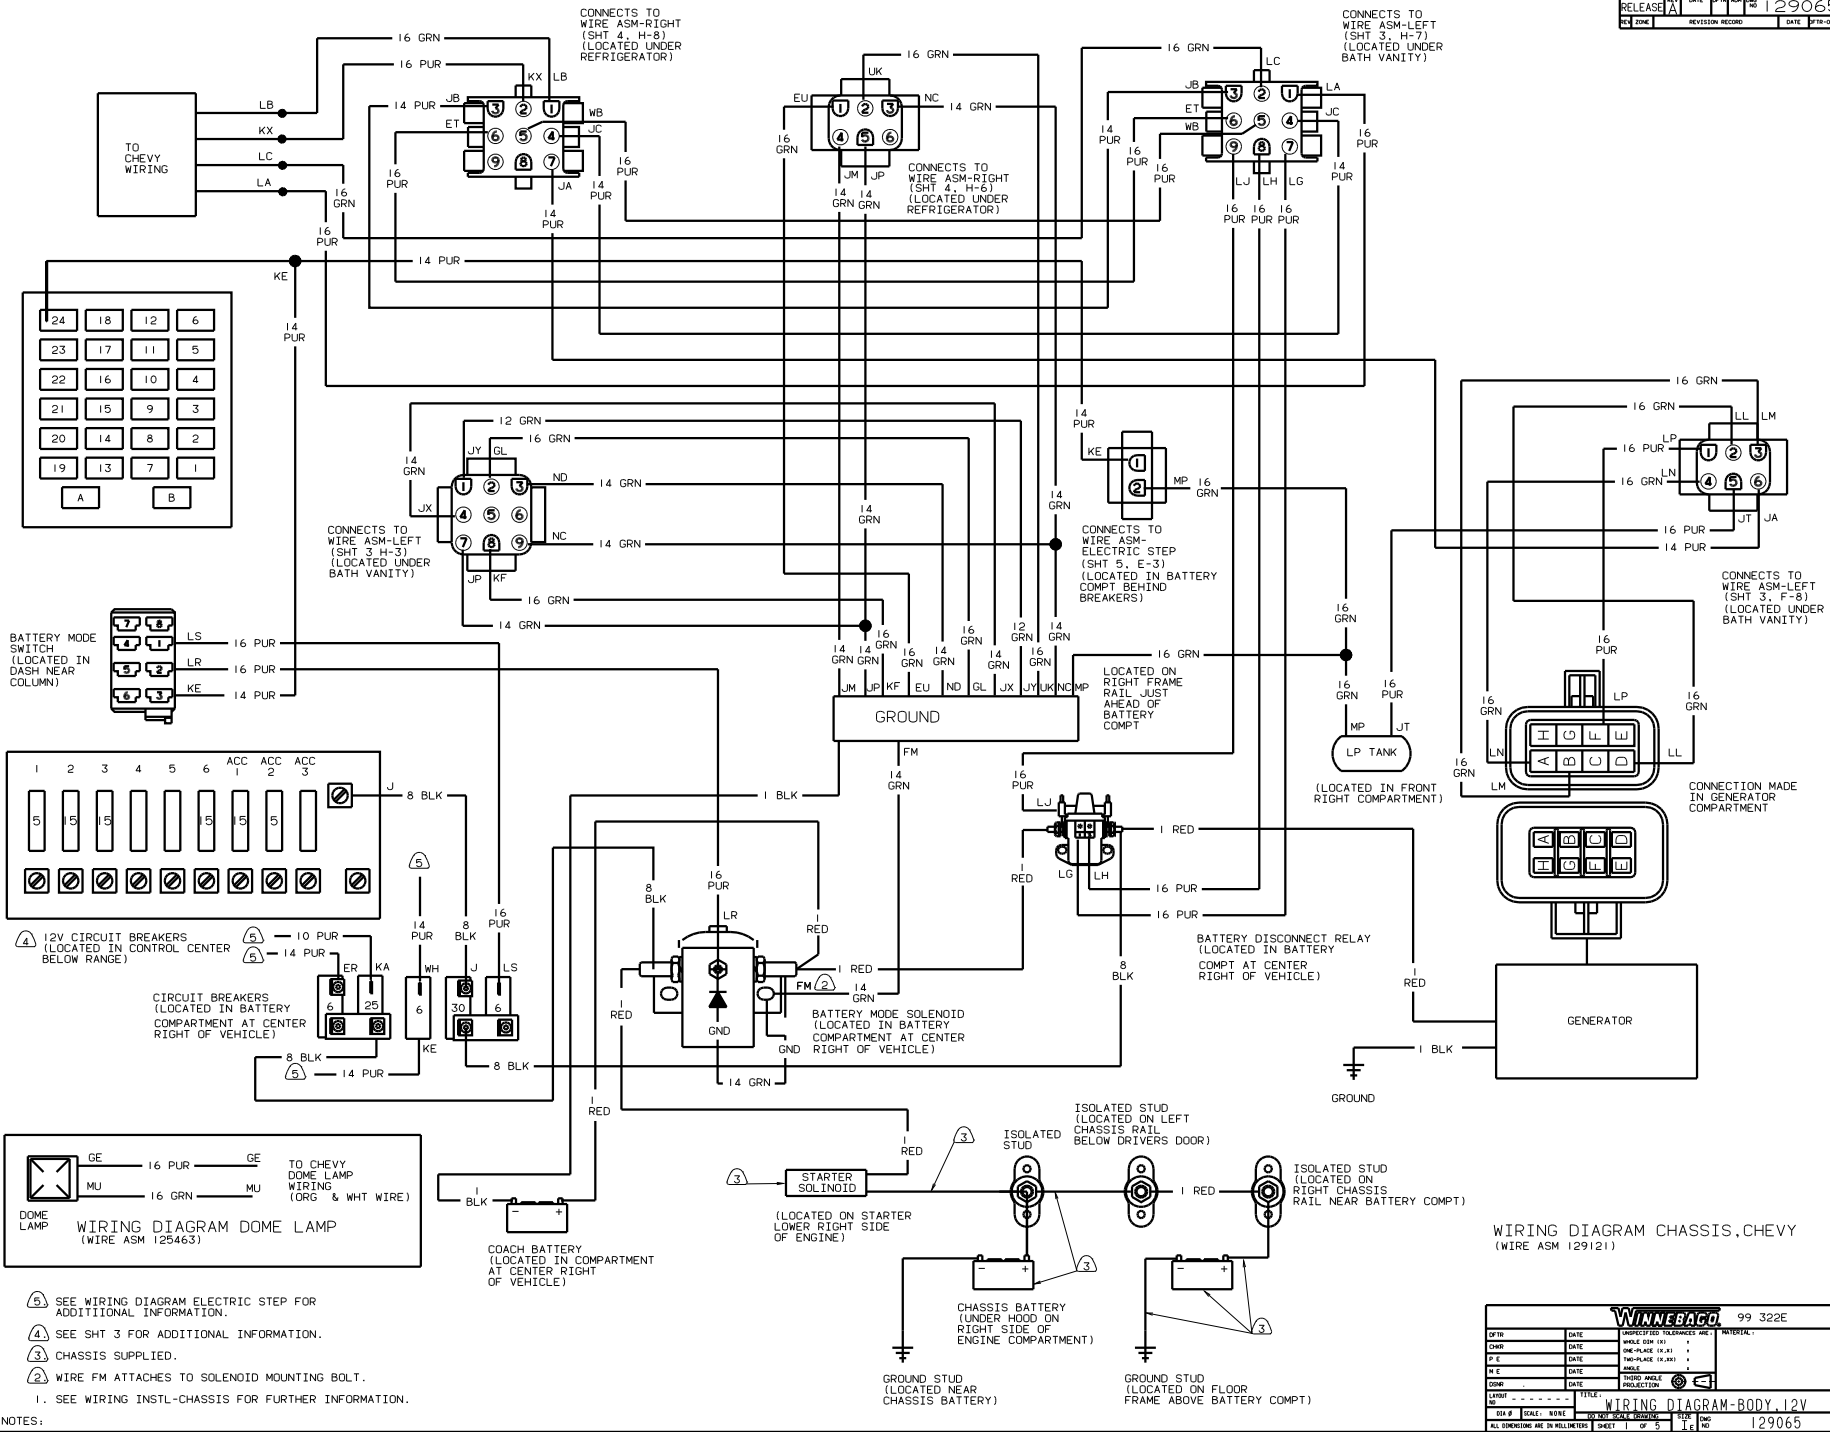

- ③ SEE WIRING DIAGRAM ELECTRIC STEP FOR ADDITIONAL INFORMATION.
- ④ SEE SHT 3 FOR ADDITIONAL INFORMATION.
- ③ CHASSIS SUPPLIED.
- ② WIRE FM ATTACHES TO SOLENOID MOUNTING BOLT.
- 1. SEE WIRING INSTL-CHASSIS FOR FURTHER INFORMATION.


		99 322E
OF IN	DATE	UNSPECIFIED TOLERANCES ARE
CHP	DATE	WHOLE OR 1/16"
DR	DATE	ONE-PLACE (1/32) "
PL	DATE	TWO-PLACE (1/64) "
CON	DATE	THREE-PLACE (1/128) "
TITLE: <b>WIRING DIAGRAM-BODY, 12V</b>		SHEET 1 OF 5
REF: 126214		129065

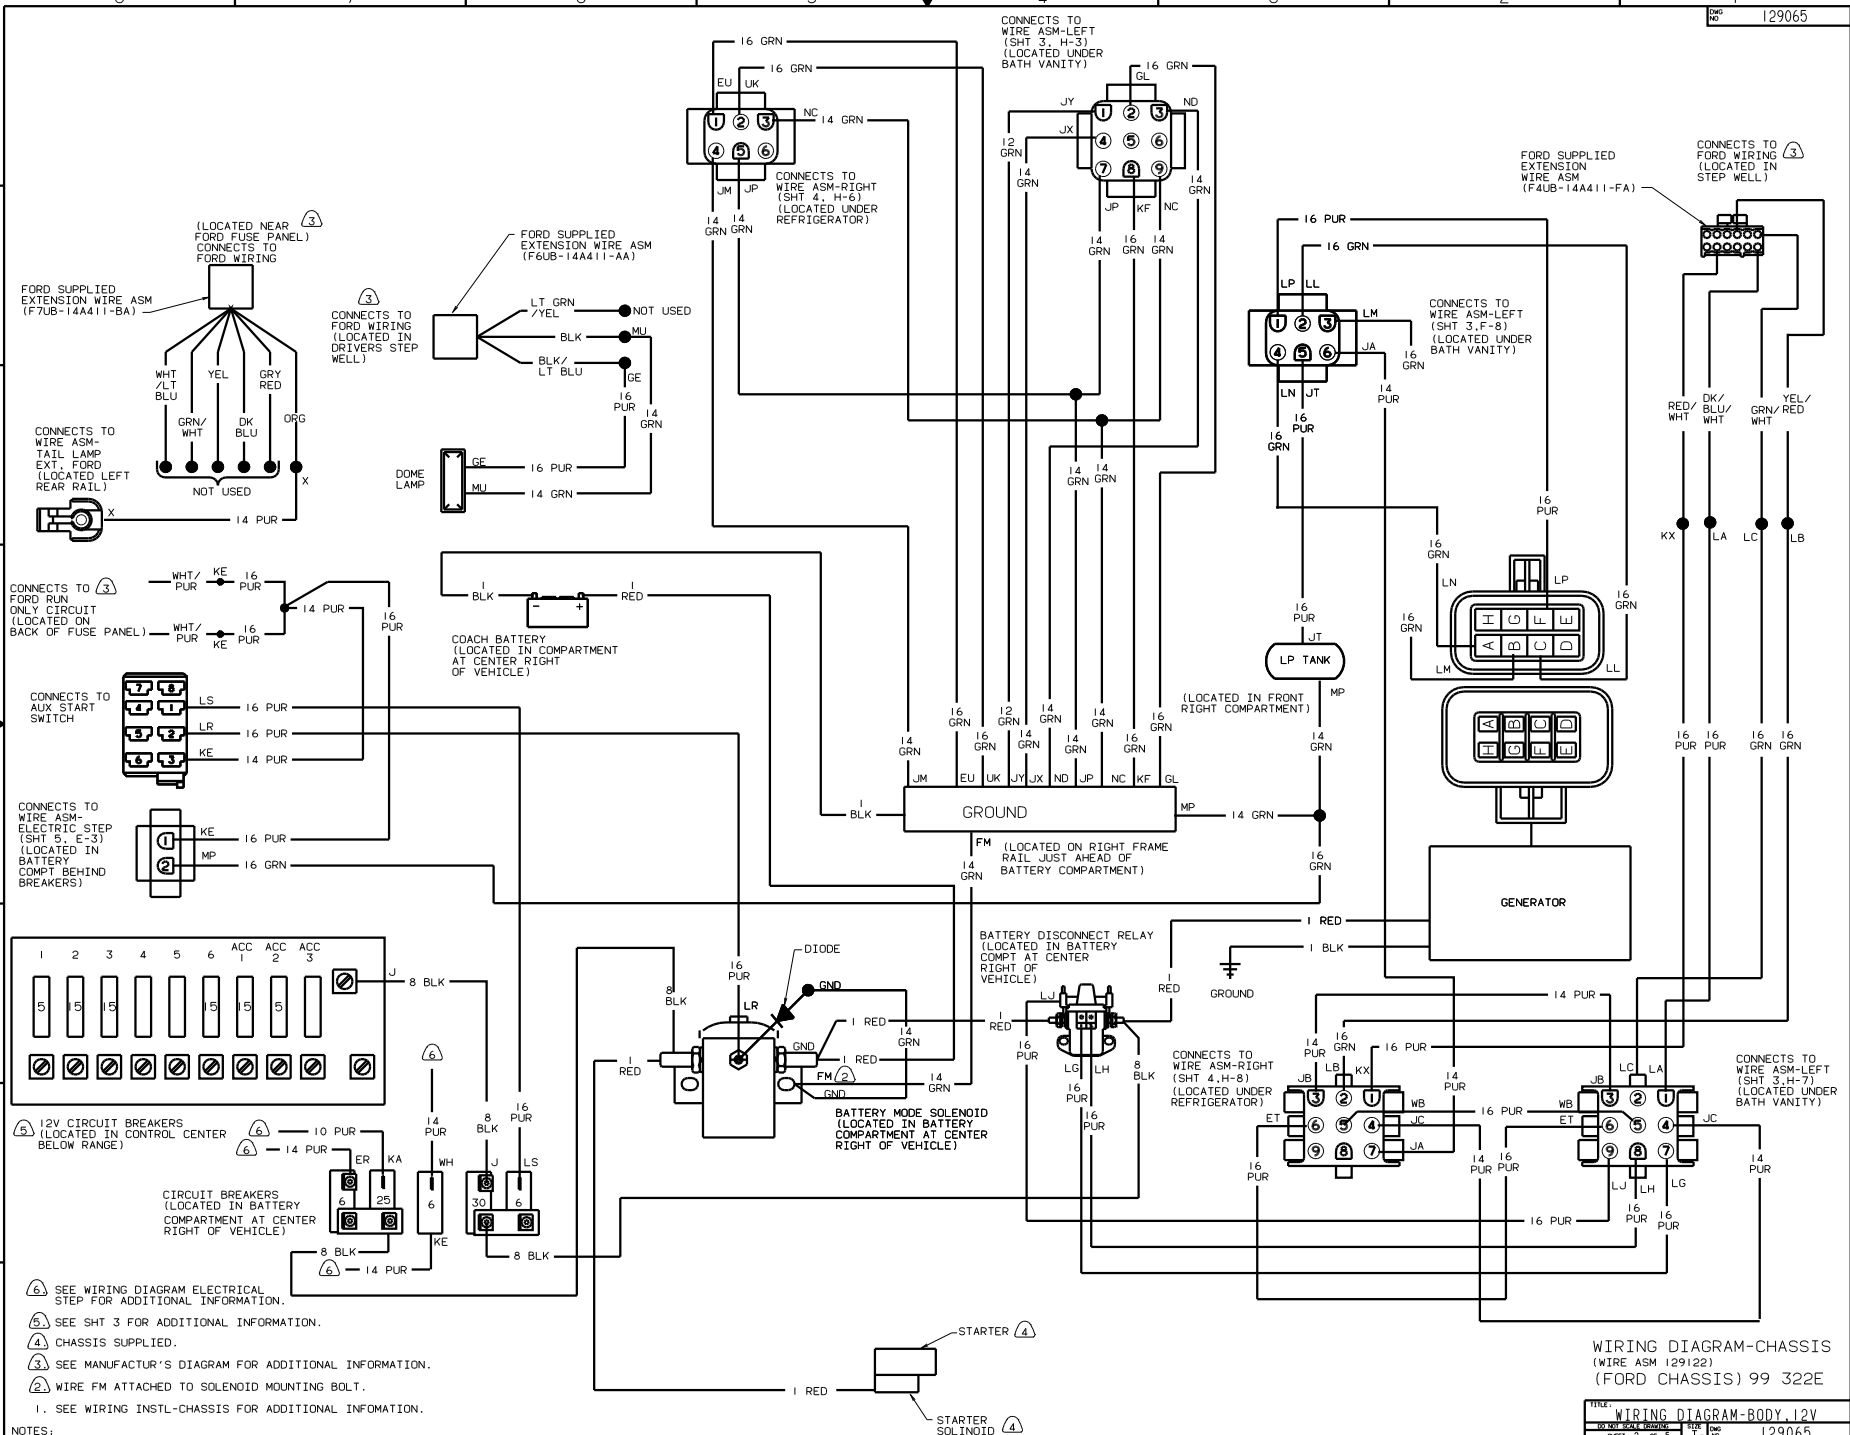

NOTES:  
 1. SEE WIRING INSTL-CHASSIS FOR ADDITIONAL INFORMATION.

WIRING DIAGRAM-CHASSIS  
 (WIRE ASM 129122)  
 (FORD CHASSIS) 99 322E

FIG. NO.	129065
NO. OF SHEETS	5
SHEET NO.	2
DATE	1/6
REV.	1

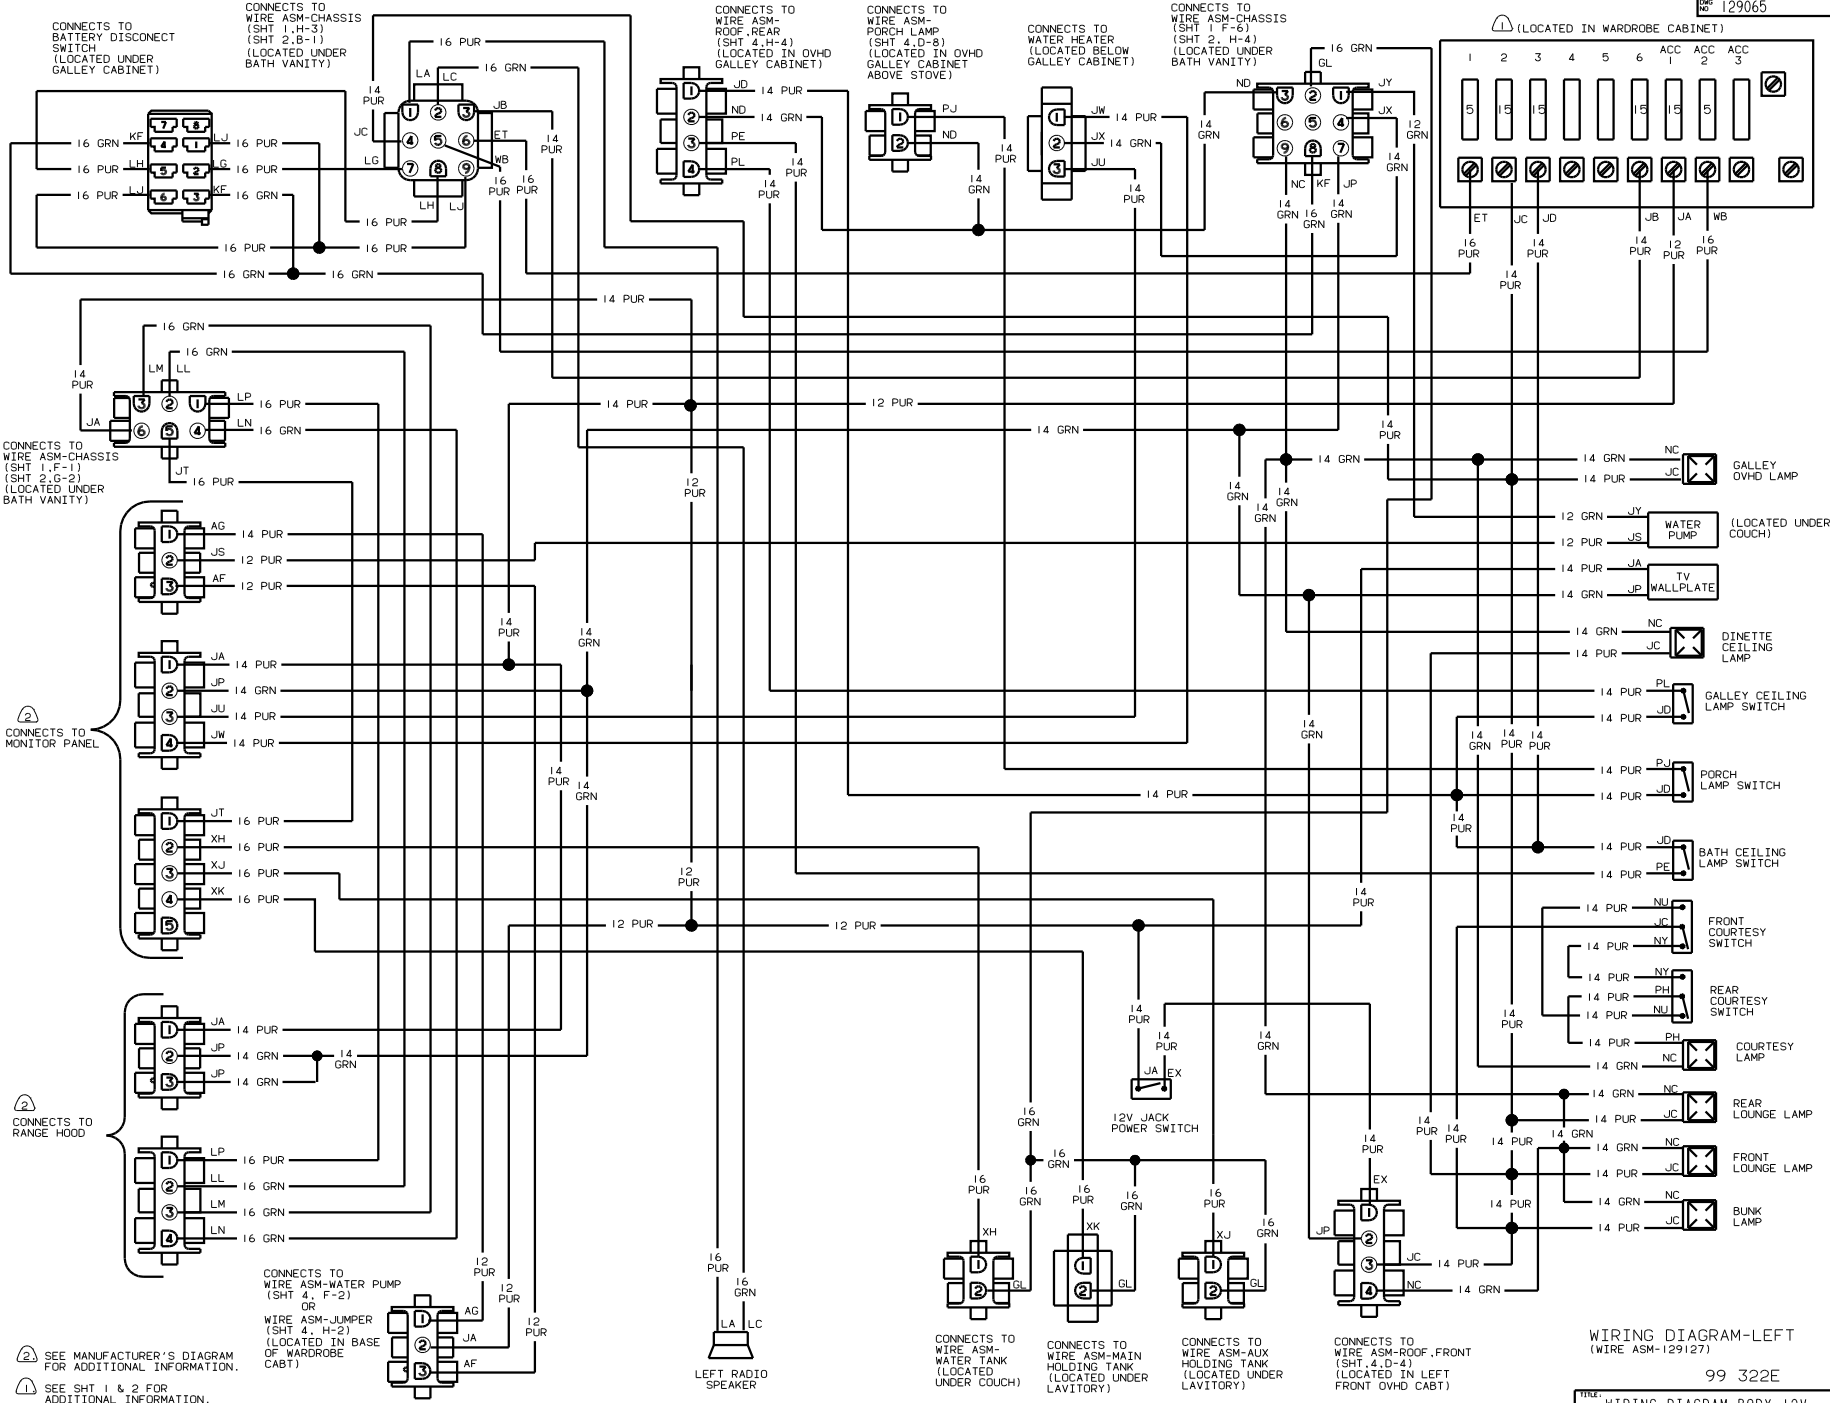


NOTES:  
 ① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.  
 ② SEE SHT 1 & 2 FOR ADDITIONAL INFORMATION.

WIRING DIAGRAM-LEFT  
 (WIRE ASM-129127)

99 322E


TITLE:	WIRING DIAGRAM-BODY_12V
NO. OF SHEETS DRAWING:	1 of 1
SHEET NO.:	3 of 5
DATE:	129065



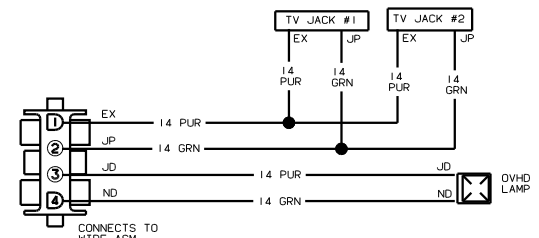

CONNECTS TO  
WIRE ASM-  
ROOF FRONT  
(SHT 4, C-1)  
(LOCATED IN  
OVHD TV CABT)

WIRING DIAGRAM-OVHD,TV  
(WIRE ASM 128775)

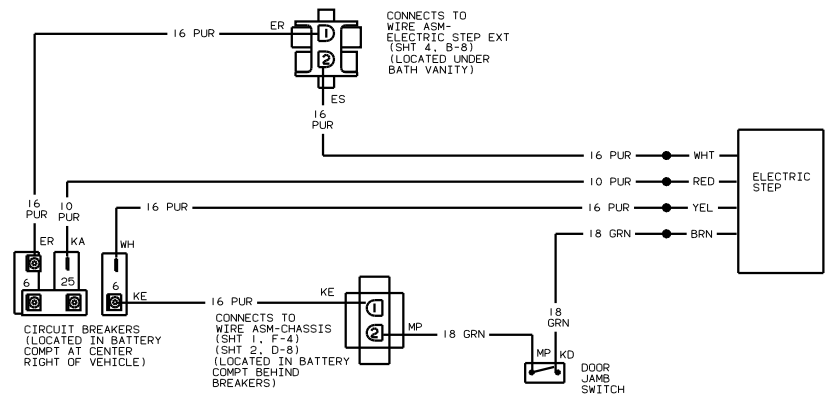

CONNECTS TO  
WIRE ASM-  
ELECTRIC STEP EXT  
(SHT 4, B-8)  
(LOCATED UNDER  
BATH VANITY)

CIRCUIT BREAKERS  
(LOCATED IN BATTERY  
COMPT AT CENTER  
RIGHT OF VEHICLE)

CONNECTS TO  
WIRE ASM-CHASSIS  
(SHT 1, F-4)  
(SHT 2, D-8)  
(LOCATED IN BATTERY  
COMPT BEHIND  
BREAKERS)

WIRING DIAGRAM-ELECTRIC STEP  
(WIRE ASM 129123)  
(W/ELECTRIC STEP)