



DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

CONTROL CENTER
 BREAKER PANEL

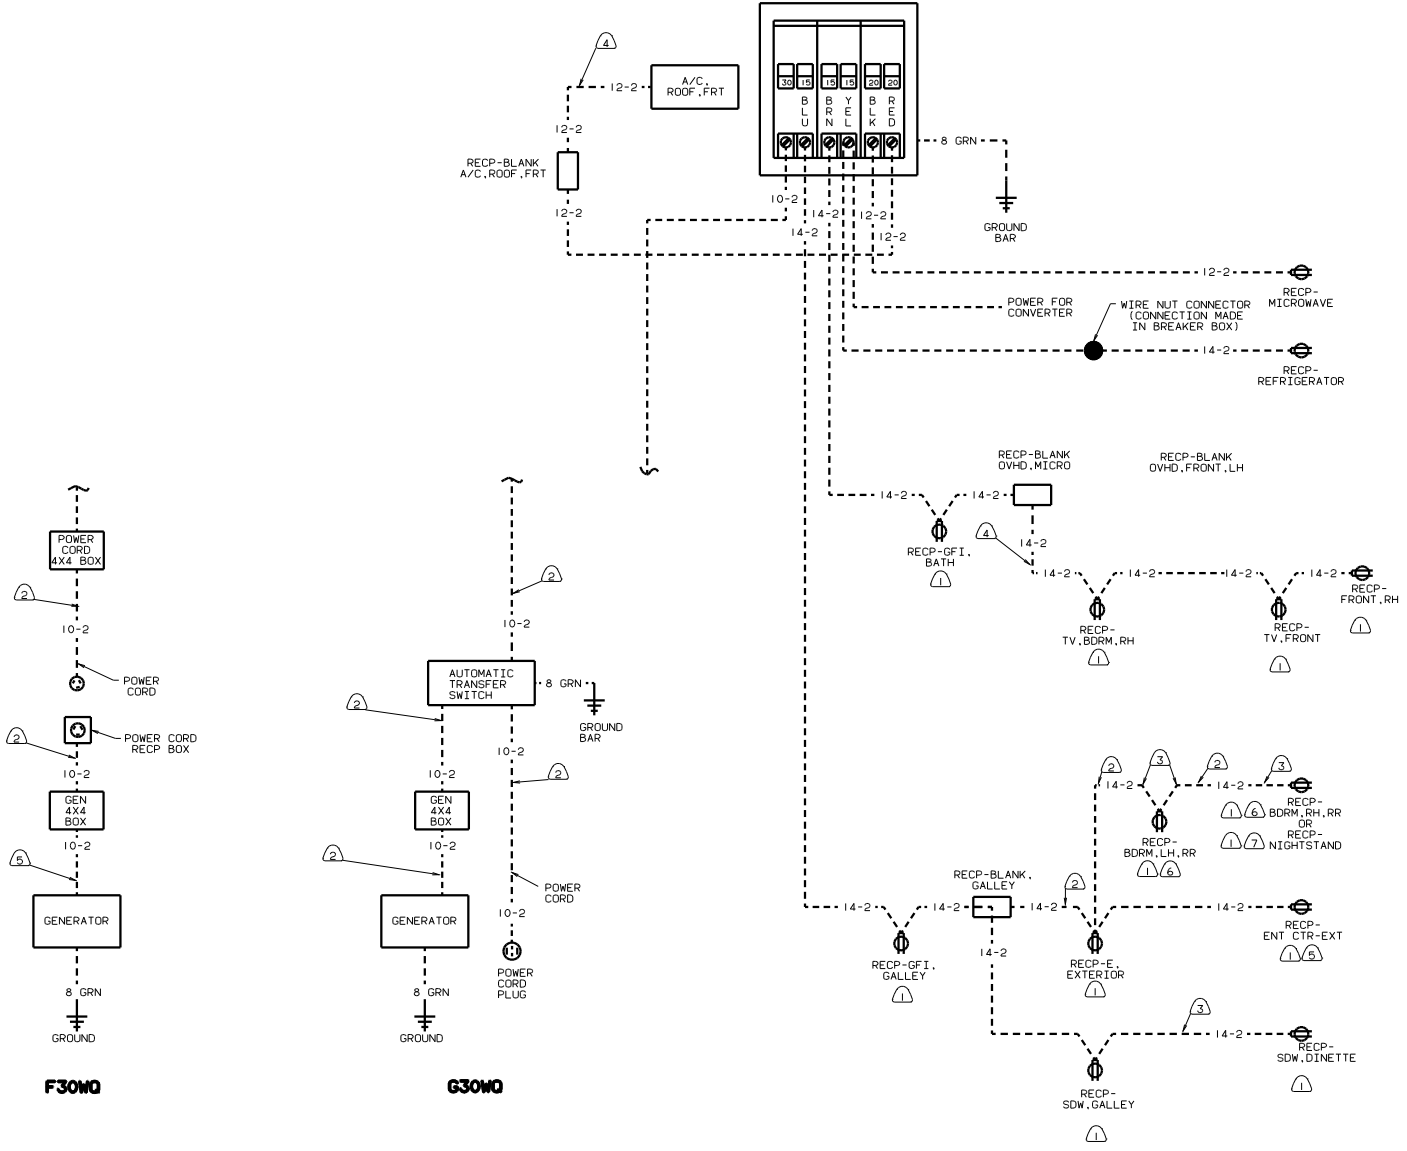


- ⑦ USED WITH TWIN BED
- ⑧ USED WITH QUEEN BED
- ⑨ USE WITH ENT CTR-EXT
- ④ WIRE IN ROOF
- ③ WIRE IN SIDEWALL
- ② WIRE BELOW FLOOR
- ① PROTECTED BY GFI REC

(US 30A 110V)

WINNEBAGO		99 F&G30A
OF IN	DATE	UNSPECIFIED TOLERANCES ARE:
CHP	DATE	WHOLE DIM IN
DR	DATE	ONE-PLACE IN .01
PL	DATE	TWO-PLACE IN .005
W	DATE	MILS
CON	DATE	THIRD ANGLE PROJECTION
LAYOUT		TITLE
REV #		SCALE: NONE
ALL DIMENSIONS ARE IN MILLIMETERS		SHEET 1 OF 2
DRAWING NO. 129489		REF: 127139 C I

CONTROL CENTER BREAKER PANEL

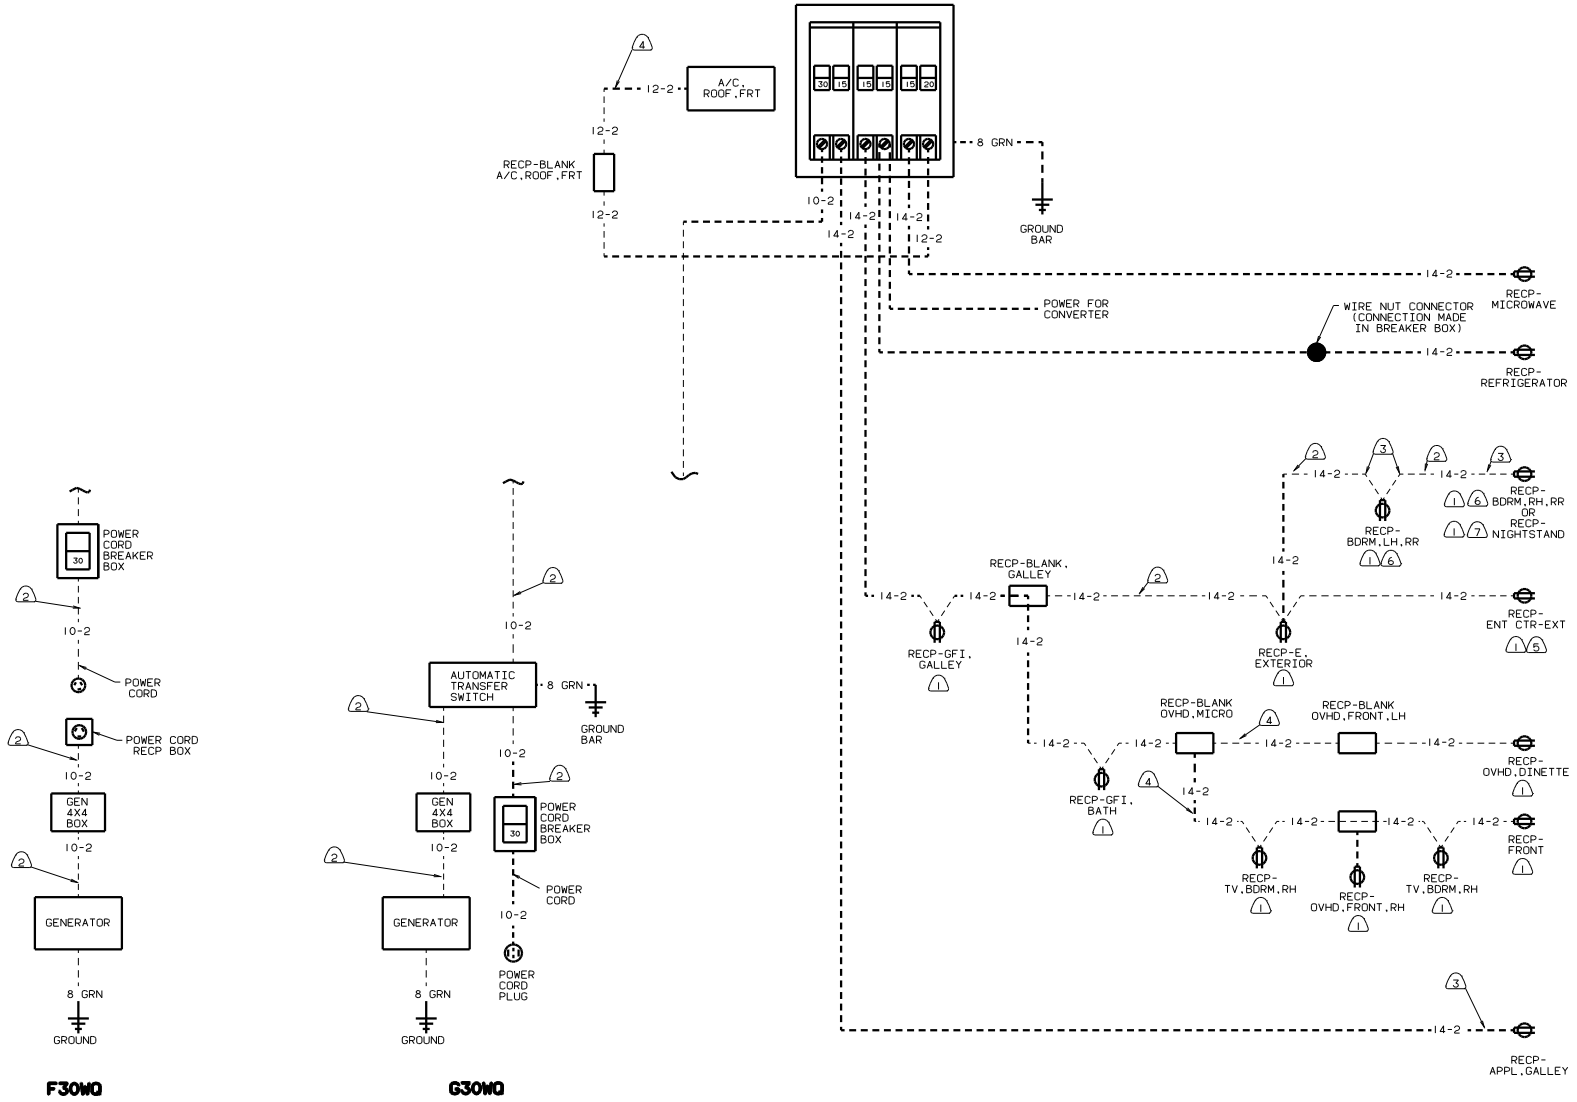

F30W0

G30W0

- ① USED WITH TWIN BED
- ② USED WITH QUEEN BED
- ③ USE WITH ENT CTR-EXT
- ④ WIRE IN ROOF
- ⑤ WIRE IN SIDEWALL
- ⑥ WIRE BELOW FLOOR
- ⑦ PROTECTED BY GFI REC