




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

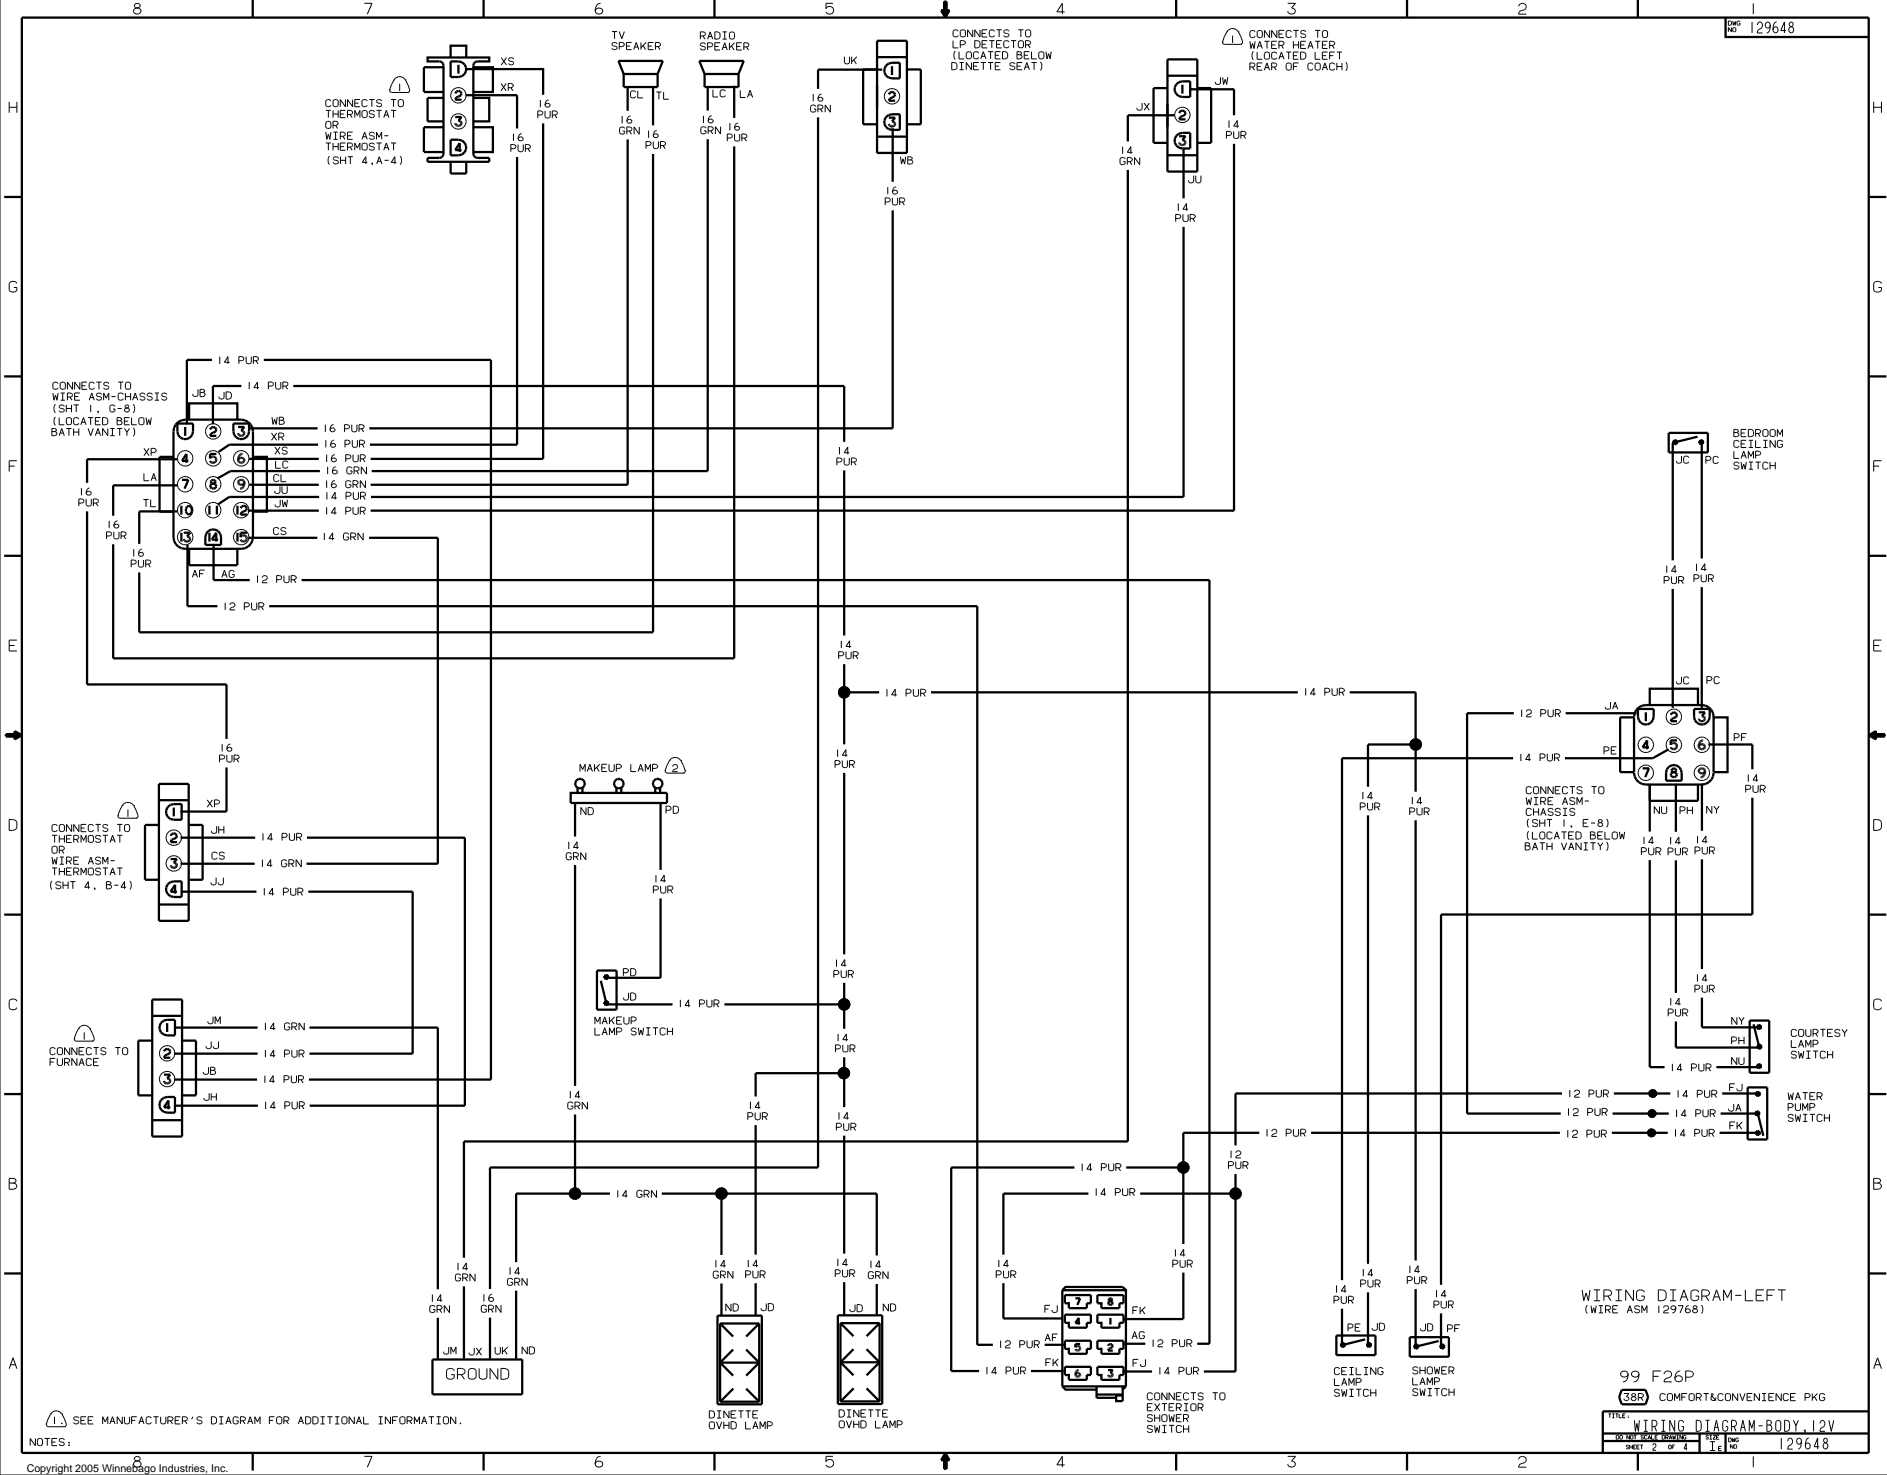

CONNECTS TO THERMOSTAT OR WIRE ASM-THERMOSTAT (SHT 4, A-4)

CONNECTS TO LP DETECTOR (LOCATED BELOW DINETTE SEAT)

CONNECTS TO WATER HEATER (LOCATED LEFT REAR OF COACH)

CONNECTS TO WIRE ASM-CHASSIS (SHT 1, G-8) (LOCATED BELOW BATH VANITY)

CONNECTS TO THERMOSTAT OR WIRE ASM-THERMOSTAT (SHT 4, B-4)

CONNECTS TO FURNACE

CONNECTS TO WIRE ASM-CHASSIS (SHT 1, E-8) (LOCATED BELOW BATH VANITY)

CONNECTS TO EXTERIOR SHOWER SWITCH

WIRING DIAGRAM-LEFT (WIRE ASM 129768)

99 F26P
38R COMFORT&CONVENIENCE PKG

NOTES: SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

