





DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

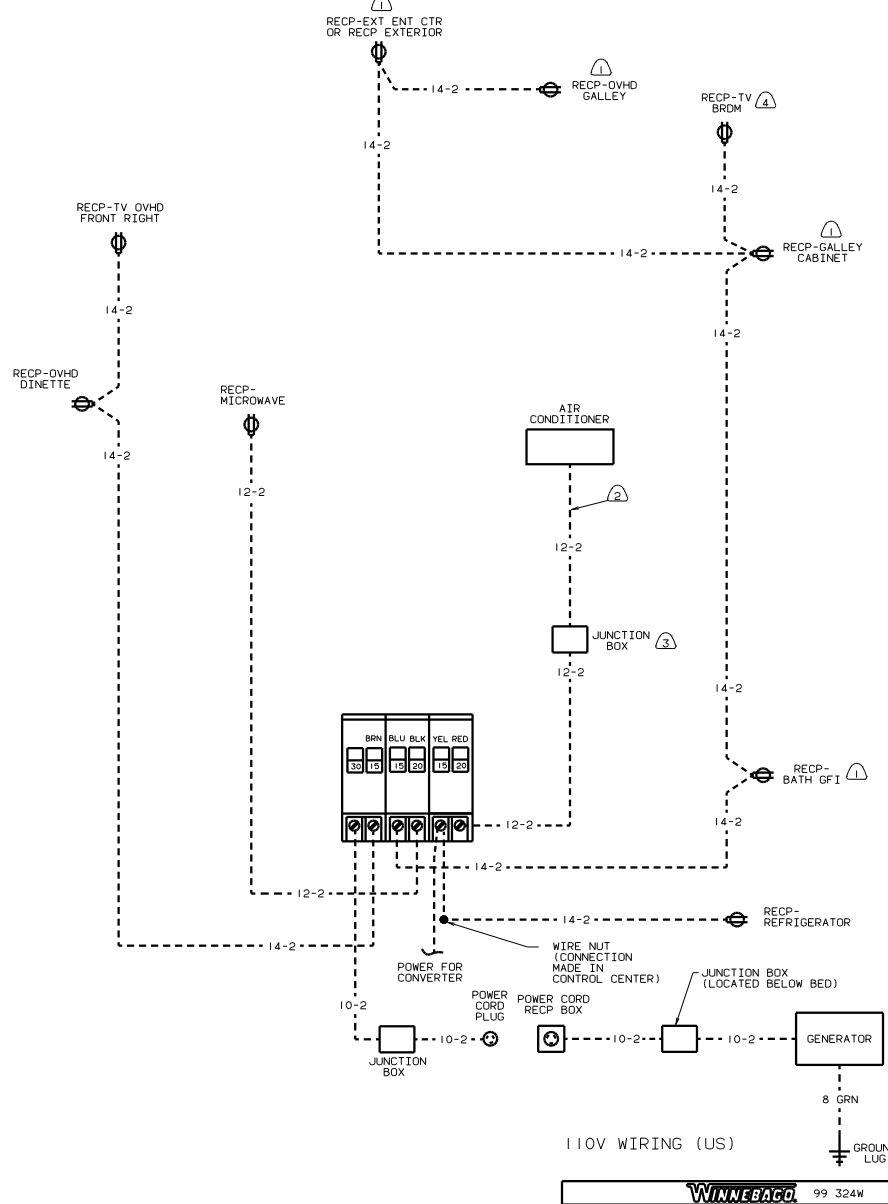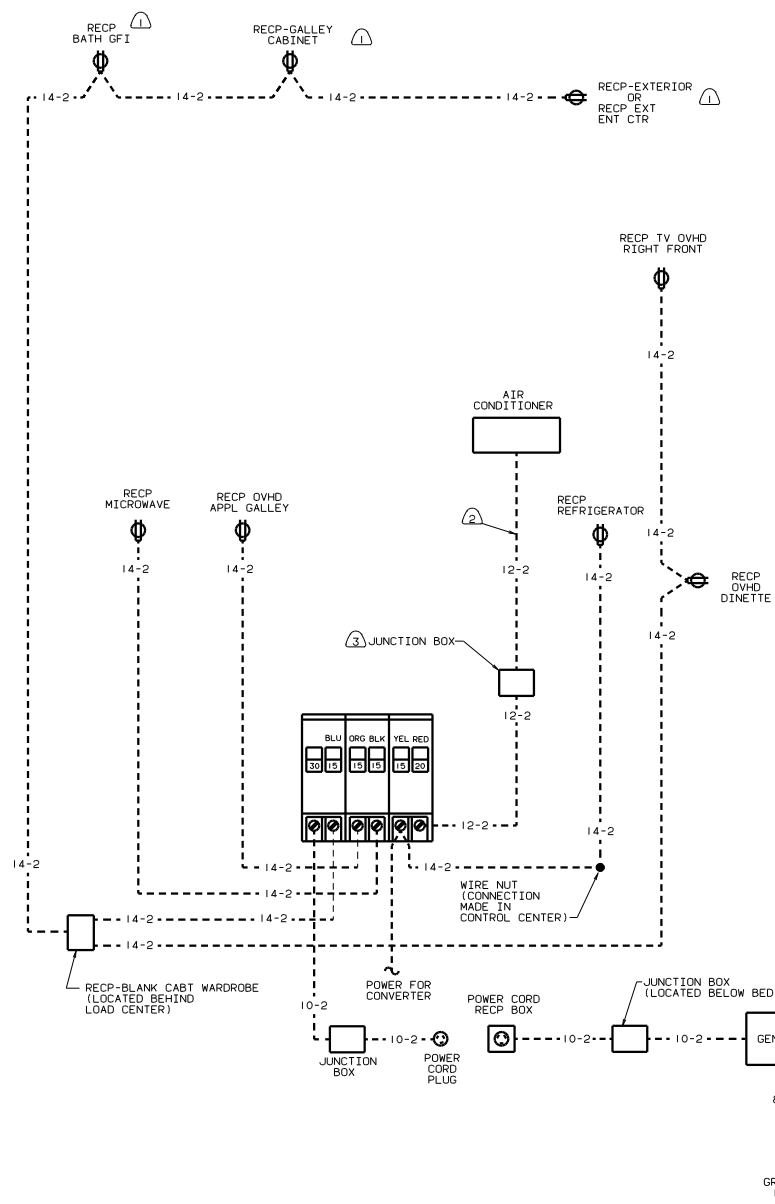

- ④ 04L JAPAN EXPORT PACKAGE.
- ③ WITHOUT 290 A/C ROOF-MOUNT-13.500 BTU.
- ② ROUTED THROUGH ROOF.
- ① PROTECTED BY GROUND FAULT INTERRUPTER BREAKER.

WINNEBAGO 99 324W


DATE	UNDESIGNED TOLERANCES ARE:	MATERIAL
DATE	WHOLE OR 1/2	
DATE	ONE-PLACE (1/2, 1/4)	
DATE	TWO-PLACE (1/2, 1/4)	
DATE	ANGLE	
DATE	INDIC. W/ANGLE PROJECTION	

110V WIRING (US)

WIRING DIAGRAM-BODY 110V

SHEET 1 OF 2

129651

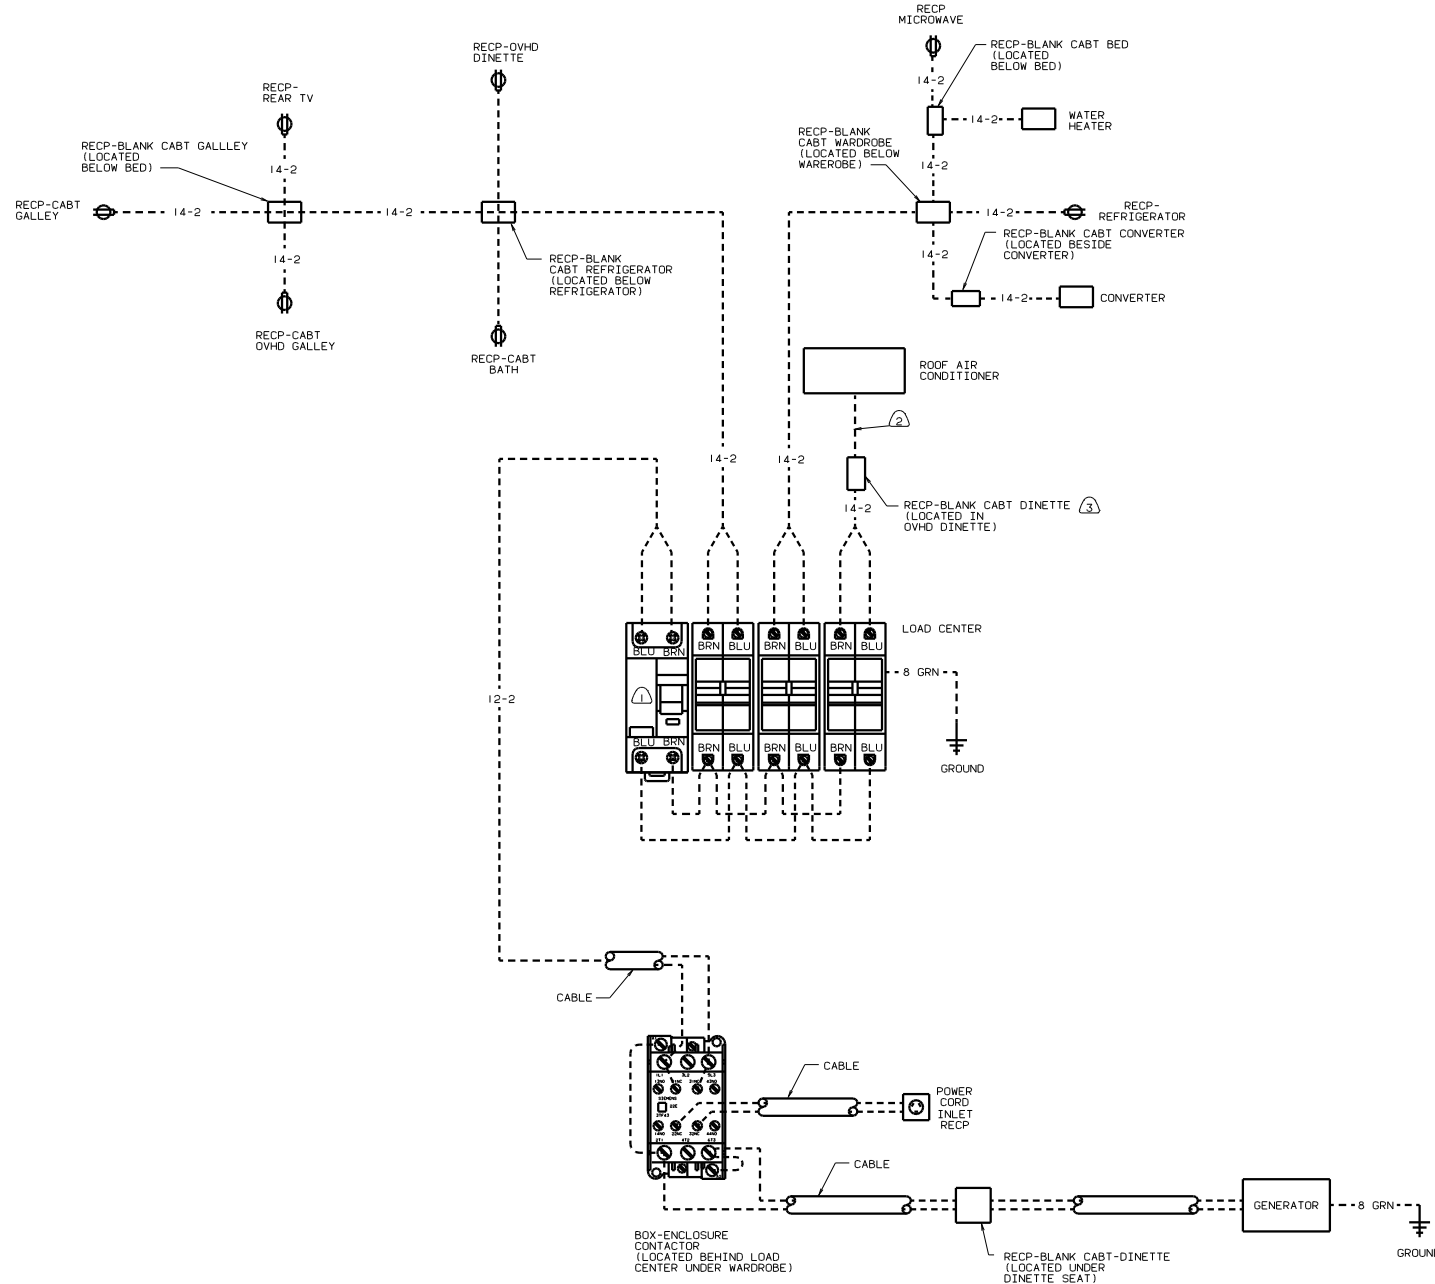

- ③ WITHOUT 05G EXPORT ROOF AIR-13.500 BUT. 220VAC.
- ② WIRE ROUTED IN ROOF.
- ① GFI CIRCUIT BREAKER

99 324W
 03T EUROPEAN EXPORT
 PREP PACKAGE

TITLE	WIRING DIAGRAM-BODY
DATE	1.6.00
SHEET	2 OF 2
FIG. NO.	129651