




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

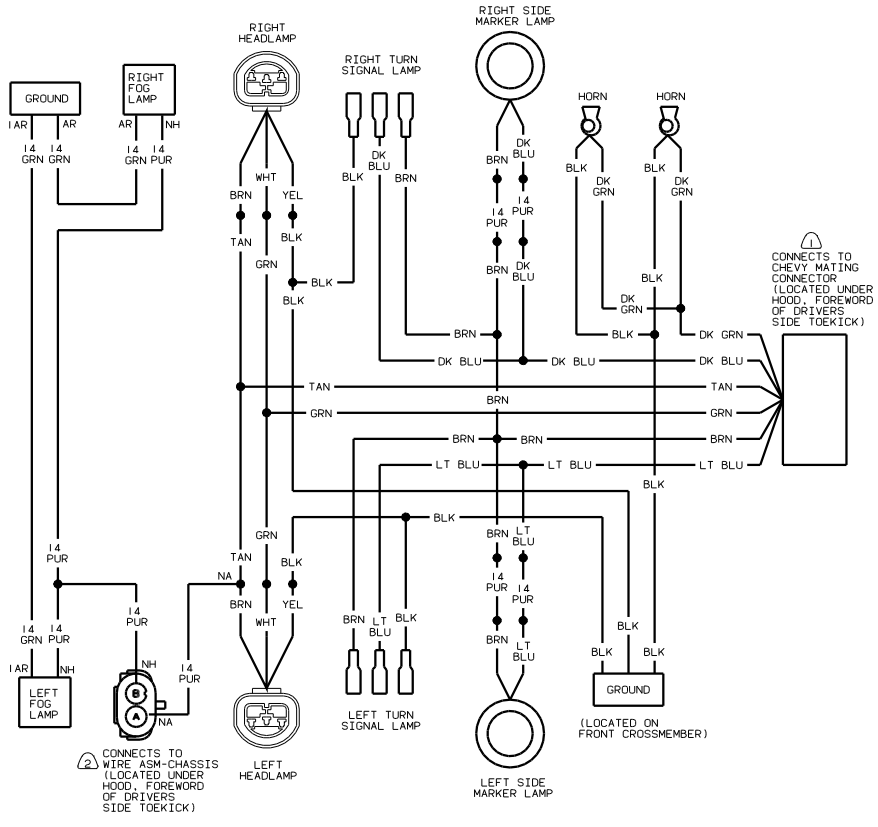

WIRING DIAGRAM-HEADLAMP
(CHEVY CHASSIS)
(WIRE ASM 126816-01)

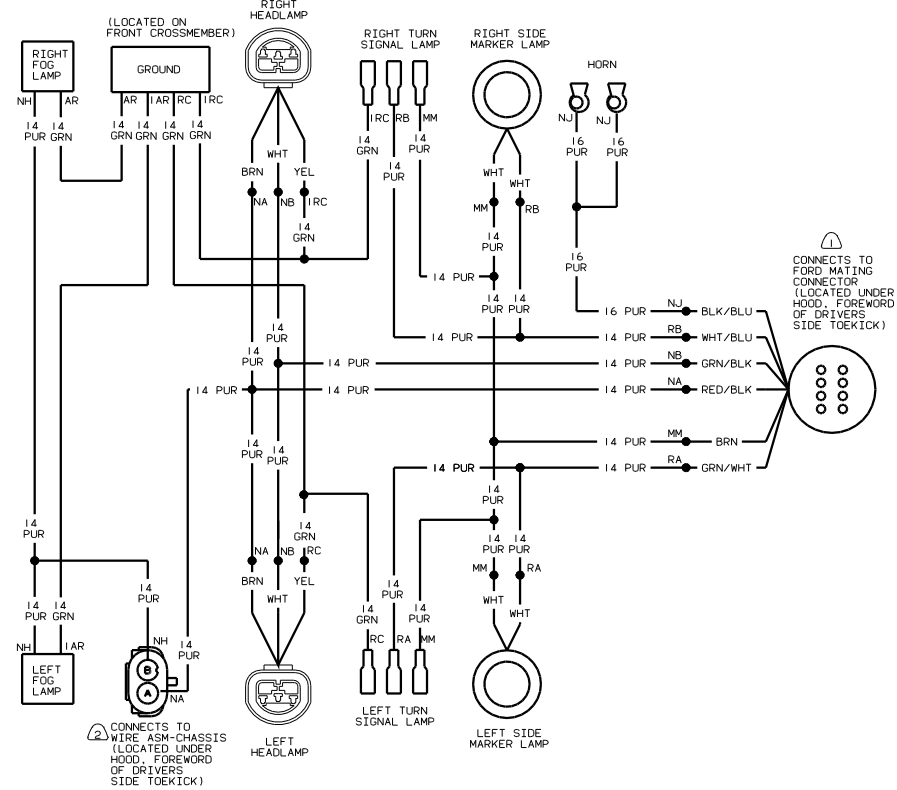

WIRING DIAGRAM-HEADLAMP
(FORD CHASSIS)
(WIRE ASM 126816-02)


② SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.
① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

WINNEBAGO 99 L-SERIES


OF IN	DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL
CHP	DATE	HALF DIM (1)	
DVE	DATE	ONE-PLACE (1.21)	
DVE	DATE	TWO-PLACE (1.203)	
CDR	DATE	THIRD-PLACE (1.200)	
DATE	DATE	THIRD-PLACE (1.200)	
DATE	DATE	THIRD-PLACE (1.200)	
DATE	DATE	THIRD-PLACE (1.200)	

WIRING DIAGRAM-AUTO LAMPS

129783

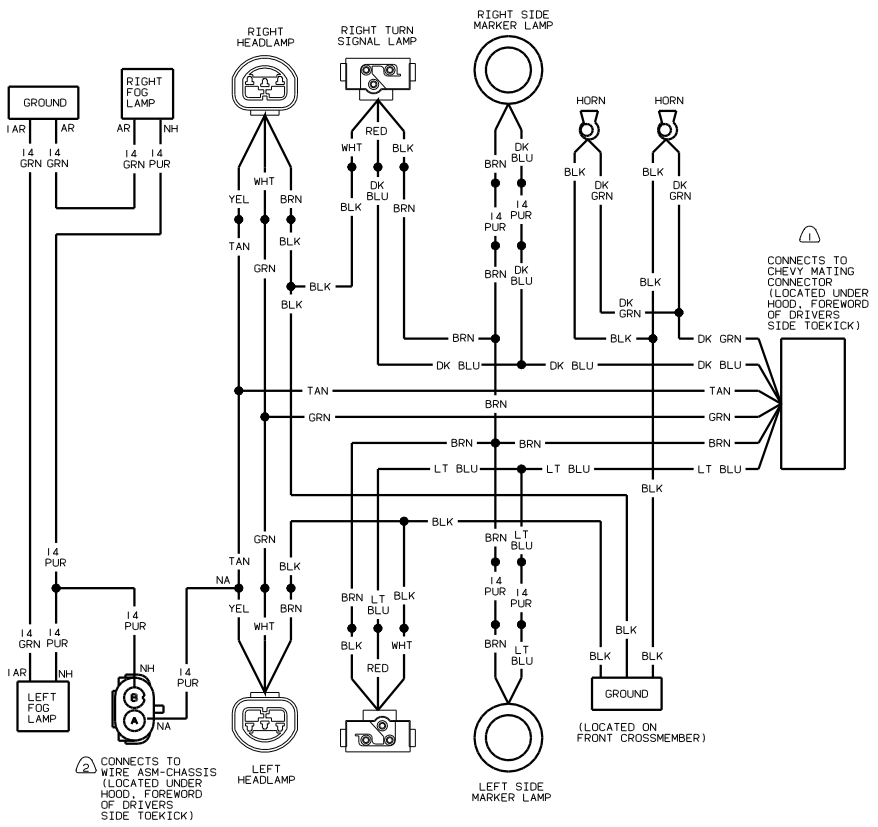


WIRING DIAGRAM-HEADLAMP
(CHEVY CHASSIS)
(WIRE ASM 126865-01)

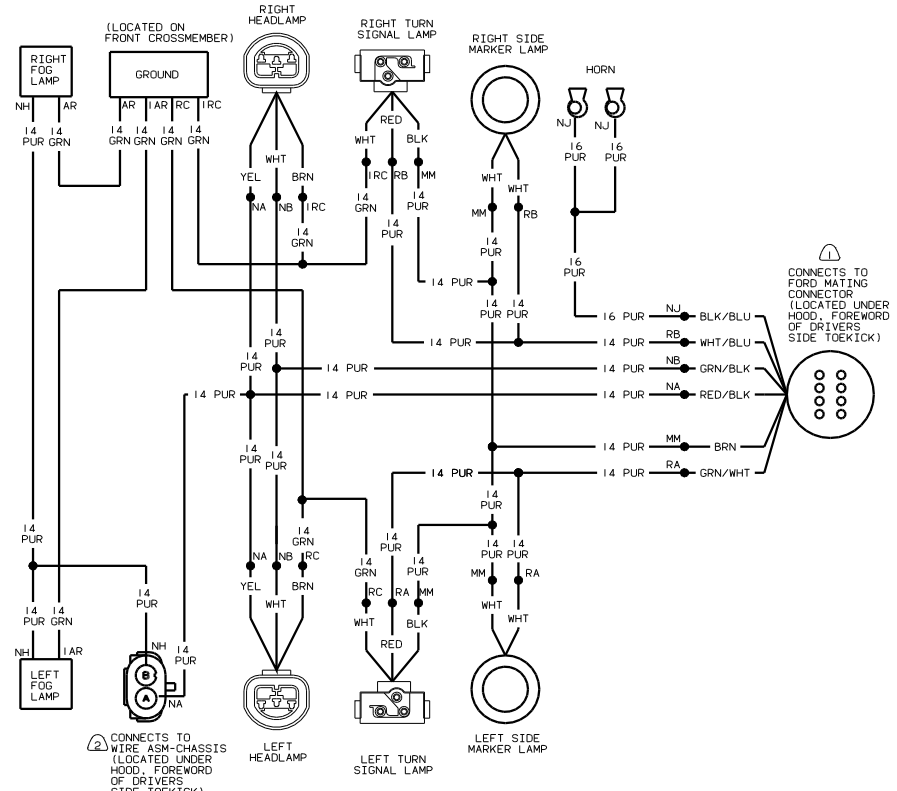


WIRING DIAGRAM-HEADLAMP
(FORD CHASSIS)
(WIRE ASM 126865-02)

② SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
① SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.




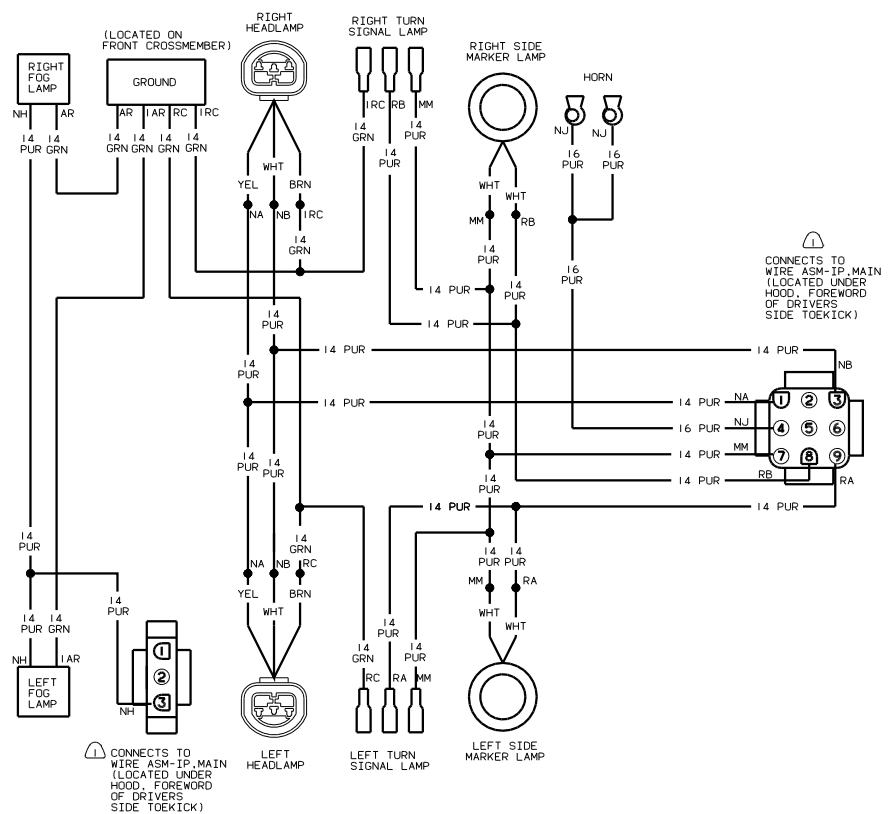


WIRING DIAGRAM-HEADLAMP
 (WINNEBAGO)
 (FREIGHTLINER CHASSIS)
 (WIRE ASM 126816-03)

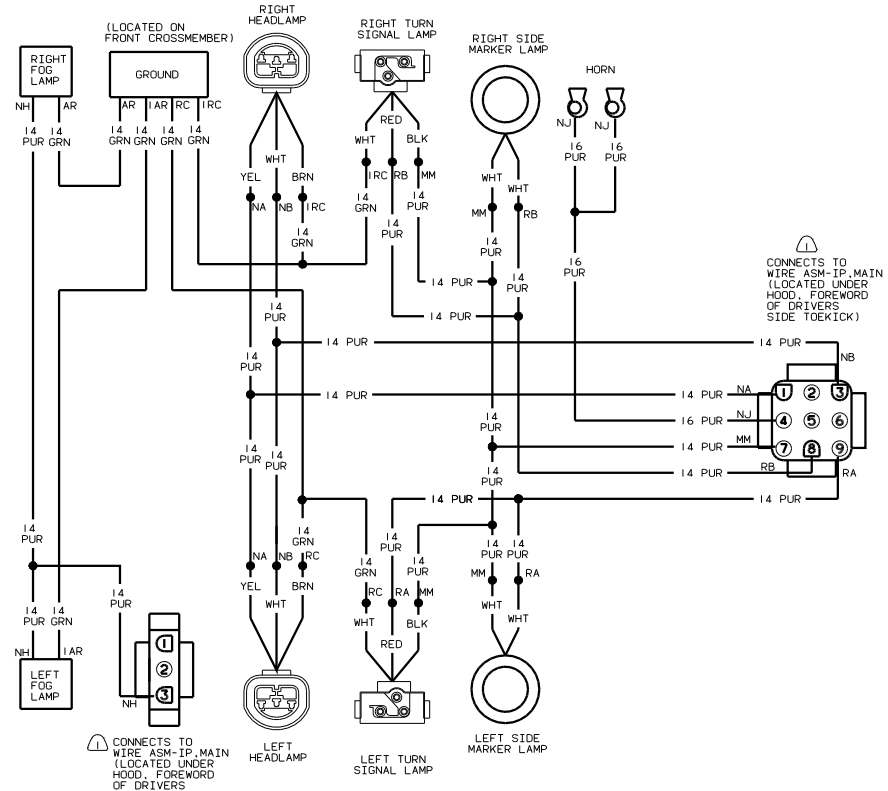

WIRING DIAGRAM-HEADLAMP
 (ITASCA)
 (FREIGHTLINER CHASSIS)
 (WIRE ASM 126865-03)



NOTES: SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.

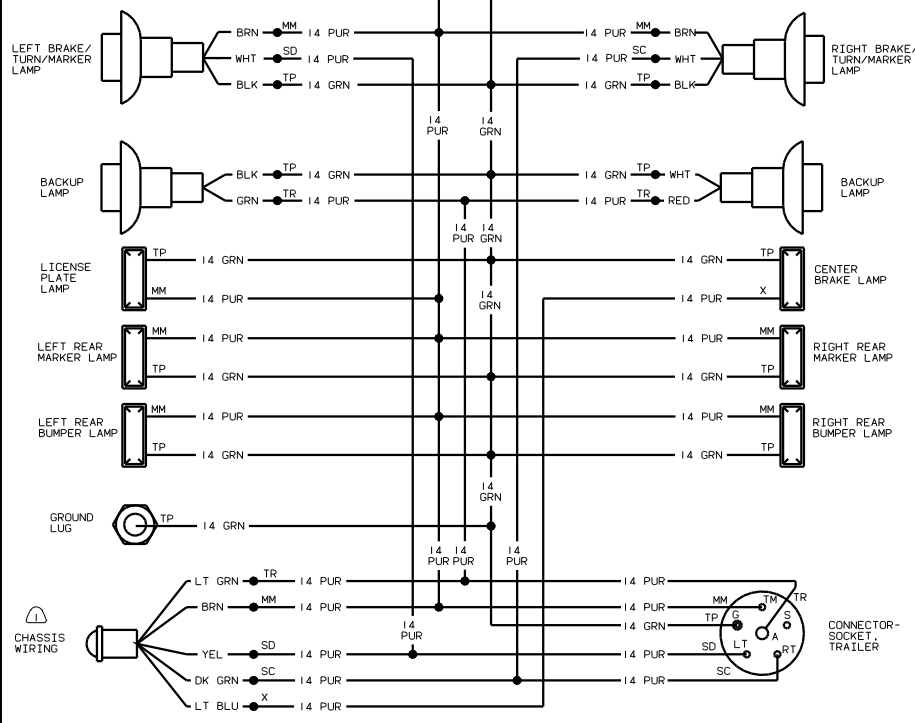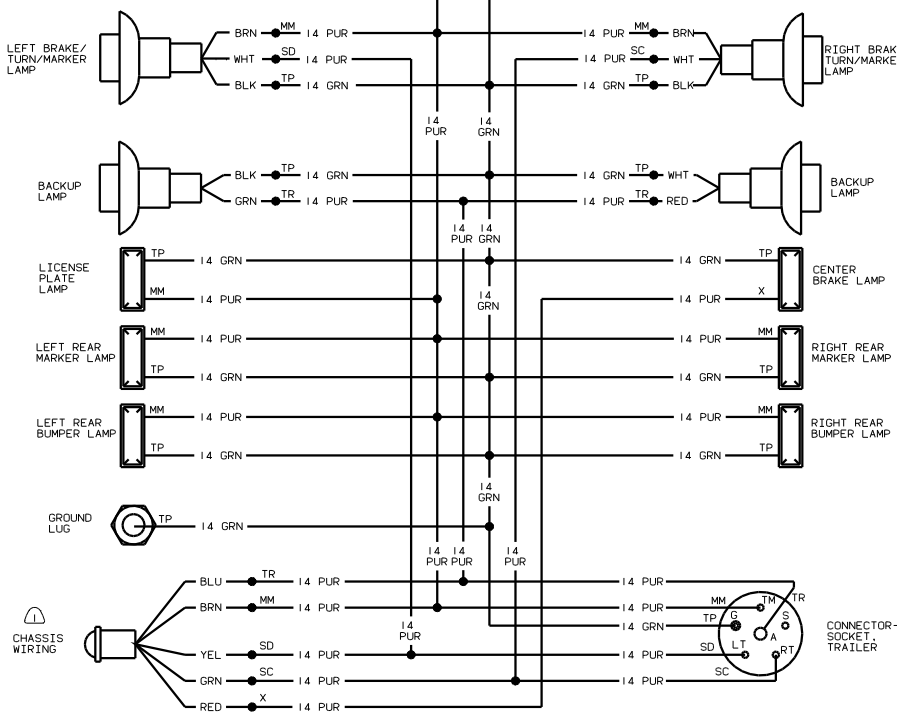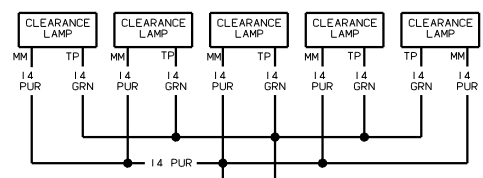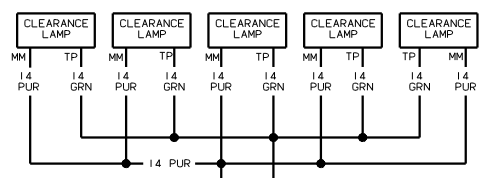

WIRING DIAGRAM-BACKWALL
(FREIGHTLINER CHASSIS)
(WIRE ASM-129777-04-000)

WIRING DIAGRAM-BACKWALL
(GM CHASSIS)
(WIRE ASM-129777-01-000)

SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

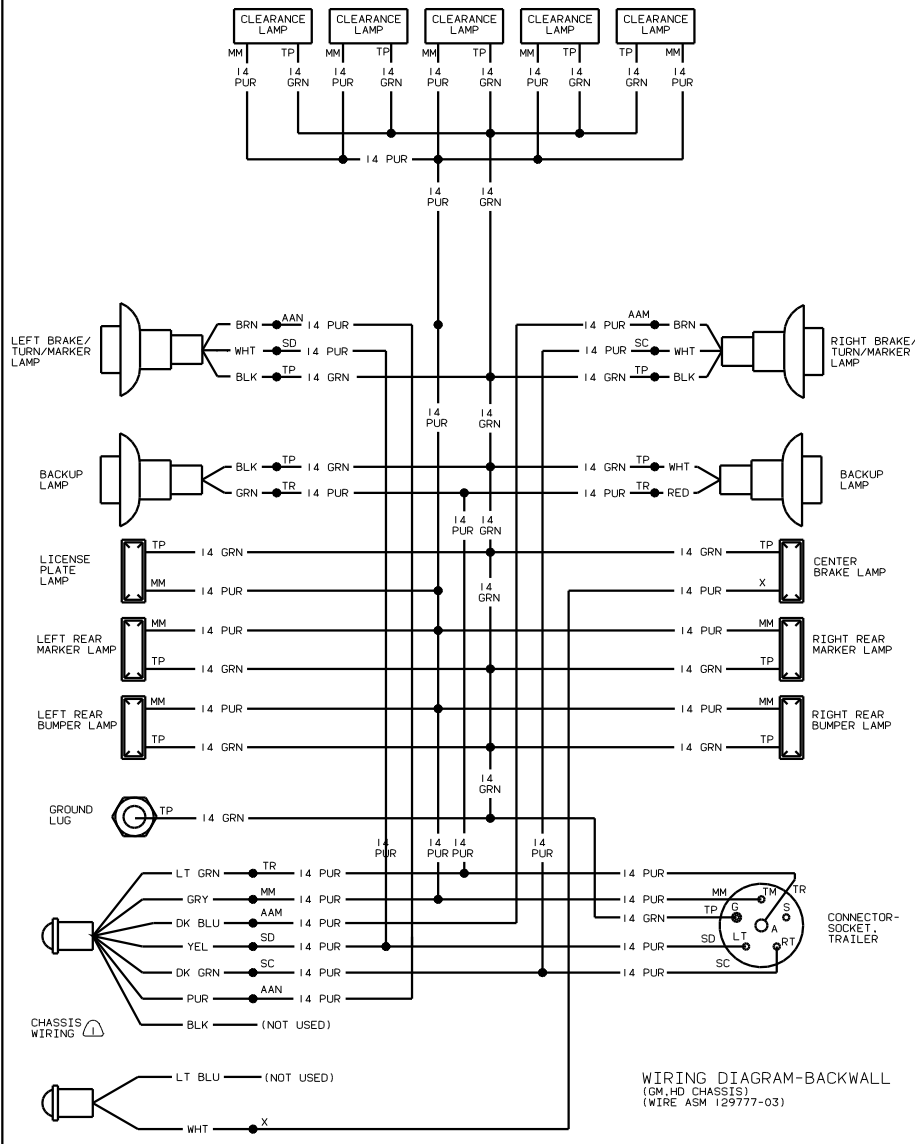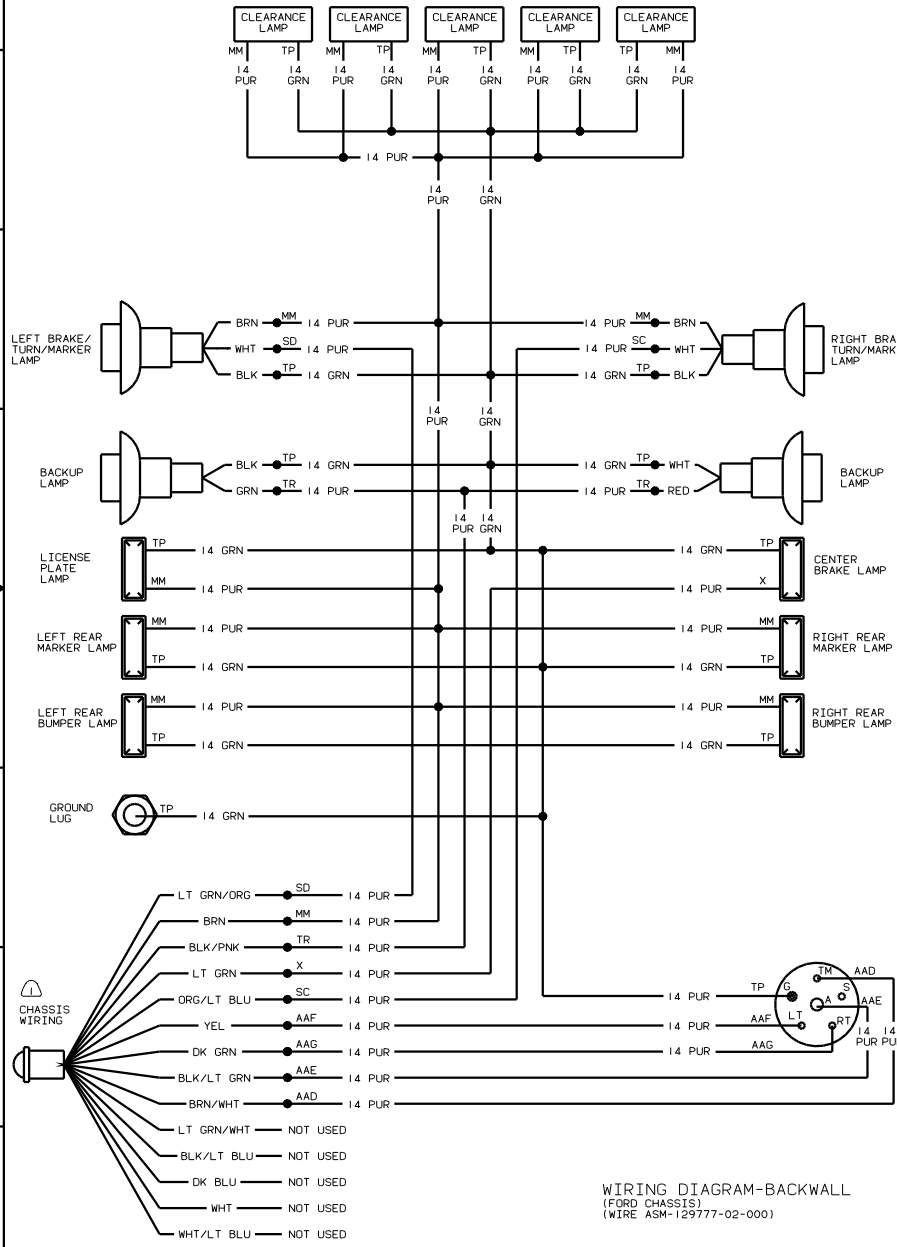

NOTES:
 1. SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.