




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

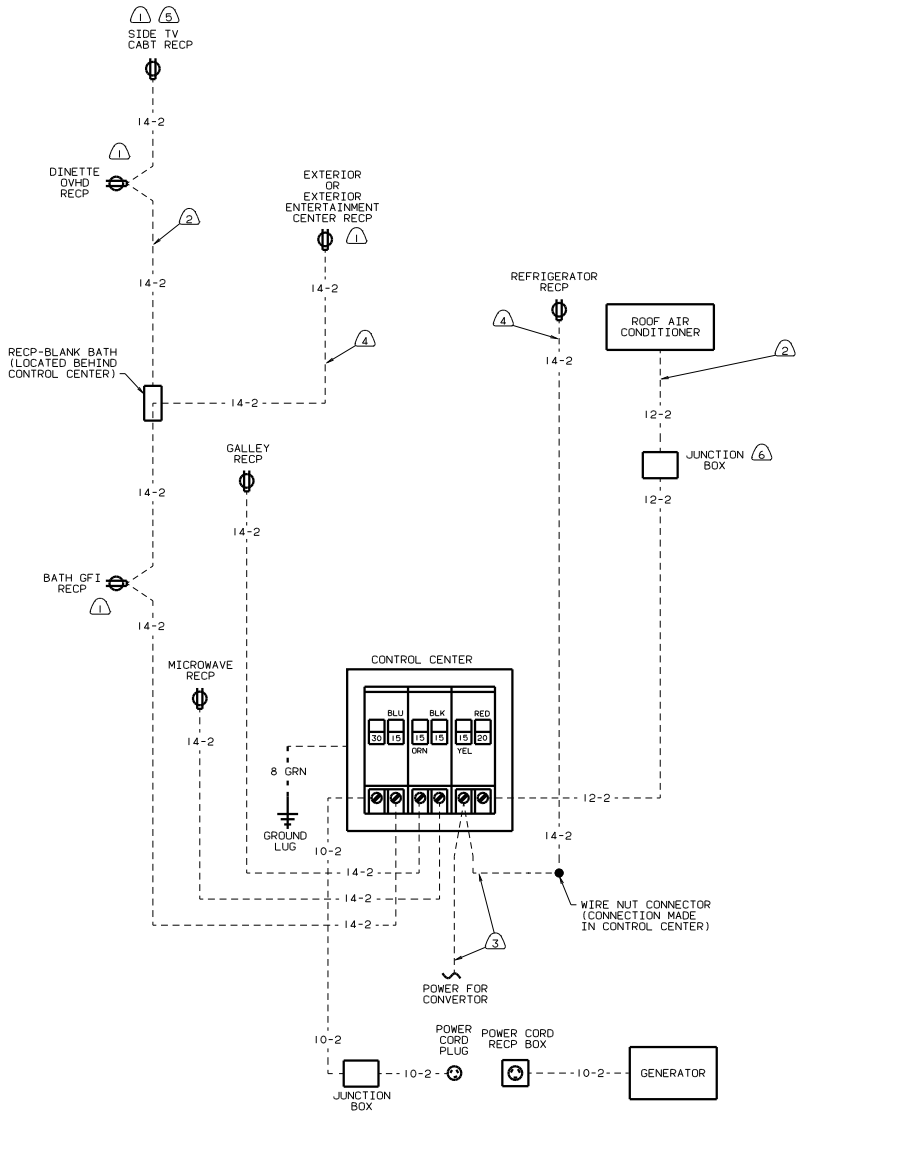

- Ⓐ NOT USED WITH 290 A/C-ROOF-ONE 13,500.
- Ⓑ NOT USE WITH 78A TV-13" W/VCP,12
- Ⓒ WIRE ROUTED THROUGH FLOOR.
- Ⓓ WIRE SUPPLIED WITH CONVERTOR.
- Ⓔ WIRE ROUTED IN ROOF.
- Ⓕ PROTECTED BY GFI OUTLET.

265 CODE STANDARDS-CSA
12D ELECTRICAL SYS-30 AMP

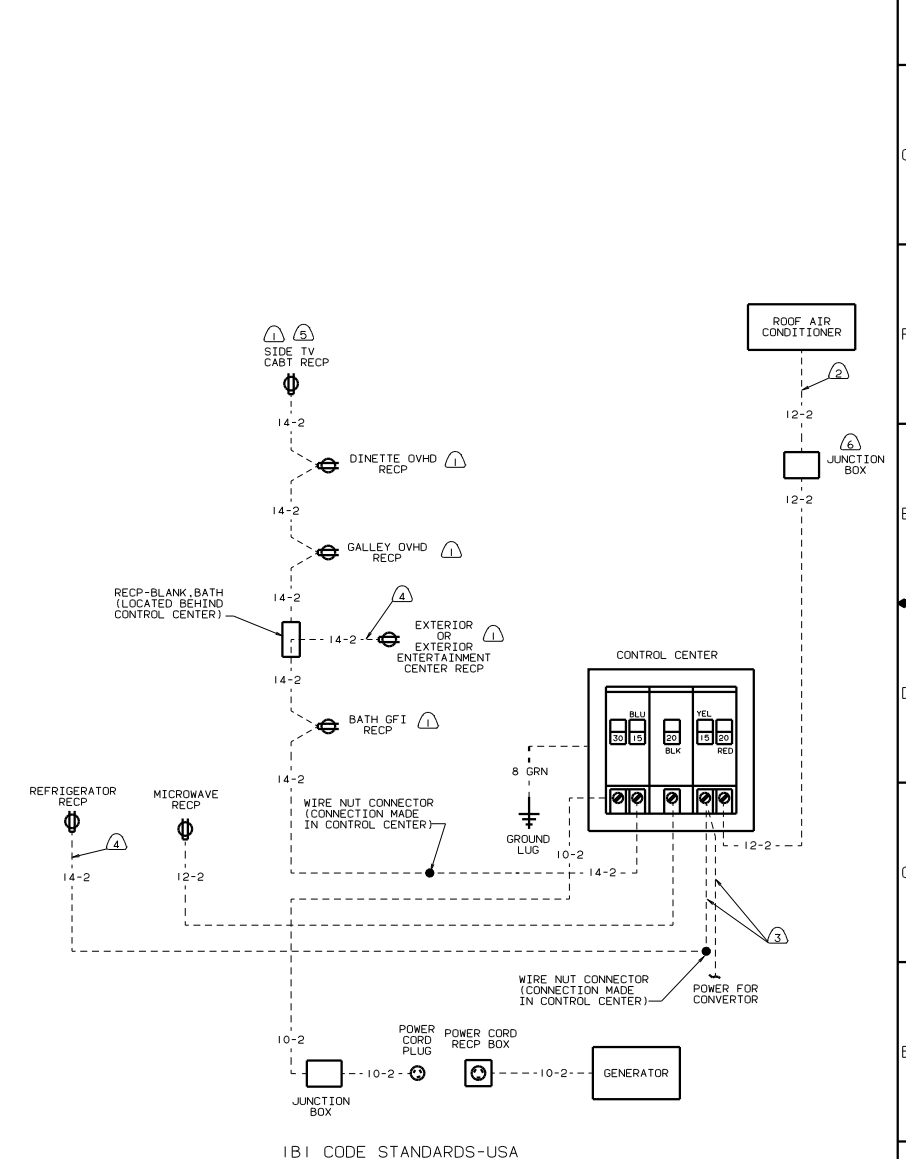

IB1 CODE STANDARDS-USA
12D ELECTRICAL SYS-30 AMP

OF IN		DATE	UNDESIGNED TOLERANCES ARE:	INVERTER
CHP	DATE	ONE-PLACE (R, 21)		
P/E	DATE	TWO-PLACE (R, 20)		
D/E	DATE	ANGLE		
COMP	DATE	INDIC. W/ANGLE		
LAYOUT		TITLE		
BY		SCALE		
CHECKED		DATE		
APPROVED		SHEET		

WINNEBAGO 99 322R

WIRING DIAGRAM-BODY 110V

130215