




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

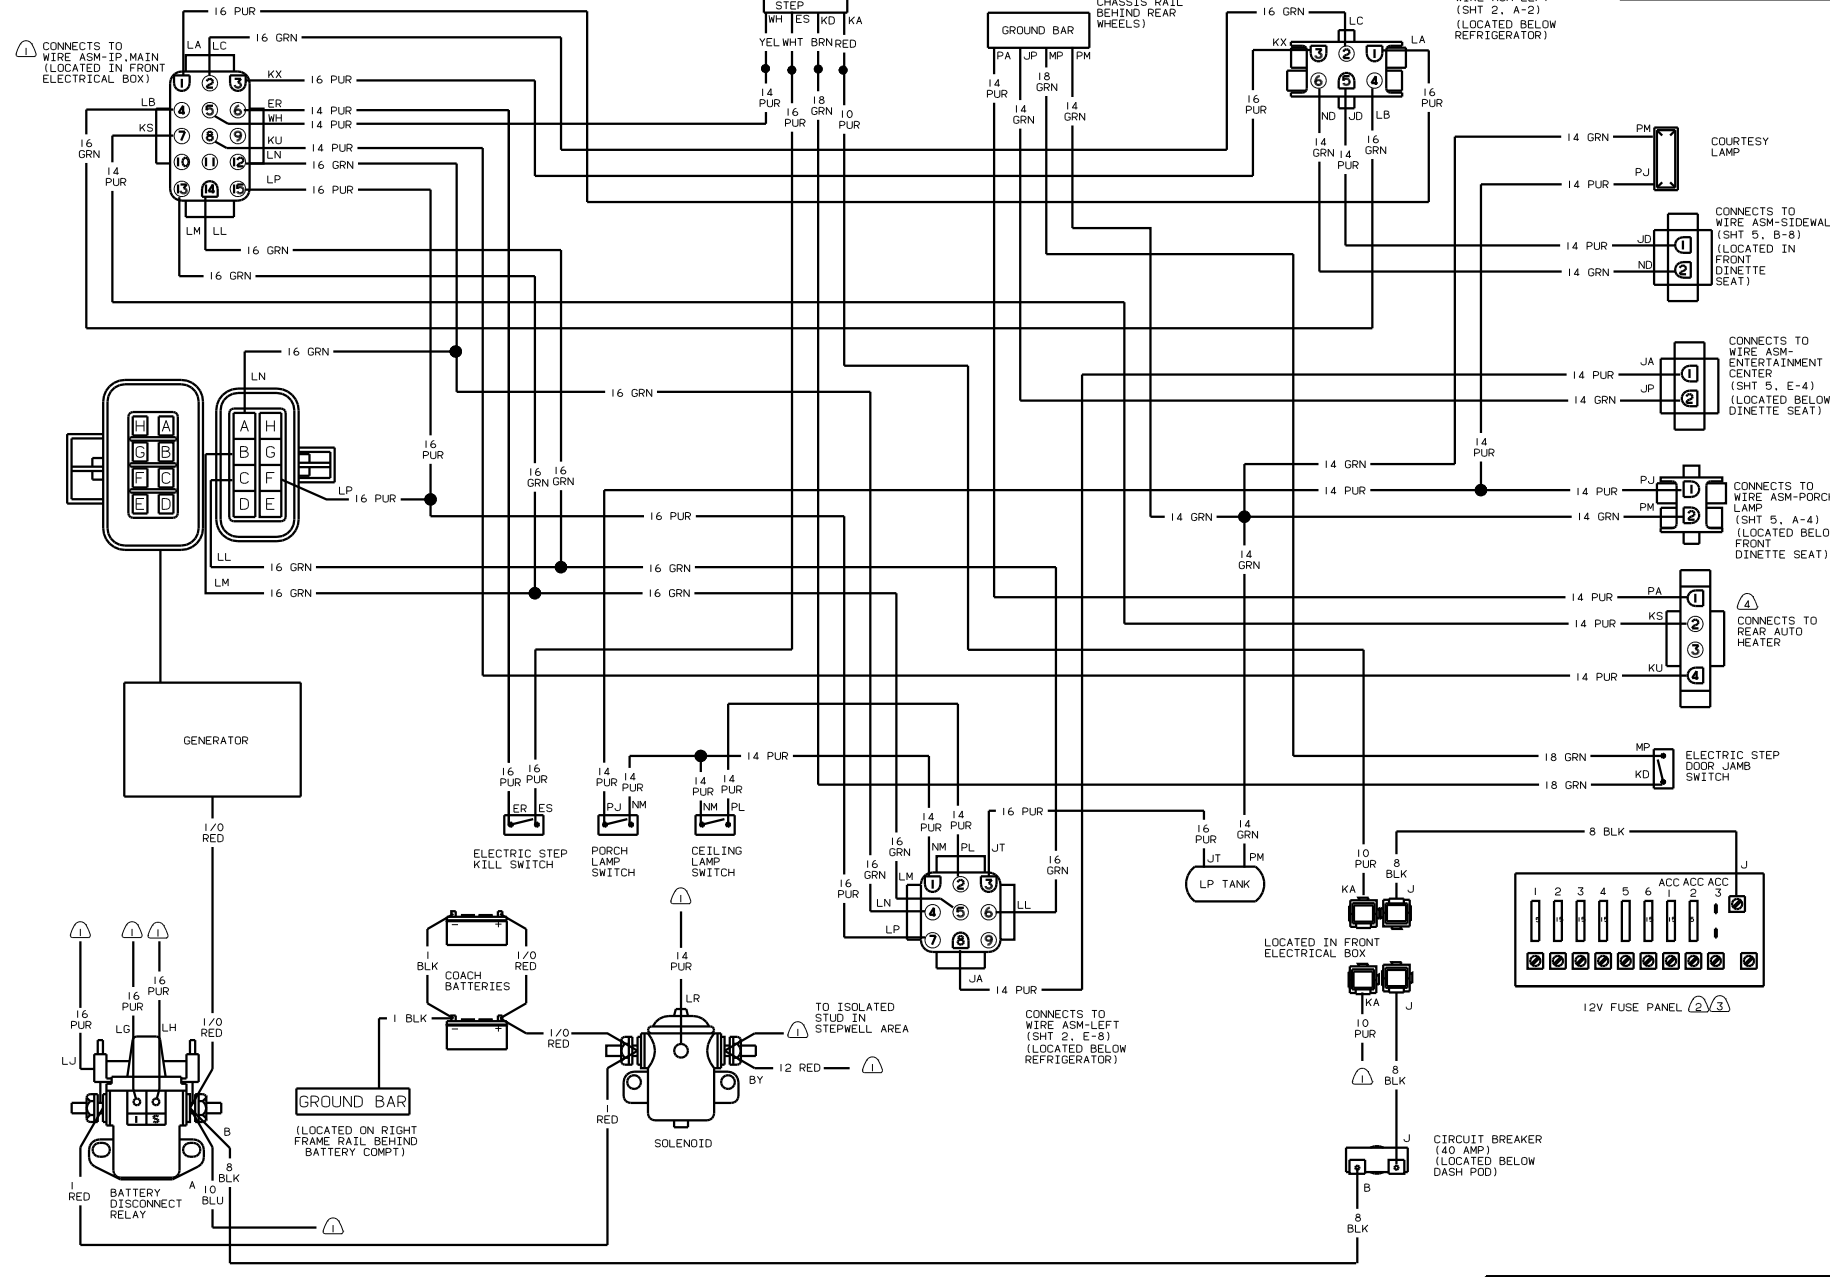

- ④ SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
- ③ SEE SHT 4 FOR ADDITIONAL INFORMATION.
- ② SEE SHT 2 FOR ADDITIONAL INFORMATION.
- ① SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.

WIRING DIAGRAM CHASSIS
 (WIRE ASM 124824)

WINNEBAGO		99 F28E
OF IN	DATE	UNSPECIFIED TOLERANCES ARE IN INCHES.
CHP	DATE	WELD DIM (1)
DR	DATE	ONE-PLACE (1, 2)
PL	DATE	TWO-PLACE (1, 2)
W	DATE	ANGLE
CDR	DATE	INDIC. W/ANGLE PROJECTION
LAYOUT		TITLE
BY		WIRING DIAGRAM-BODY 12V
SCALE	NOTE	DO NOT SCALE DIMENSIONS
SHEET 1 OF 6		130604

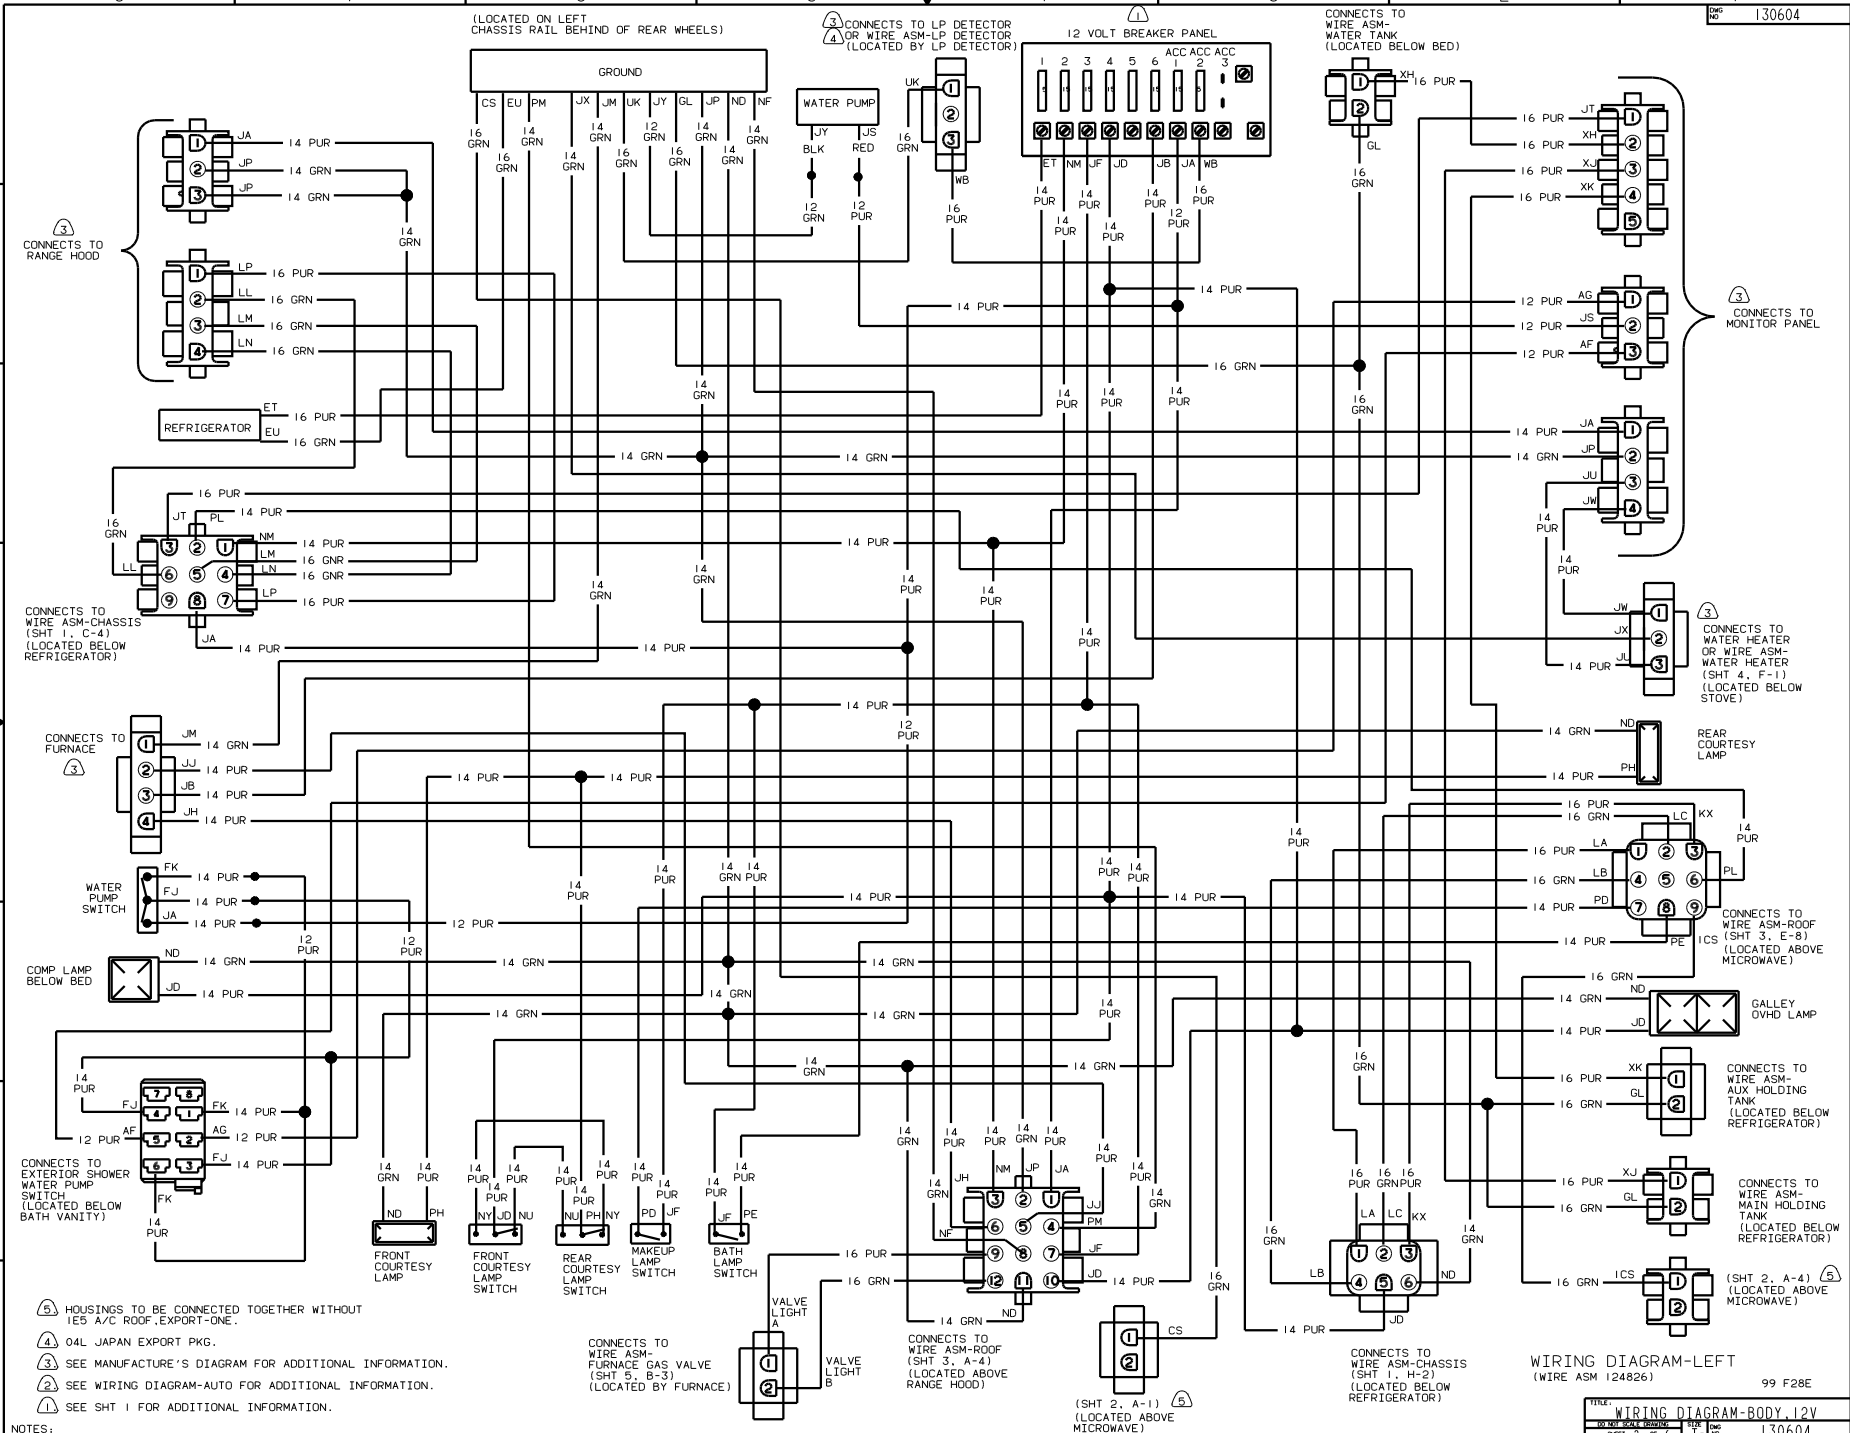

- ⑤ HOUSINGS TO BE CONNECTED TOGETHER WITHOUT IE5 A/C ROOF EXPORT ONE.
- ④ 04L JAPAN EXPORT PKG.
- ③ SEE MANUFACTURE'S DIAGRAM FOR ADDITIONAL INFORMATION.
- ② SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
- ① SEE SHT 1 FOR ADDITIONAL INFORMATION.

CONNECTS TO WIRE ASM- FURNACE GAS VALVE (SHT 5, B-3) (LOCATED BY FURNACE)

CONNECTS TO WIRE ASM-ROOF (SHT 3, A-4) (LOCATED ABOVE RANGE HOOD)

(SHT 2, A-1) ⑤
CONNECTS TO WIRE ASM-ROOF (LOCATED ABOVE MICROWAVE)








CONNECTS TO WIRE ASM-CHASSIS (SHT 1, H-2) (LOCATED BELOW REFRIGERATOR)

WIRING DIAGRAM-LEFT (WIRE ASM 124826)







99 F28E

TITLE: WIRING DIAGRAM-BODY_12V	
NO. OF SHEETS	TOTAL SHEETS
SHEET 2 OF 6	16
DATE	130604

   
CONNECTS TO WIRE ASM-OVHD RIGHT (SHT 5, G-8) (LOCATED IN CENTER OF DINETTE OVHD)

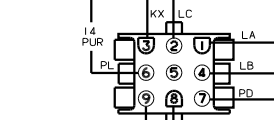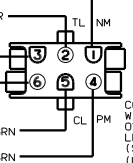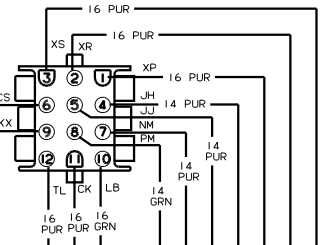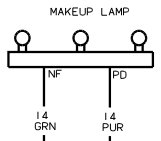

  
 
 
 
CONNECTS TO WIRE ASM-LEFT (SHT 2, D-1) (LOCATED ABOVE MICROWAVE)

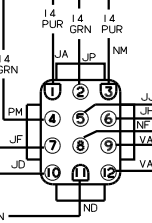








 
CONNECTS TO WIRE ASM-LEFT (SHT 2 A-4) (LOCATED ABOVE RANGE HOOD)



    CONNECTS TO WIRE ASM-FURNACE GAS LIGHT (SHT 9, A-3) (LOCATED IN CENTER OF DINETTE OVHD)



WIRING DIAGRAM ROOF (WIRE ASM 124900)

 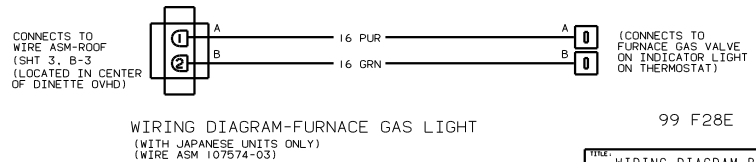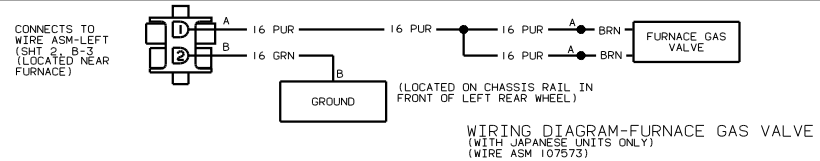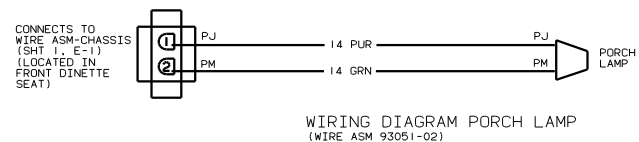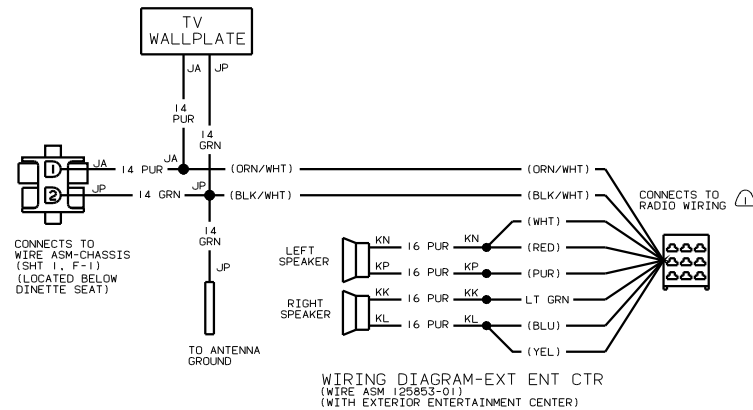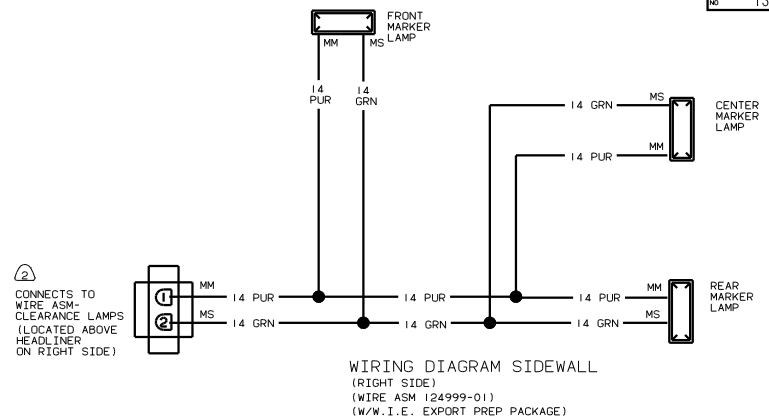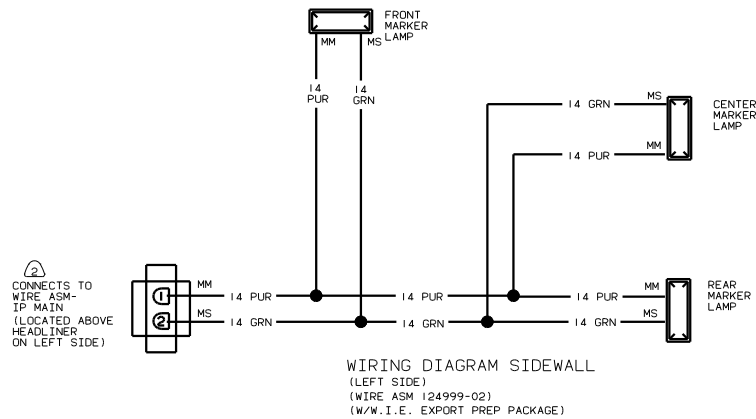
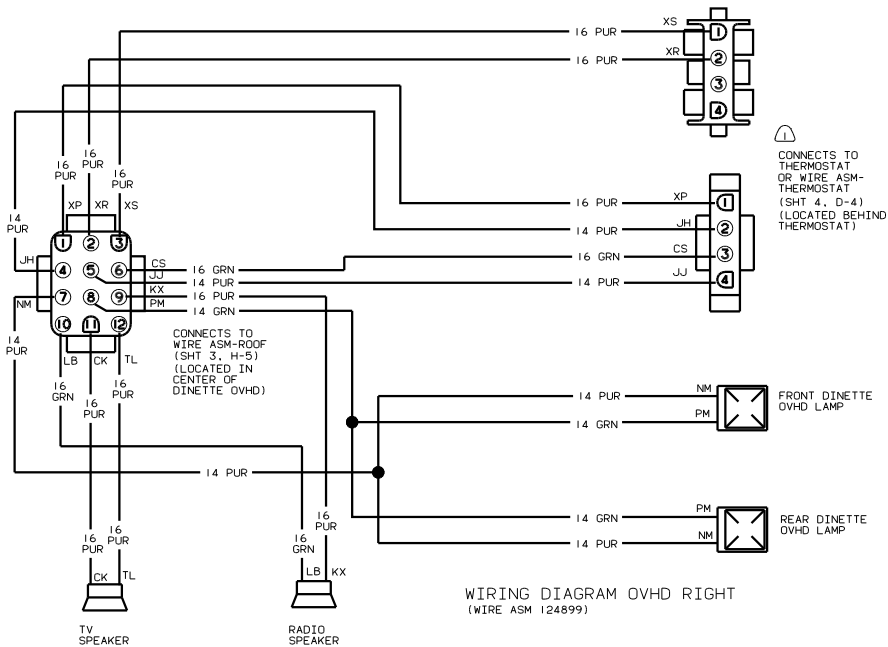


SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.

SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

H
G
F
E
D
C
B
A

H
G
F
E
D
C
B
A

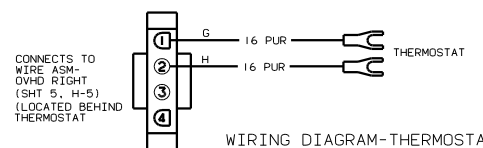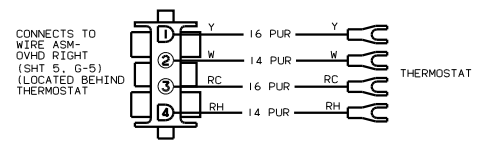

WIRING DIAGRAM-THERMOSTAT
(WIRE ASM 117252-02)

99 F28E



NOTES:

TITLE: WIRING DIAGRAM-BODY 12V	
DO NOT SCALE DRAWING	REV NO 1
SHEET 5 OF 6	FIG NO 130604