





**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

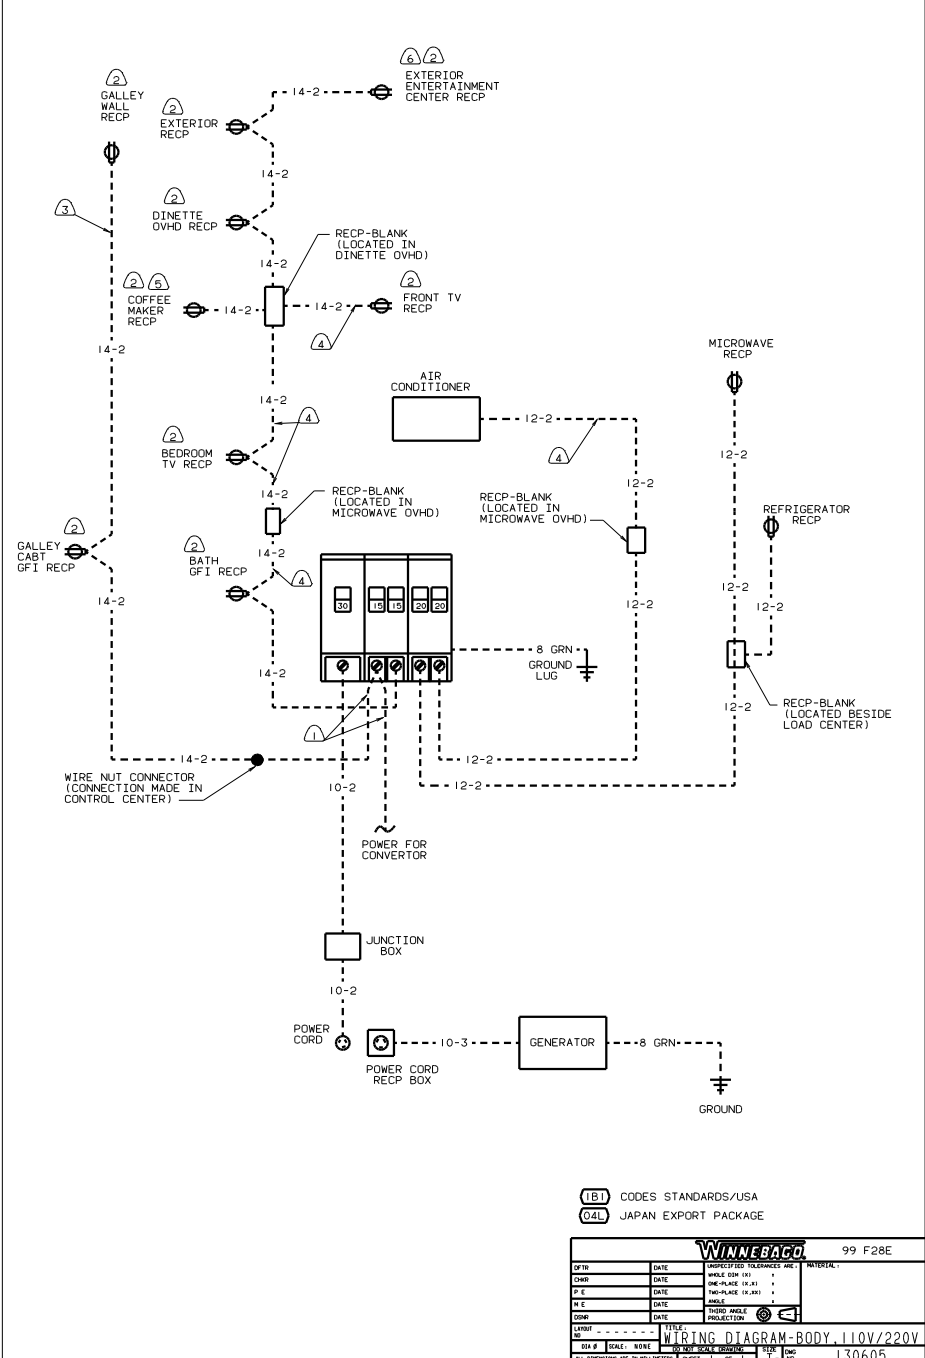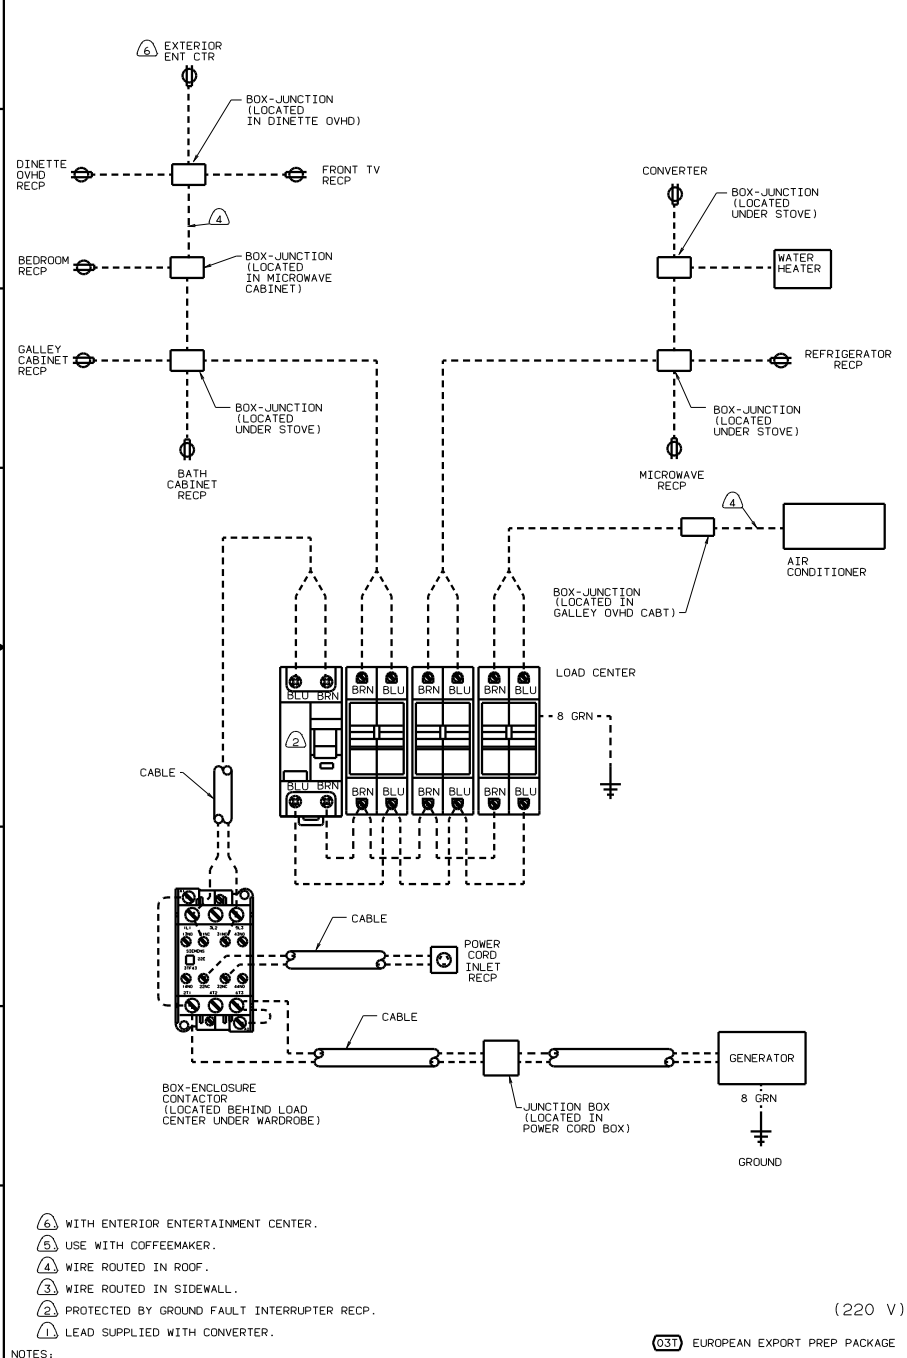

- Ⓐ WITH EXTERIOR ENTERTAINMENT CENTER.
- Ⓒ USE WITH COFFEEMAKER.
- Ⓓ WIRE ROUTED IN ROOF.
- Ⓔ WIRE ROUTED IN SIDEWALL.
- Ⓕ PROTECTED BY GROUND FAULT INTERRUPTER RECP.
- ① LEAD SUPPLIED WITH CONVERTER.

- Ⓐ CODES STANDARDS/USA
- Ⓒ JAPAN EXPORT PACKAGE

<b>WINNEBAGO</b> 99 F28E		OF IN	DATE	UNSPECIFIED TOLERANCES ARE:	INVERTAL
		CHP	DATE	FR. OR 1/16"	
DR	DATE	ONE-PLACE 1/16"			
D/E	DATE	TWO-PLACE 1/16"			
CDR	DATE	THREE-PLACE 1/16"			
DR	DATE	FOUR-PLACE 1/16"			

WIRING DIAGRAM-BODY 110V/220V  
 REF: 128167-A | 130605