



**DANGER**



**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.








**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.





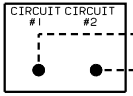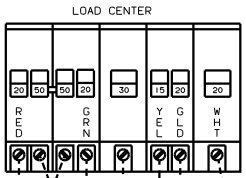

 

 

CENTRAL AIR UNIT (LOCATED IN RIGHT REAR COMPARTMENT BELOW FLOOR)

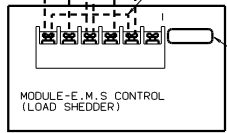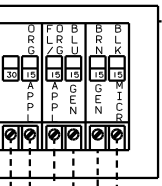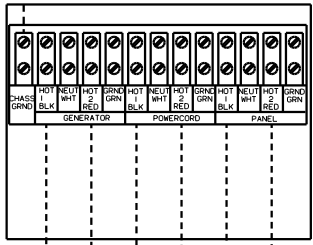

 SWITCH-WATER HEATER (LOCATED IN GALLEY AREA)

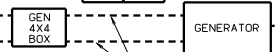

INVERTER BREAKER PANEL

    

- ① THIS WIRE IS 6-3 WITH LP GENERATOR.
- ② WIRE ROUTED THROUGH FLOOR.
- ③ WITH WASHER/DRYER.
- ④ WIRE ROUTED IN ROOF.
- ⑤ WIRE ROUTED IN SIDEWALL.
- ⑥ PROTECTED BY GFI RECP.

78J ELECTRICAL SYS 50-AMP

TITLE		WIRING DIAGRAM-BODY, 110V	
NO	REV	DATE	BY
20	NO	SCALE	2000
SHEET		2 OF 2	
JOB NO		131222	

00 Q36C  
50 AMP CAN