



DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

DWG NO.	SHT
102765-01	1
102765-02	2
102765-03	3
102765-04	4

REV	DATE	BY	CHKD	DWG NO	102765
ECR	REV	ZONE	REVISION RECORD	DATE	CR

D
C
B
A

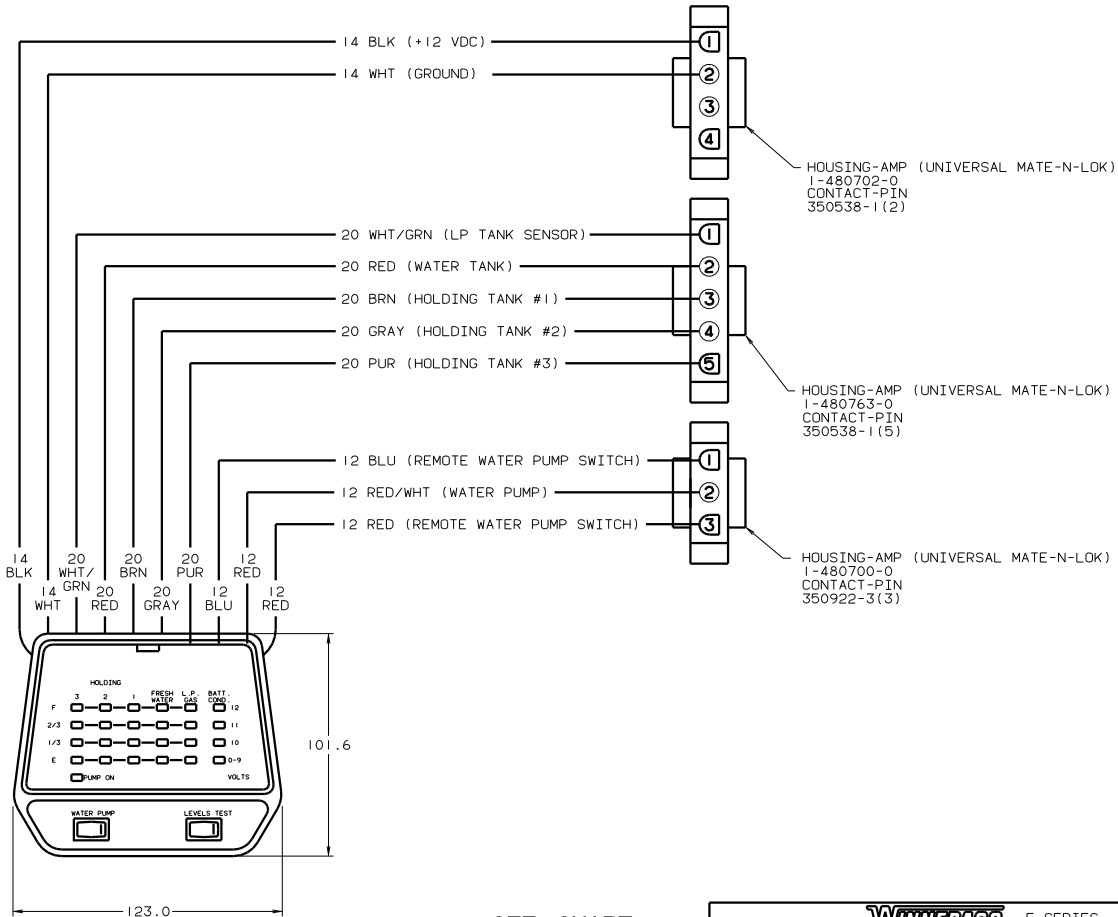

- NOTES:
- THE L.P. GAS REQUIRES A 90 OHM SENDING UNIT.
 - THE "E" INDICATION REQUIRES NO SENSOR.

SEE CHART
FOR COLOR VARIATIONS
OF THIS PART

WINGS

WINNEBAGO		F SERIES	
OFTR	DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL:
CHGR	DATE	WHOLE DIM (X.X)	PURCHASED
P E	DATE	ONE-PLACE (X.XX)	
M E	DATE	TWO-PLACE (X.XXX)	
DSCR	DATE	ANGLE	
TITLE: PANEL-MONITOR		SIZE: 1.0	
DIA #	SCALE: NONE	TO ADL SCALE (CONVERT)	DWG NO: 102765
ALL DIMENSIONS ARE IN MILLIMETERS		SHEET 1 OF 4	

8

7

6


5

4

3

2

1

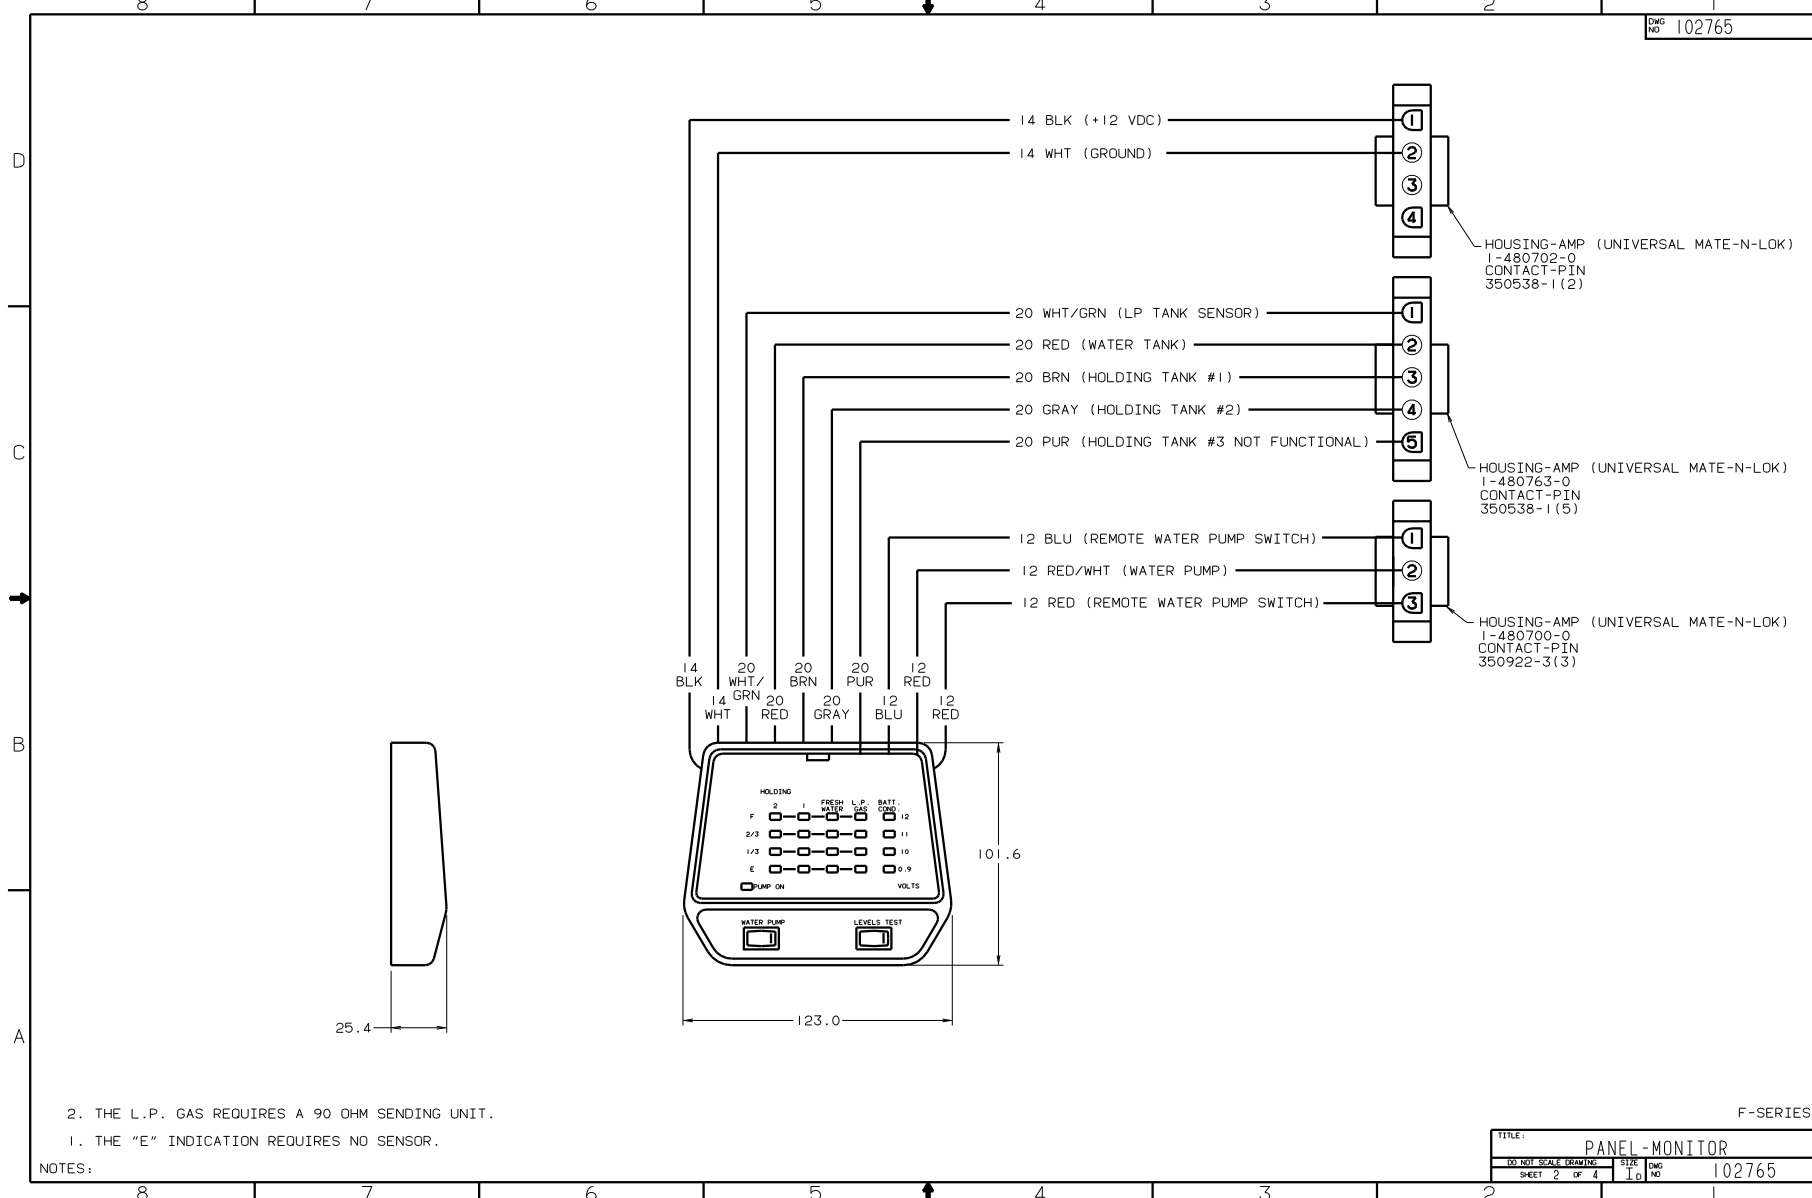

HOUSING-AMP (UNIVERSAL MATE-N-LOK)
 1-480702-0
 CONTACT-PIN
 350538-1 (2)


HOUSING-AMP (UNIVERSAL MATE-N-LOK)
 1-480763-0
 CONTACT-PIN
 350538-1 (5)

HOUSING-AMP (UNIVERSAL MATE-N-LOK)
 1-480700-0
 CONTACT-PIN
 350922-3 (3)

- NOTES:
- THE "E" INDICATION REQUIRES NO SENSOR.
 - THE L.P. GAS REQUIRES A 90 OHM SENDING UNIT.

TITLE:		PANEL-MONITOR	
DO NOT SCALE DIMENSIONS	SCALE	DWG NO	102765
SHEET 2	OF 4		

D
C
B
A

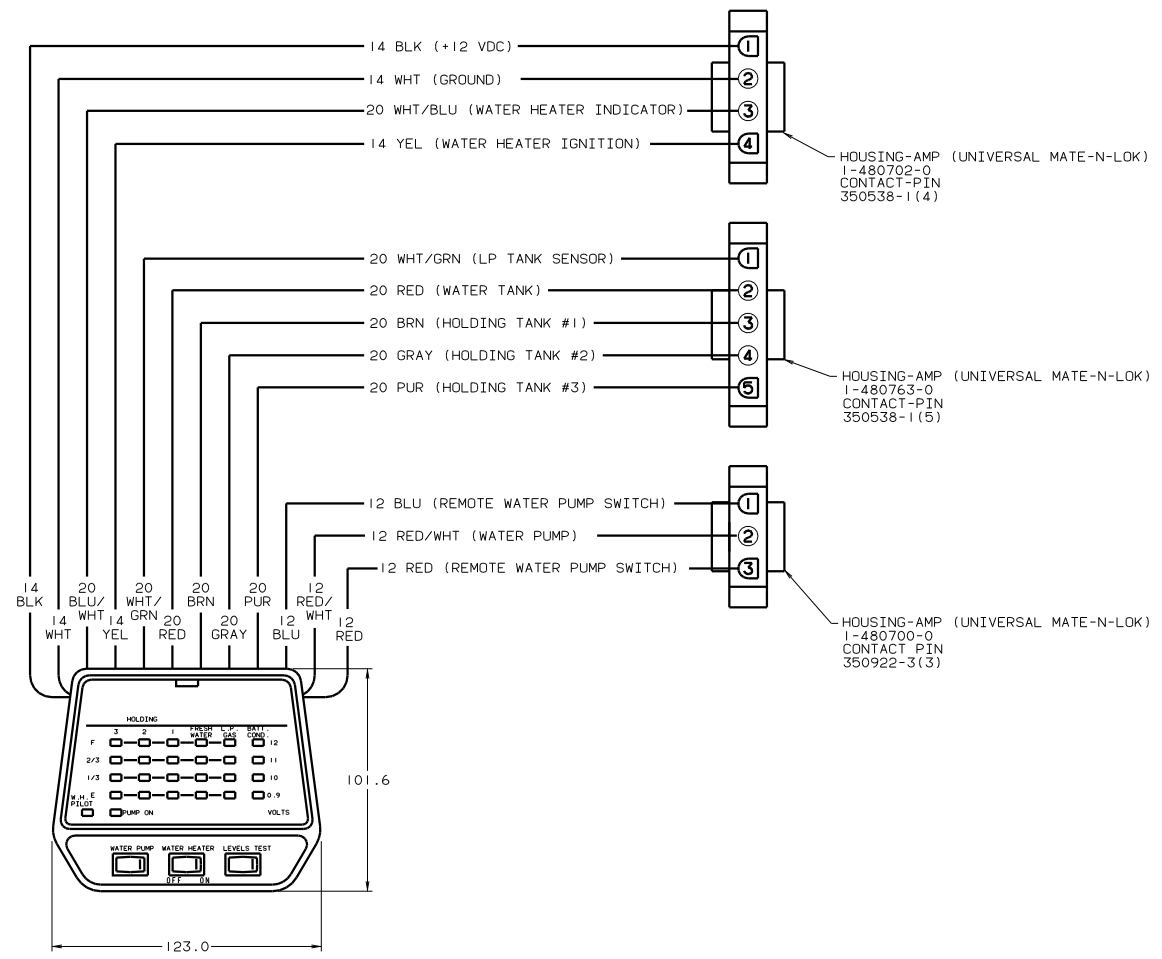


NOTES:
2. THE L.P. GAS REQUIRES A 90 OHM SENDING UNIT.
1. THE "E" INDICATION REQUIRES NO SENSOR.

F-SERIES

TITLE: PANEL-MONITOR		DWG NO 102765	
DO NOT SCALE DRAWING	SHEET 3 OF 4	SIZE 1.0	

D
C
B
A

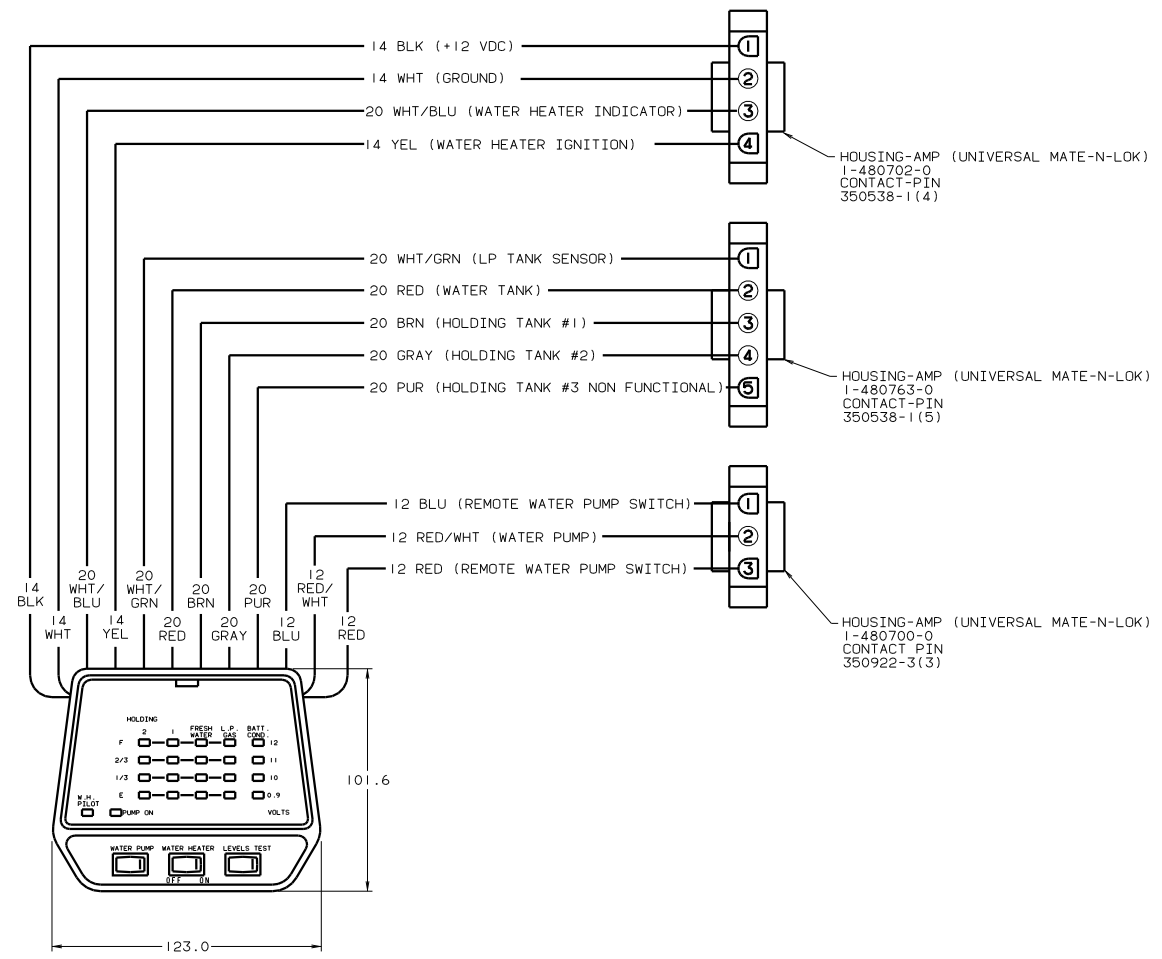

- NOTES:
- 2. THE L.P. GAS REQUIRES A 90 OHM SENDING UNIT.
 - 1. THE "E" INDICATION REQUIRES NO SENSOR.

F-SERIES

TITLE: PANEL-MONITOR	
DO NOT SCALE DRAWING	SIZE
SHEET 4 OF 4	DWG NO 102765