



**DANGER**


**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

RELEASE	REV A	DATE	DFTR	ADM	DWG NO 121879
REV ZONE	REVISION RECORD			DATE	DR CR

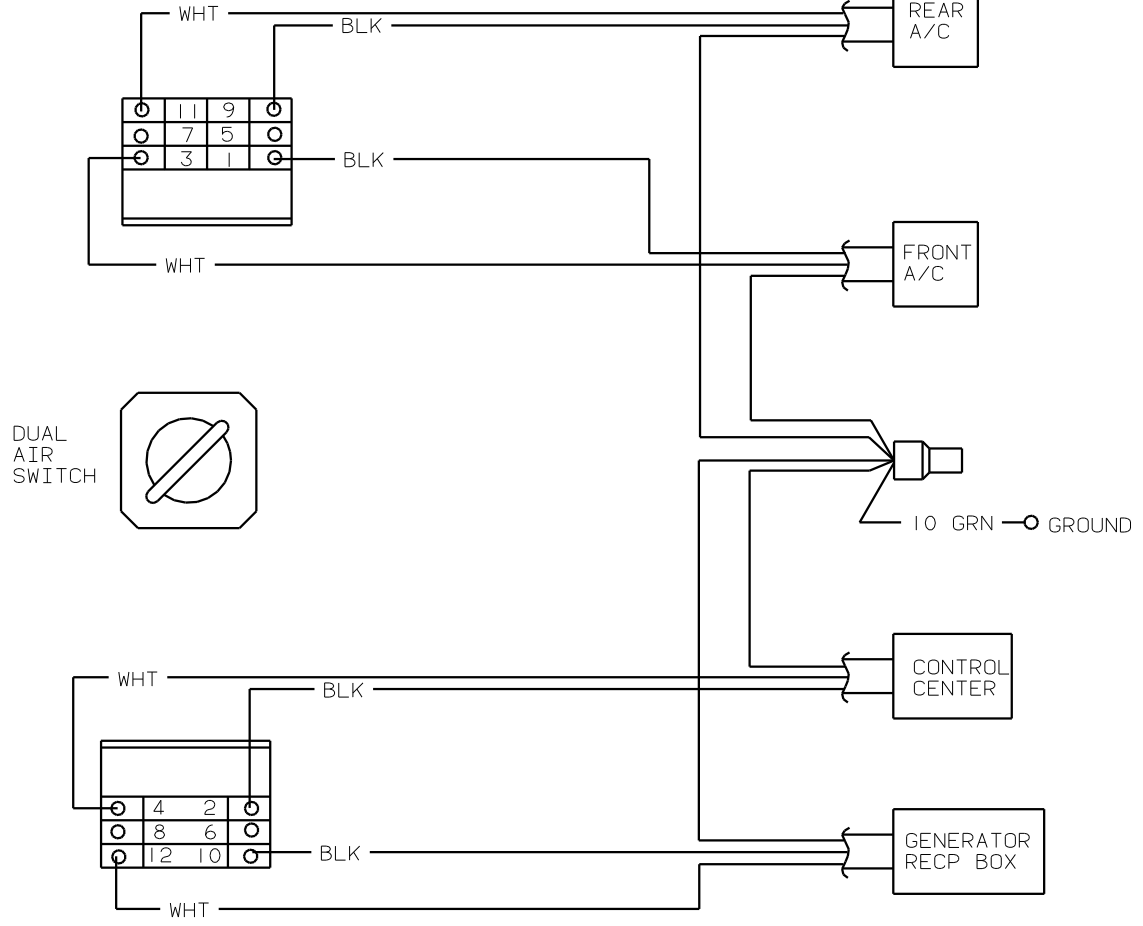

1. SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.

NOTES:

<b>WINNEBAGO.</b> 96 MOTORHOMES		UNSPECIFIED TOLERANCES ARE		MATERIAL
		WHOLE DIM (X)	±	
DFTR	DATE	ONE-PLACE (X.X)	±	
CHKR	DATE	TWO-PLACE (X.XX)	±	
P E	DATE	ANGLE	±	
M E	DATE	THIRD ANGLE PROJECTION	±	
DSNR	DATE			
LAYOUT NO	TITLE: WIRING DIAGRAM-DUAL AIR SW			
DIA Ø	SCALE NONE	DO NOT SCALE DRAWING	SIZE I c	DWG NO 121879
ALL DIMENSIONS ARE IN MILLIMETERS		SHEET 1	OF 1	