




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

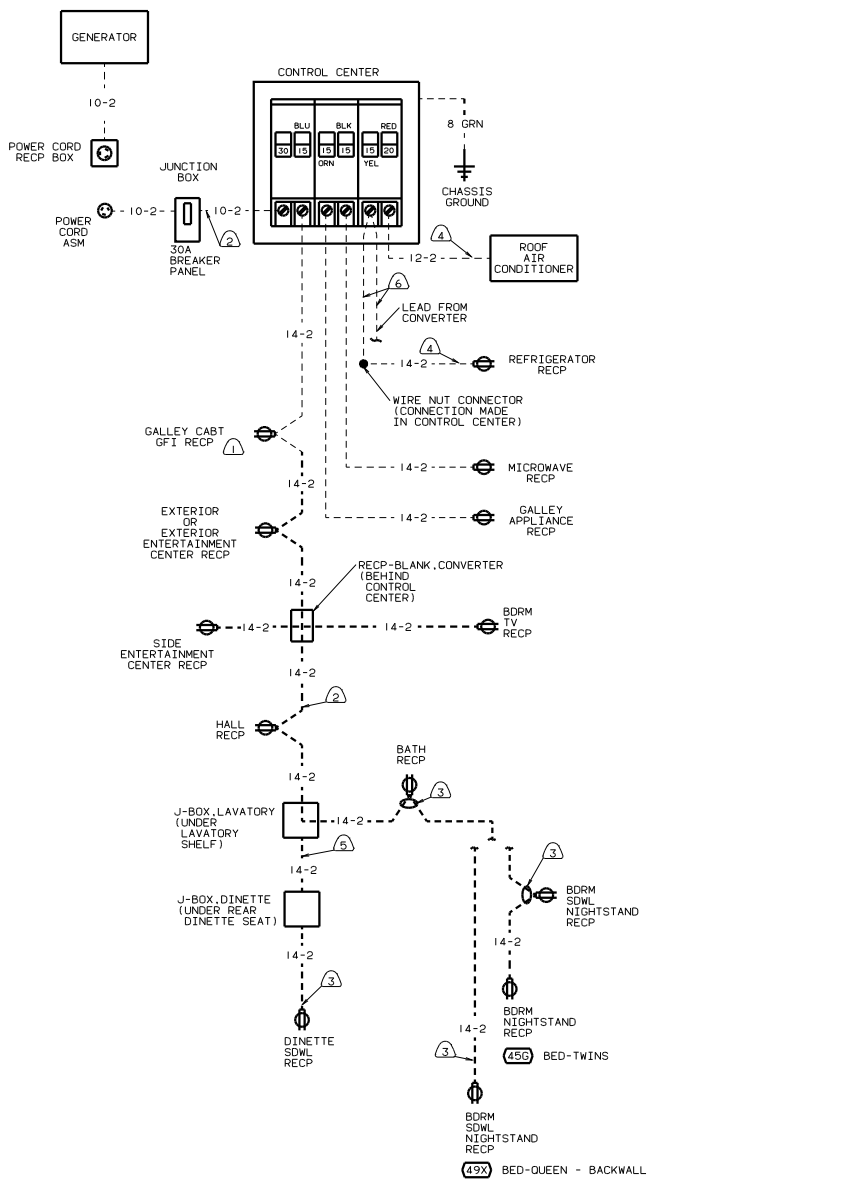

- ① LEAD SUPPLIED WITH CONVERTER.
- ② FLEXIBLE CORD FOR SLIDE-OUT.
- ③ WIRE ROUTED THRU ROOF.
- ④ WIRE ROUTED THRU SIDEWALL.
- ⑤ WIRE ROUTED THRU FLOOR.
- ⑥ ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT INTERRUPT PROTECTED.

(265) CODES/STANDARDS-CSA/CMVSS  
 (120) ELECTRICAL SYSTEM 30 AMP

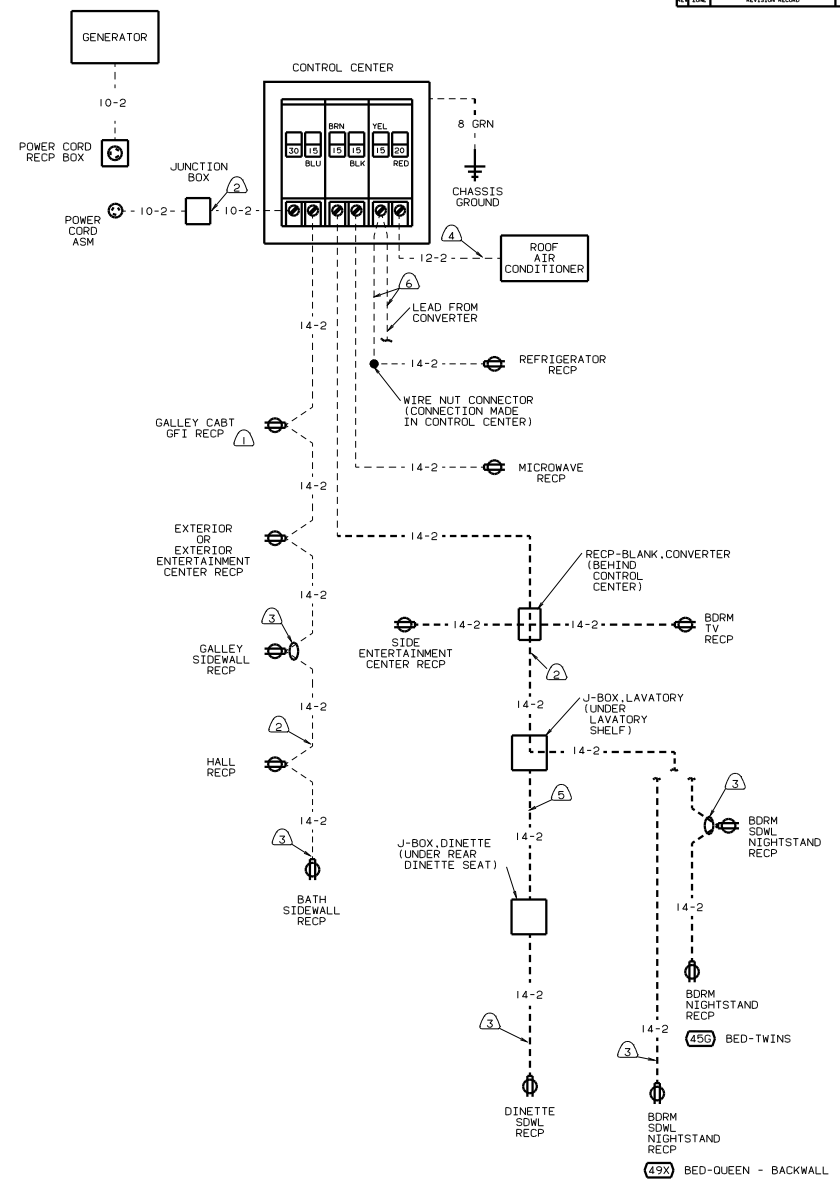

(181) CODES/STANDARDS USA  
 (120) ELECTRICAL SYSTEM 30 AMP

**WINNEBAGO** '00 331C

OF IN	DATE	UNDESIGNED TOLERANCES ARE	MATERIAL
CHP	DATE	ONE-PLACE (R, 21)	
WFE	DATE	TWO-PLACE (R, 20)	
WFE	DATE	MAGLE	
CONP	DATE	INDUS. WAGLE PRODUCTION	

LANE# - - - - - TITLE  
 WIRING DIAGRAM-BODY, 110V  
 SHEET 1 OF 1  
 REF: 130373 132250