




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

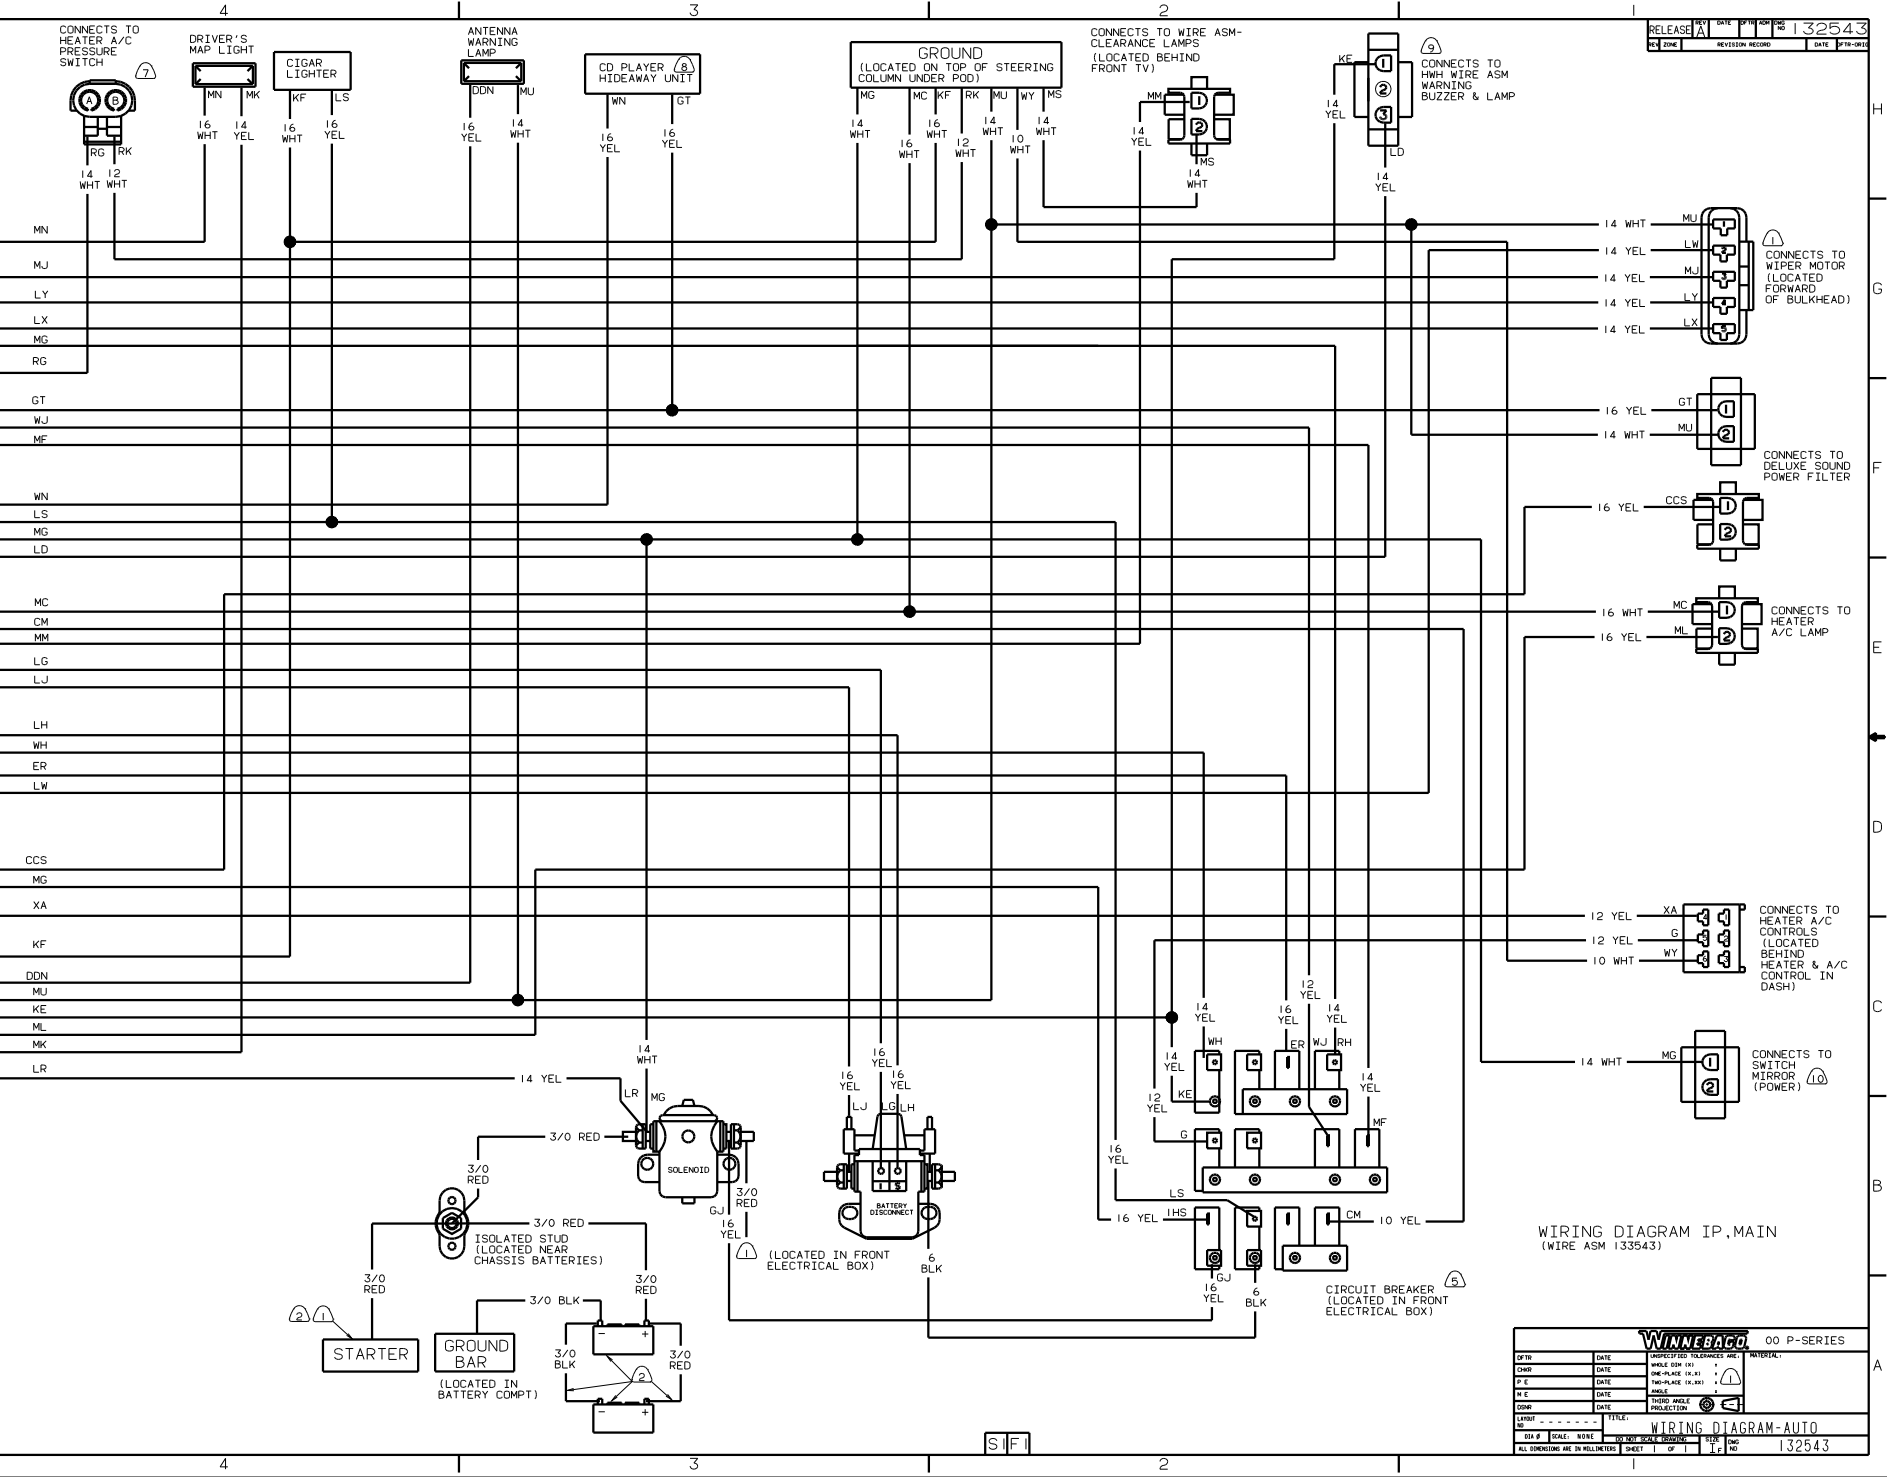


WIRING DIAGRAM IP, MAIN  
 (WIRE ASM 133543)

WINNEBAGO		00 P-SERIES	
OF IN	DATE	UNDESIGNED TOLERANCES ARE:	MATERIAL
CHP	DATE	WHOLE DIM (IN)	
DFE	DATE	ONE-PLACE (IN, IN)	
D/E	DATE	TWO-PLACE (IN, IN)	
NGLE	DATE	THREE-PLACE (IN, IN)	
CDHP	DATE	THIRD WIRE PRODUCTION	
LAH#	DATE	TITLE	
REV #	SCALE	NOTE	NO NET SCALE CHANGES
ALL DIMENSIONS ARE IN MILLIMETERS		SHEET	1 OF 1
WIRING DIAGRAM-AUTO		FIG	1 OF 1
		NO	132543

SIF

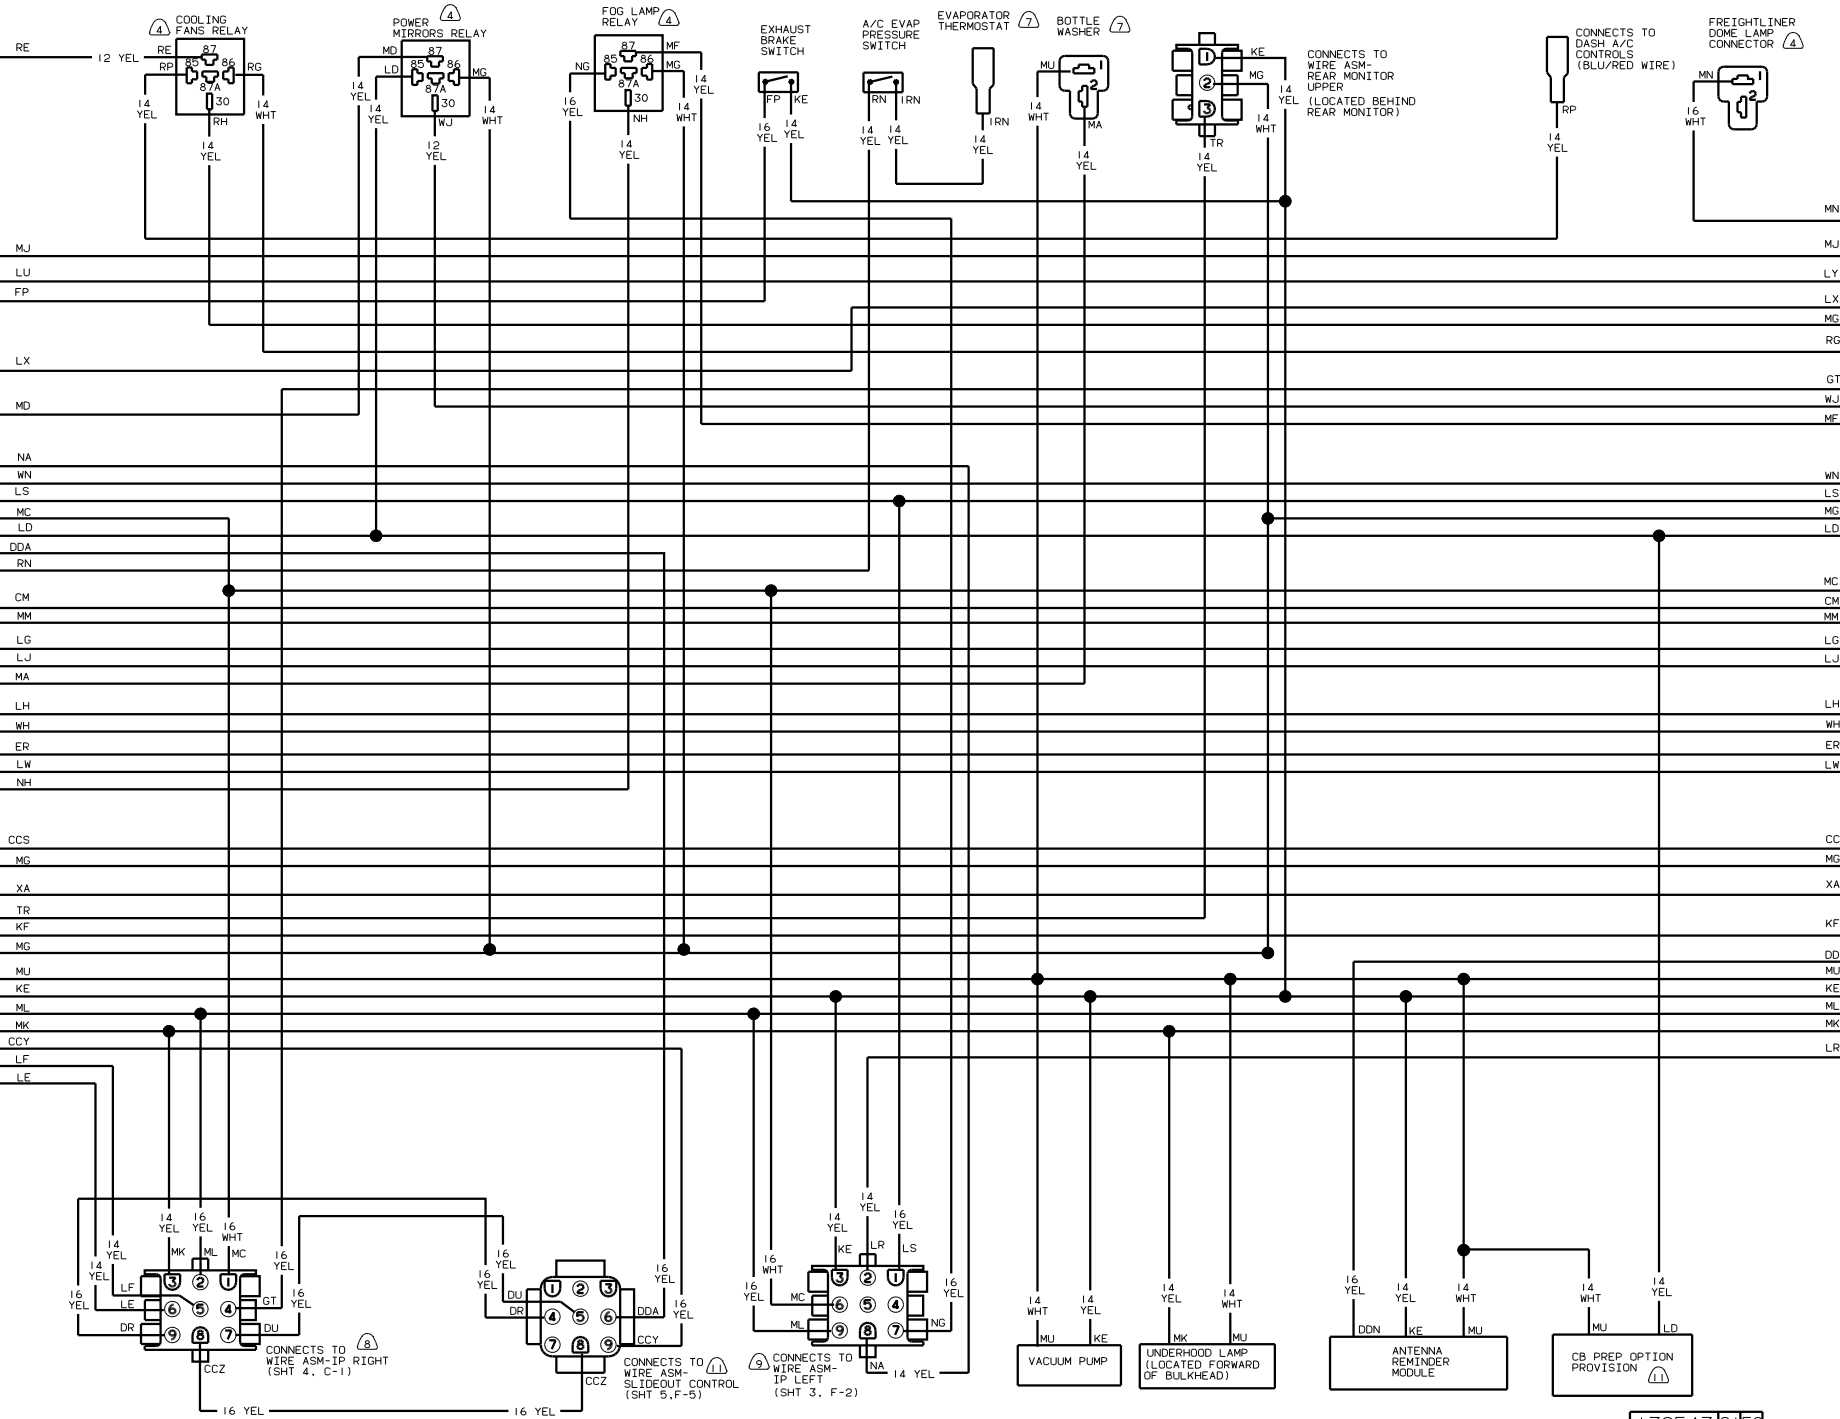

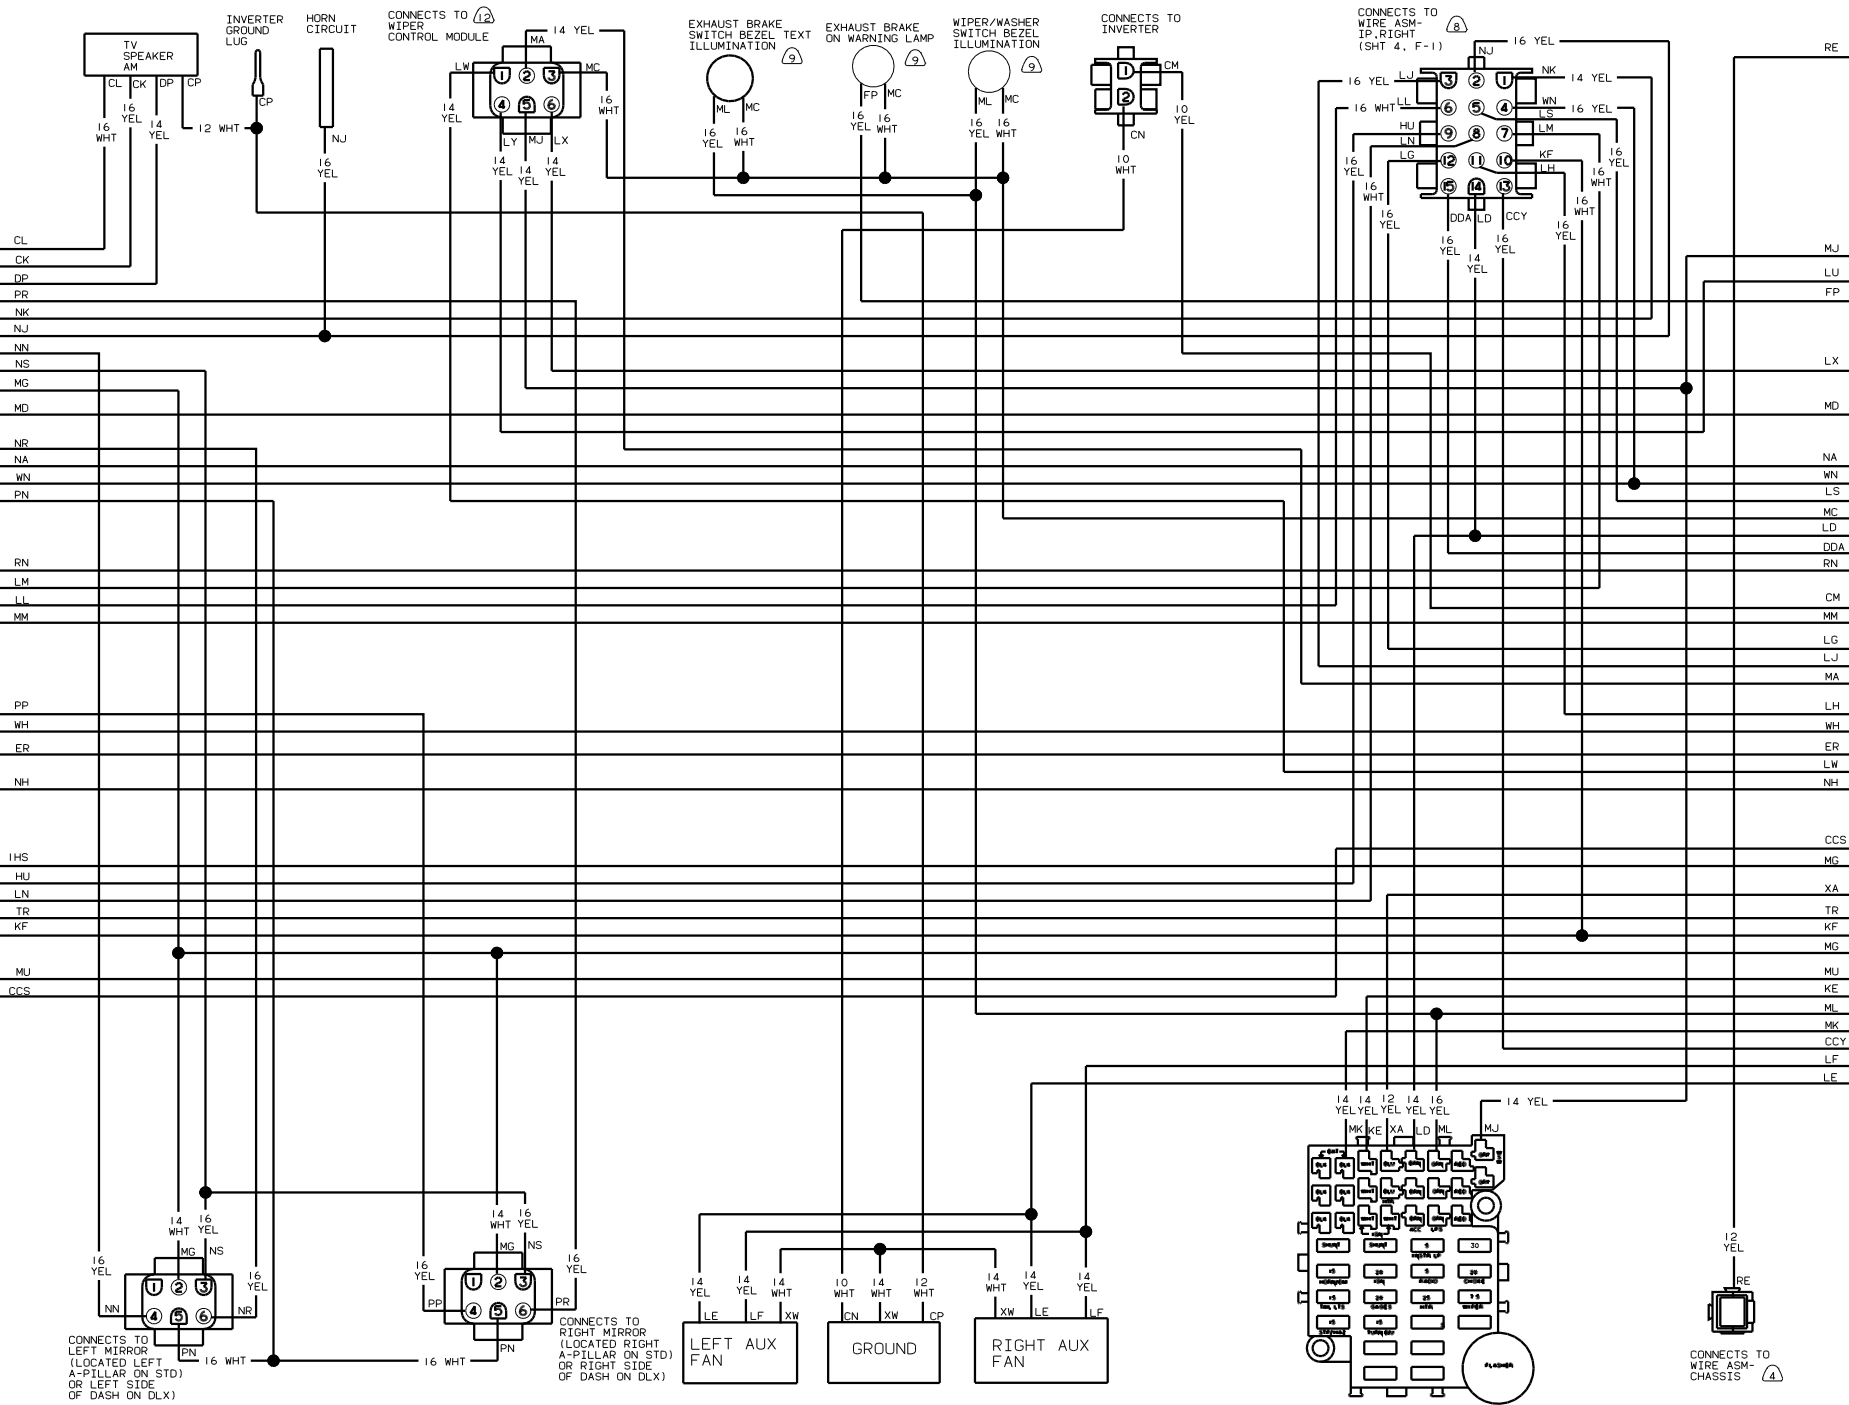

CONNECTS TO LEFT MIRROR (LOCATED LEFT A-PILLAR ON STD) OR LEFT SIDE OF DASH ON DLX)

CONNECTS TO RIGHT MIRROR (LOCATED RIGHT A-PILLAR ON STD) OR RIGHT SIDE OF DASH ON DLX)

CONNECTS TO WIRE ASM-CHASSIS

H  
G  
F  
E  
D  
C  
B  
A

CONNECTS TO WIRE ASM-MTS AMPLIFIER

CONNECTS TO MIRROR SWITCH

CONNECTS TO HEATER MIRROR SWITCH


CONNECTS TO WIRE ASM-HEADLAMP


CONNECTS TO MIRROR SWITCH (POWER)

CONNECTS TO WIRE ASM-CHASSIS (LOCATED ON FLOOR BELOW LEFT SIDE OF DASH)

CONNECTS TO FREIGHTLINER HEADLAMP WIRING CONNECTOR

- ⑫ LOCATED BELOW LEFT DASH ON BULKHEAD
- ⑪ LOCATED BELOW LEFT DASH
- ⑩ LOCATED IN DRIVER'S SIDE TRIM PANEL.
- ⑨ LOCATED ON LEFT SIDE OF DASH.
- ⑧ LOCATED ON RIGHT SIDE OF DASH.
- ⑦ LOCATED FORWARD OF BULKHEAD ON RIGHT SIDE.
- ⑥ SEE SHT 4 FOR ADDITIONAL INFORMATION.
- ⑤ SEE SHT 3 FOR ADDITIONAL INFORMATION.
- ④ LOCATED FORWARD OF BULKHEAD IN FRONT ELEC. BOX.
- ③ SEE WIRING DIAGRAM BODY FOR ADDITIONAL INFORMATION.
- ② SUPPLIED WITH CHASSIS.
- ① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

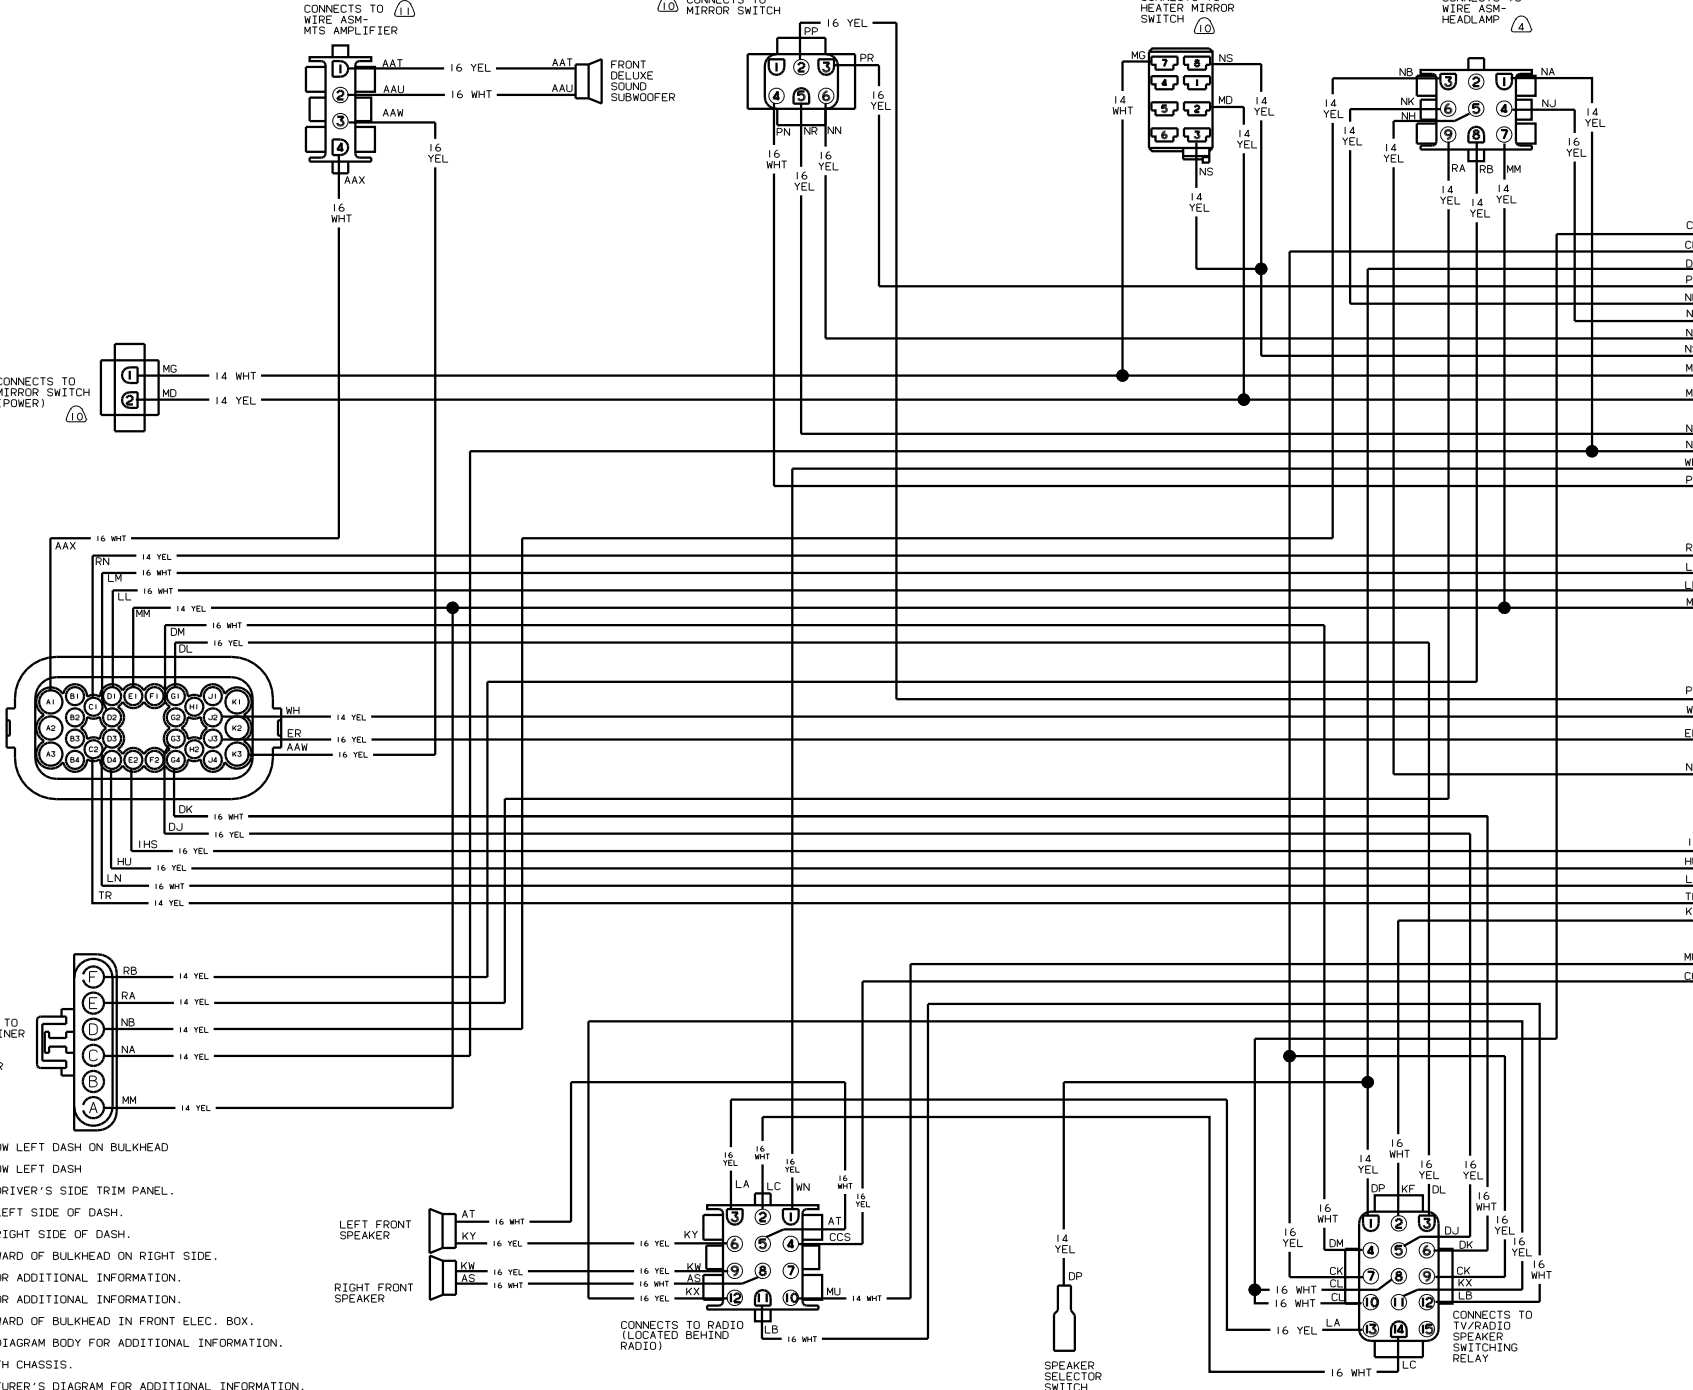

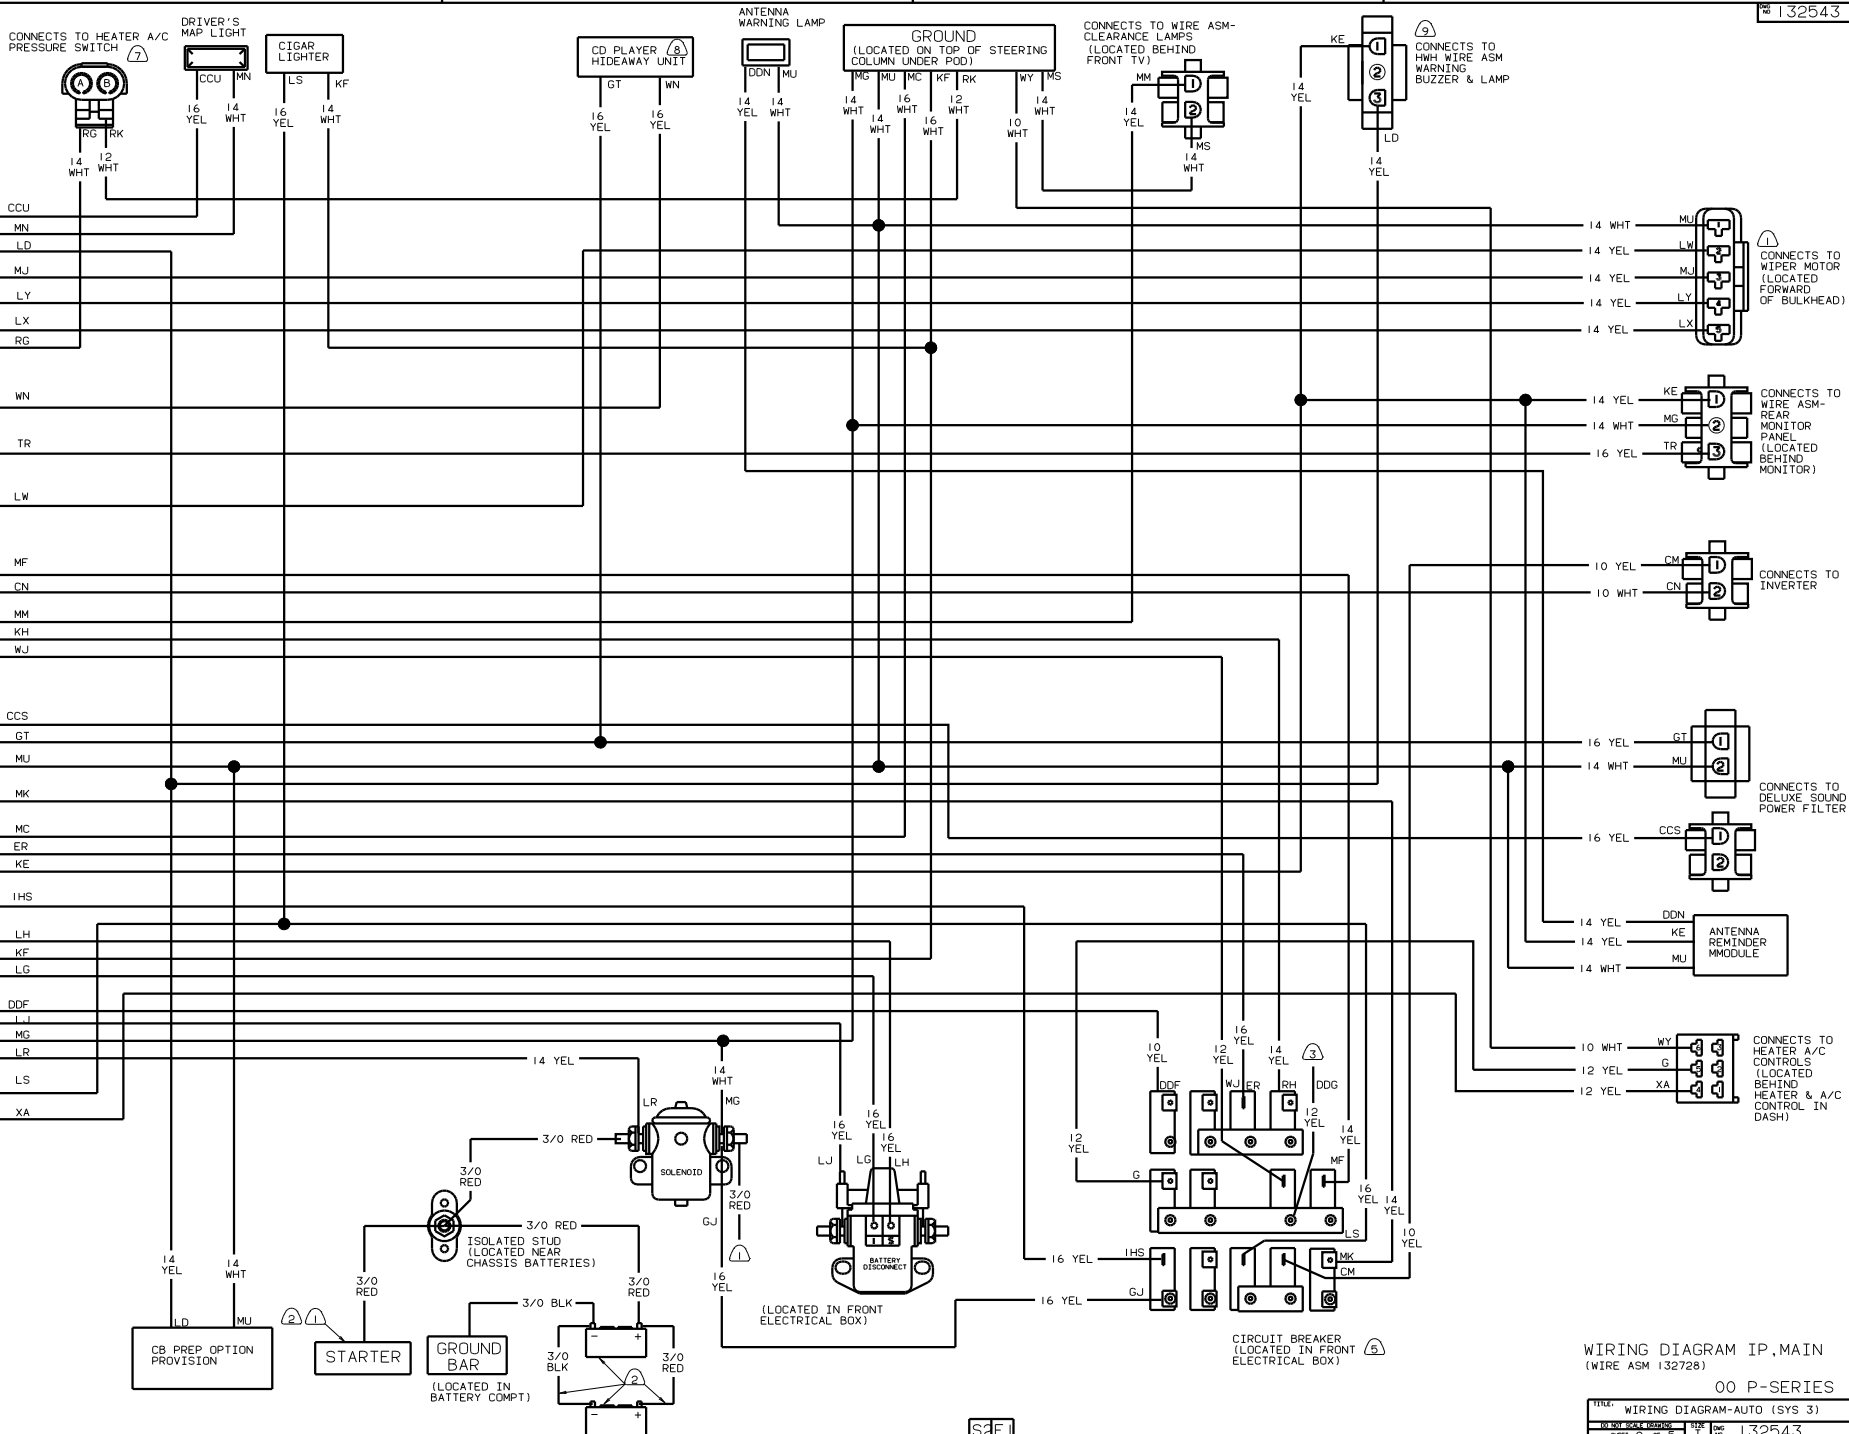



WIRING DIAGRAM IP.MAIN (WIRE ASM 132728)

00 P-SERIES







TITLE		WIRING DIAGRAM-AUTO (SYS 3)	
BY	DATE	CHK	DATE
1	1	1	1
SHEET		OF	
2		5	
DWG NO		132543	

 S2F


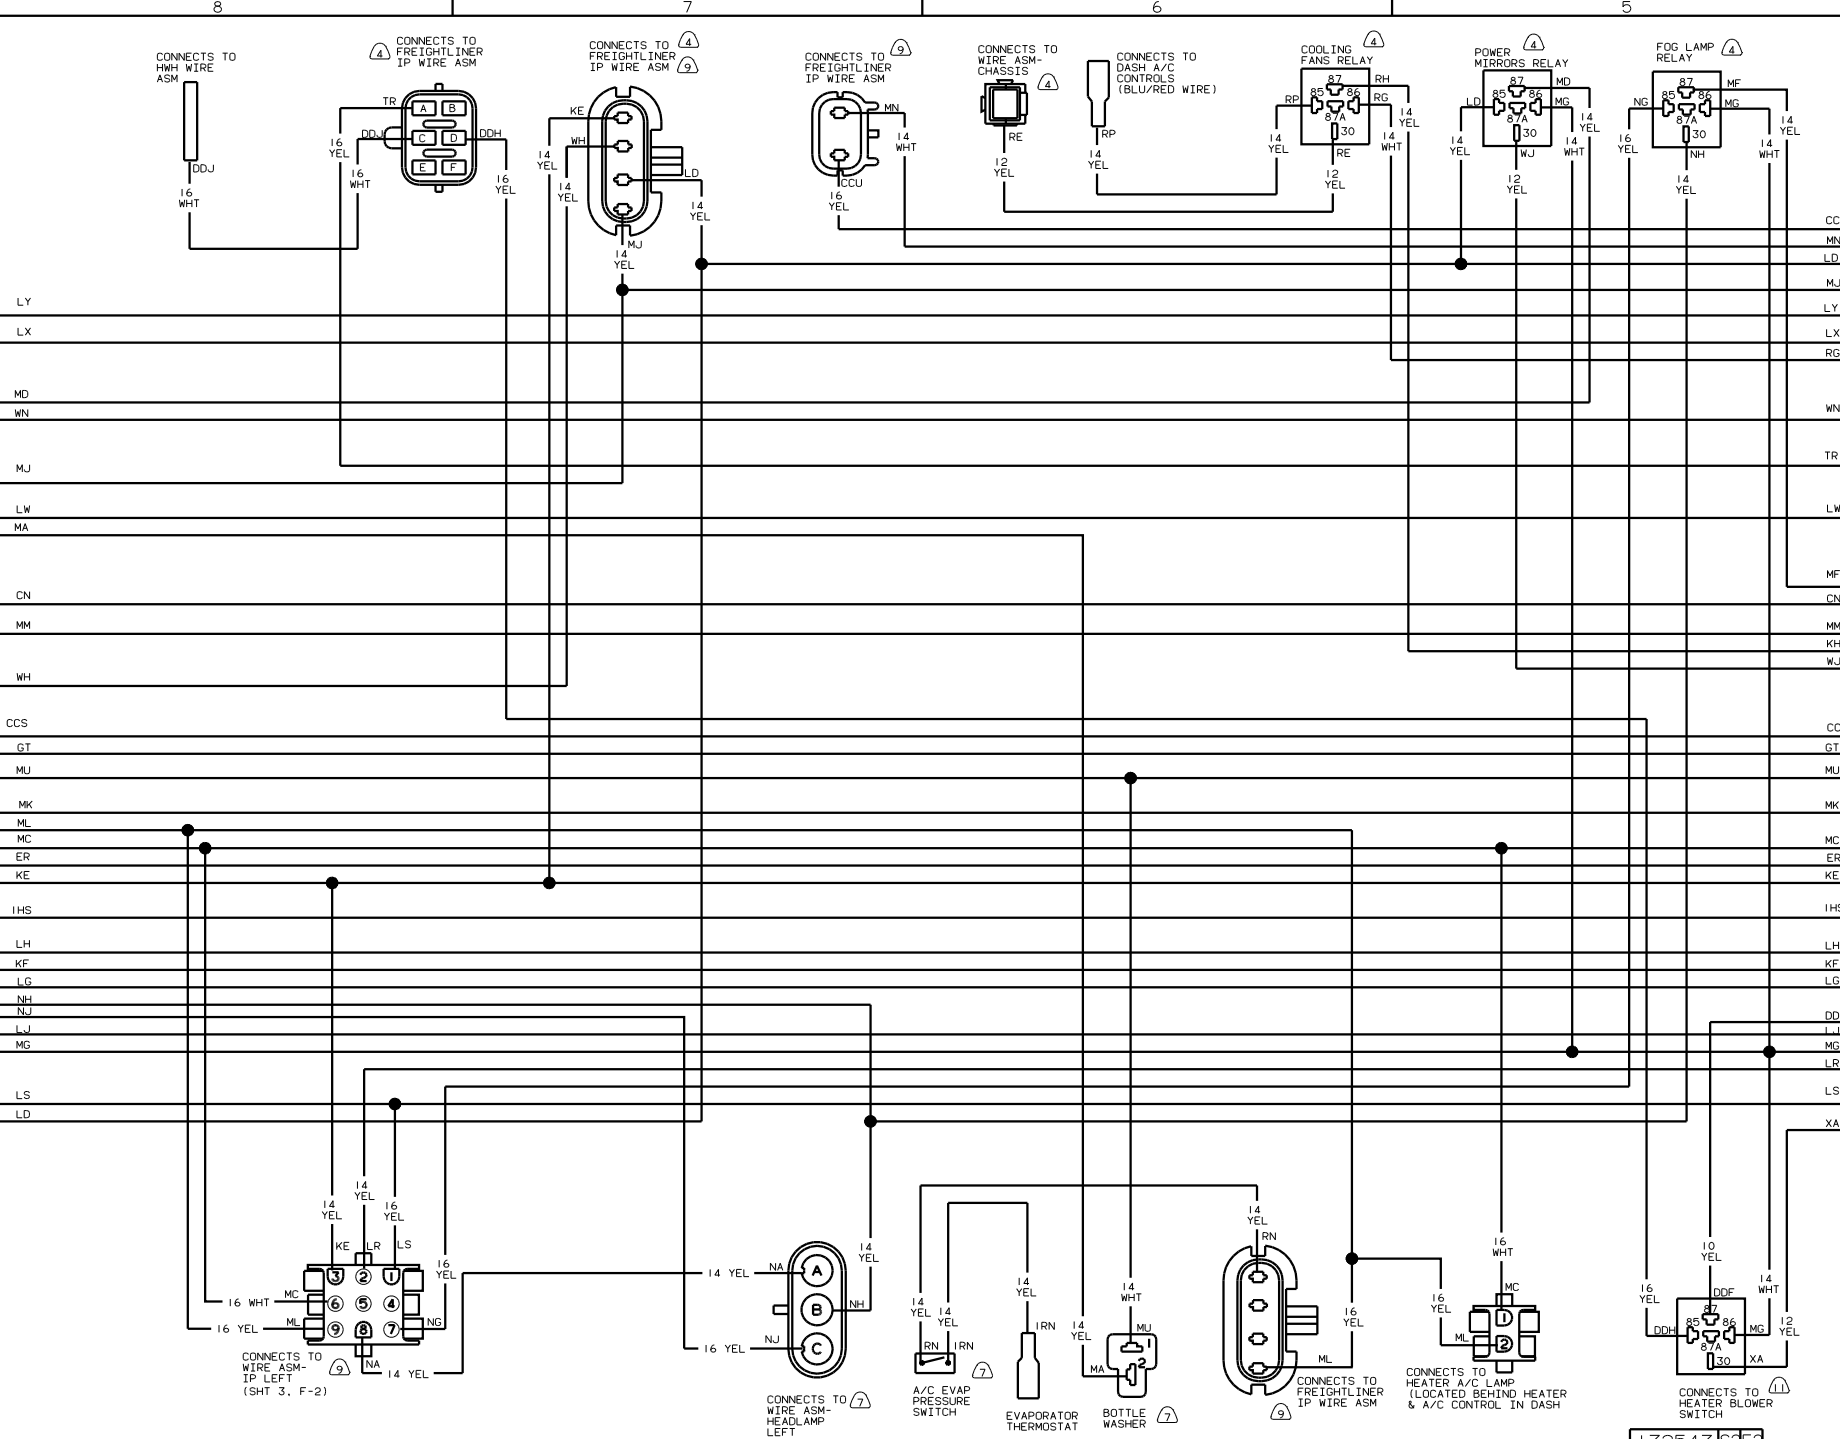


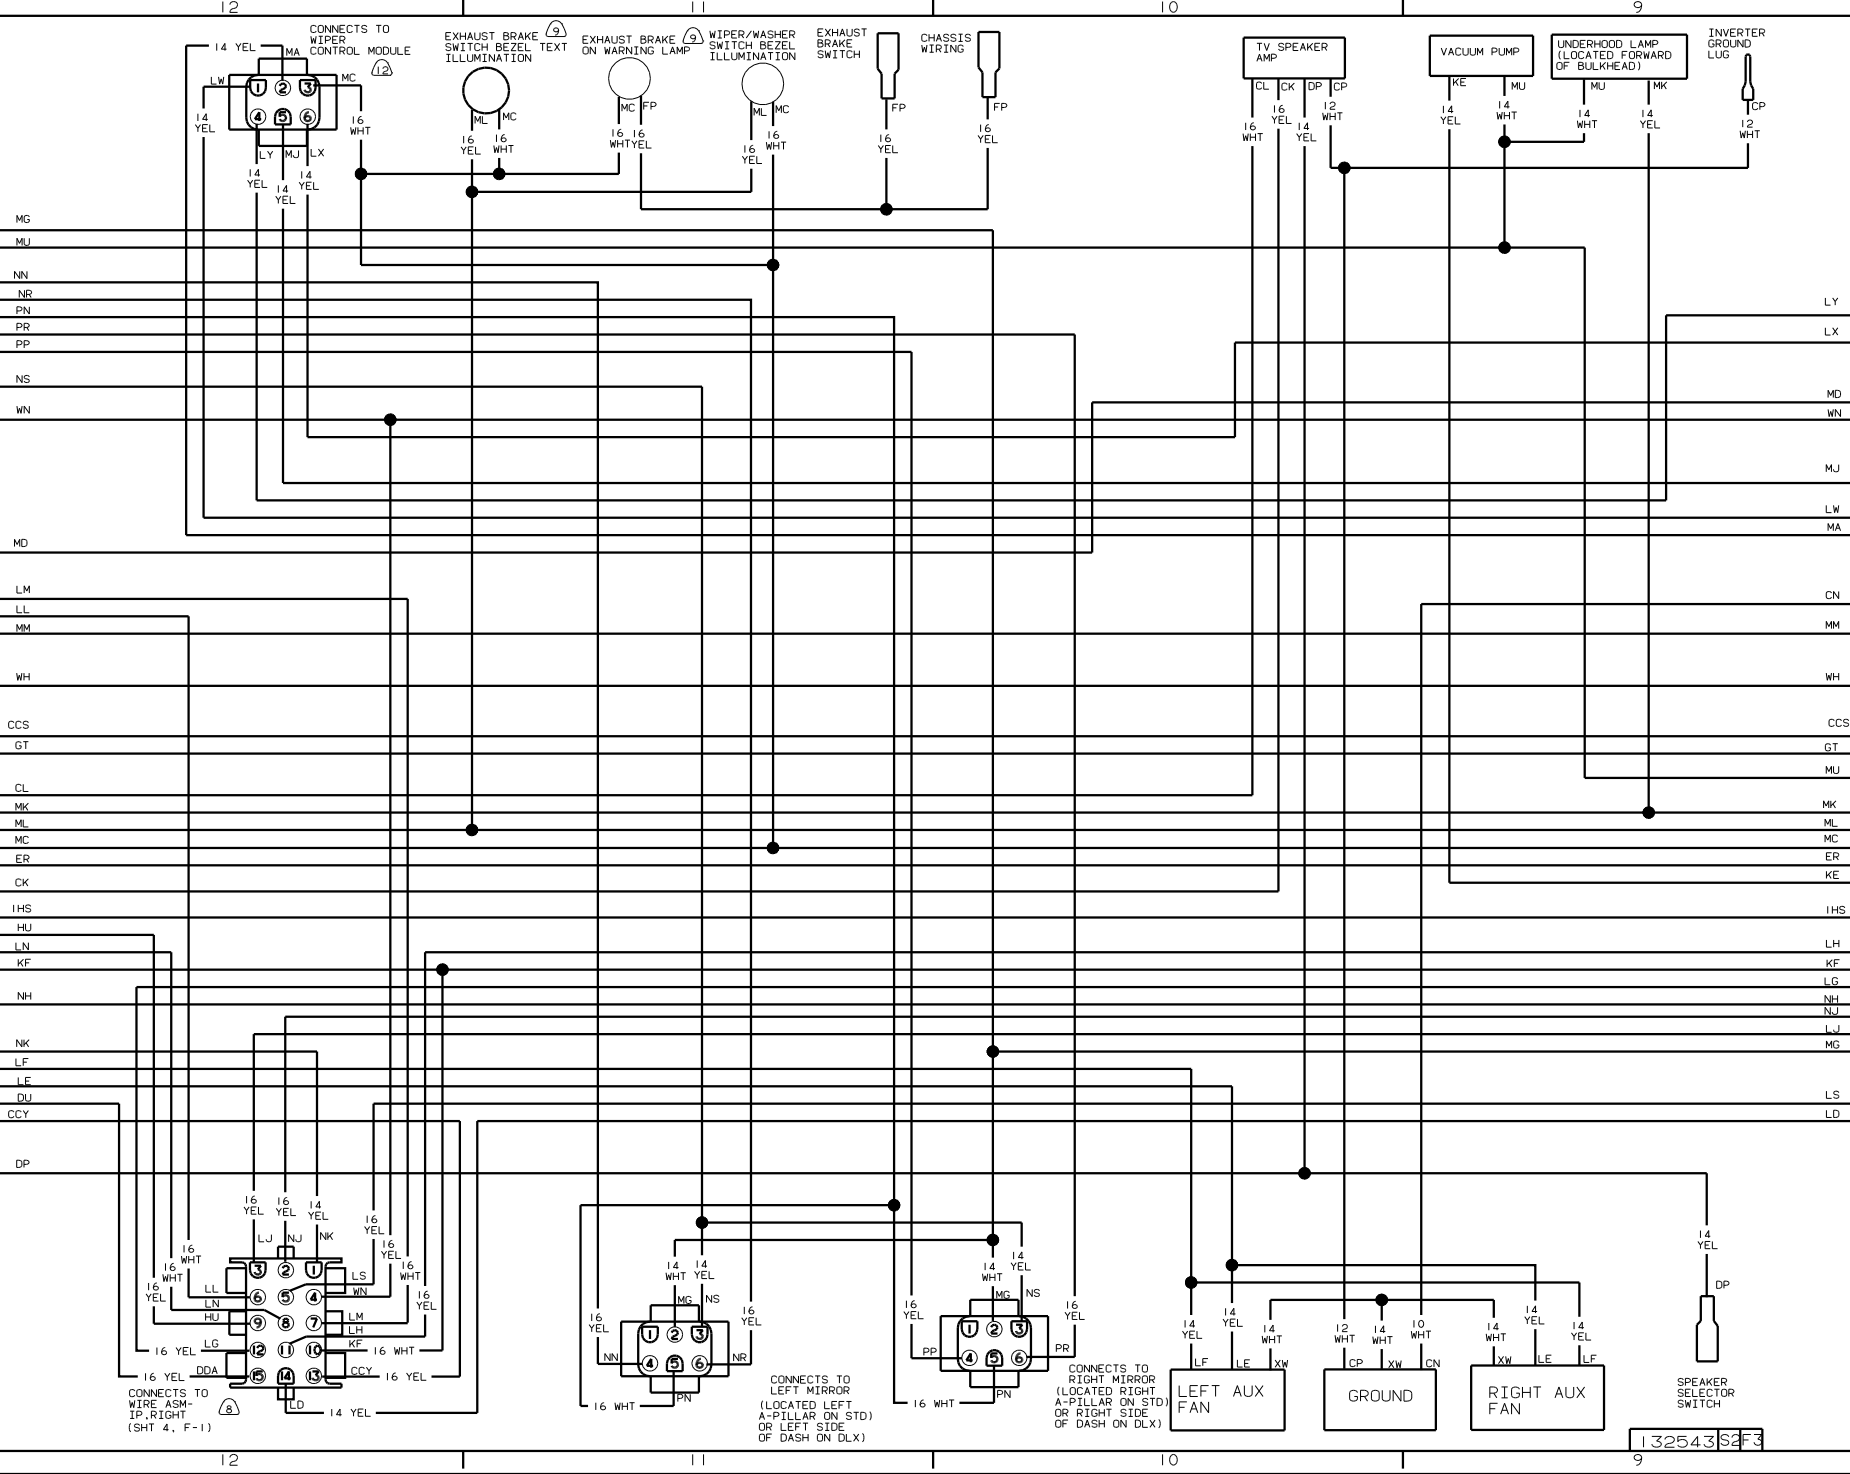






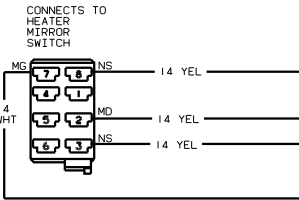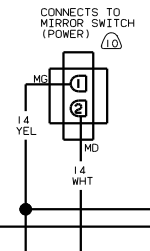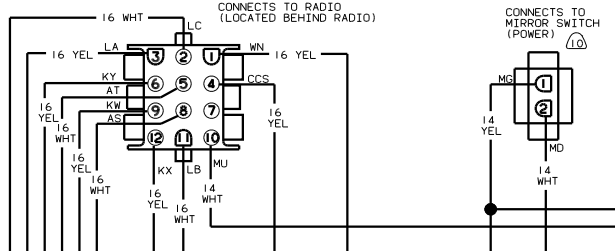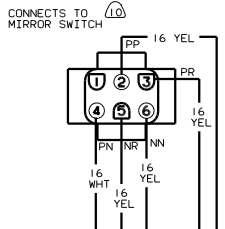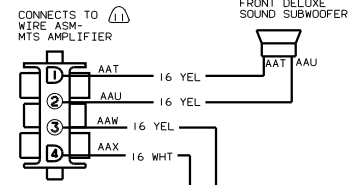


CONNECTS TO WIRE ASM-CHASSIS (LOCATED ON FLOOR BELOW LEFT SIDE OF DASH)

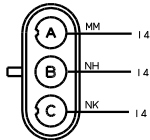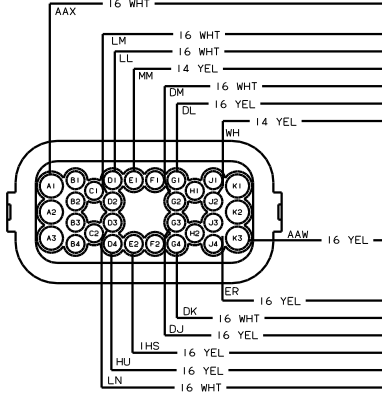


- NOTES:
- (11) LOCATED BELOW LEFT DASH
  - (10) LOCATED IN DRIVER'S SIDE TRIM PANEL.
  - (9) LOCATED ON LEFT SIDE OF DASH.
  - (8) LOCATED ON RIGHT SIDE OF DASH.
  - (7) LOCATED FORWARD OF BULKHEAD ON RIGHT SIDE.
  - (6) LOCATED BELOW LEFT DASH ON BULKHEAD
  - (5) SEE SHT 3 FOR ADDITIONAL INFORMATION.
  - (4) LOCATED FORWARD OF BULKHEAD IN FRONT ELEC. BOX.
  - (3) SEE WIRING DIAGRAM BODY FOR ADDITIONAL INFORMATION.
  - (2) SUPPLIED WITH CHASSIS.
  - (1) SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

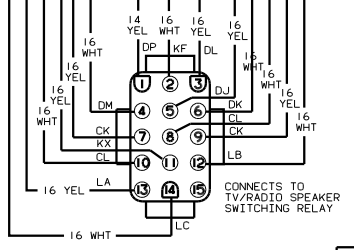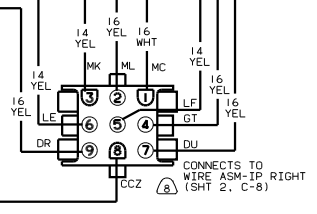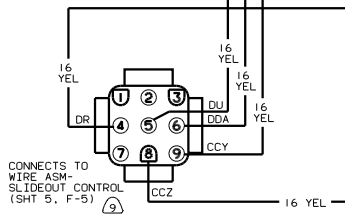


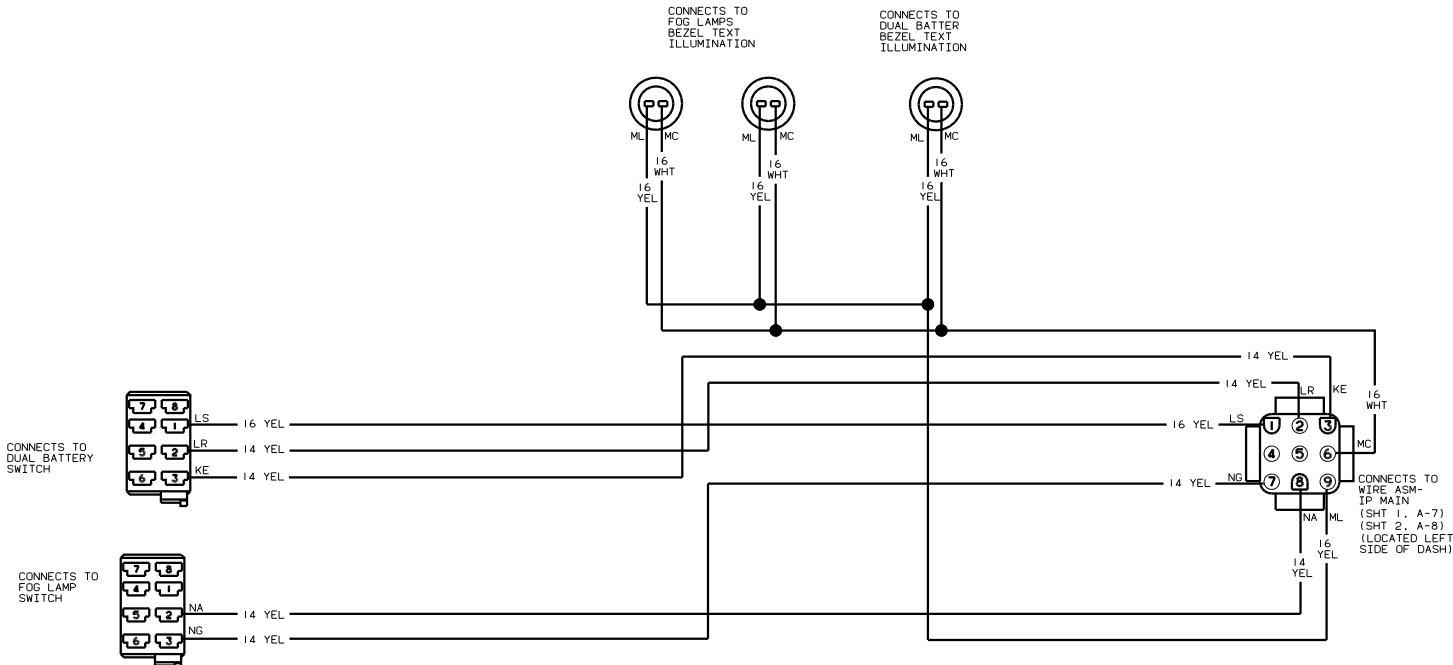

WIRING DIAGRAM-IP,LEFT  
(WIRE ASM 129437-01)

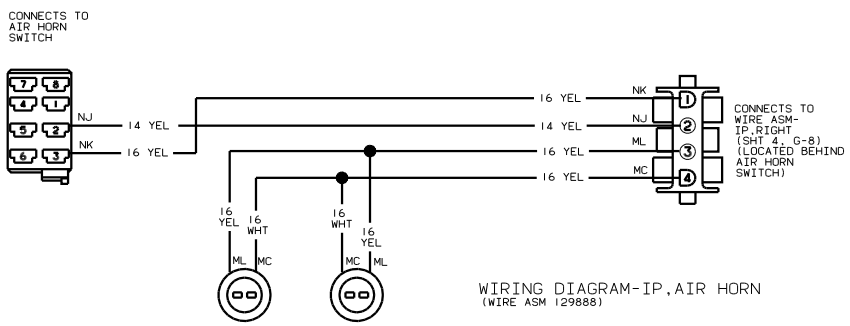


WIRING DIAGRAM-IP,AIR HORN  
(WIRE ASM 129888)

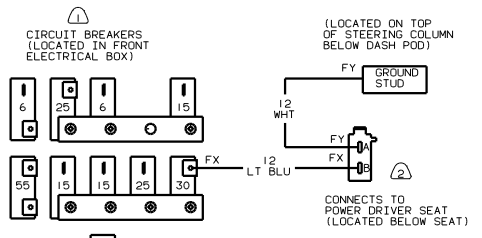

WIRING DIAGRAM-POWER DRIVER SEAT  
(WIRE ASM 108029-01) DRIVER'S  
(WIRE ASM 108029-02) PASSENGER'S



NOTES:  
② SEE MANUFACTURER'S DIAGRAM FOR ADDITION INFORMATION.  
① SEE SHT 1 FOR ADDITIONAL INFORMATION.

AUX FANS BEZEL TEXT ILLUMINATION  
GENERATOR BEZEL TEXT ILLUMINATION  
RADIO POWER BEZEL TEXT ILLUMINATION  
BATTERY DISCONNECT BEZEL TEXT ILLUMINATION

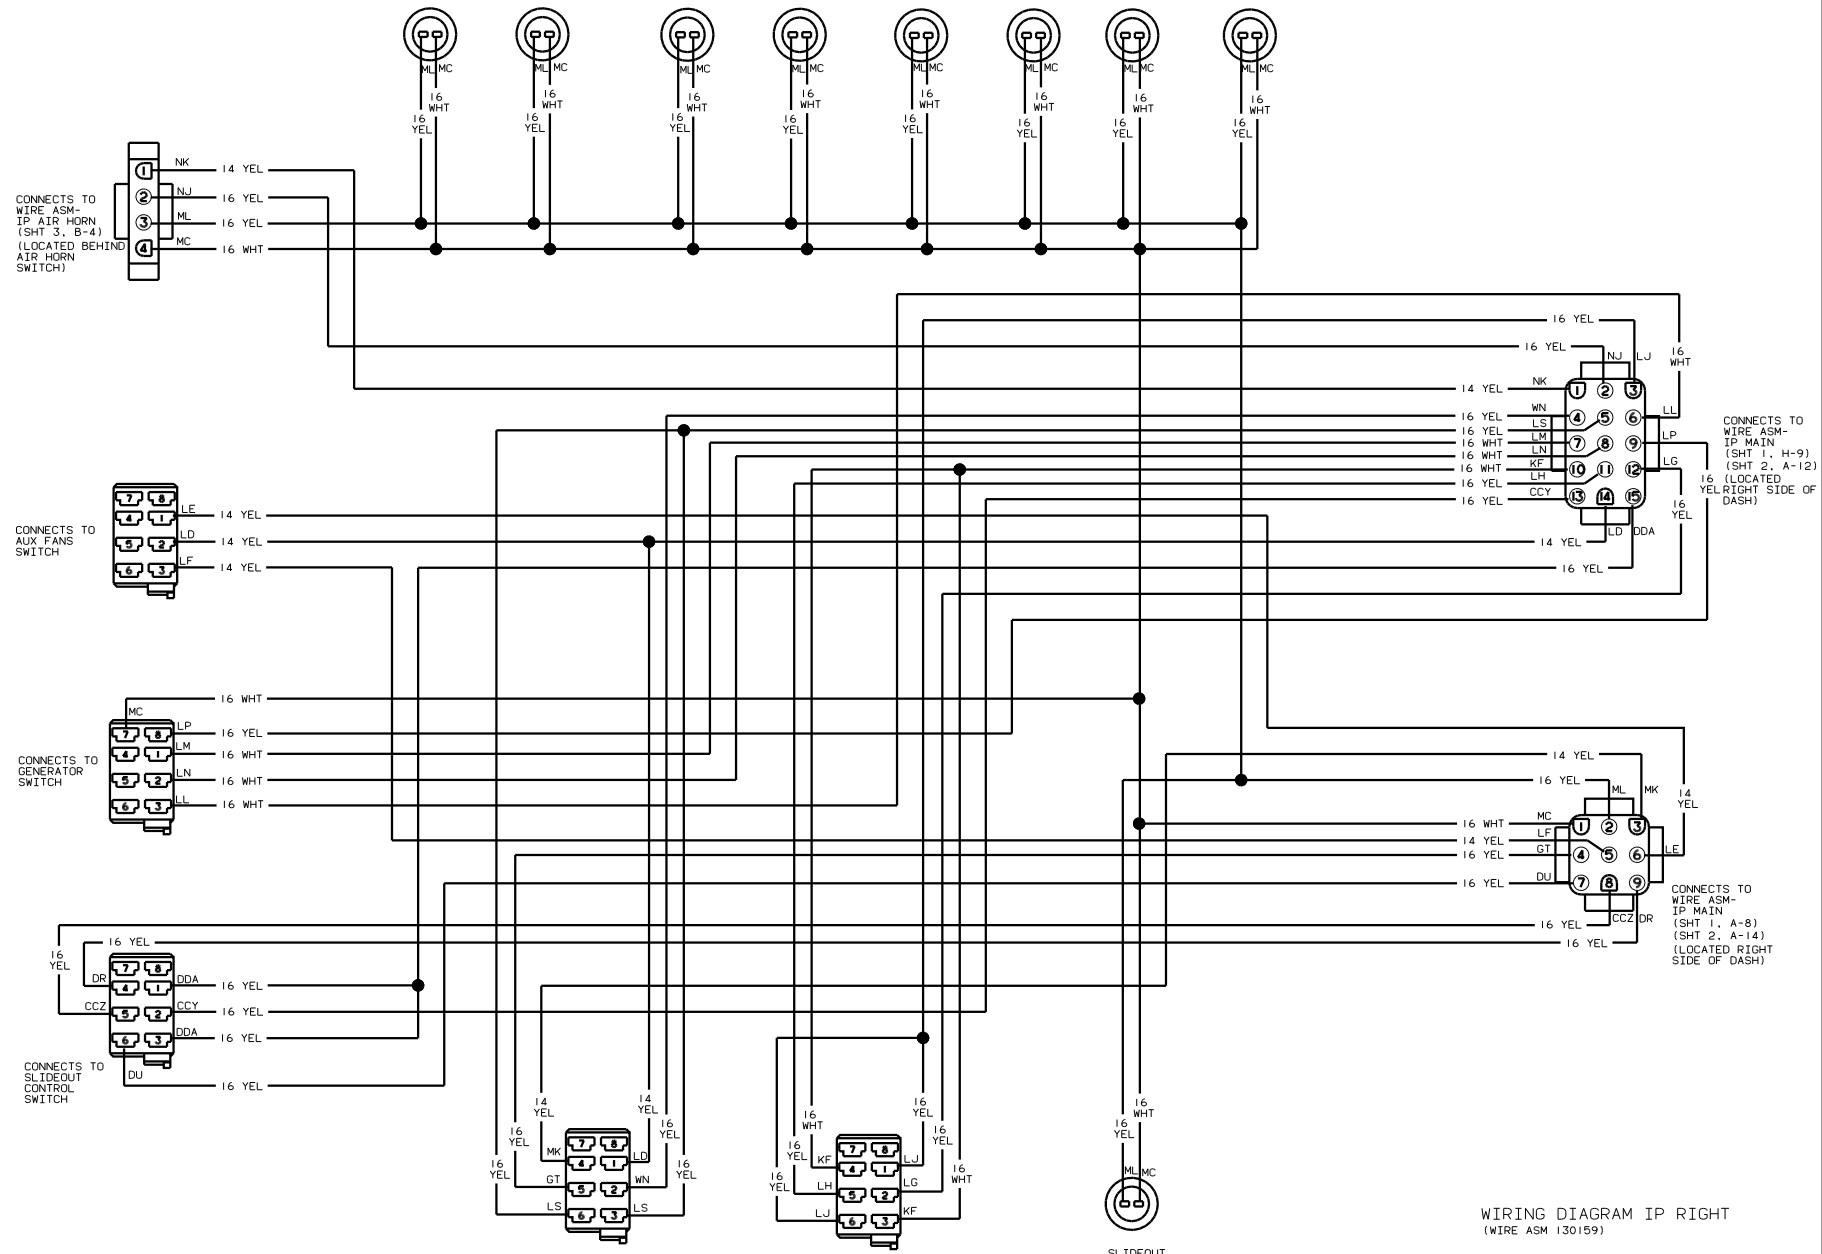


WIRING DIAGRAM IP RIGHT  
(WIRE ASM 130159)


TITLE		WIRING DIAGRAM-AUTO	
30 NO SCALE DRAWING	1/16	1/16	132543
SHEET 4 OF 5			

 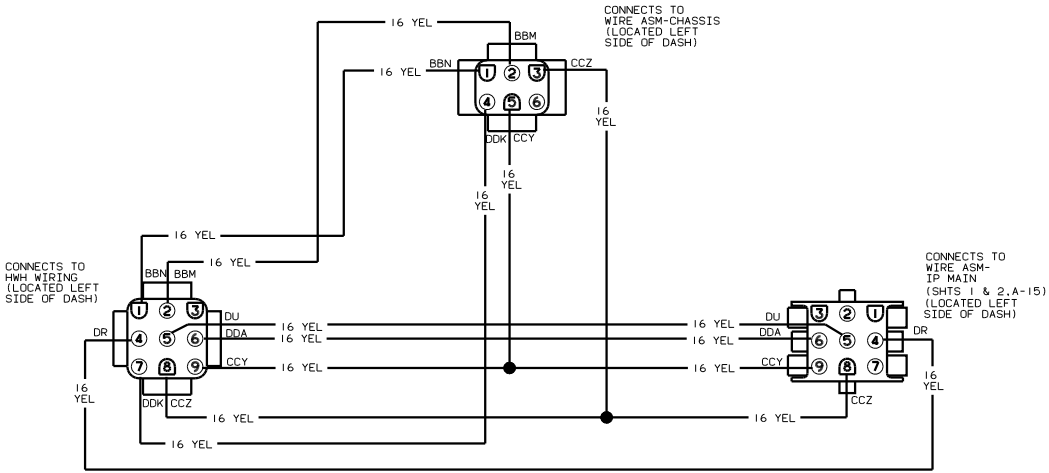

 WIRING DIAGRAM CRT BRK. POWER  
(WIRE ASM 103991-05)



 WIRING DIAGRAM SPEAKER ADAPTER  
(WIRE ASM 124843-07)  
(RIGHT SIDE)



WIRING DIAGRAM SPEAKER ADAPTER  
(WIRE ASM 124843-08)  
(LEFT SIDE)