




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.






CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

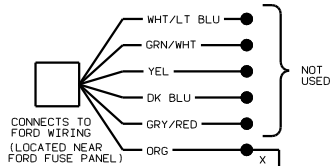

CONNECTS TO WIRE ASM-TAILLAMP EXT FOR

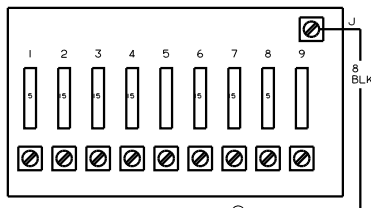  


12V CIRCUIT BREAKERS (LOCATED IN CONTROL CENTER IN BEDROOM)


CIRCUIT BREAKERS (LOCATED IN BATTERY COMPARTMENT AT CENTER RIGHT OF VEHICLE)

- NOTES:
- ③ SEE SHT 2 FOR ADDITIONAL INFORMATION.
 - ④ SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
 - 3. SEE WIRING INSTL-CHASSIS FOR FUTURE INFORMATION.
 - ② CHASSIS SUPPLIED.
 - ① SEE WIRING DIAGRAM INVERTOR, CHASSIS SHT 4, F-2 FOR ADDITIONAL INFORMATION.


 
CONNECTS TO BATTERY CHANGE-OVER SWITCH (LOCATED IN DASH NEAR COLUMN)





CONNECTS TO WIRE ASM-BREAKER PANEL (SHT 5, D-1) (LOCATED AT CHASSIS BREAKER PANEL)

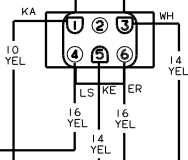


CONNECTS TO WIRE ASM-ELECTRIC STEP

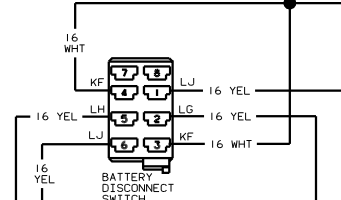 

BATTERY DISCONNECT RELAY

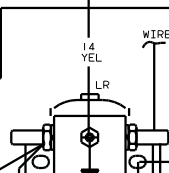
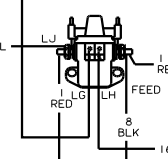


 BATTERY MODE SOLENOID (LOCATED IN BATTERY COMPARTMENT BEHIND ENTRANCE STEP)




FORD RUN ONLY CIRCUIT

CONNECTS TO FORD WIRING (LOCATED BEHIND DRIVER DOOR)

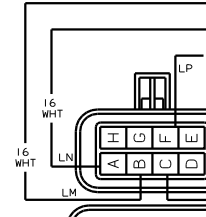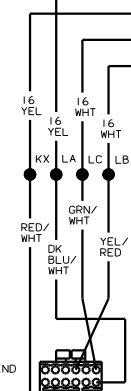

(CONNECTION MADE IN GENERATOR COMPARTMENT)

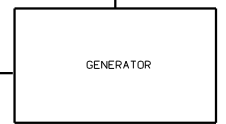

COACH BATTERY (LOCATED IN COMPARTMENT AT CENTER RIGHT OF VEHICLE)




STARTER RELAY (LOCATED ON RIGHT SIDE PANEL OF RADIATOR SUPPORT)

CHASSIS BATTERY (UNDER HOOD ON RIGHT SIDE OF ENGINE COMPARTMENT)

STARTER

STARTER SOLENOID

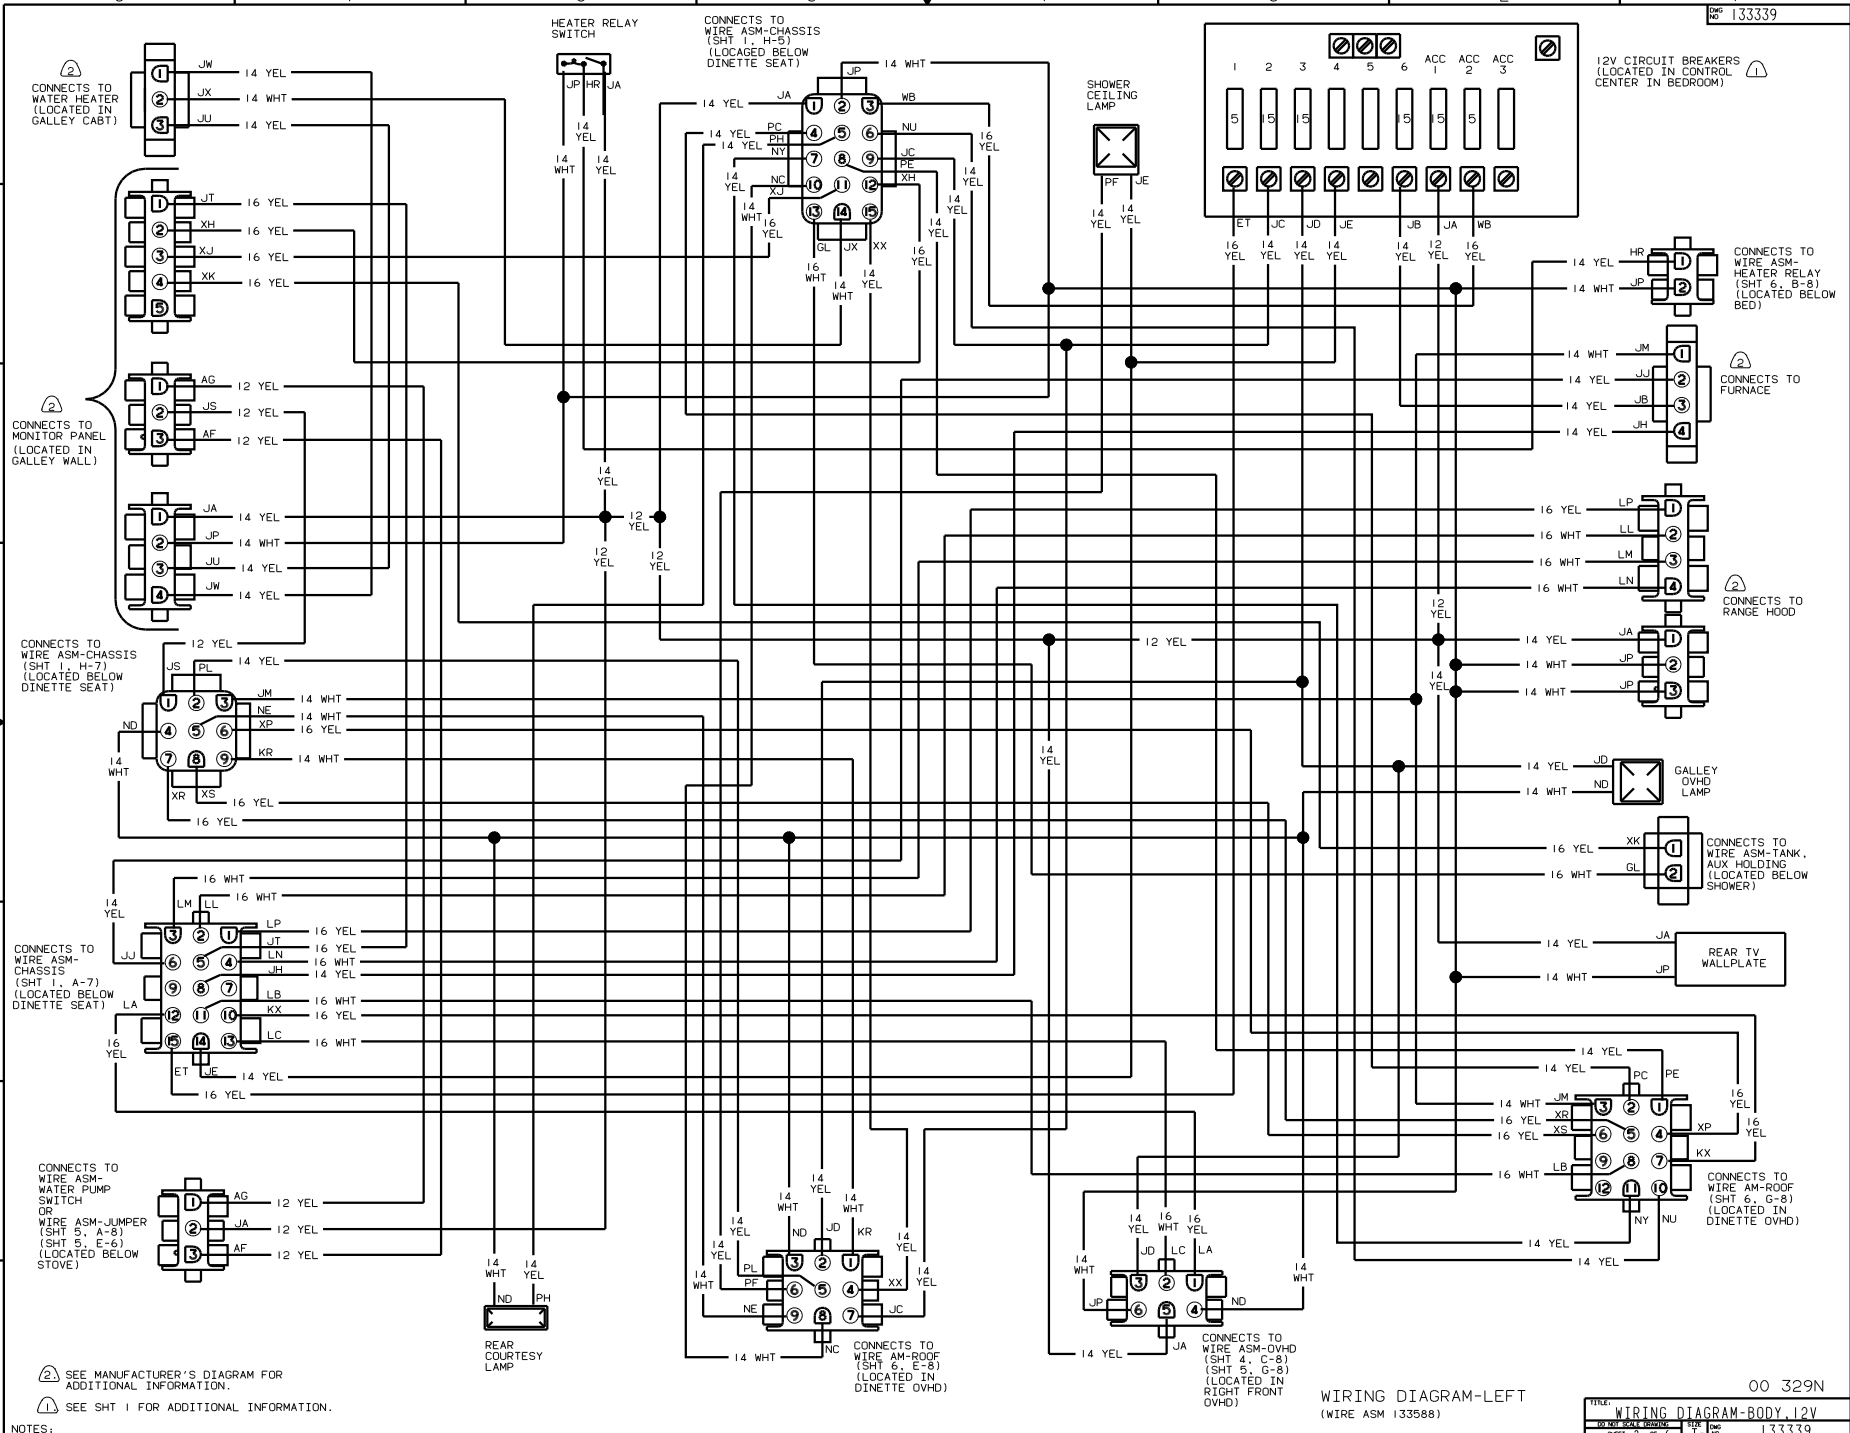

NOTES:


② SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

① SEE SHT 1 FOR ADDITIONAL INFORMATION.


WIRING DIAGRAM-LEFT
(WIRE ASM 133588)





WIRING DIAGRAM INVERTER SIDEWALL
(WIRE ASM 101755)

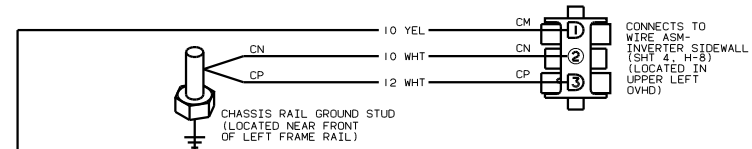


WIRING DIAGRAM-INVERTER, CHASSIS
(WIRE ASM 110606-06)

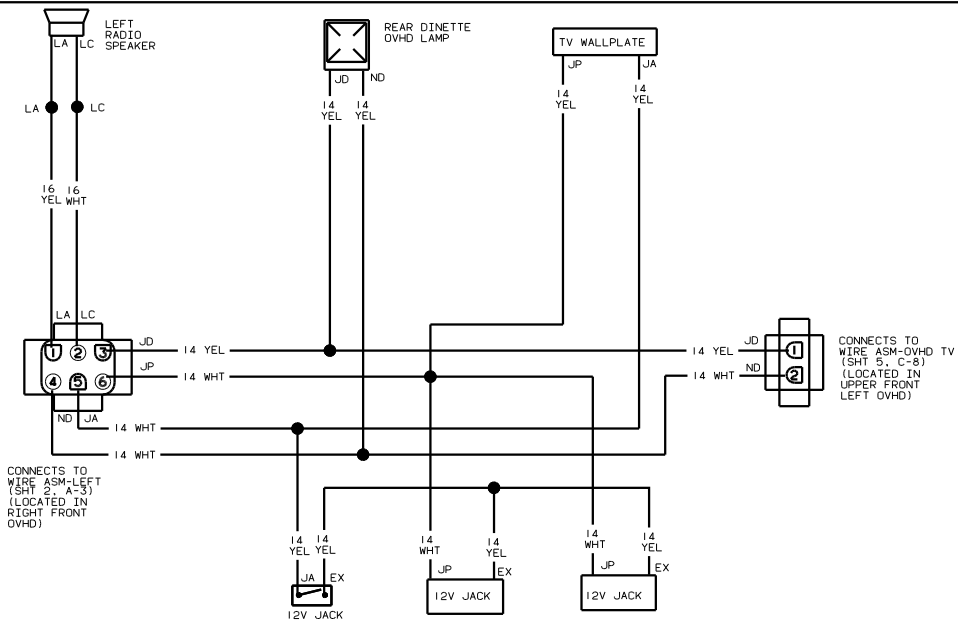

 WIRING DIAGRAM OVHD DINETTE, TV
(WIRE ASM 122743)

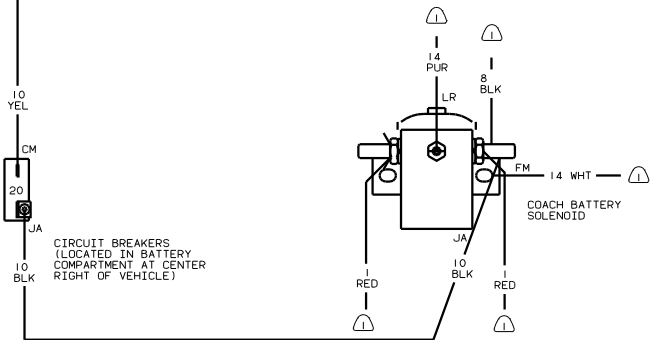


WIRING DIAGRAM PORCH LAMP
(WIRE ASM 93051-02)

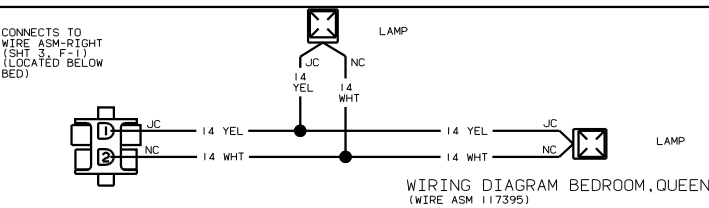


WIRING DIAGRAM BEDROOM, QUEEN
(WIRE ASM 117395)


NOTES: SEE WIRING DIAGRAM-CHASSIS, SHT 1, C-13 FOR ADDITIONAL INFORMATION.

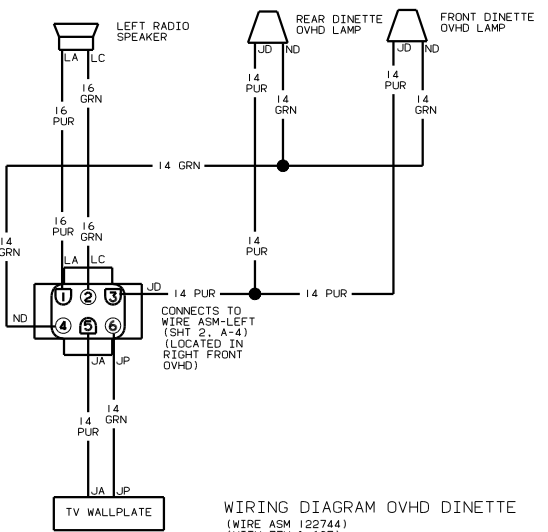

 
WIRING DIAGRAM OVHD DINETTE (WIRE ASM 122744) (WITH 73H & 68F)



 
WIRING DIAGRAM WATER PUMP SWITCH W/EXT WASH (WIRE ASM 103494-04)



 
WIRING DIAGRAM OVHD TV (WIRE ASM 077093-03)




WIRING DIAGRAM JUMPER W/O EXT WASH (WIRE ASM 103493)

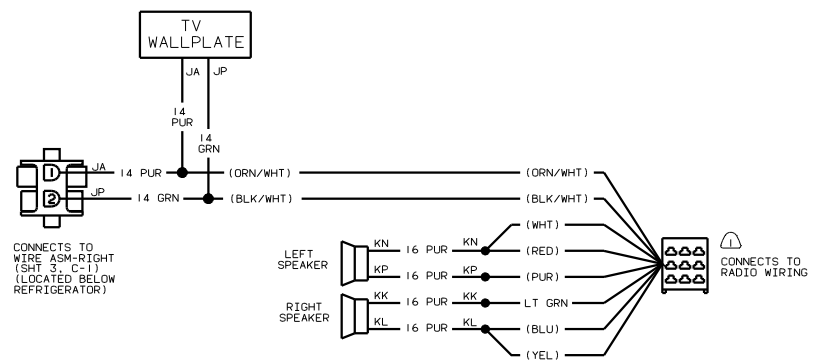

 
WIRING DIAGRAM-EXT ENT CTR (WIRE ASM 125853-01) (WITH EXTERIOR ENTERTAINMENT CENTER)



WIRING DIAGRAM-INVERTER (WIRE ASM 100931) (WITH INVERTER)

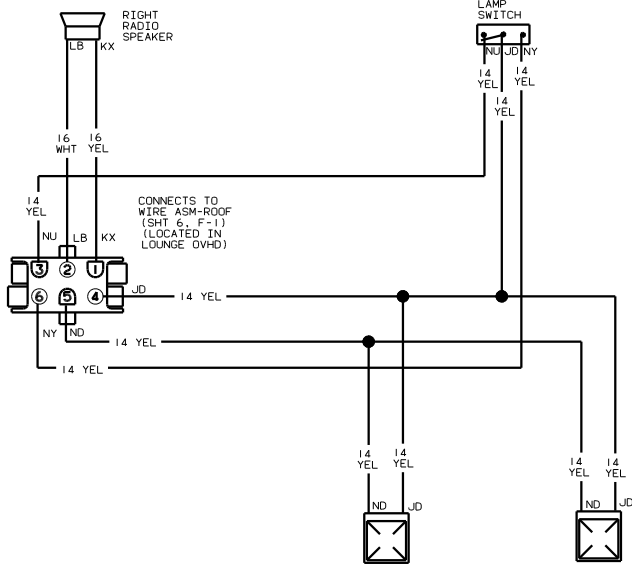

WIRING DIAGRAM OVHD (WIRE ASM 130735-02)

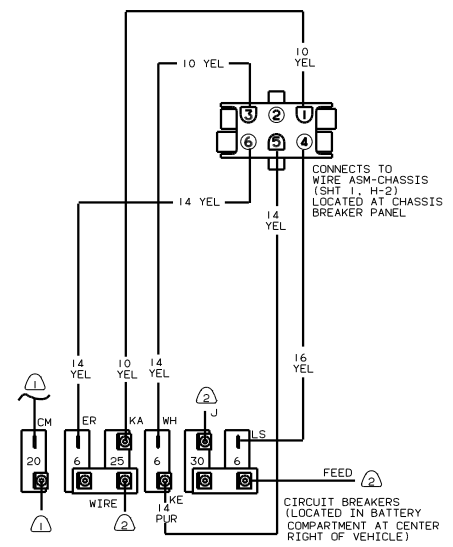

WIRING DIAGRAM-PANEL BREAKERS (131799-02)

2 SEE SHT 1, E-16 FOR ADDITIONAL INFORMATION.
1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

