




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

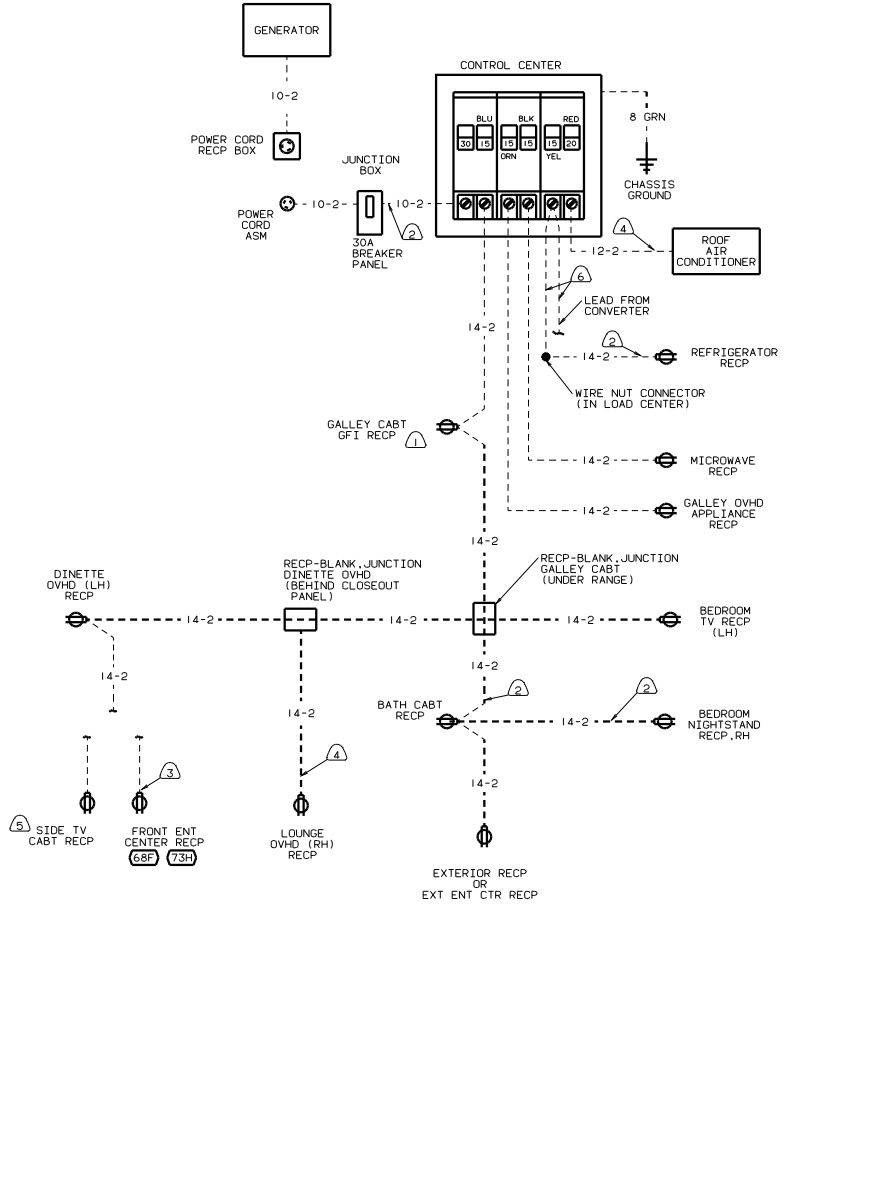

(265) CODES/STANDARDS-CSA/CMVSS  
 (120) ELECTRICAL SYSTEM 30 AMP

- (6) LEAD SUPPLIED WITH CONVERTER.
- (5) NOT USED WITH (68F) OR (73H) OR (78A)
- (4) WIRE ROUTED THRU ROOF.
- (3) WIRE ROUTED THRU SIDEWALL.
- (2) WIRE ROUTED THRU FLOOR.
- (1) ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT INTERRUPT PROTECTED.

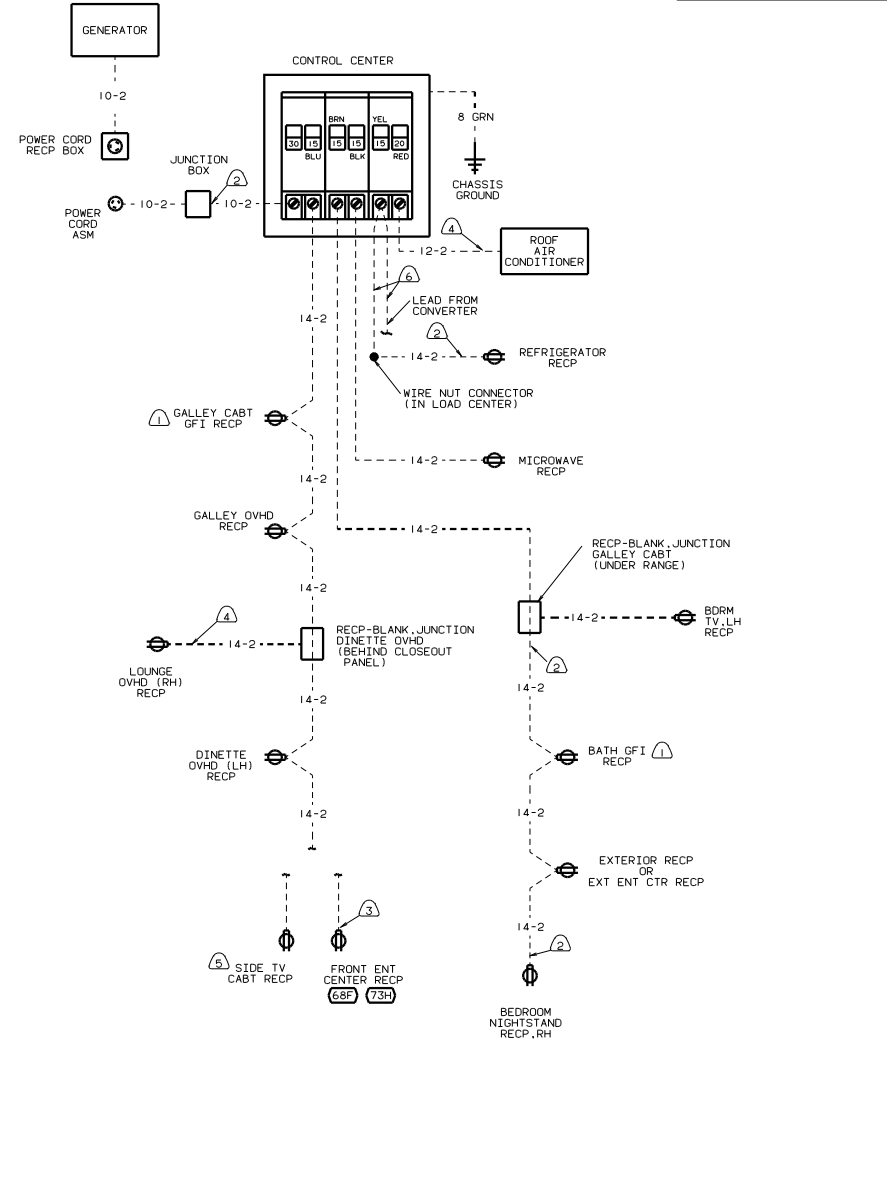

(181) CODES/STANDARDS USA  
 (120) ELECTRICAL SYSTEM 30 AMP

- (78A) TV-13" W/VCP-12V
- (73H) TV-19"/VCR/VIDEO SEL/SGL BNK
- (68F) TV-19"/VIDEO SELECT/SGL BUNK
- (265) CODES/STANDARDS-CSA/CMVSS
- (120) ELECTRICAL SYSTEM 30 AMP
- (181) CODES/STANDARDS USA

WINNEBAGO		100 329N	
DATE	DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL
DATE	DATE	WELD DIM 1/16"	
DATE	DATE	ONE-PLACE 1/8"	
DATE	DATE	TWO-PLACE 1/8"	
DATE	DATE	ANGLE	
DATE	DATE	THRU HOLE PROJECTION	
DATE	DATE		
DRAWING TITLE: WIRING DIAGRAM-BODY 110V			
SHEET NO	SCALE	NO. OF SHEETS	TOTAL SHEETS
1	1:1	1	1
ALL DIMENSIONS ARE IN MILLIMETERS			133340