




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

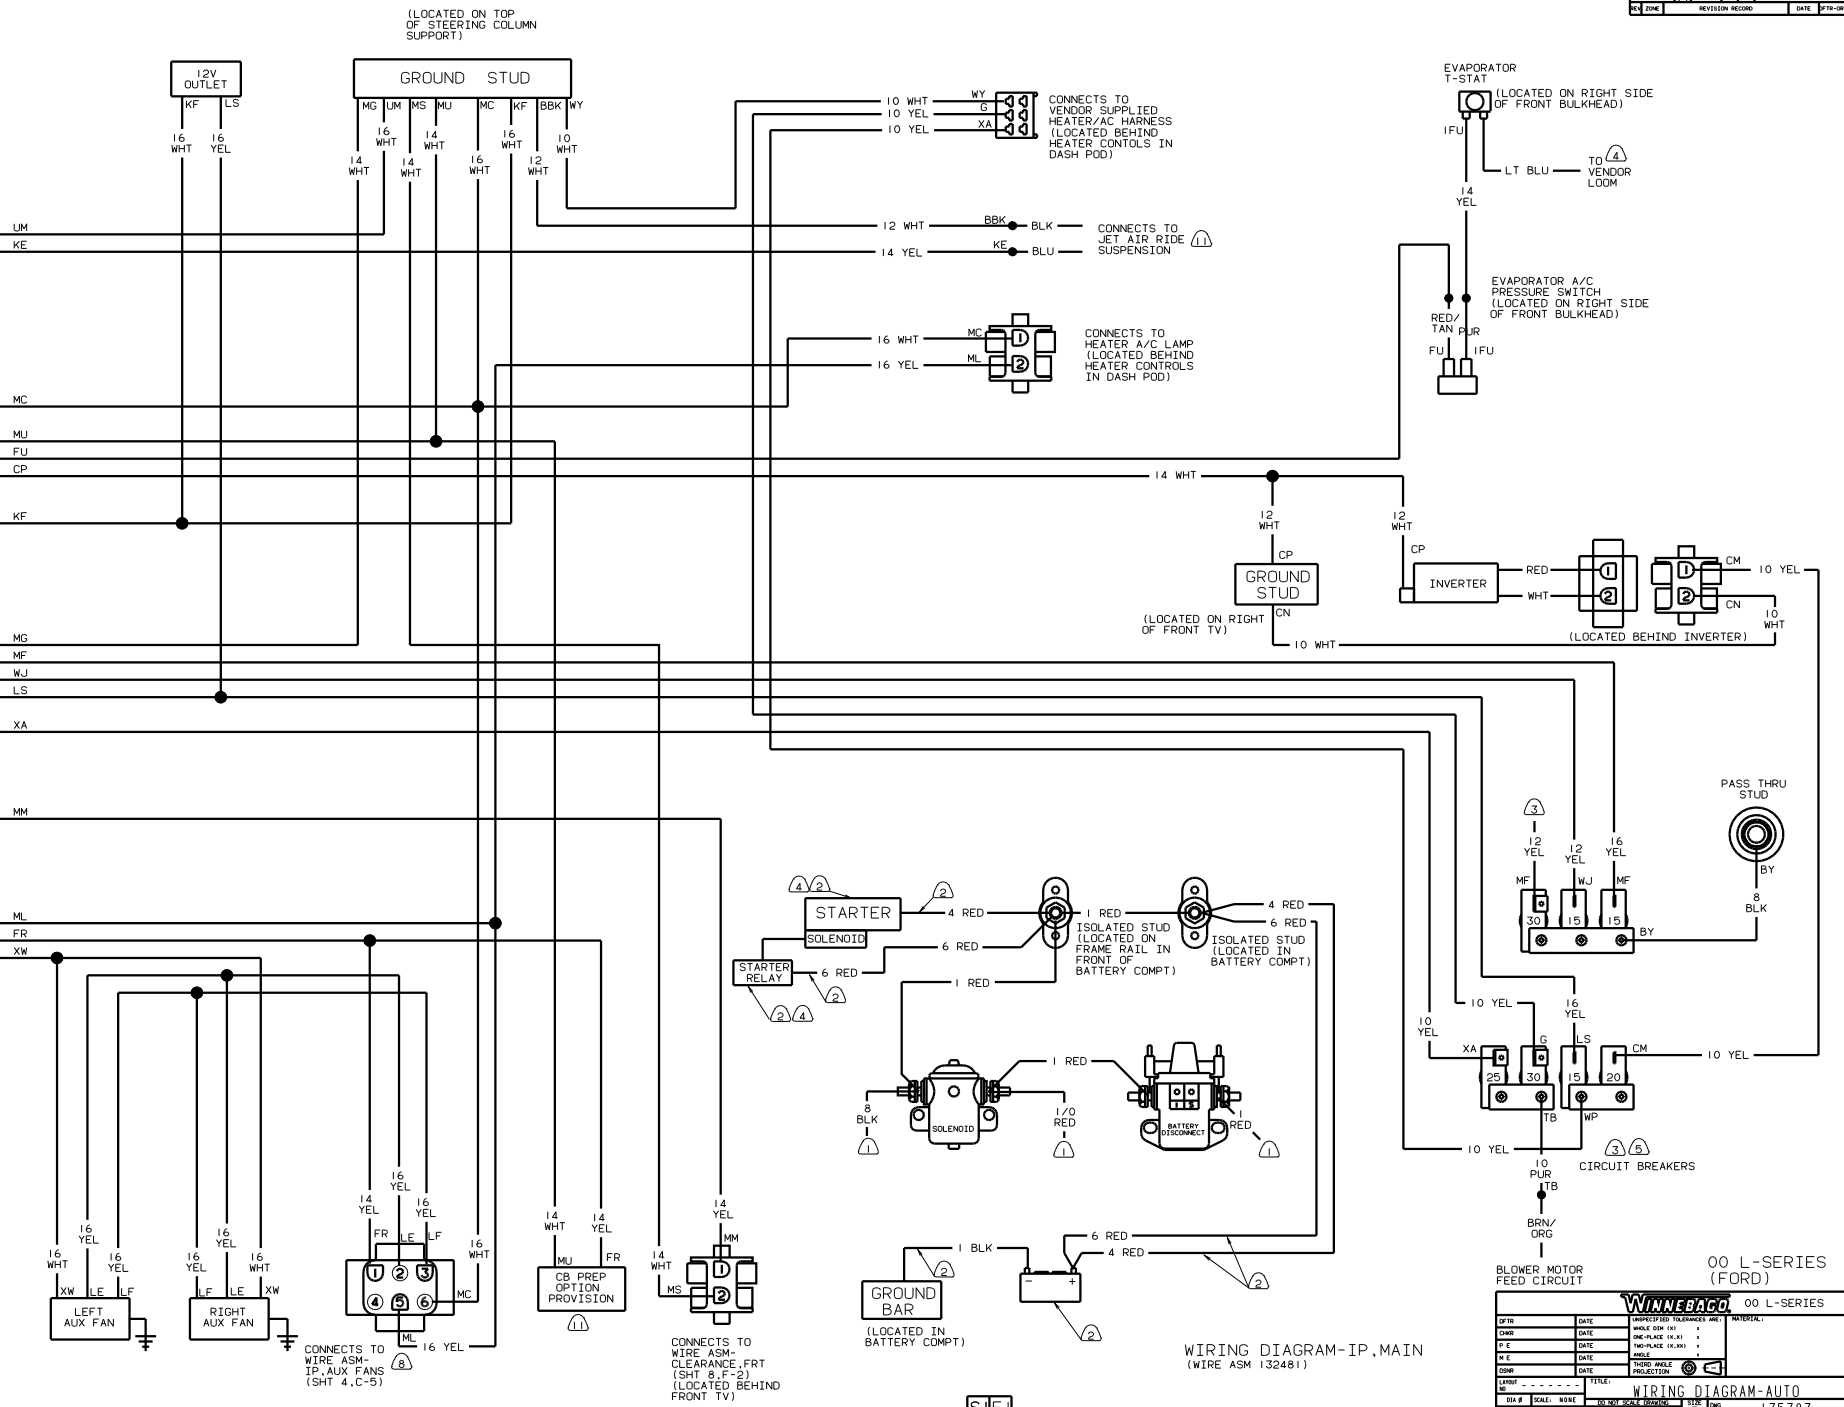


WIRING DIAGRAM-IP, MAIN  
 (WIRE ASM 132481)


00 L-SERIES (FORD)

**WINNEBAGO** 00 L-SERIES

DATE	DATE	PROCESSED/RELEASED BY	MATERIAL
CHKD	DATE	MADE FOR (BY)	
P.E.	DATE	INS-PHASE (BY)	
DATE	DATE	THIRD MADE PRODUCTION	
DATE	DATE		

WIRING DIAGRAM-AUTO  
 ALL DIMENSIONS ARE IN MILLIMETERS SHEET 1 OF 8 135383

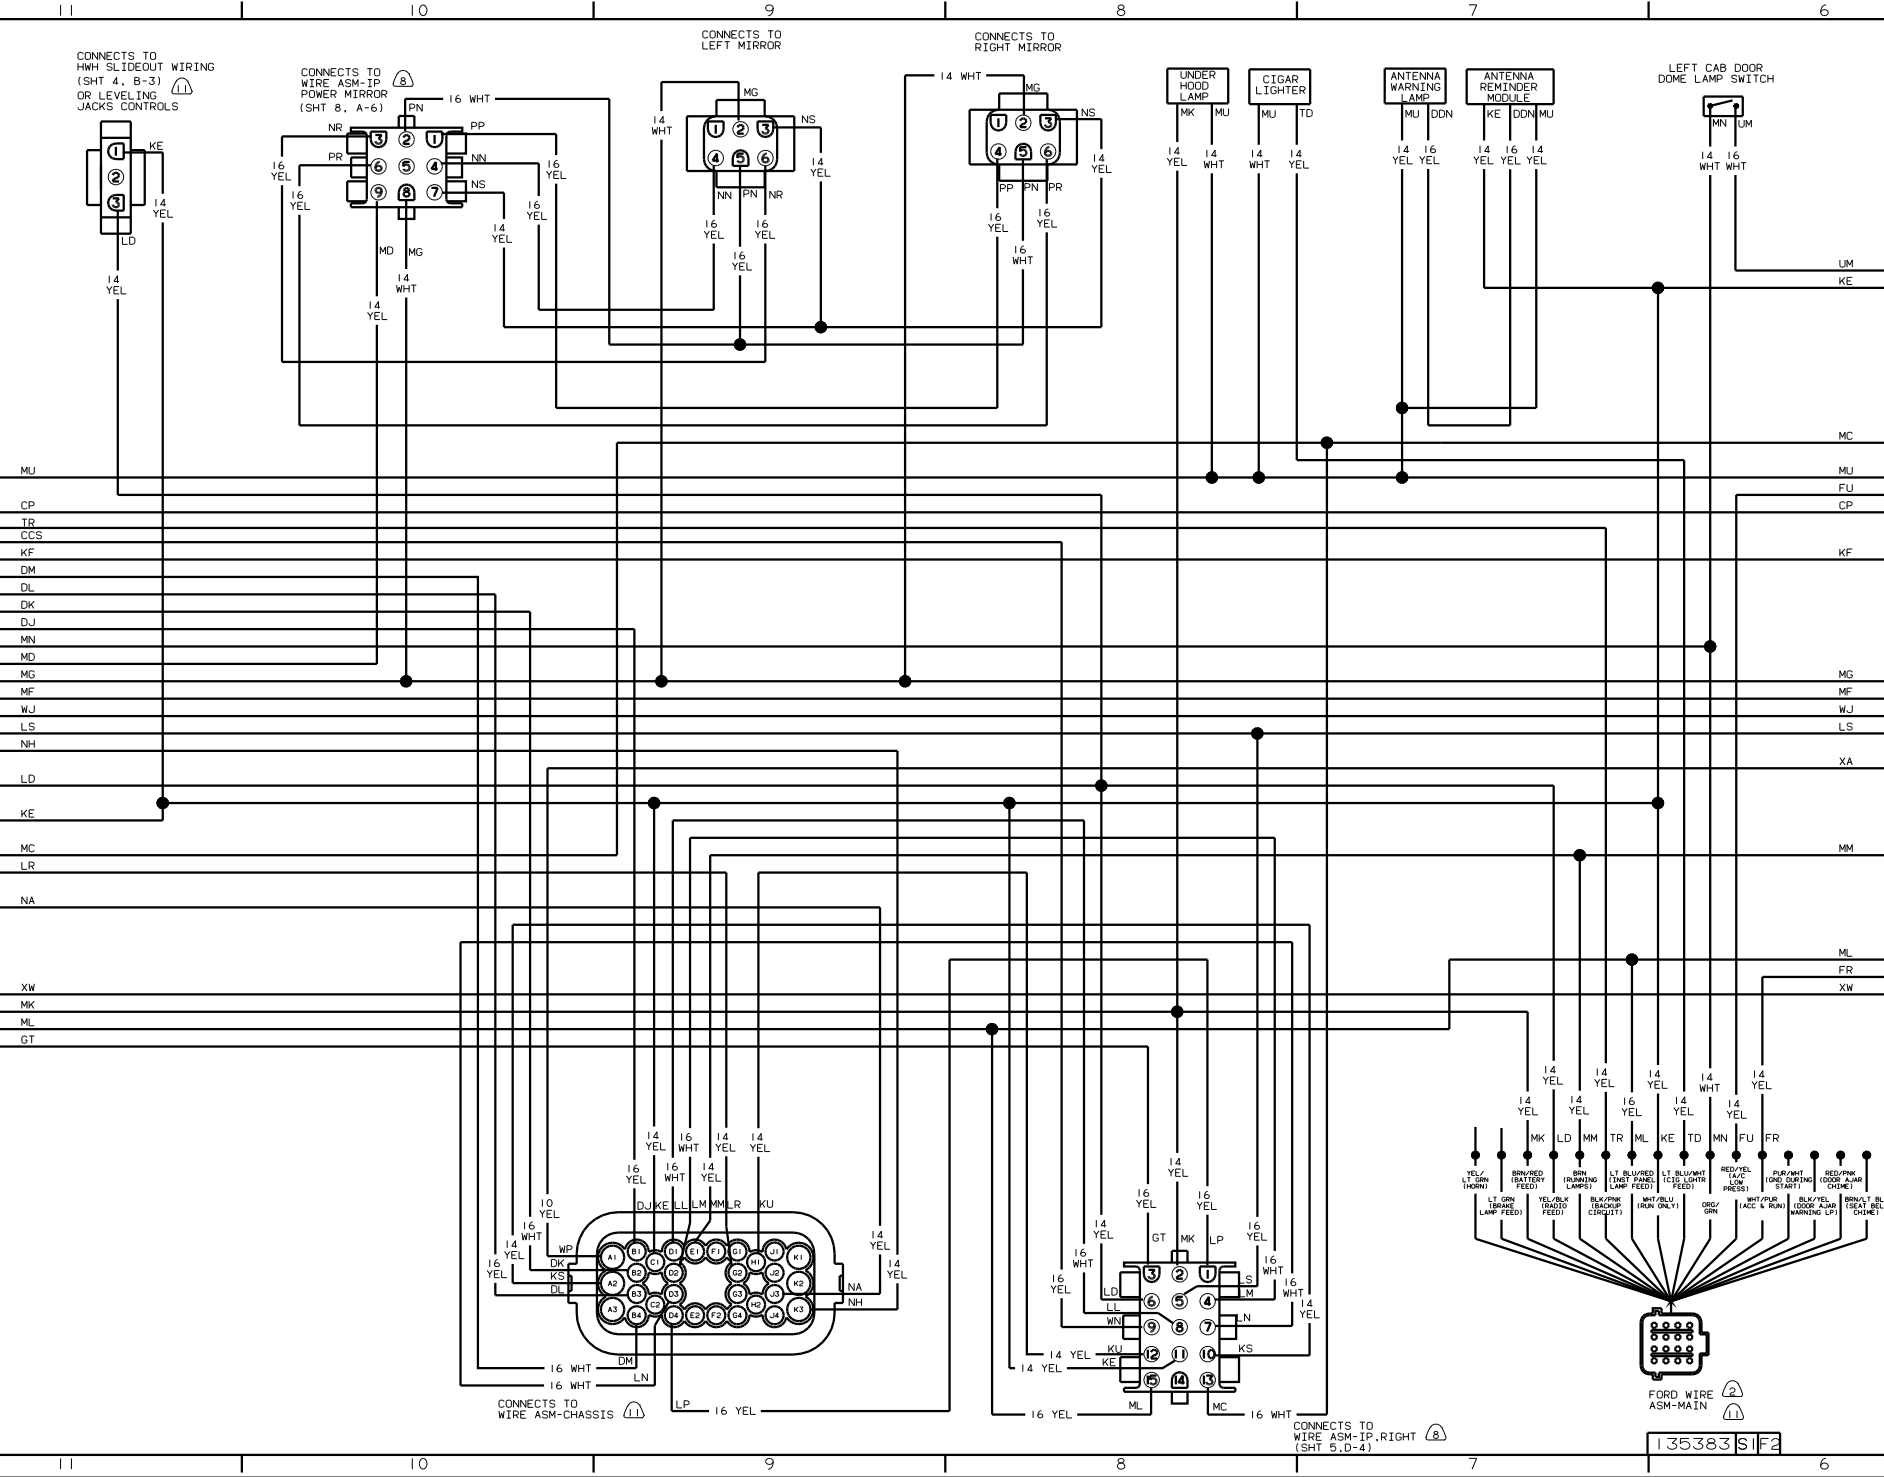

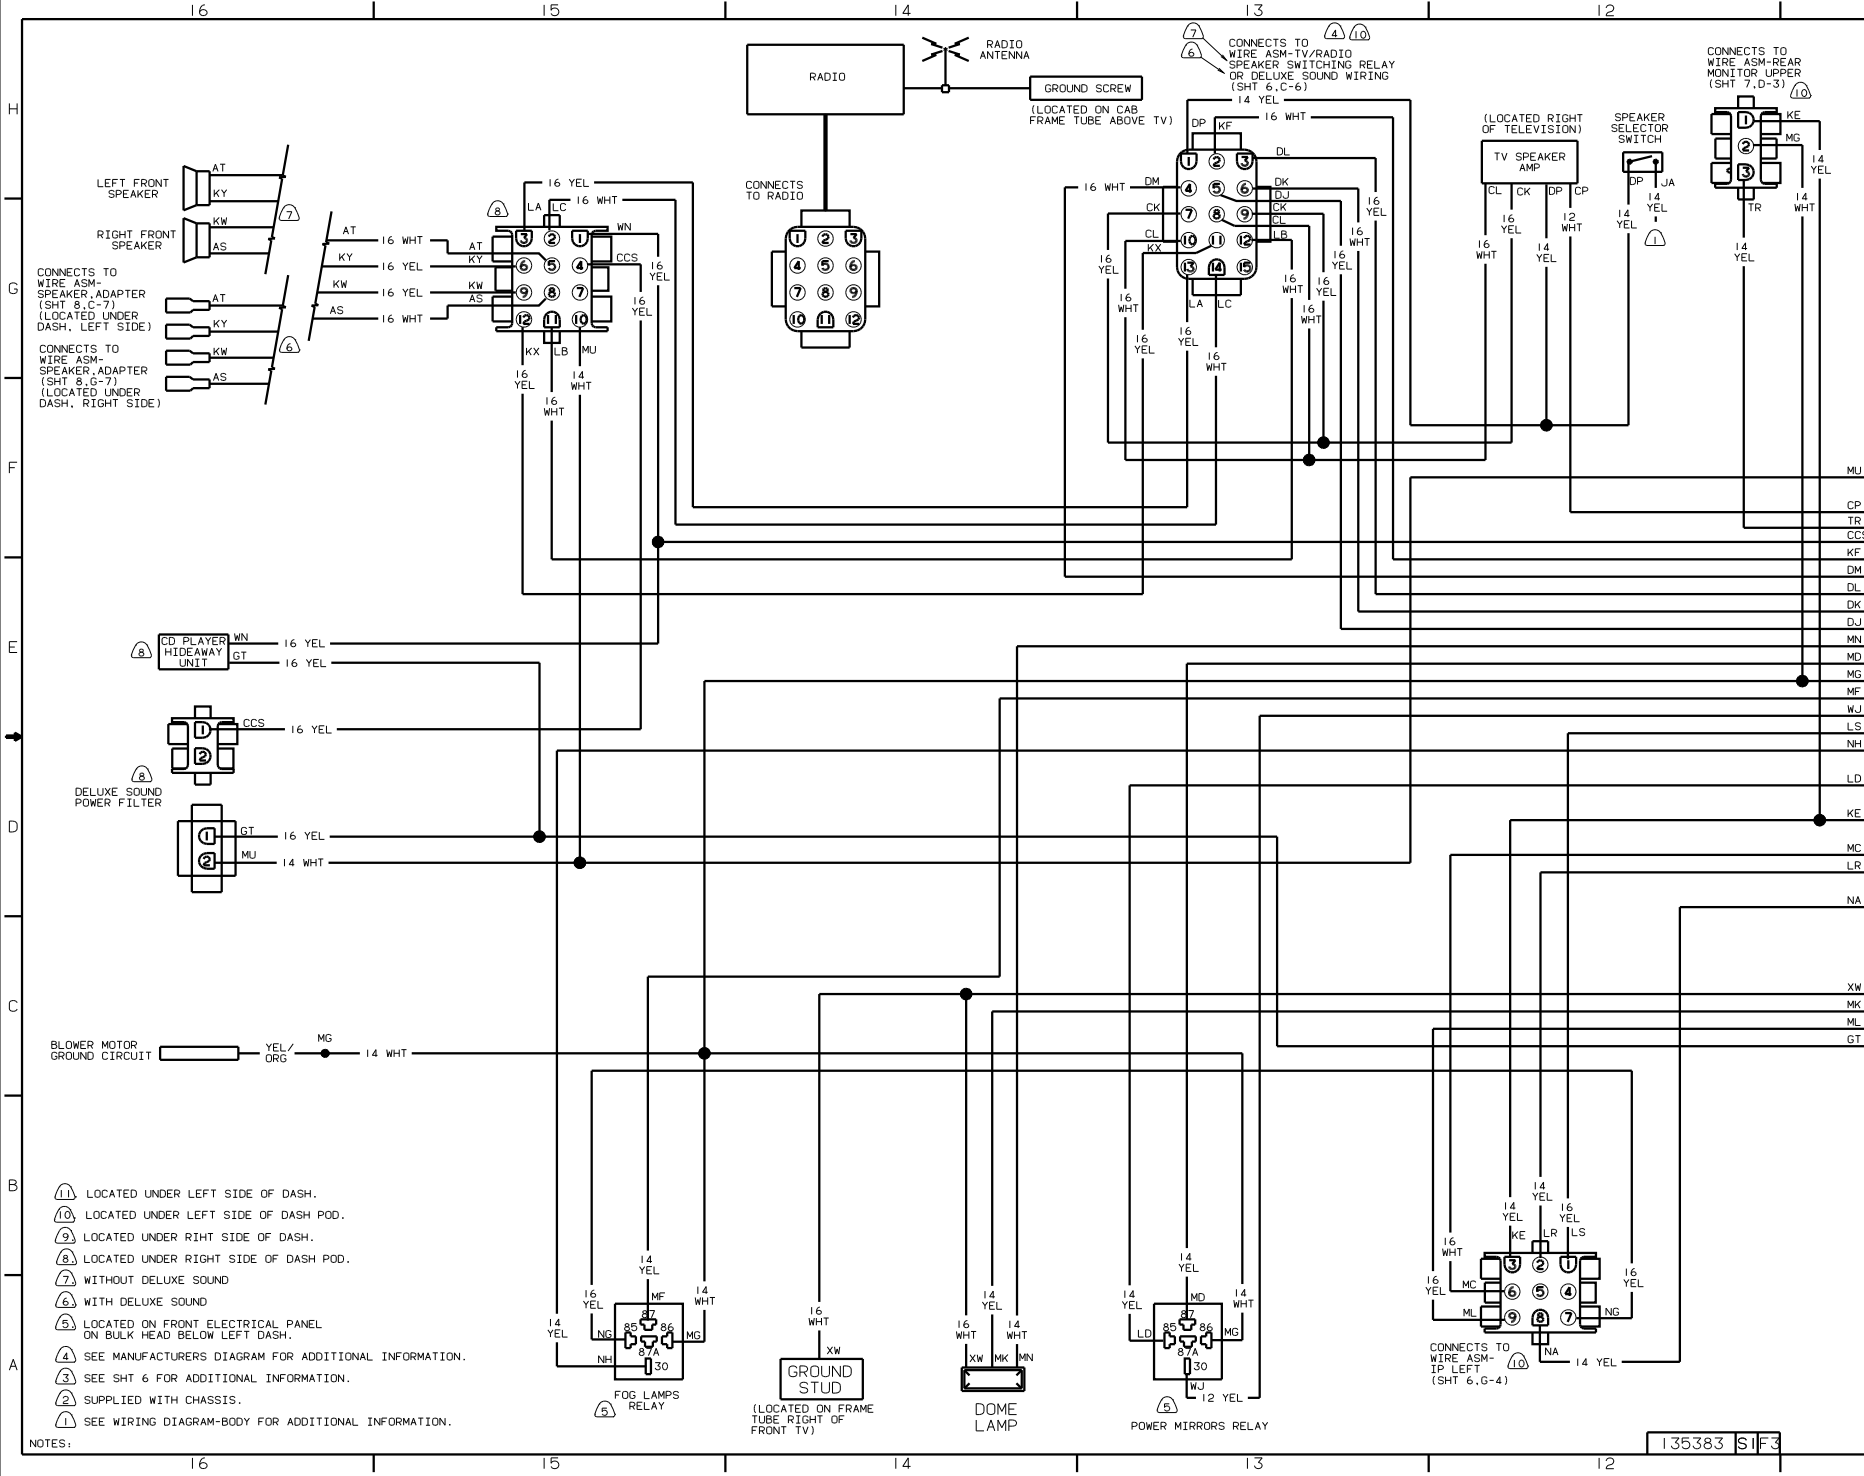

LEFT FRONT SPEAKER  
 AT  
 KY  
 KW  
 AS

CONNECTS TO WIRE ASM-SPEAKER ADAPTER (SHT 8,C-7) (LOCATED UNDER DASH, LEFT SIDE)

RIGHT FRONT SPEAKER  
 AT  
 KY  
 KW  
 AS

CONNECTS TO WIRE ASM-SPEAKER ADAPTER (SHT 8,C-7) (LOCATED UNDER DASH, RIGHT SIDE)


CD PLAYER HIDEAWAY UNIT  
 MN  
 GT

DELUXE SOUND POWER FILTER  
 CCS

GT  
 MU


BLOWER MOTOR GROUND CIRCUIT  
 YEL/ORG  
 MG

- NOTES:
- ⑪ LOCATED UNDER LEFT SIDE OF DASH.
  - ⑩ LOCATED UNDER LEFT SIDE OF DASH POD.
  - ⑨ LOCATED UNDER RIGHT SIDE OF DASH.
  - ⑧ LOCATED UNDER RIGHT SIDE OF DASH POD.
  - ⑦ WITHOUT DELUXE SOUND
  - ⑥ WITH DELUXE SOUND
  - ⑤ LOCATED ON FRONT ELECTRICAL PANEL ON BULK HEAD BELOW LEFT DASH.
  - ④ SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
  - ③ SEE SHT 6 FOR ADDITIONAL INFORMATION.
  - ② SUPPLIED WITH CHASSIS.
  - ① SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.

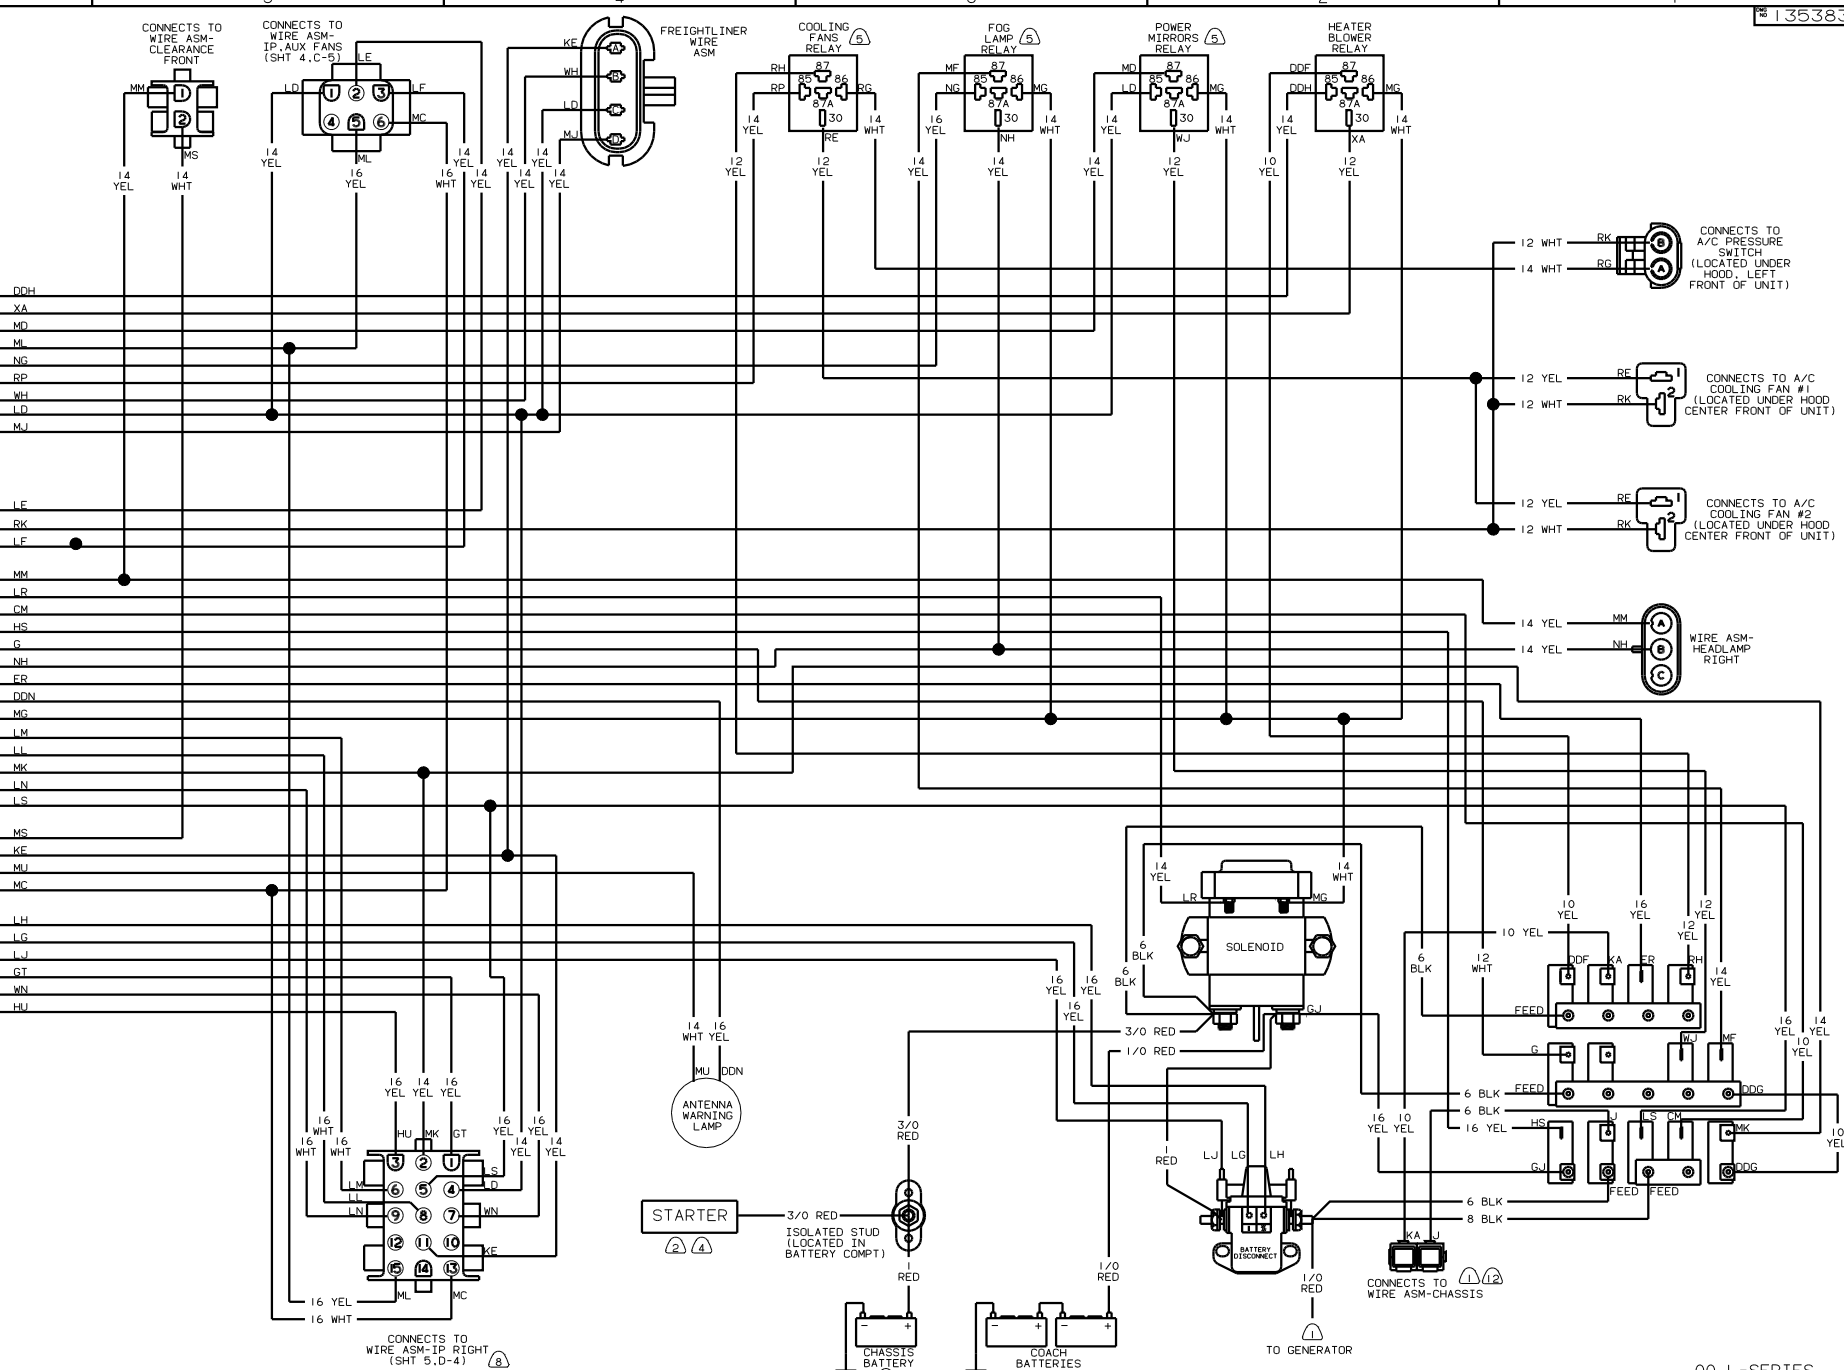


WIRING DIAGRAM-IP, MAIN  
(WIRE ASM 134053)

00 L-SERIES  
FREIGHTLINER  
TITLE: WIRING DIAGRAM-AUTO  
DRAWN BY: [blank]  
CHECKED BY: [blank]  
PART 2 OF 8  
135383

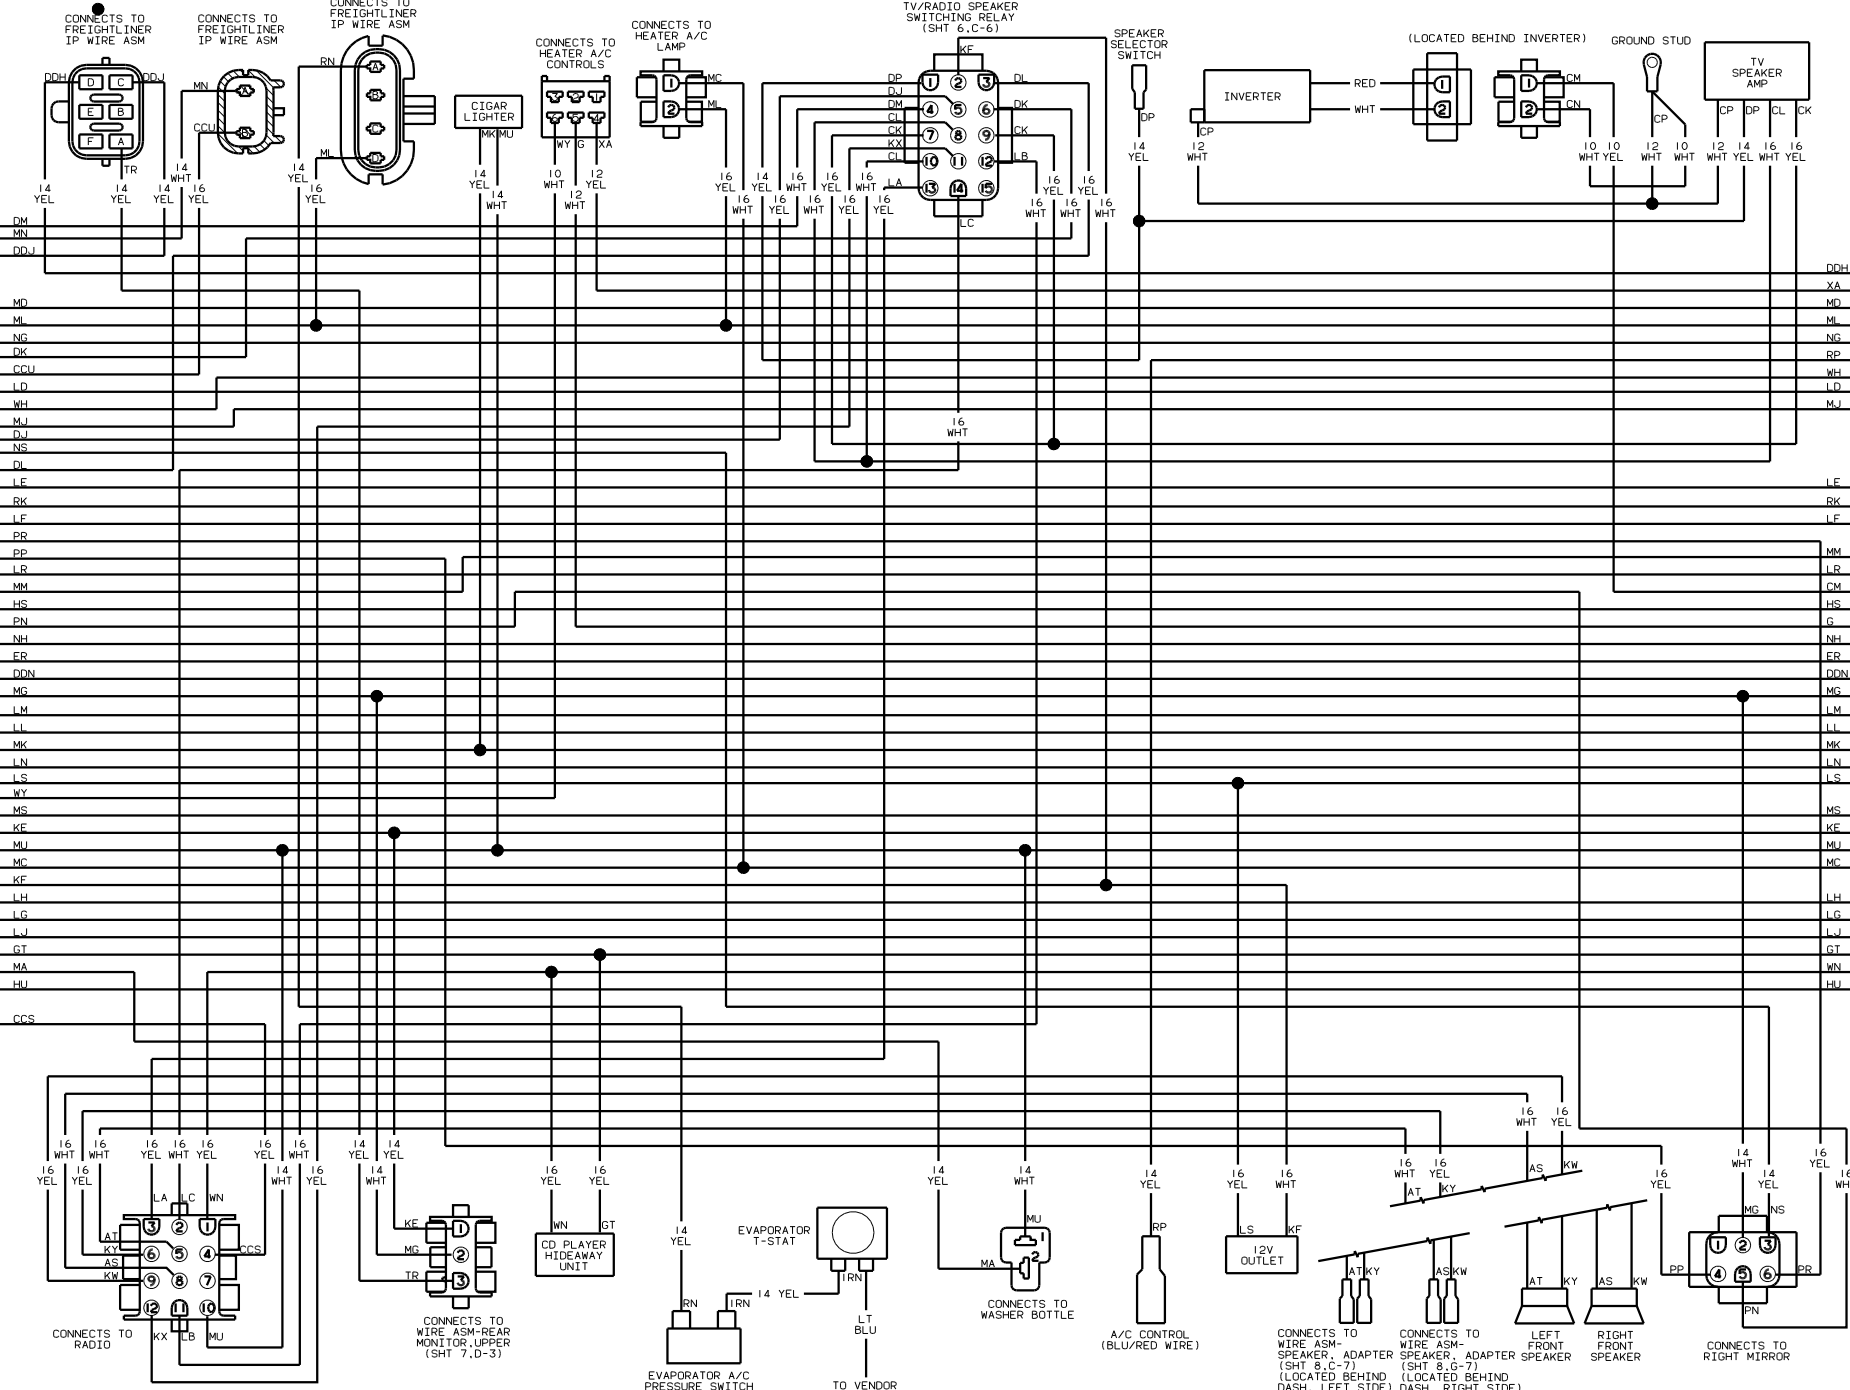


135383 S2F2

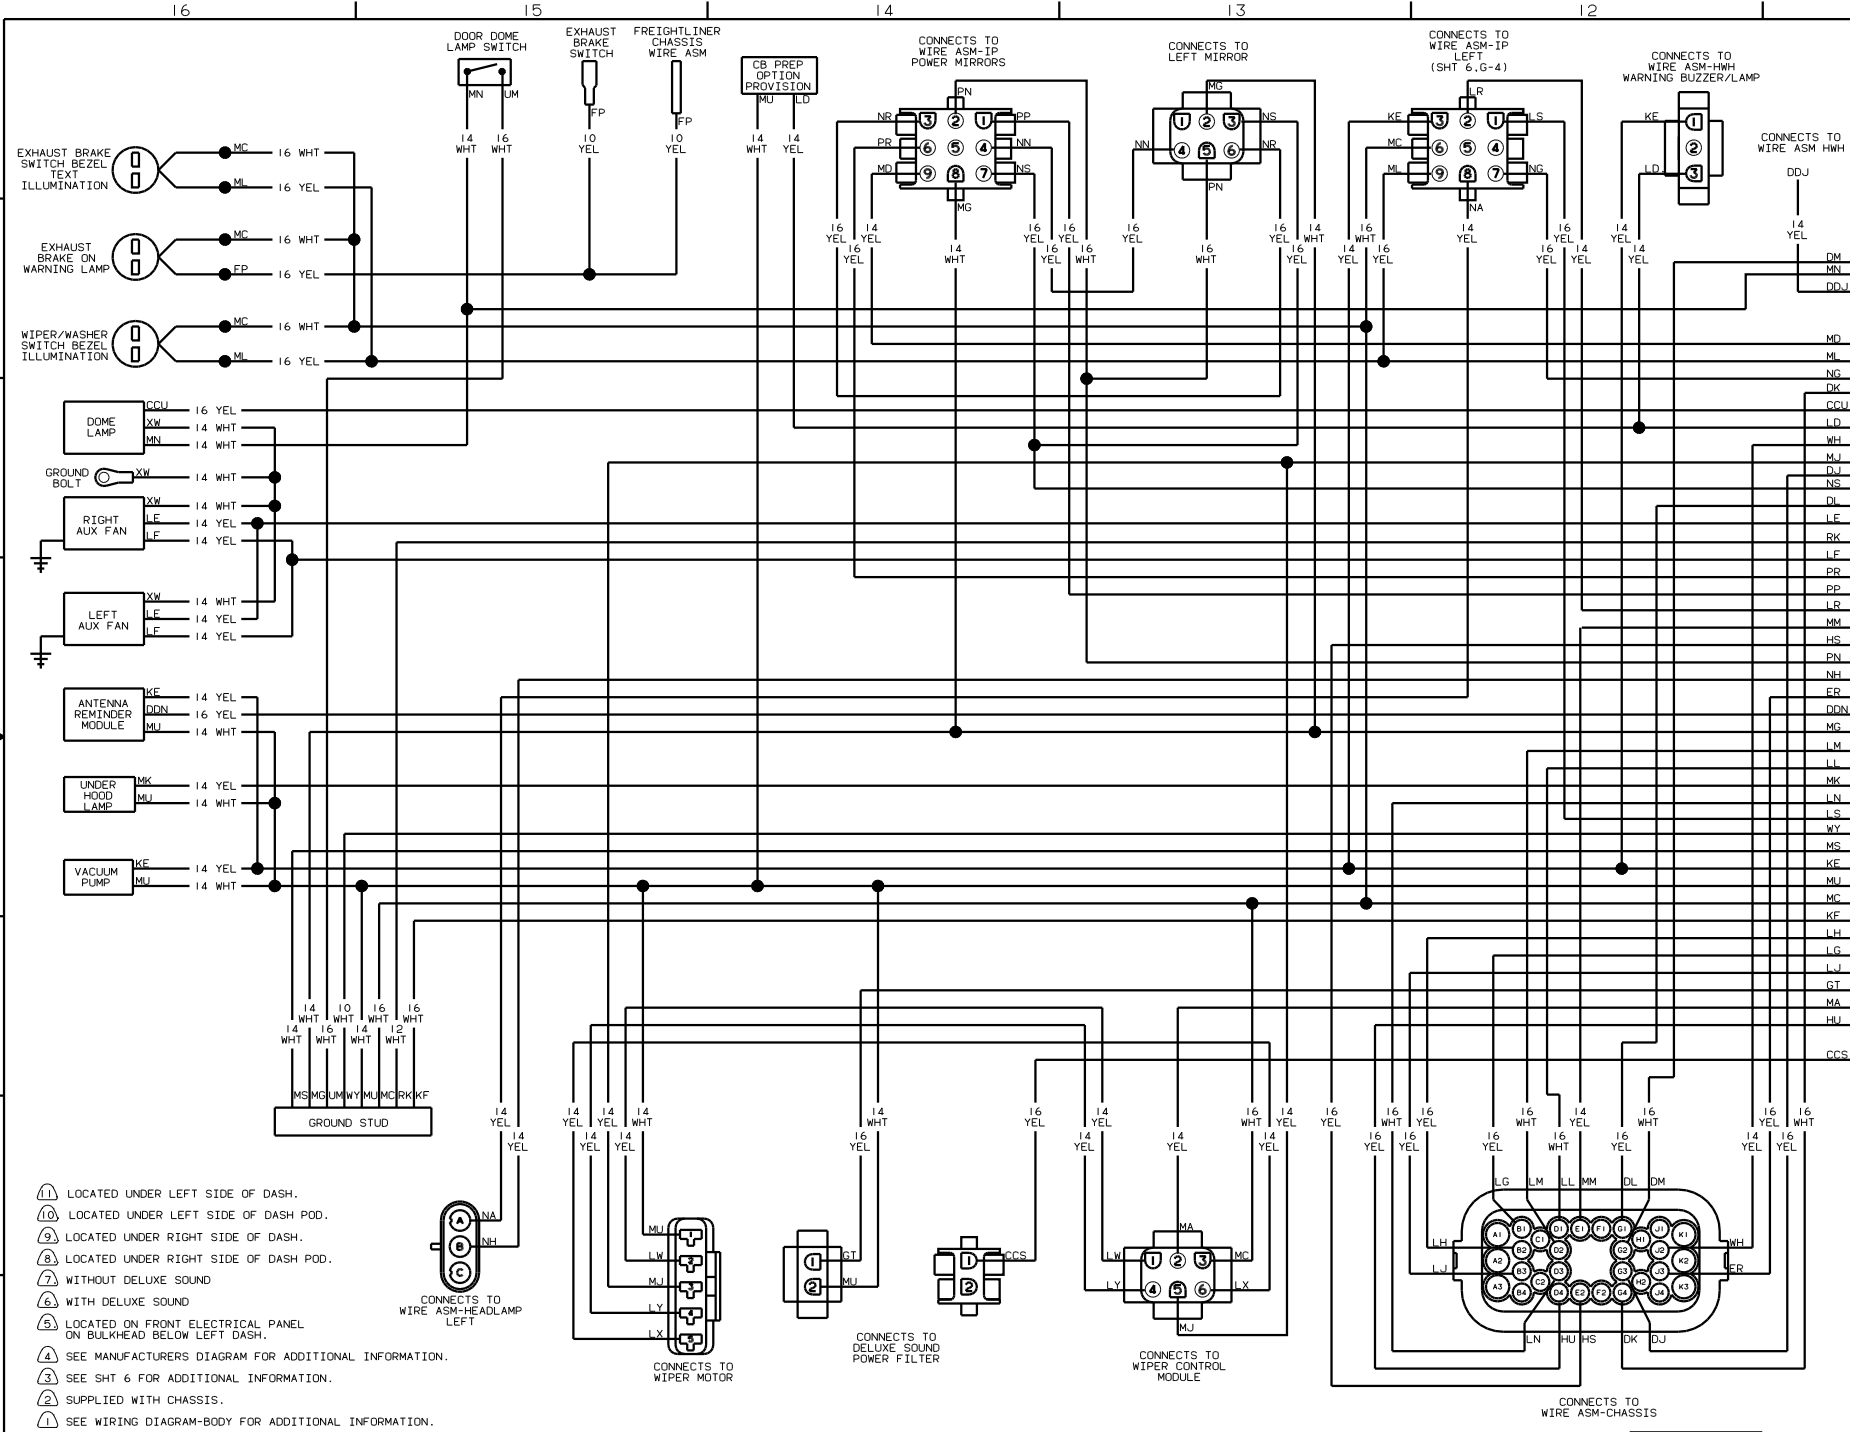


NOTES:


- ① LOCATED UNDER LEFT SIDE OF DASH.
- ⑩ LOCATED UNDER LEFT SIDE OF DASH POD.
- ⑨ LOCATED UNDER RIGHT SIDE OF DASH.
- ⑧ LOCATED UNDER RIGHT SIDE OF DASH POD.
- ⑦ WITHOUT DELUXE SOUND
- ⑥ WITH DELUXE SOUND
- ⑤ LOCATED ON FRONT ELECTRICAL PANEL ON BULKHEAD BELOW LEFT DASH.
- ④ SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
- ③ SEE SHT 6 FOR ADDITIONAL INFORMATION.
- ② SUPPLIED WITH CHASSIS.
- ① SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.

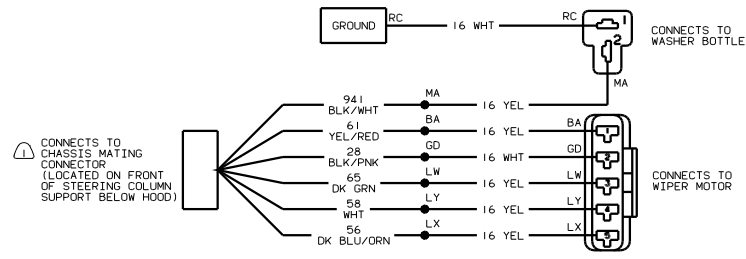

WIRING DIAGRAM-WIPER/WASHER  
(WIRE ASM 111096-03)  
(FORD ONLY)

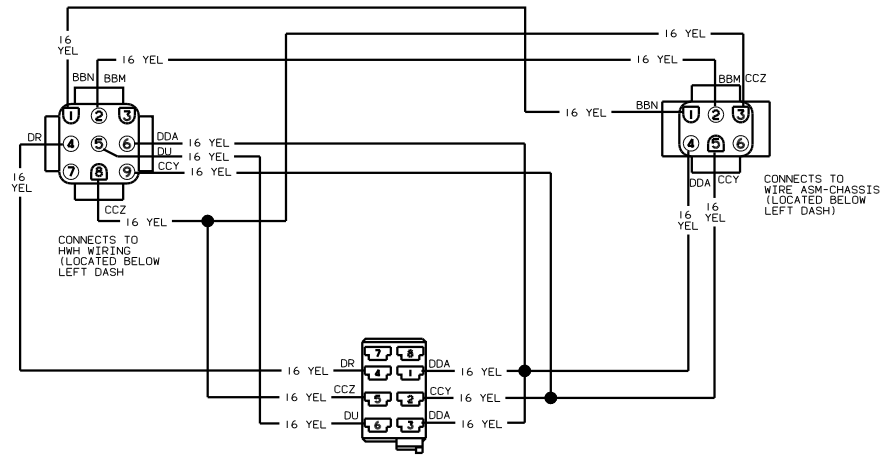


WIRING DIAGRAM SLIDEOUT CONTROL  
(WIRE ASM 131386-02)  
(W/DOUBLE SLIDE)

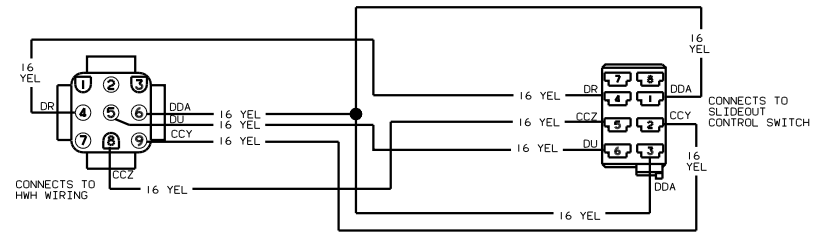

WIRING DIAGRAM SLIDEOUT CONTROL  
(WIRE ASM 131386-01)  
(W/SINGLE SLIDE)


SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.



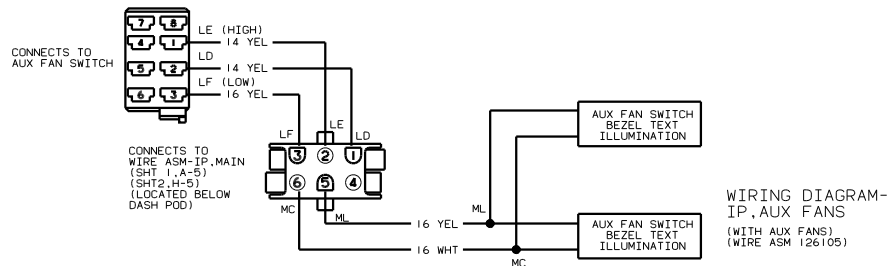

WIRING DIAGRAM-IP, AUX FANS (WITH AUX FANS) (WIRE ASM 126105)

2) SEE SHT'S 1,2,3, & 4 FOR ADDITIONAL INFORMATION.  
 1) SEE MANUFACTURER'S DIGRAM FOR ADDITIONAL INFORMATION.

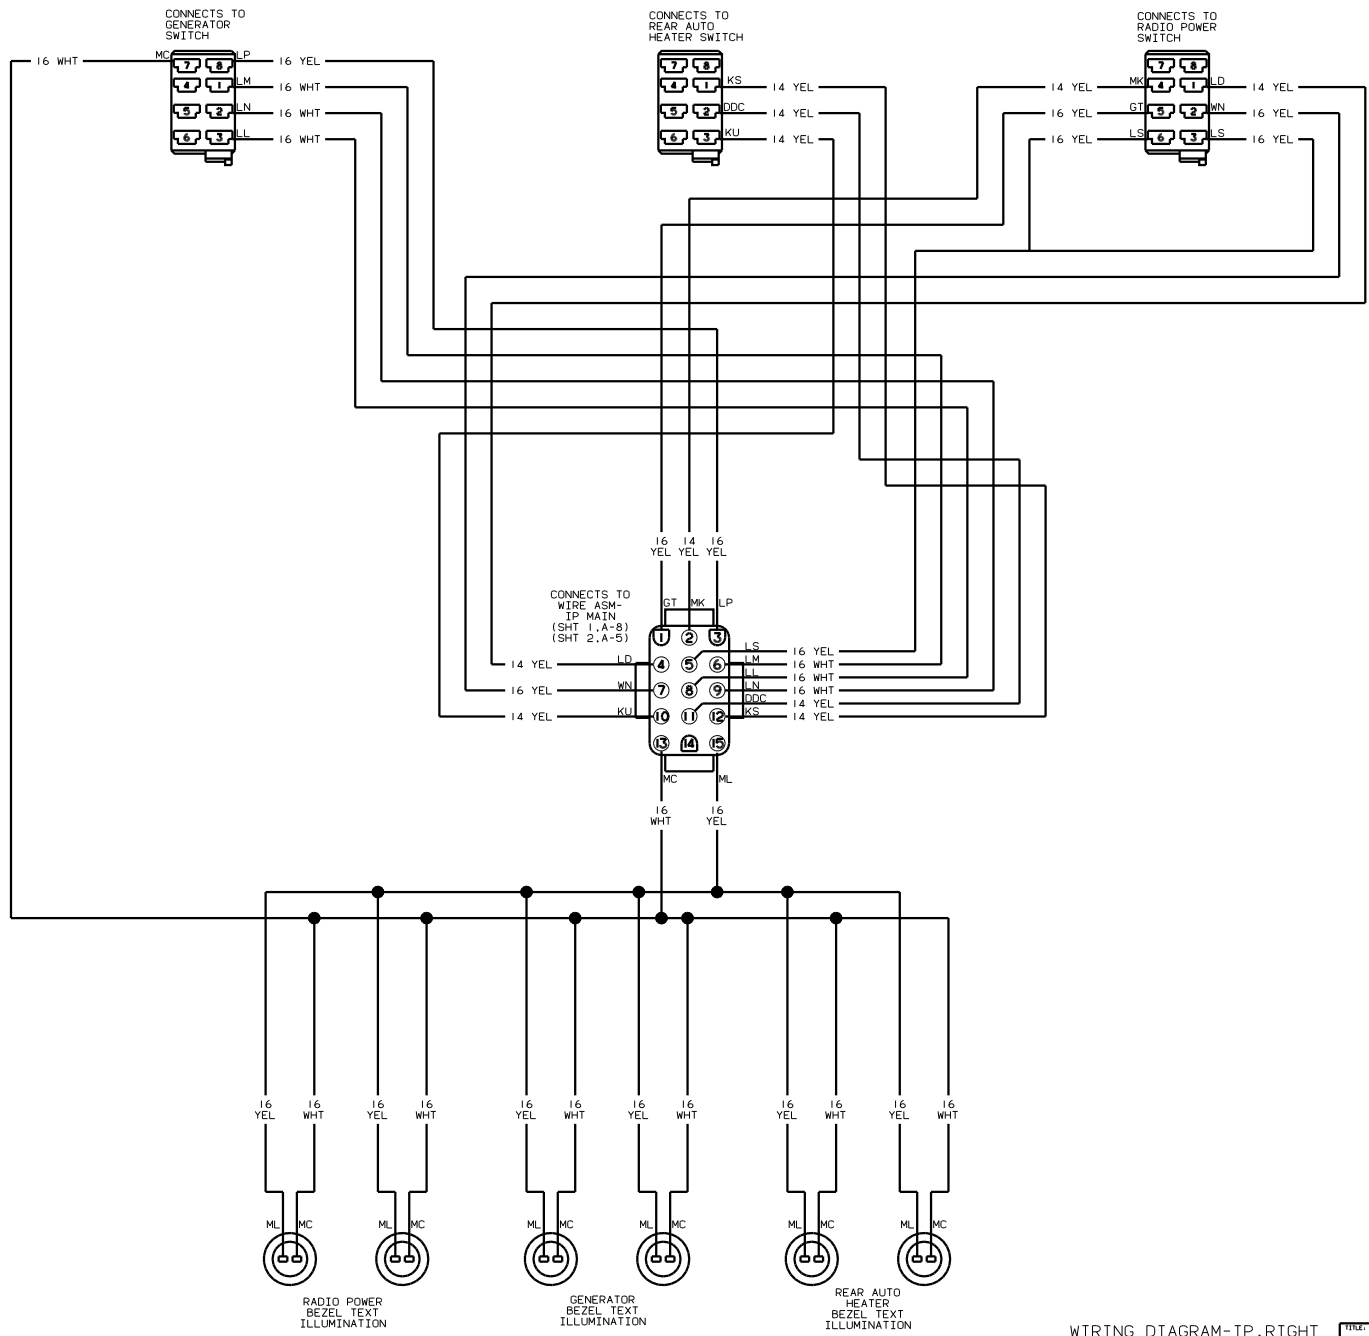


NOTES:


WIRING DIAGRAM-IP.RIGHT  
(WIRE ASM 132480)

TITLE: WIRING DIAGRAM-AUTO	
DO NOT SCALE DRAWING	REV: 1.0
SHEET 5 OF 8	FIG NO 135383

00 L-SERIES

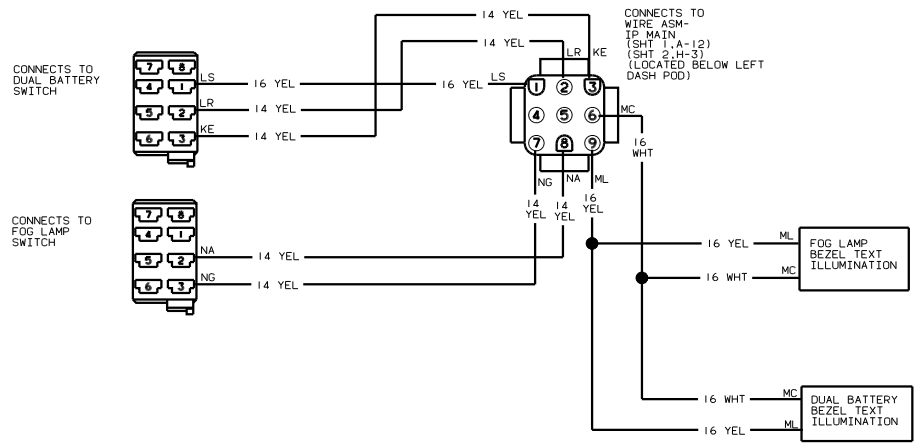


WIRING DIAGRAM IP, LEFT  
(WIRE ASM 129437)

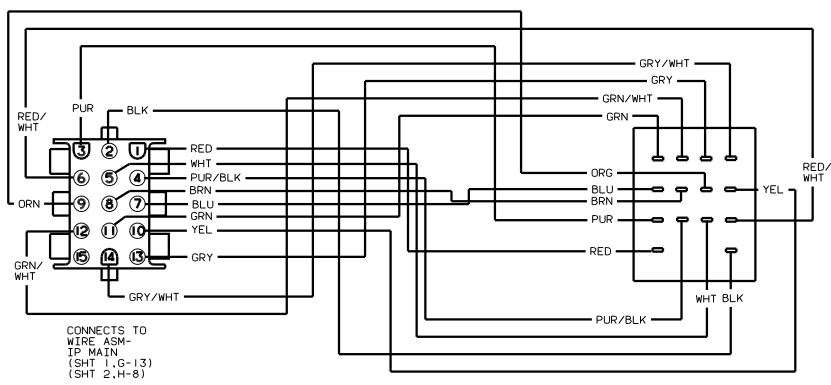


WIRING DIAGRAM RELAY-RADIO/TV  
SPEAKER, SWITCH  
(WIRE ASM 115539)


① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

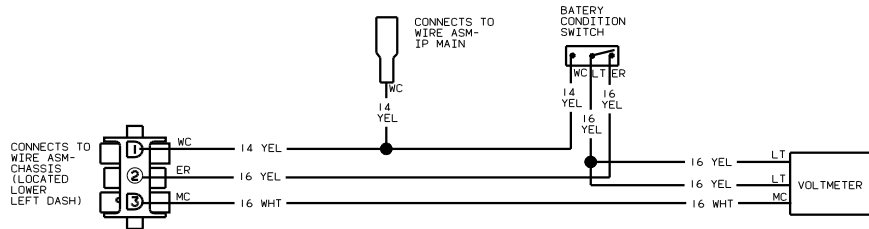

WIRING DIAGRAM VOLTMETER  
(WIRE ASM 112055-02)




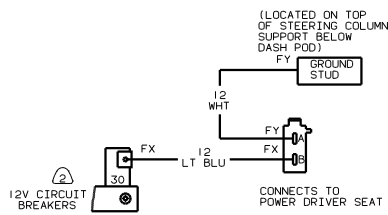


 WIRING DIAGRAM-  
POWER DRIVER SEAT  
(WITH POWER DRIVER SEAT)  
(WIRE ASM 108029)



WIRING DIAGRAM-REAR MONITOR, UPPER  
(WITH REAR MONITOR)  
(WIRE ASM 96717-04)

NOTES: 1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

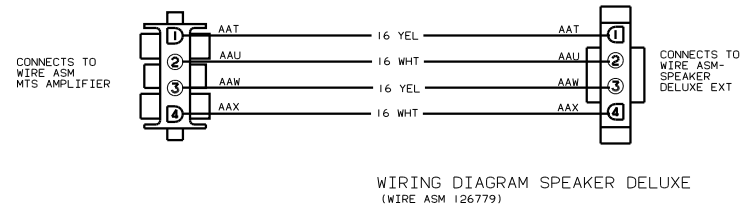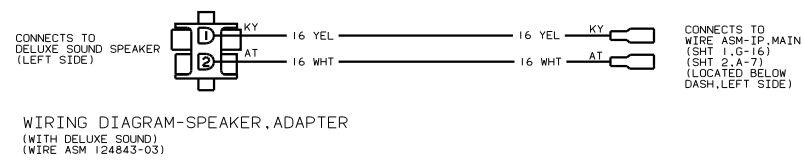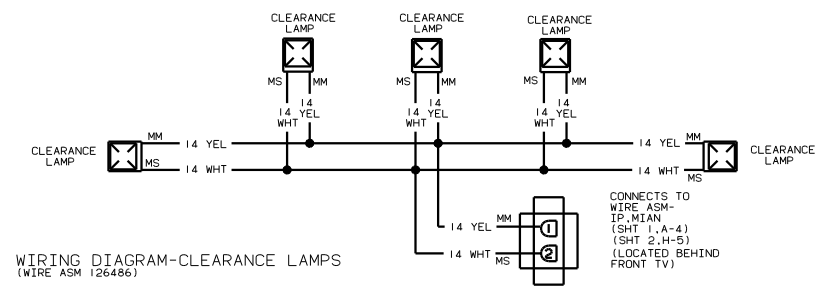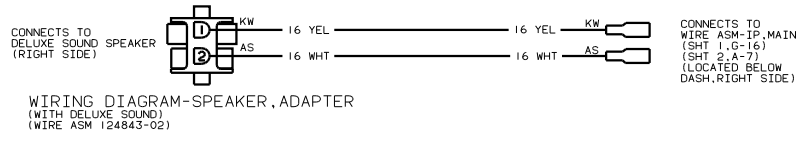

NOTES: ① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.