



 
**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




**CAUTION**


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.



 CONNECTS TO WIRE ASM-COMPT LAMPS (LOCATED INSIDE CENTER LEFT COMPT)  
 WIRING DIAGRAM-LAMP, SIDEMARKER (CENTER LEFT)  
 (WIRE ASM 107775-04)




CONNECTS TO WIRE ASM-COMPT LAMPS (LOCATED INSIDE CENTER RIGHT COMPT)  
 WIRING DIAGRAM-LAMP, SIDEMARKER (CENTER RIGHT)  
 (WIRE ASM 107775-04)

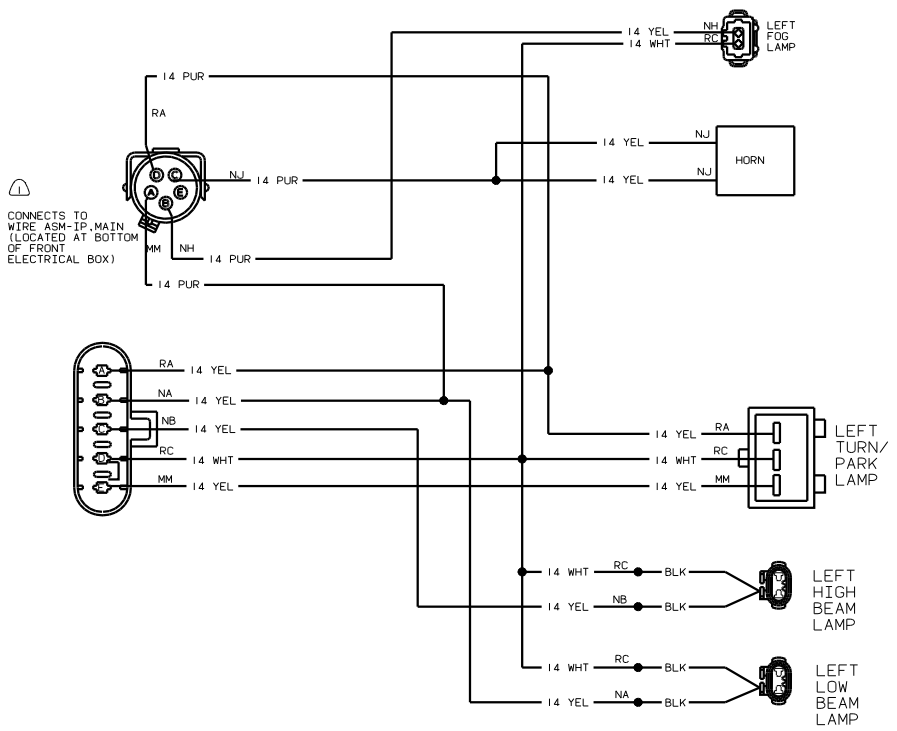

CONNECTS TO WIRE ASM-IP, MAIN (LOCATED AT BOTTOM OF FRONT ELECTRICAL BOX)

WIRING DIAGRAM-HEADLAMP, LEFT  
 (WIRE ASM 132275)

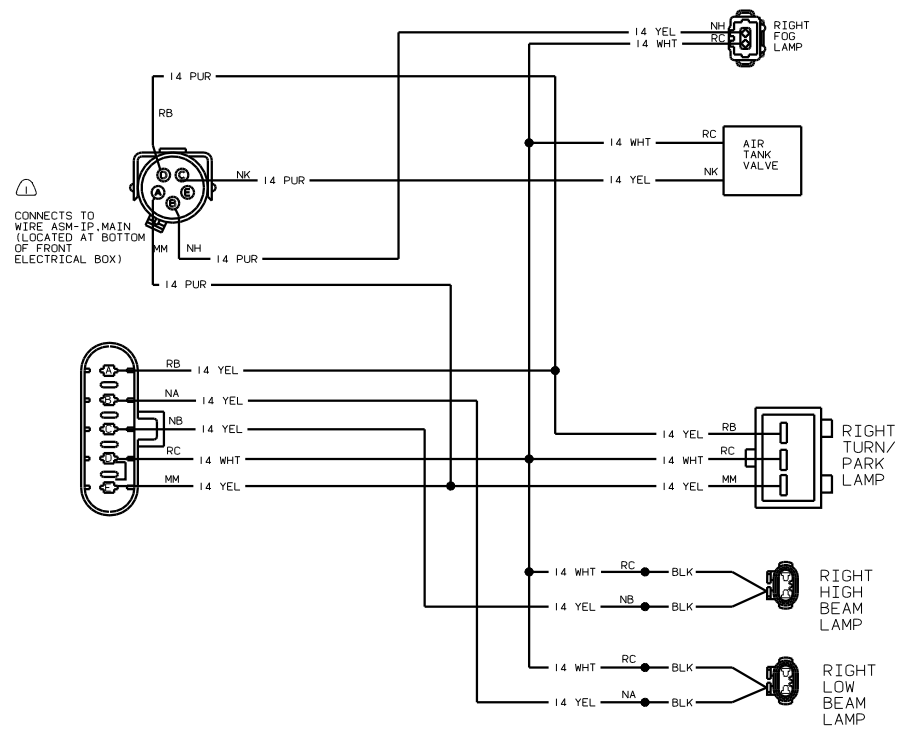

CONNECTS TO WIRE ASM-IP, MAIN (LOCATED AT BOTTOM OF FRONT ELECTRICAL BOX)

WIRING DIAGRAM-HEADLAMP, RIGHT  
 (WIRE ASM 132276)

NOTES:  
 (2) SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.  
 (1) SEE WIRING DIAGRAM AUTO FOR ADDITIONAL INFORMATION.


WINNEBAGO		00 0-SERIES	
OF IN	DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL
CHP	DATE	HALF DIM (H)	
PIE	DATE	ONE-PLACE (H, H1)	
PIE	DATE	TWO-PLACE (H, H1)	
COE	DATE	ANGLE	
COE	DATE	THIRD ANGLE PROJECTION	
DRAWN BY		TITLE	
SCALE		WIRING DIAGRAM-AUTO LAMPS	
SHEET 1 OF 2		SHEET 1 OF 2	
ALL DIMENSIONS ARE IN MILLIMETERS		135385	

CENTER BRAKE LAMP



LEFT TAILLAMPS

RIGHT TAILLAMPS

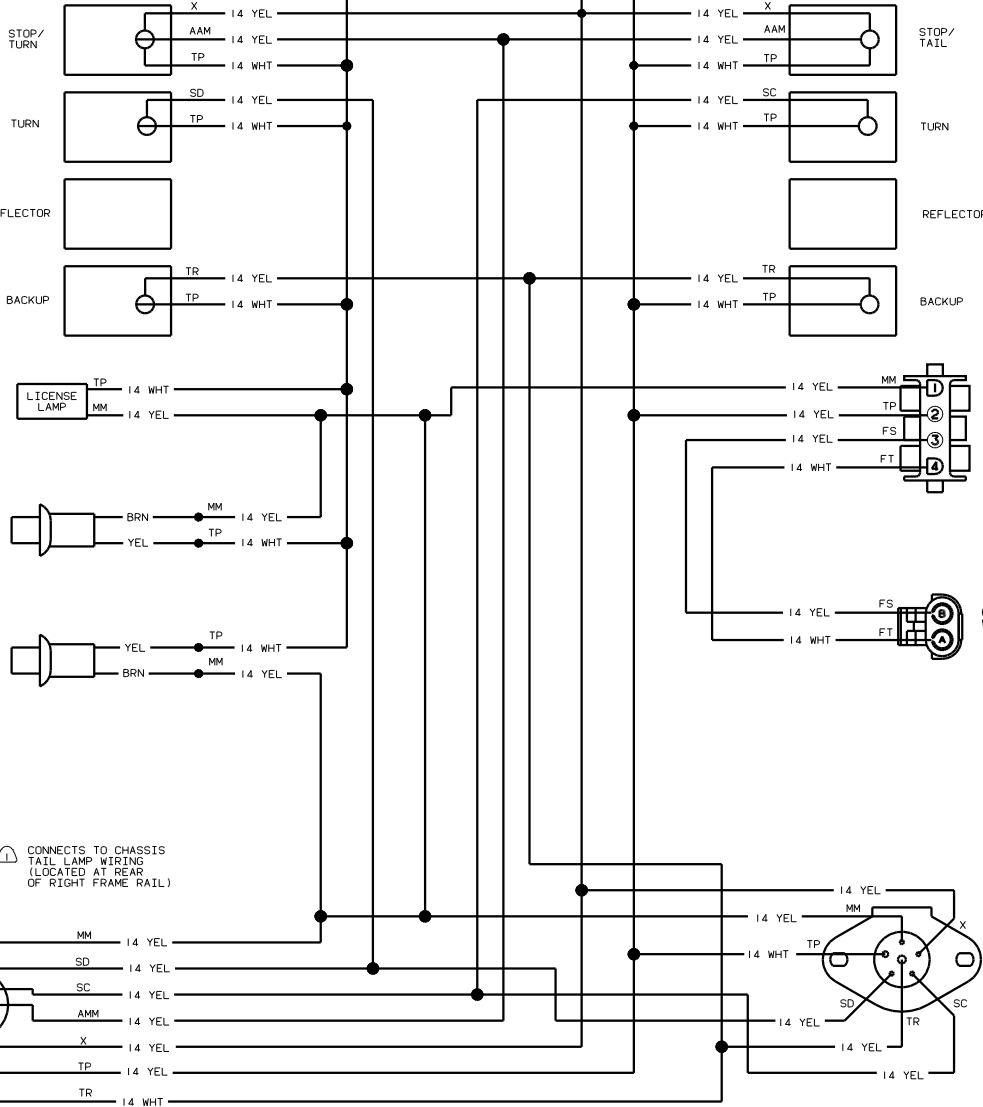

CONNECTS TO CHASSIS TAIL LAMP WIRING (LOCATED AT REAR OF RIGHT FRAME RAIL)

WIRING DIAGRAM-BACKWALL (WIRE ASM 129731-02)

00 Q-SERIES

SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.