




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

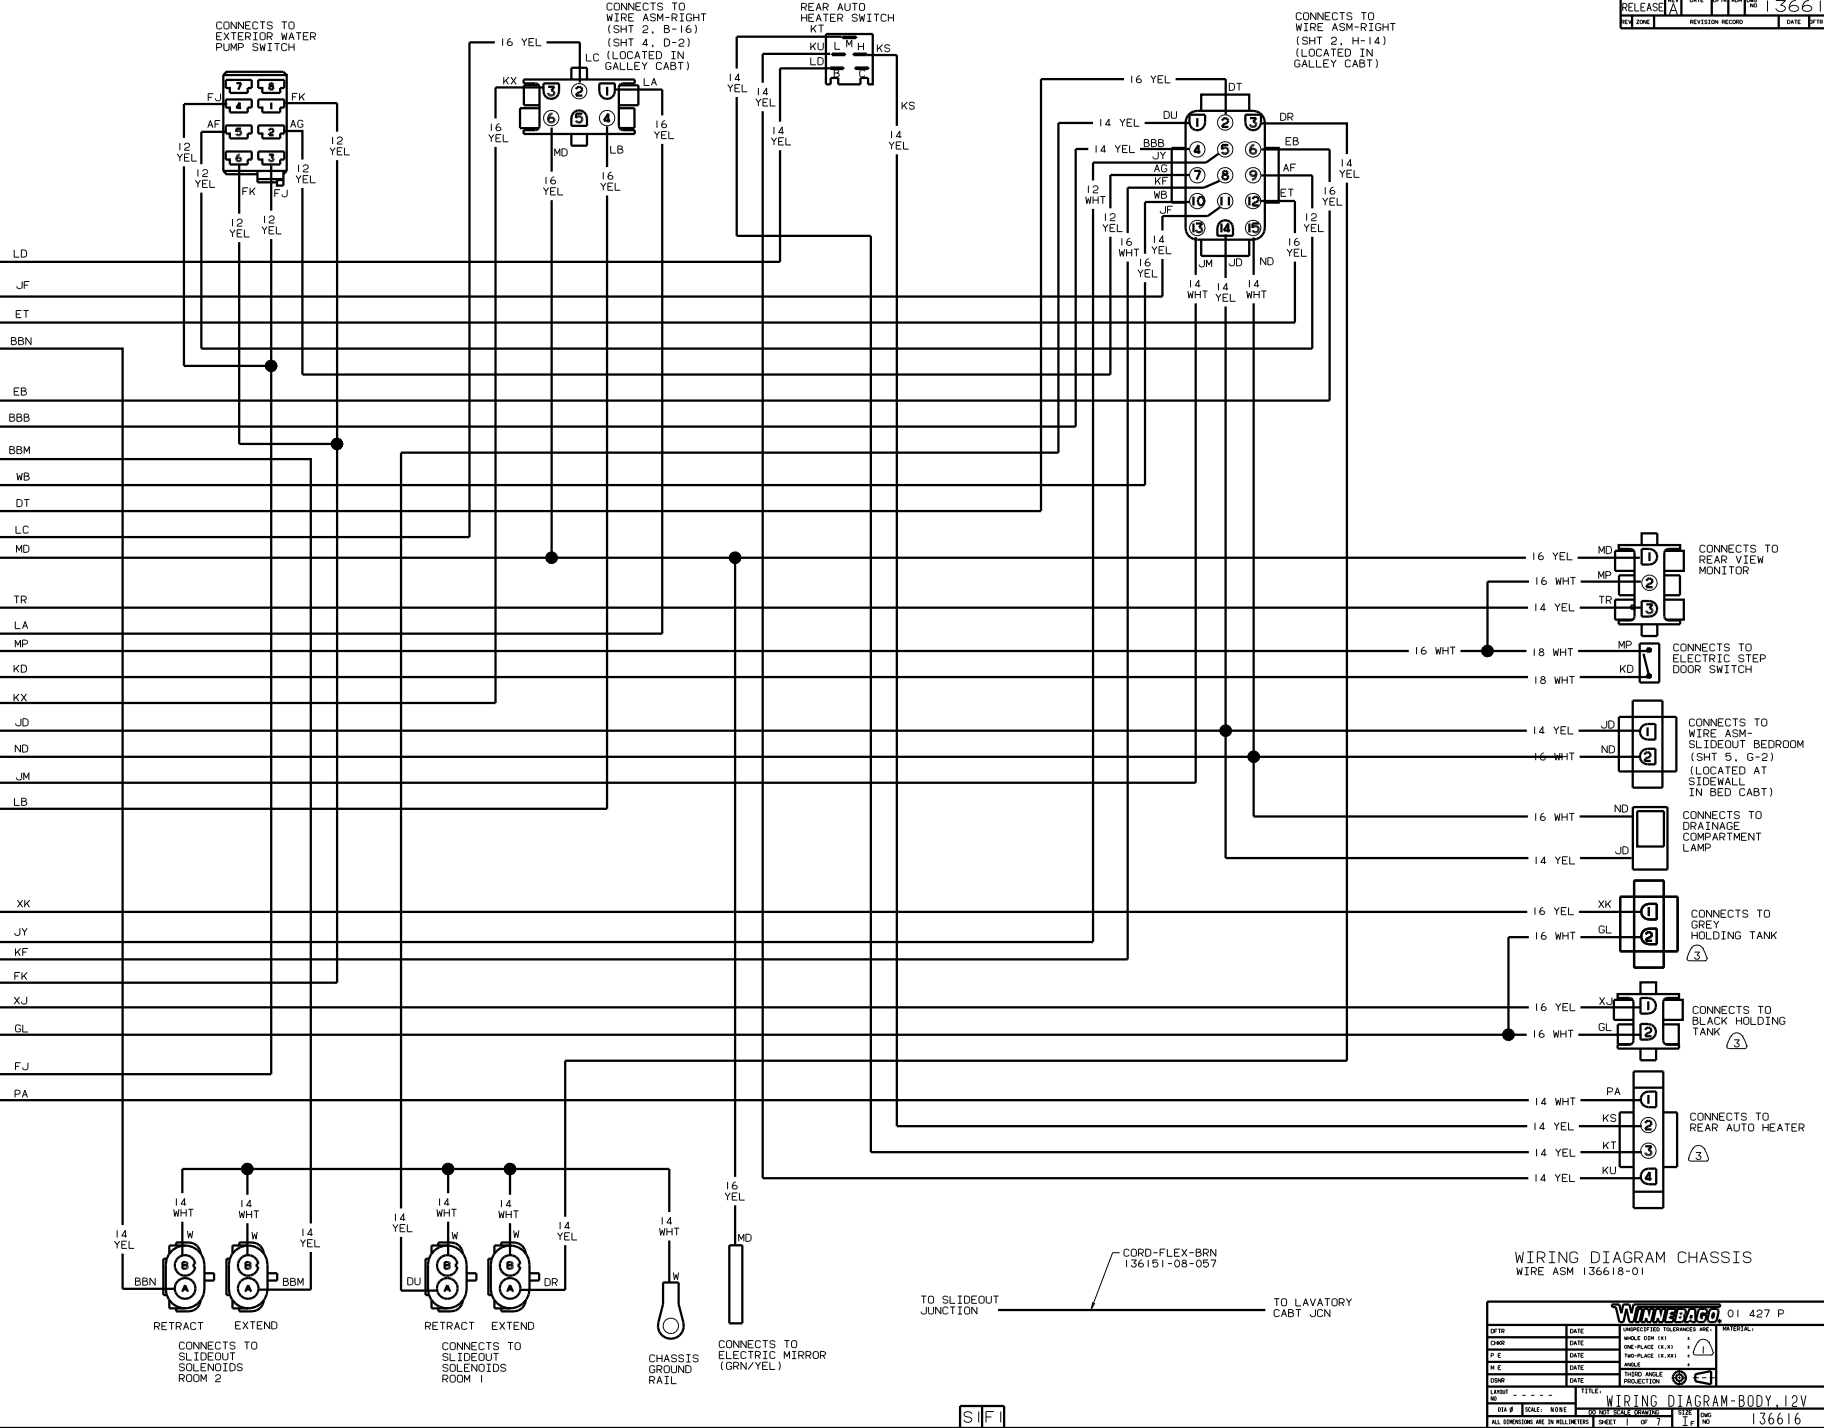


WIRING DIAGRAM CHASSIS
 WIRE ASM 136618-01


DATE		UNAPPROVED DIMENSIONS ARE INDICATED BY:	
DATE	ONE-PLACE (H, N)	DATE	ONE-PLACE (H, N)
DATE	TWO-PLACE (H, N)	DATE	TWO-PLACE (H, N)
DATE	THIRD PLACE (H, N)	DATE	THIRD PLACE (H, N)
DATE	FOURTH PLACE (H, N)	DATE	FOURTH PLACE (H, N)
DATE	FIFTH PLACE (H, N)	DATE	FIFTH PLACE (H, N)
DATE	SIXTH PLACE (H, N)	DATE	SIXTH PLACE (H, N)
DATE	SEVENTH PLACE (H, N)	DATE	SEVENTH PLACE (H, N)
DATE	EIGHTH PLACE (H, N)	DATE	EIGHTH PLACE (H, N)
DATE	NINTH PLACE (H, N)	DATE	NINTH PLACE (H, N)
DATE	TENTH PLACE (H, N)	DATE	TENTH PLACE (H, N)

WINNEBAGO 01 427 P

WIRING DIAGRAM-BODY 12V

ALL DIMENSIONS ARE IN MILLIMETERS SHEET 1 OF 7

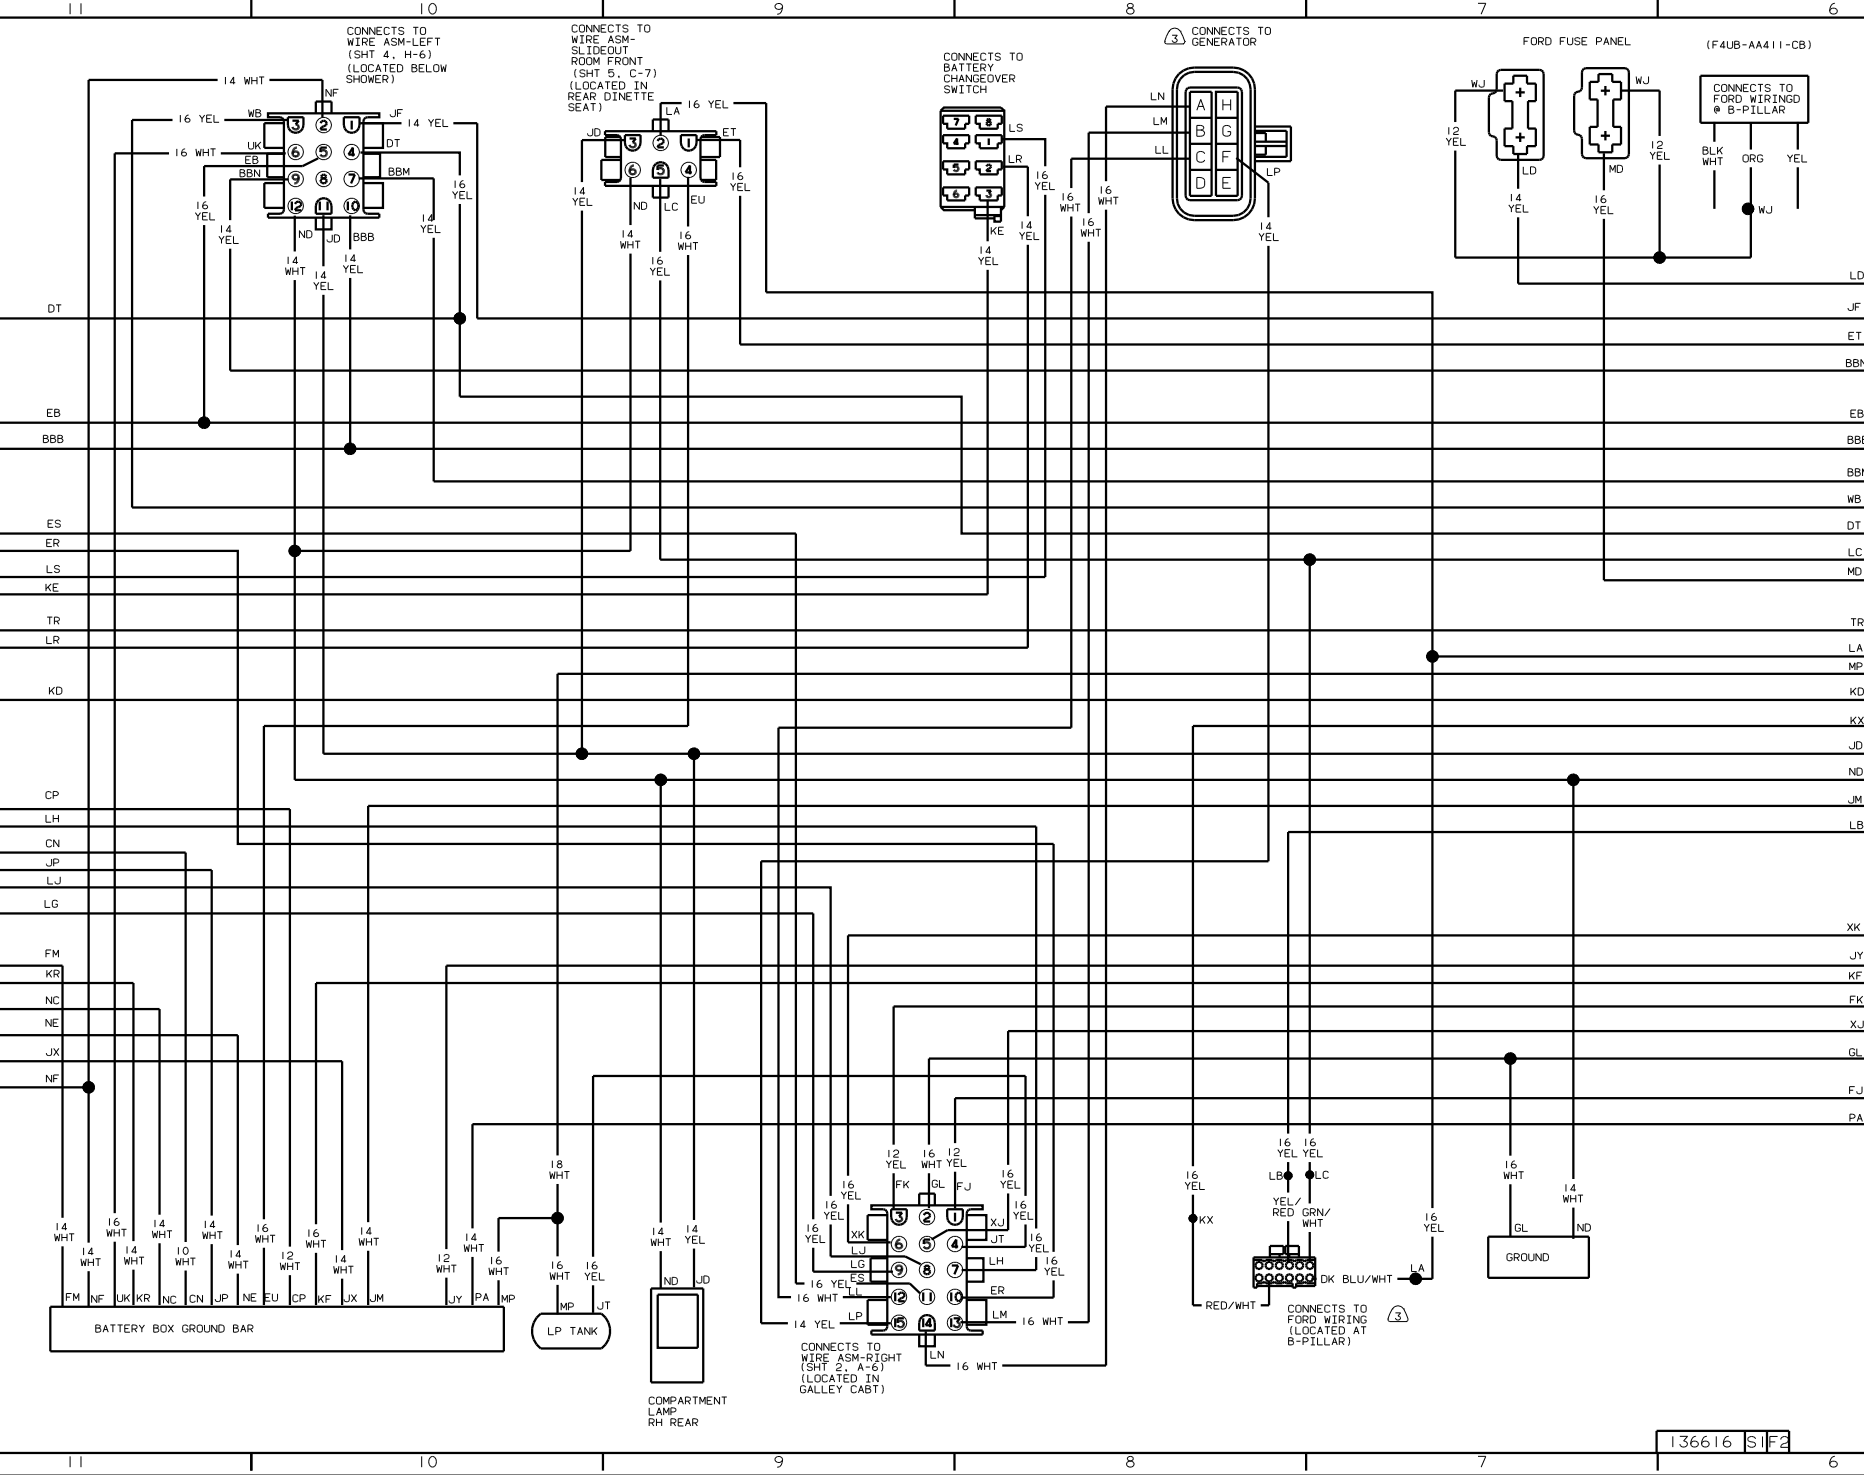

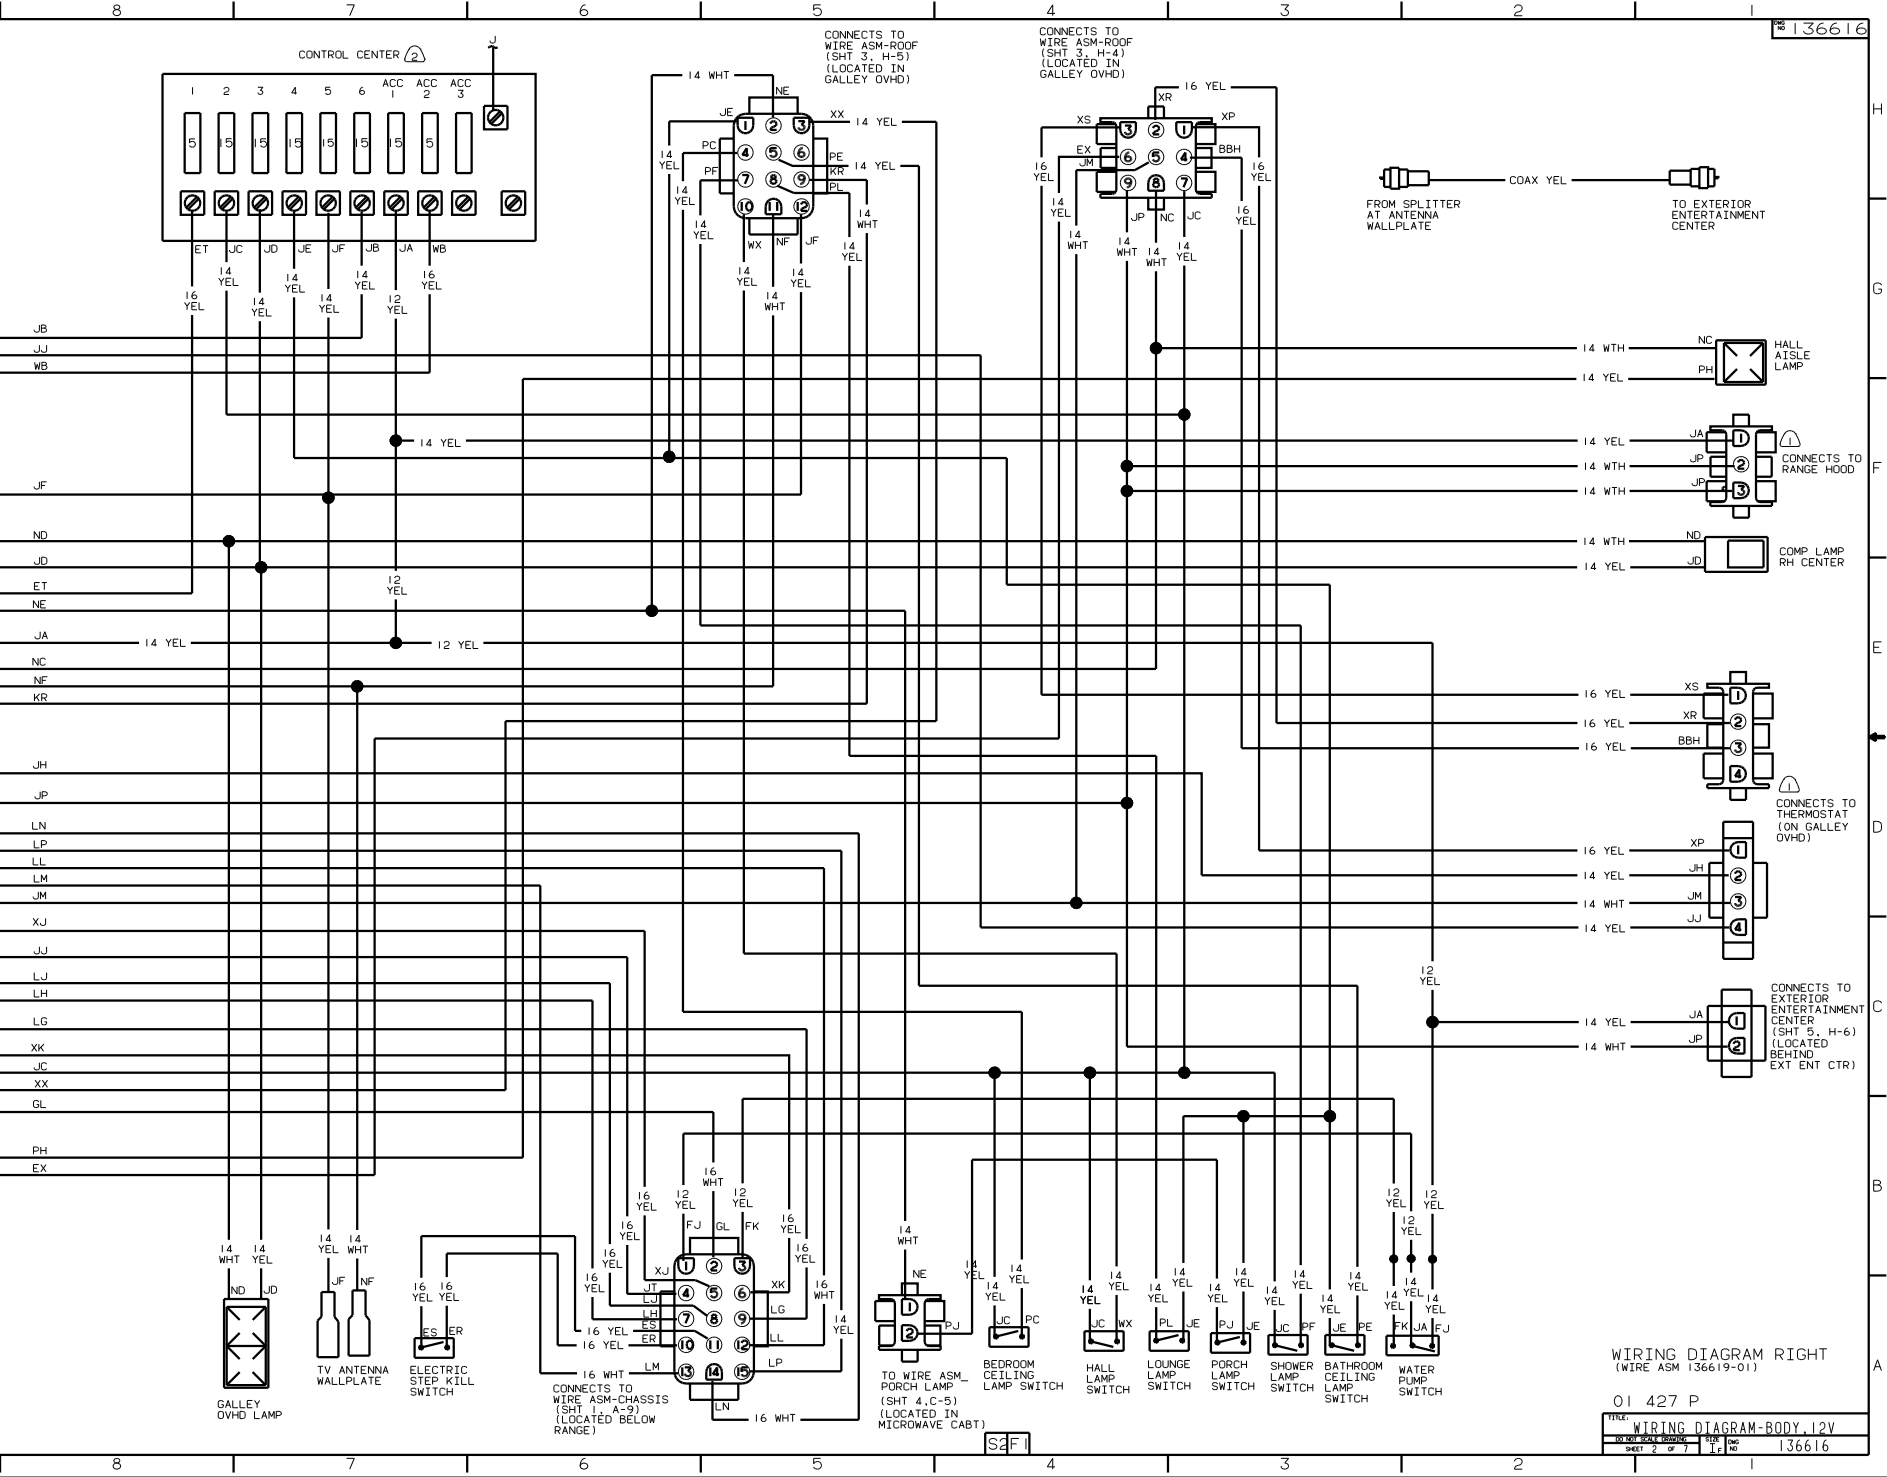


WIRING DIAGRAM RIGHT (WIRE ASM 136619-01)

01 427 P

FIGURE	WIRING DIAGRAM-BODY_12V
DO NOT SCALE DRAWING	DATE
SHEET 2 OF 7	136616



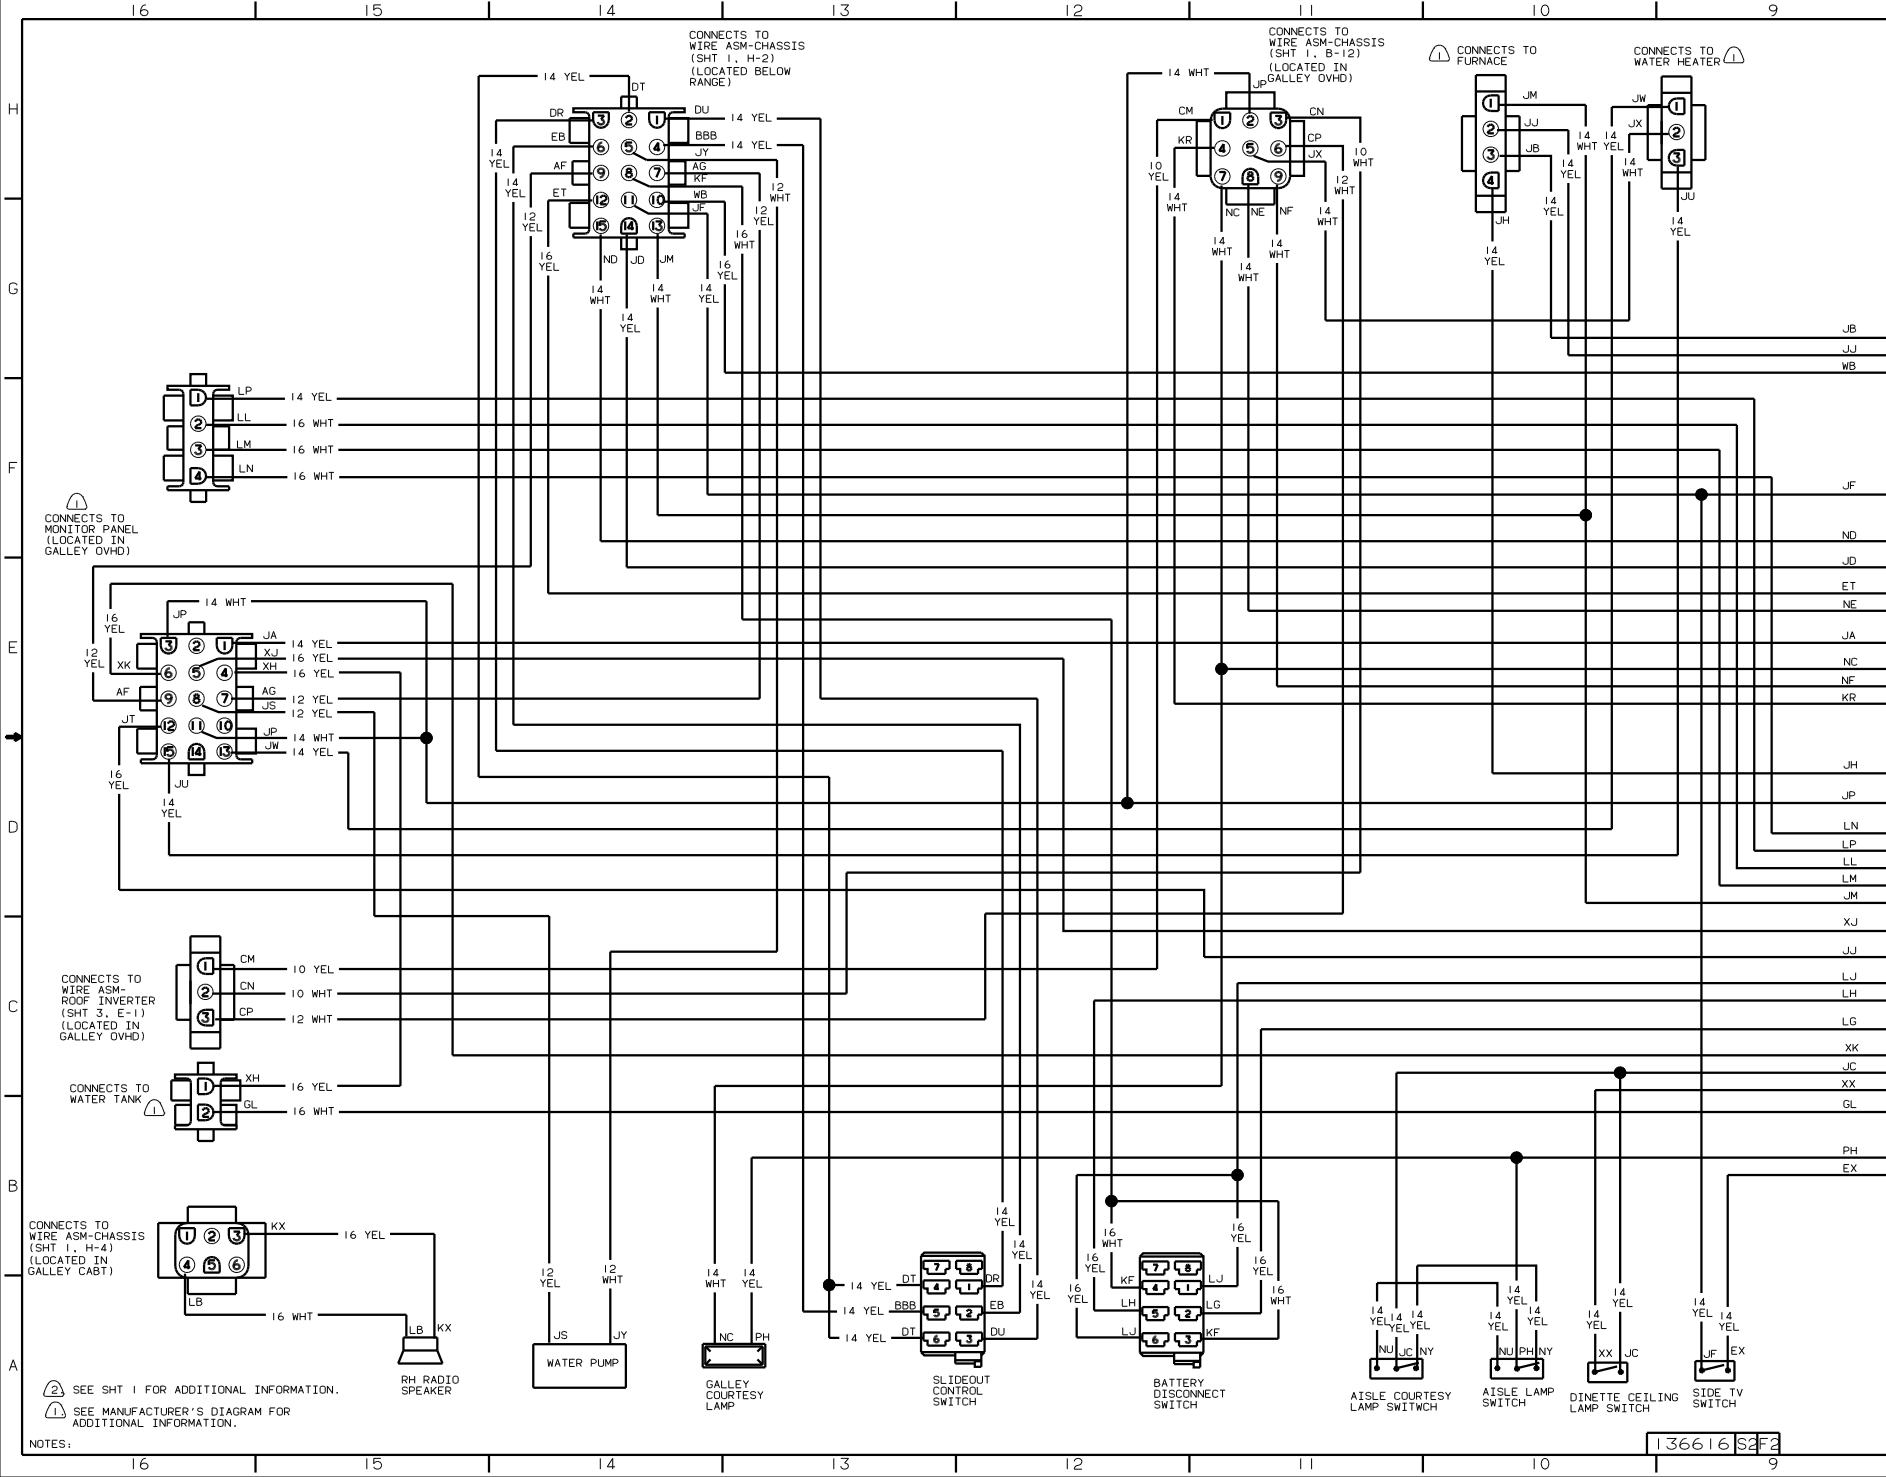

CONNECTS TO MONITOR PANEL (LOCATED IN GALLEY OVHD)

CONNECTS TO WIRE ASM-ROOF INVERTER (SHT 3, E-1) (LOCATED IN GALLEY OVHD)

CONNECTS TO WATER TANK

CONNECTS TO WIRE ASM-CHASSIS (SHT 1, H-4) (LOCATED IN GALLEY CABT)

SEE SHT 1 FOR ADDITIONAL INFORMATION.
SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.


NOTES:

CONNECTS TO WIRE ASM-CHASSIS (SHT 1, H-2) (LOCATED BELOW RANGE)

CONNECTS TO WIRE ASM-CHASSIS (SHT 1, B-12) (LOCATED IN GALLEY OVHD)









CONNECTS TO FURNACE

CONNECTS TO WATER HEATER

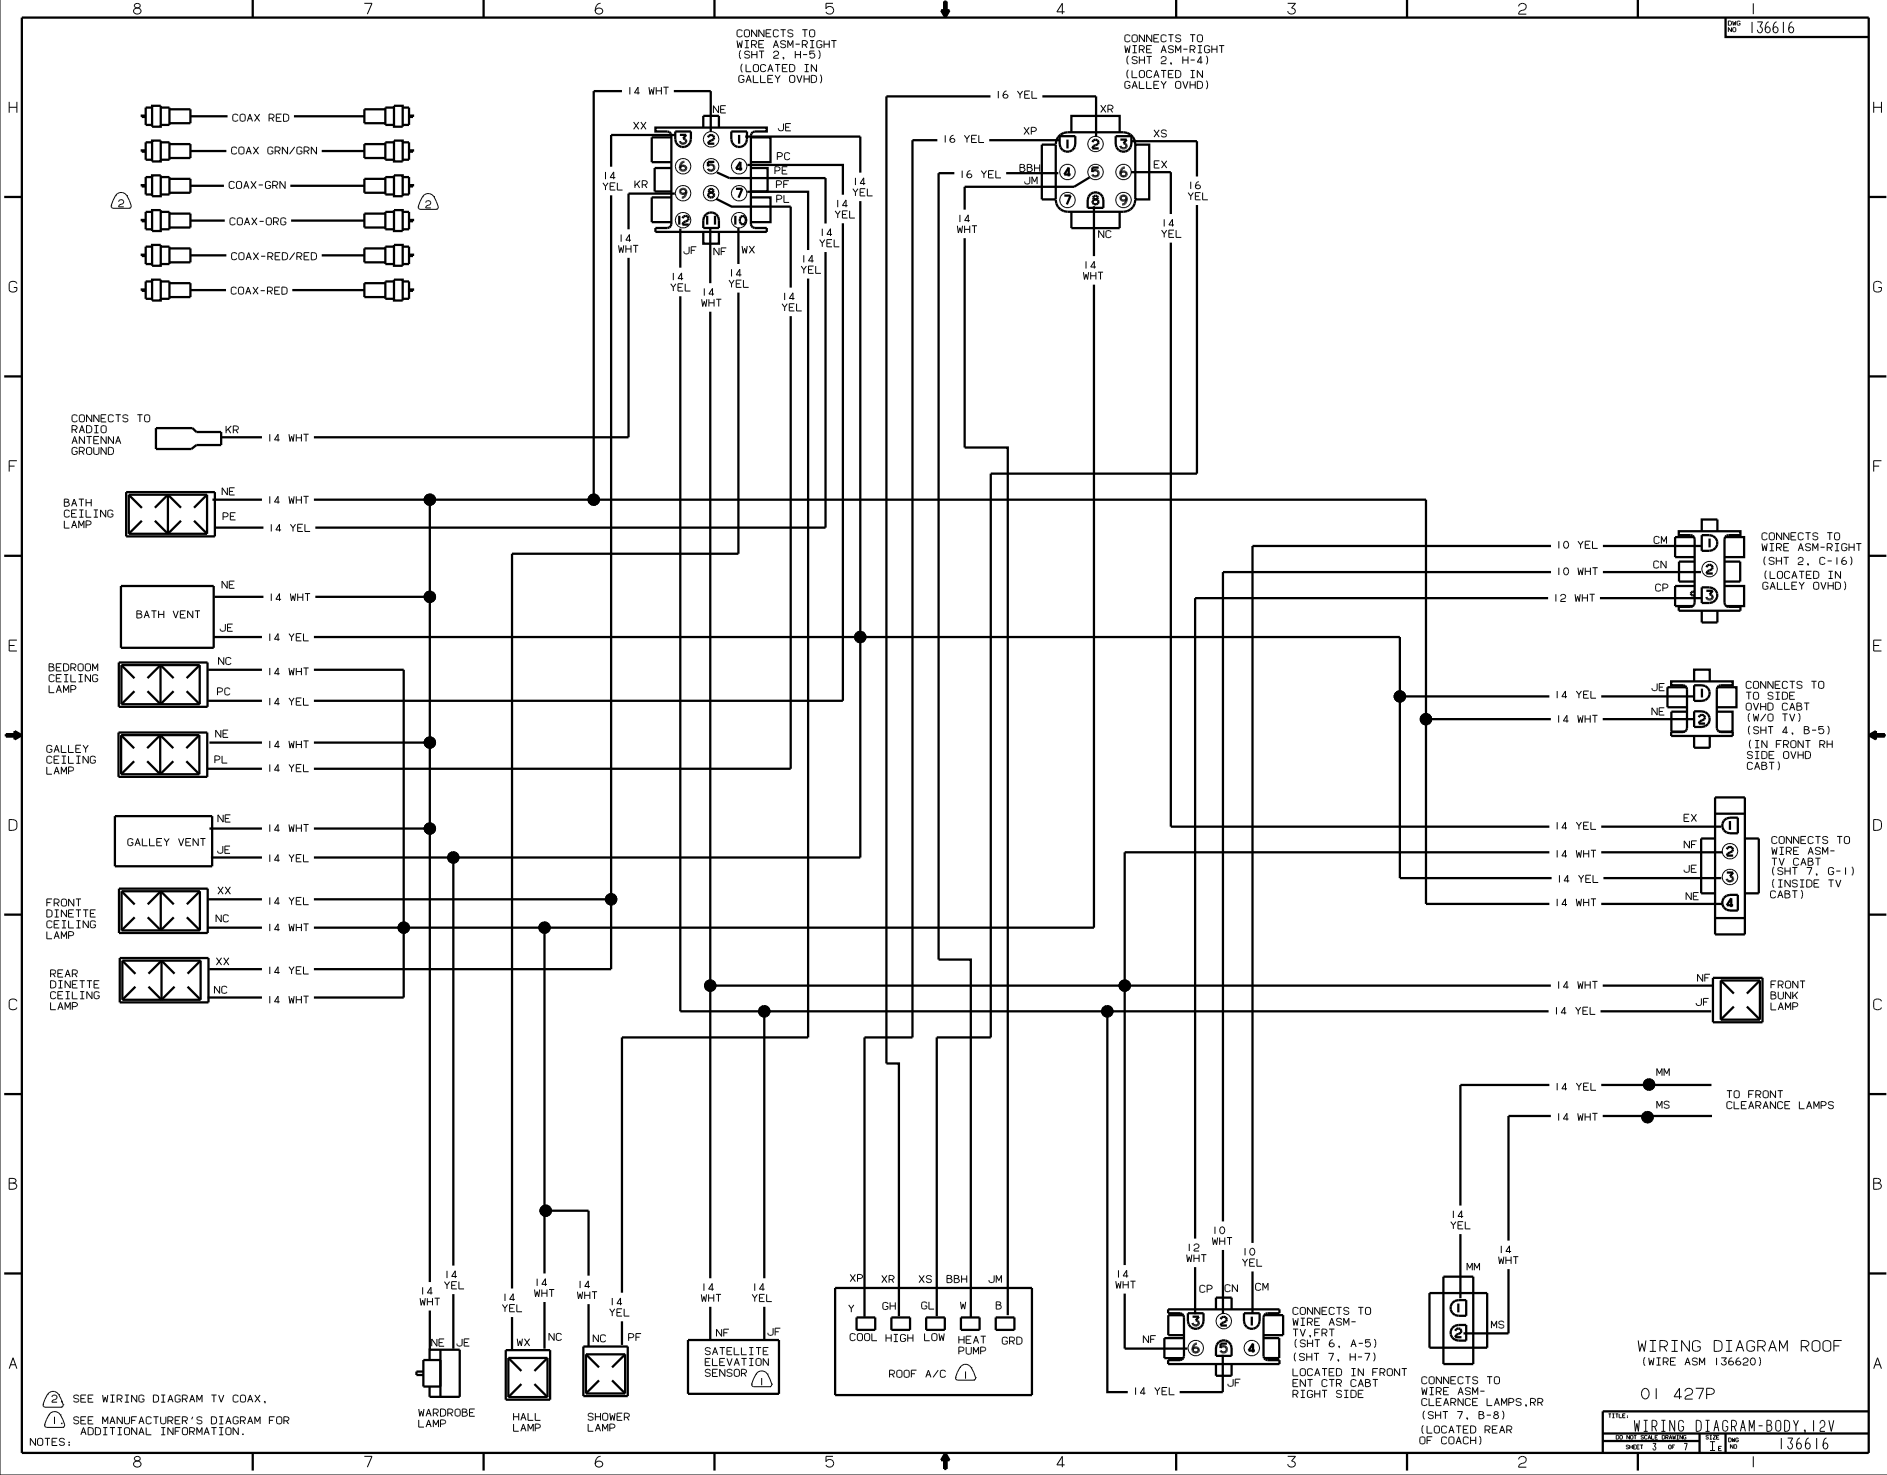

2 SEE WIRING DIAGRAM TV COAX.
 1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

  WIRING DIAGRAM ROOF
 (WIRE ASM 136620)
 01 427P
 WIRING DIAGRAM-BODY 12V
 SHEET 3 OF 7

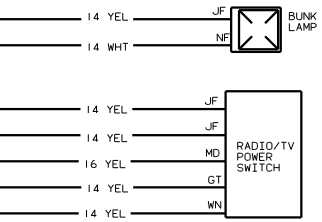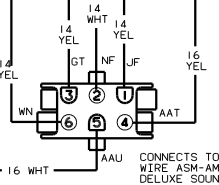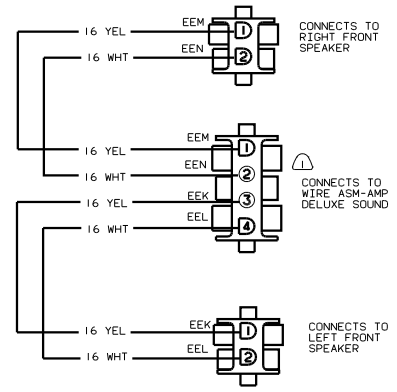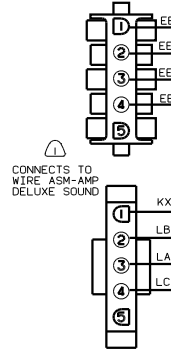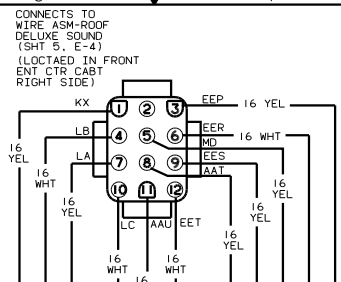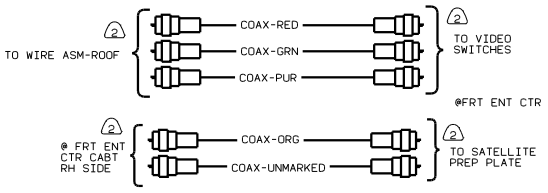

FRONT ENTERTAINMENT CENTER W/DELUXE SOUND


WIRING DIAGRAM TV FRONT (WIRE ASM 135478-02)

NOTES:

2 SEE WIRING DIAGRAM TV COAX.


1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

CONNECTS TO WIRE ASM-ROOF (SHT 3, E-1) (LOCATED IN FRONT ENT CTR CABT RIGHT SIDE)

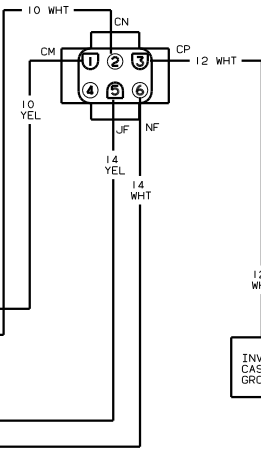

WIRING DIAGRAM TV FRONT
(WIRE ASM 135478-01)


CONNECTS TO WIRE ASM-CHASSIS (SHT 1, H-14) (LOCATED AT CHASSIS BREAKER PANEL)

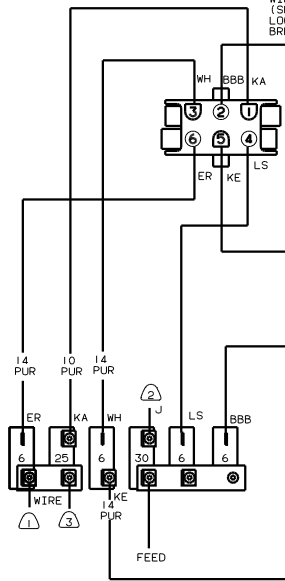


CIRCUIT BREAKERS (LOCATED IN BATTERY COMPARTMENT AT CENTER RIGHT OF VEHICLE)

WIRING DIAGRAM, PANEL, BREAKERS
(WIRE ASM 131799-01)

136616

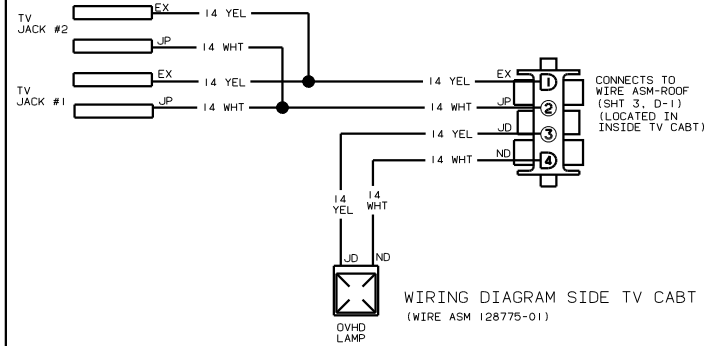

WIRING DIAGRAM SIDE TV CABT
(WIRE ASM 128775-01)

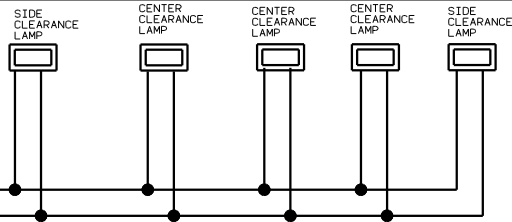

WIRING DIAGRAM CLEARANCE LAMPS
(WIRE ASM 132085-02)

CONNECTS TO WIRE ASM-ROOF (SHT 3, A-2) (LOCATED REAR OF COACH)

② SEE SHT 1 C-15 FOR ADDITIONAL INFORMATION.
① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.