






**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

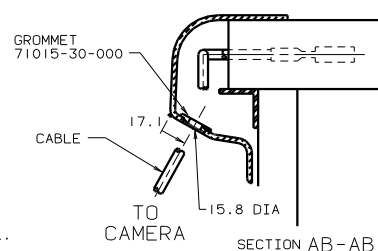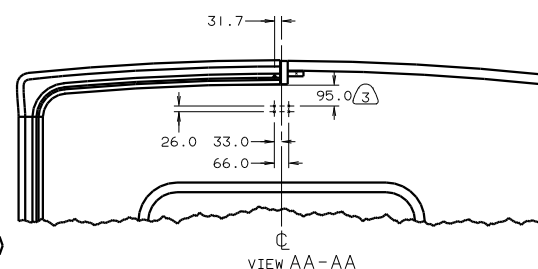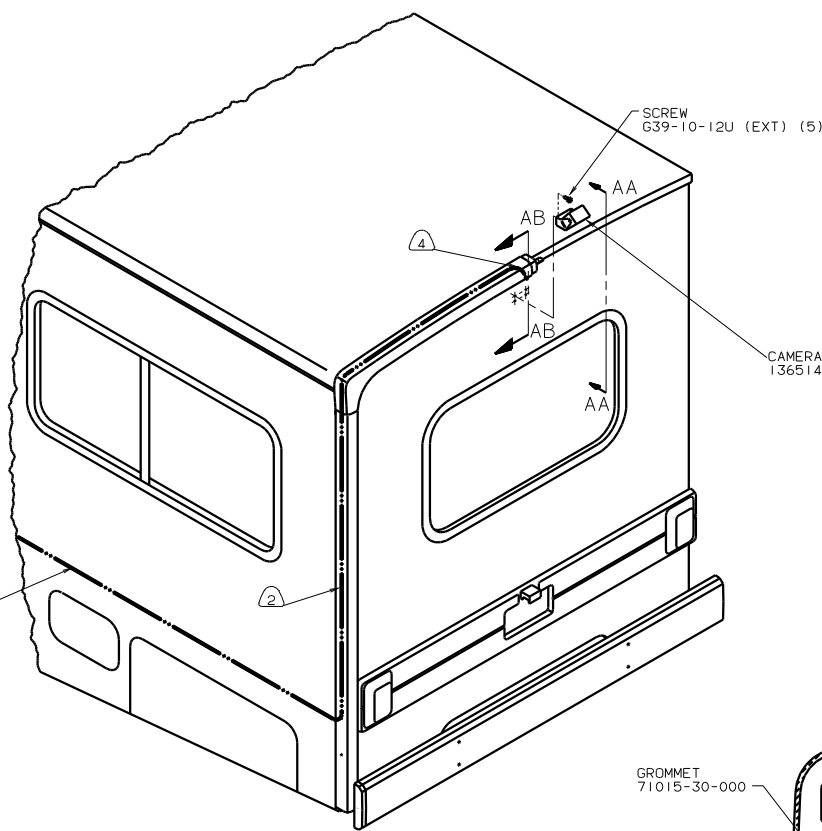

(74J) REARVIEW MONITOR SYSTEM  
 (1H4) REARVIEW MONITOR-WIRE PREP

- NOTES:
- ④ END CABLE IN THIS AREA ON UNITS WITHOUT MONITOR WITH (1H4).
  - ③ MEASURED FROM BOTTOM BACKWALL TRIM.
  - ② WIRE ROUTED IN RECESSED AREA BETWEEN SIDEWALL AND BACKWALL.
  - ① REAR MONITOR CAMERA CABLE IS PART OF WIRE ASSEMBLY CHASSIS AND RUNS ALONG LEFT FRAME RAIL.

<b>WINNEBAGO</b>		01 400 SERIES	
DFTB	DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL:
CHW	DATE	WHOLE DIM (X1)	± 1.5
P E	DATE	ONE-PLACE (X1, X2)	± 1.5
M E	DATE	TWO-PLACE (X1, X2)	± 1.5
DGN	DATE	ANGLE	± 1.5
LAYOUT NO.	DATE	THIRD ANGLE PROJECTION	
TITLE:		MONITOR INSTL	
DIA #	SCALE: NONE	NO ADD SCALE: DIMENSIONS	
ALL DIMENSIONS ARE IN MILLIMETERS		SHEET 1 OF 2	DWG NO: 136983

