




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

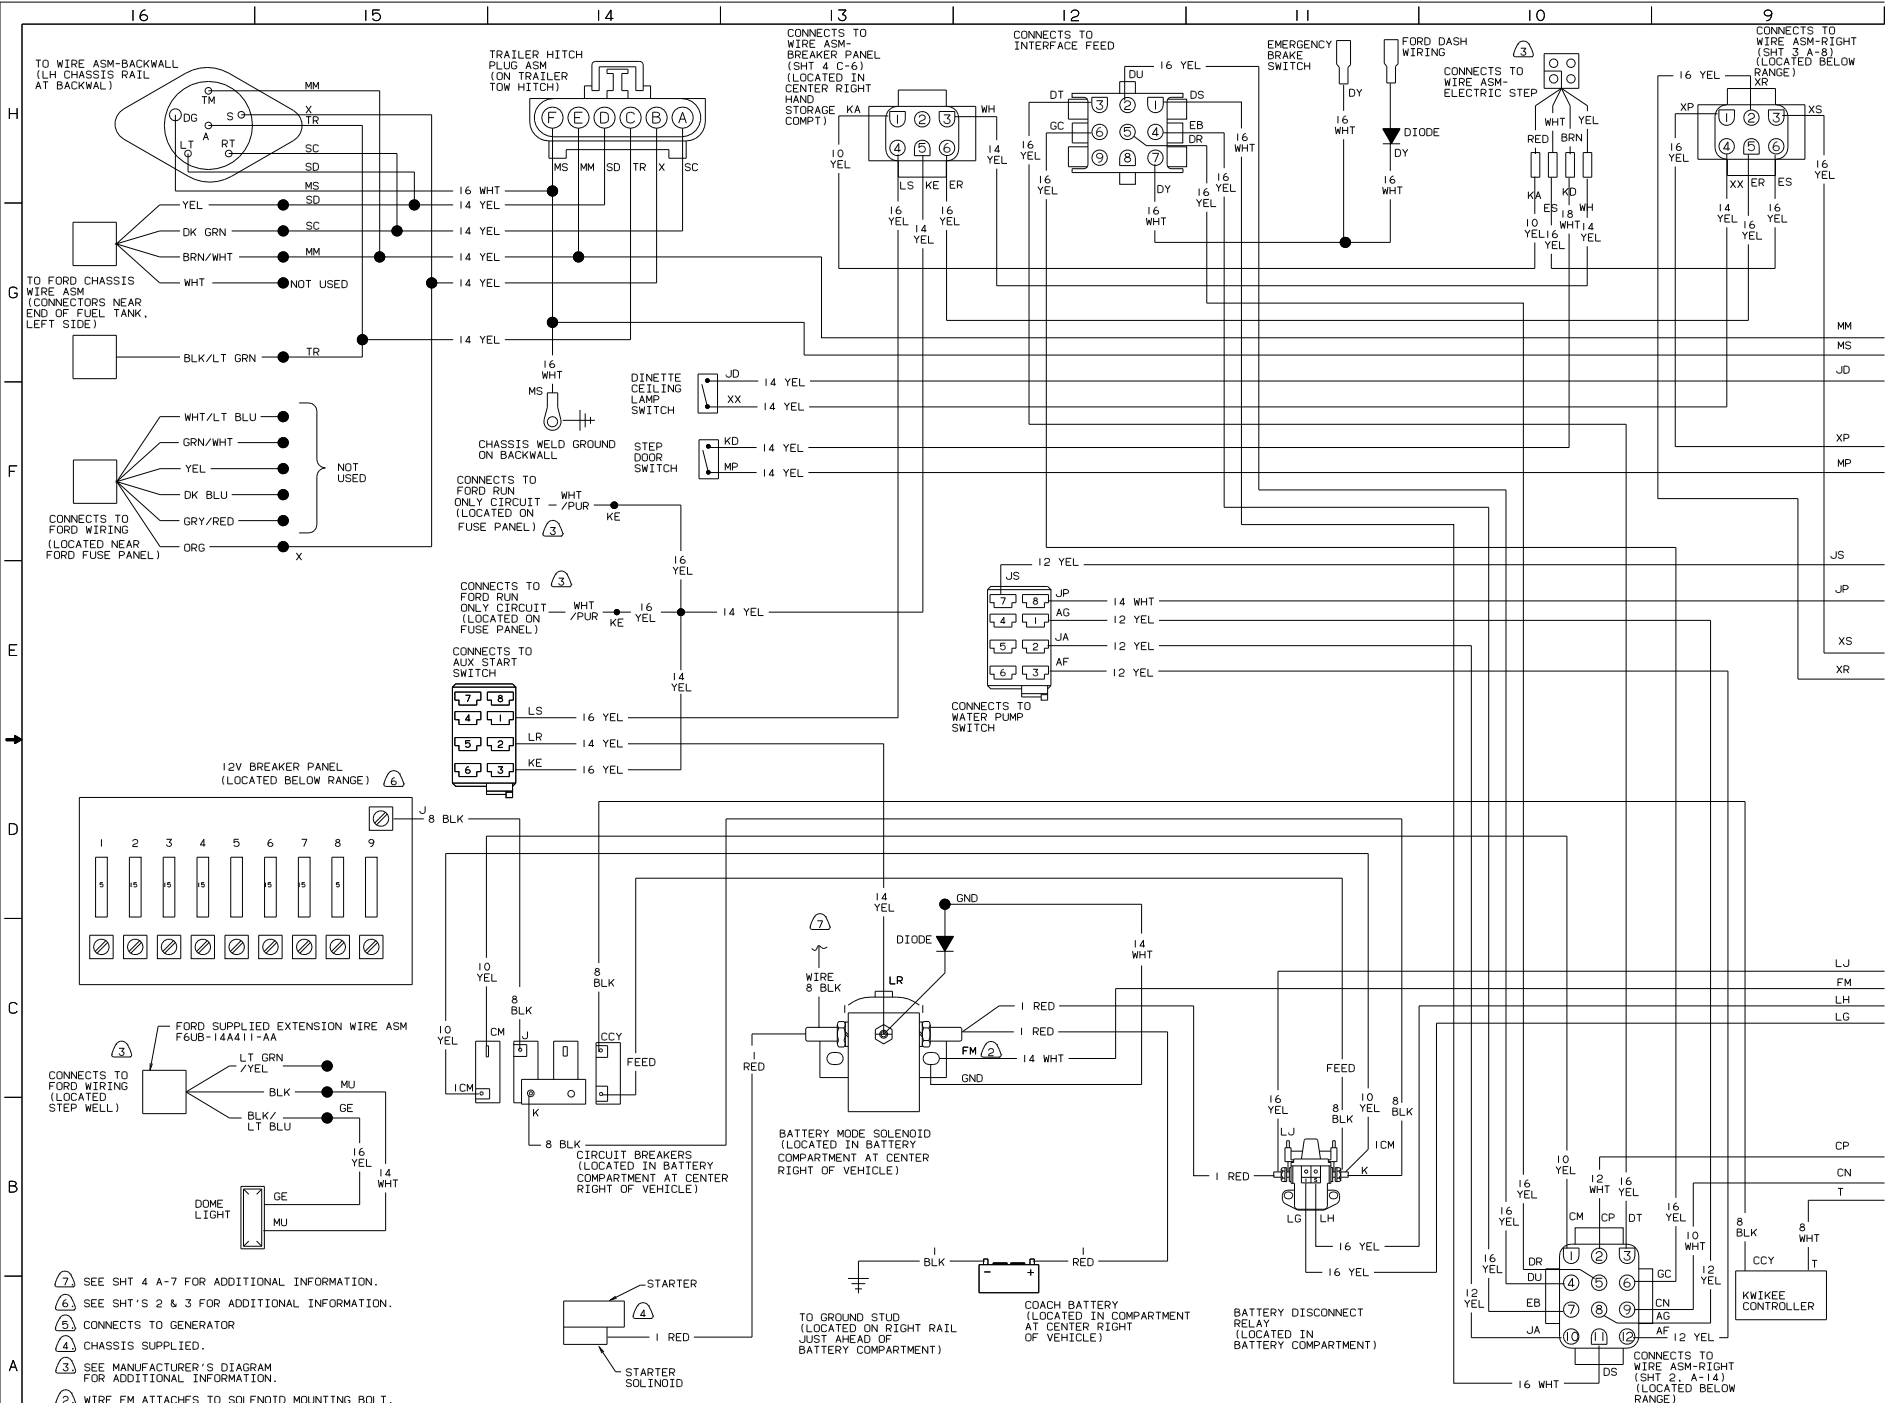

- ① SEE SHT 4 A-7 FOR ADDITIONAL INFORMATION.
- ② SEE SHT 'S 2 & 3 FOR ADDITIONAL INFORMATION.
- ③ CONNECTS TO GENERATOR
- ④ CHASSIS SUPPLIED.
- ⑤ SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
- ⑥ WIRE FM ATTACHES TO SOLENOID MOUNTING BOLT.
- 1. SEE WIRING INSTL-CHASSIS FOR FURTHER INFORMATION.

NOTES:

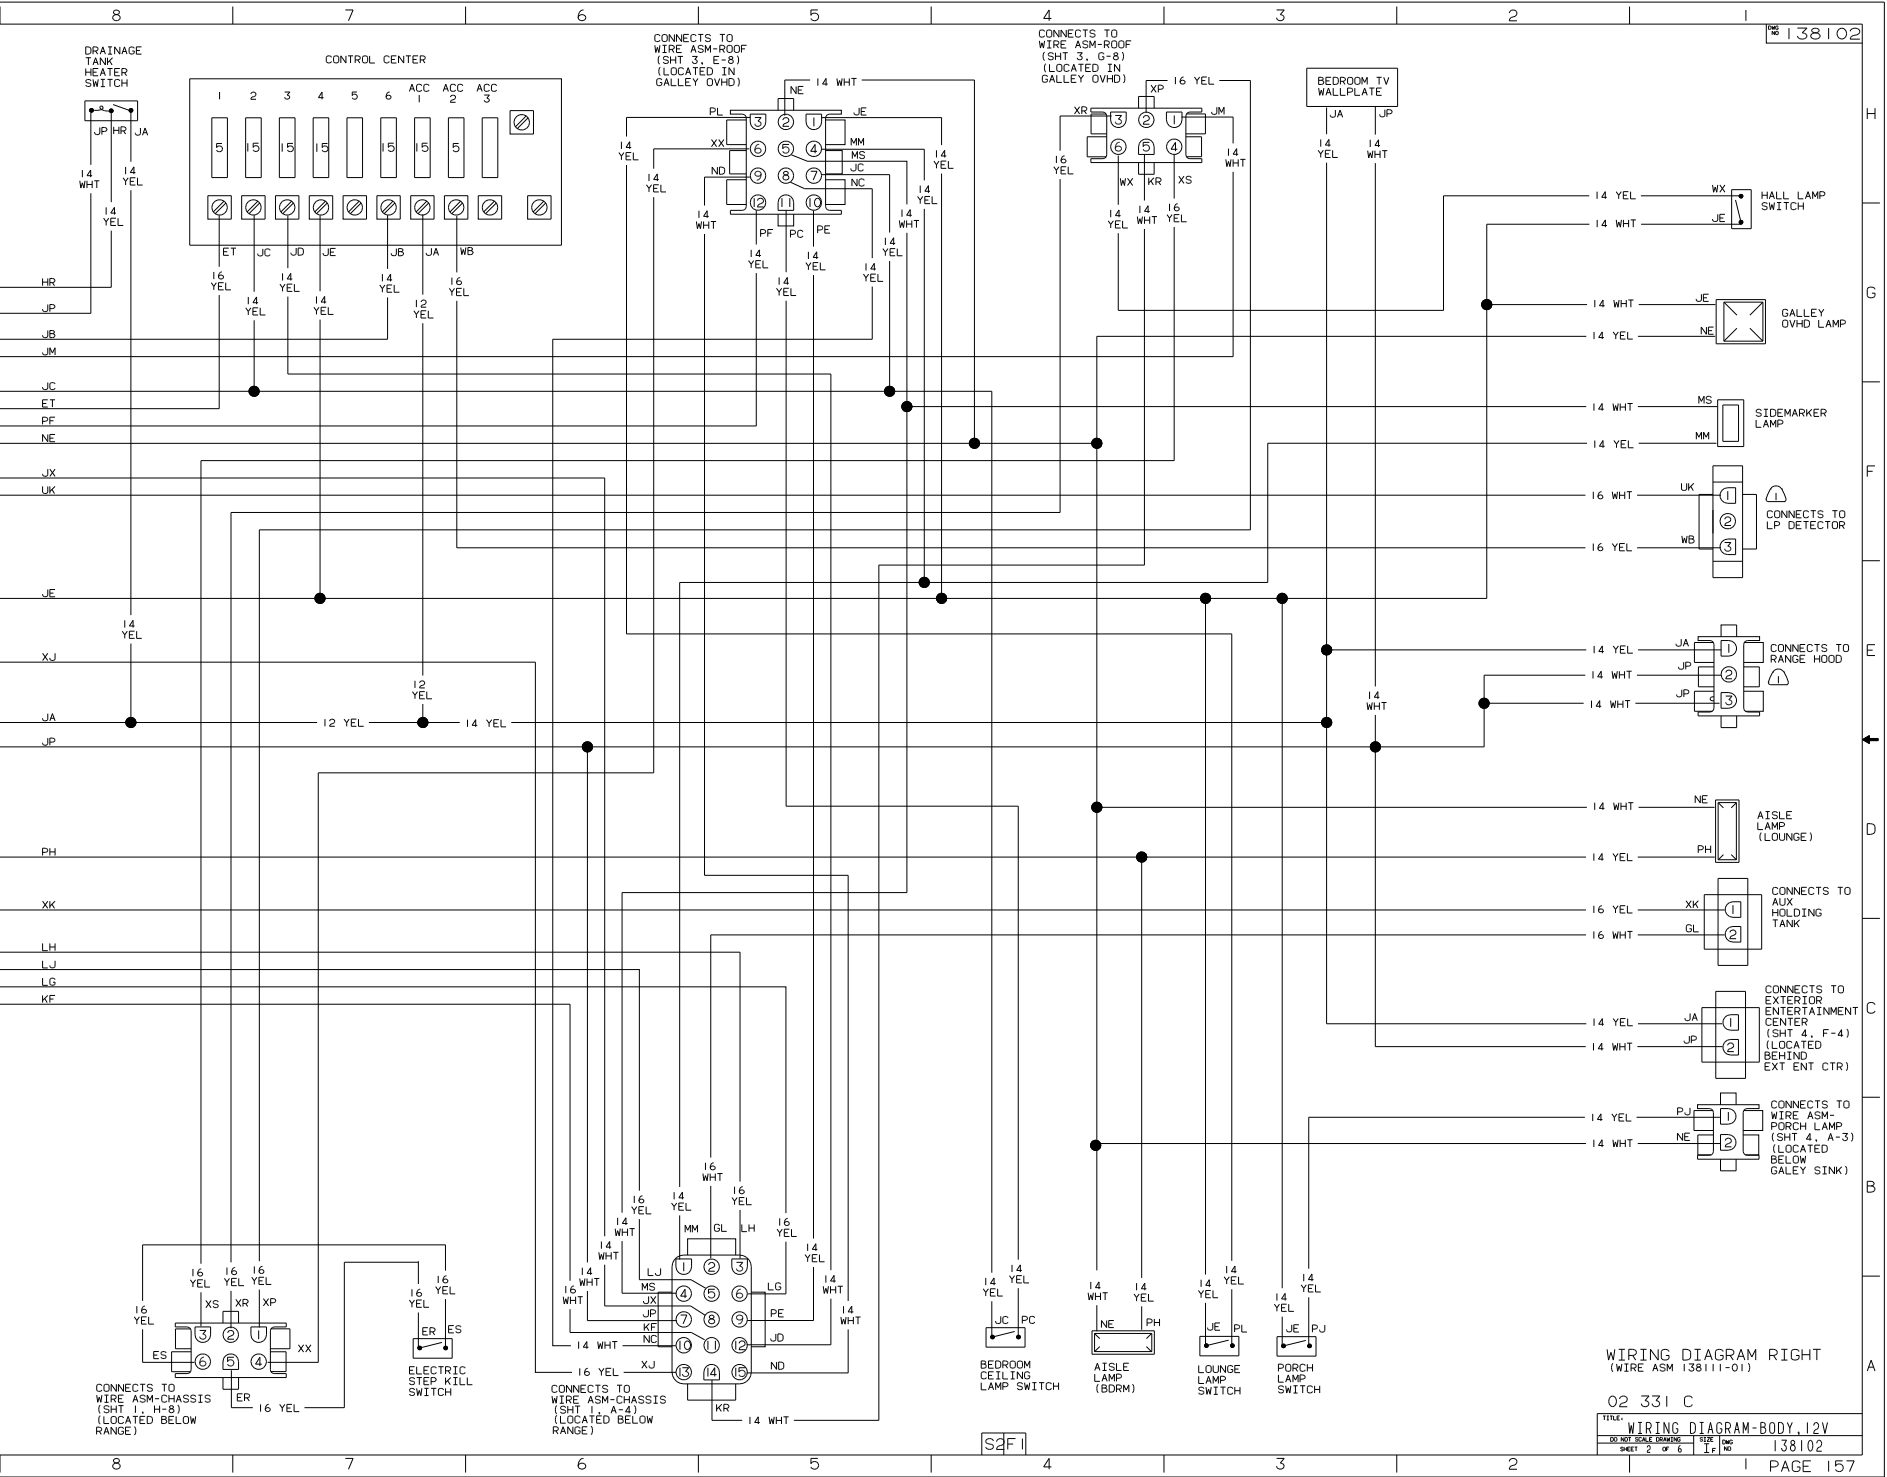


WIRING DIAGRAM RIGHT (WIRE ASM 138111-01)

02 331 C

TITLE:	WIRING DIAGRAM-BODY.12V
DO NOT SCALE DRAWING	DATE: 138102
SHEET 2 OF 6	REP. NO.


S2F



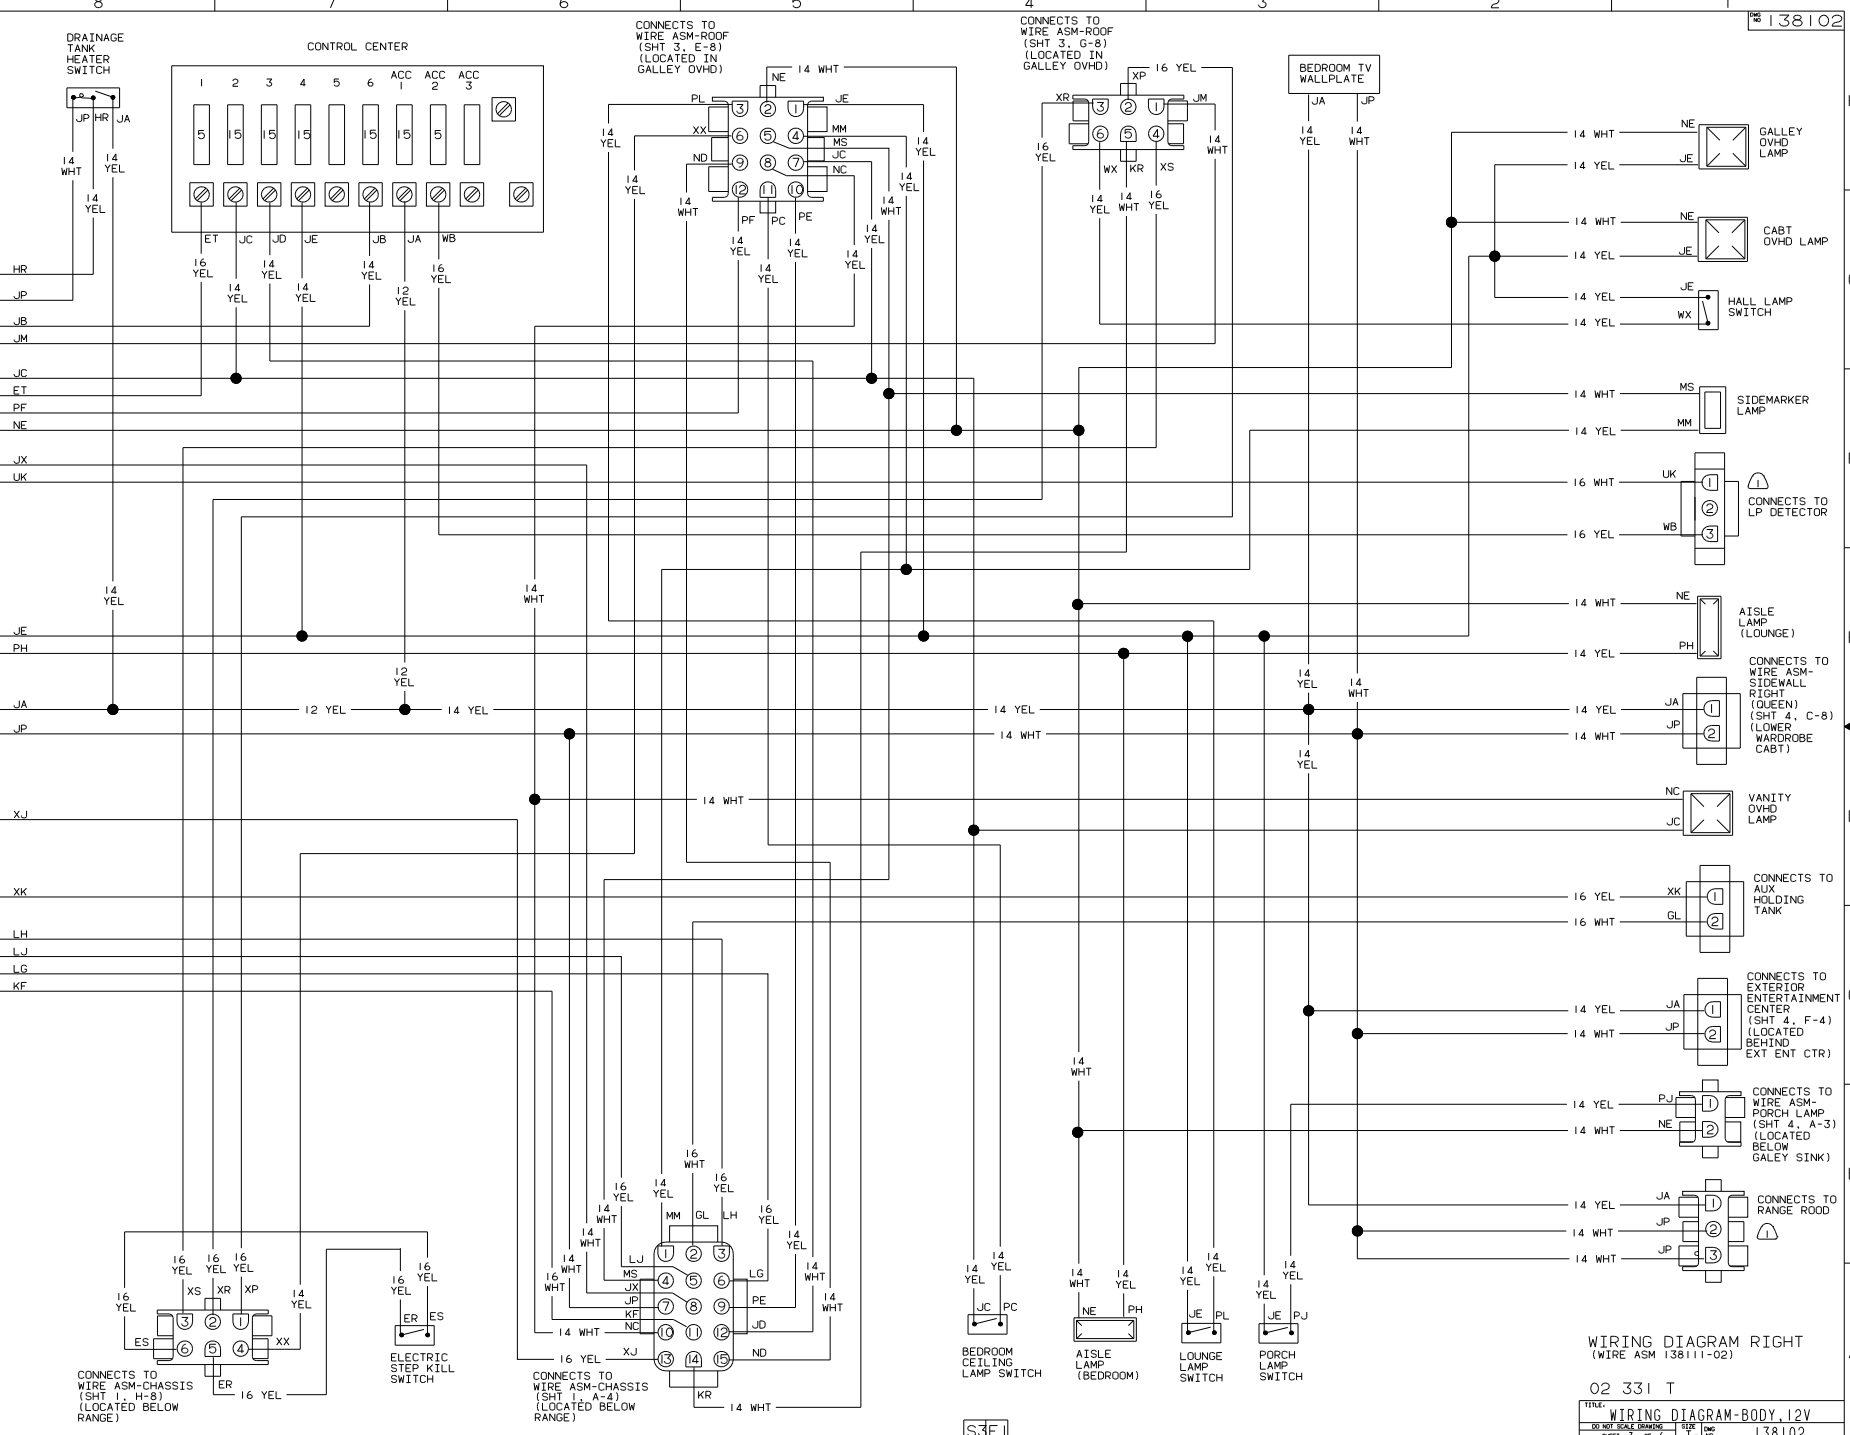


WIRING DIAGRAM RIGHT (WIRE ASM 138111-02)










02 331 T	
TITLE:	WIRING DIAGRAM-BODY.12V
DO NOT SCALE DRAWING	DATE: 138102
SHEET 3 OF 6	IF: No



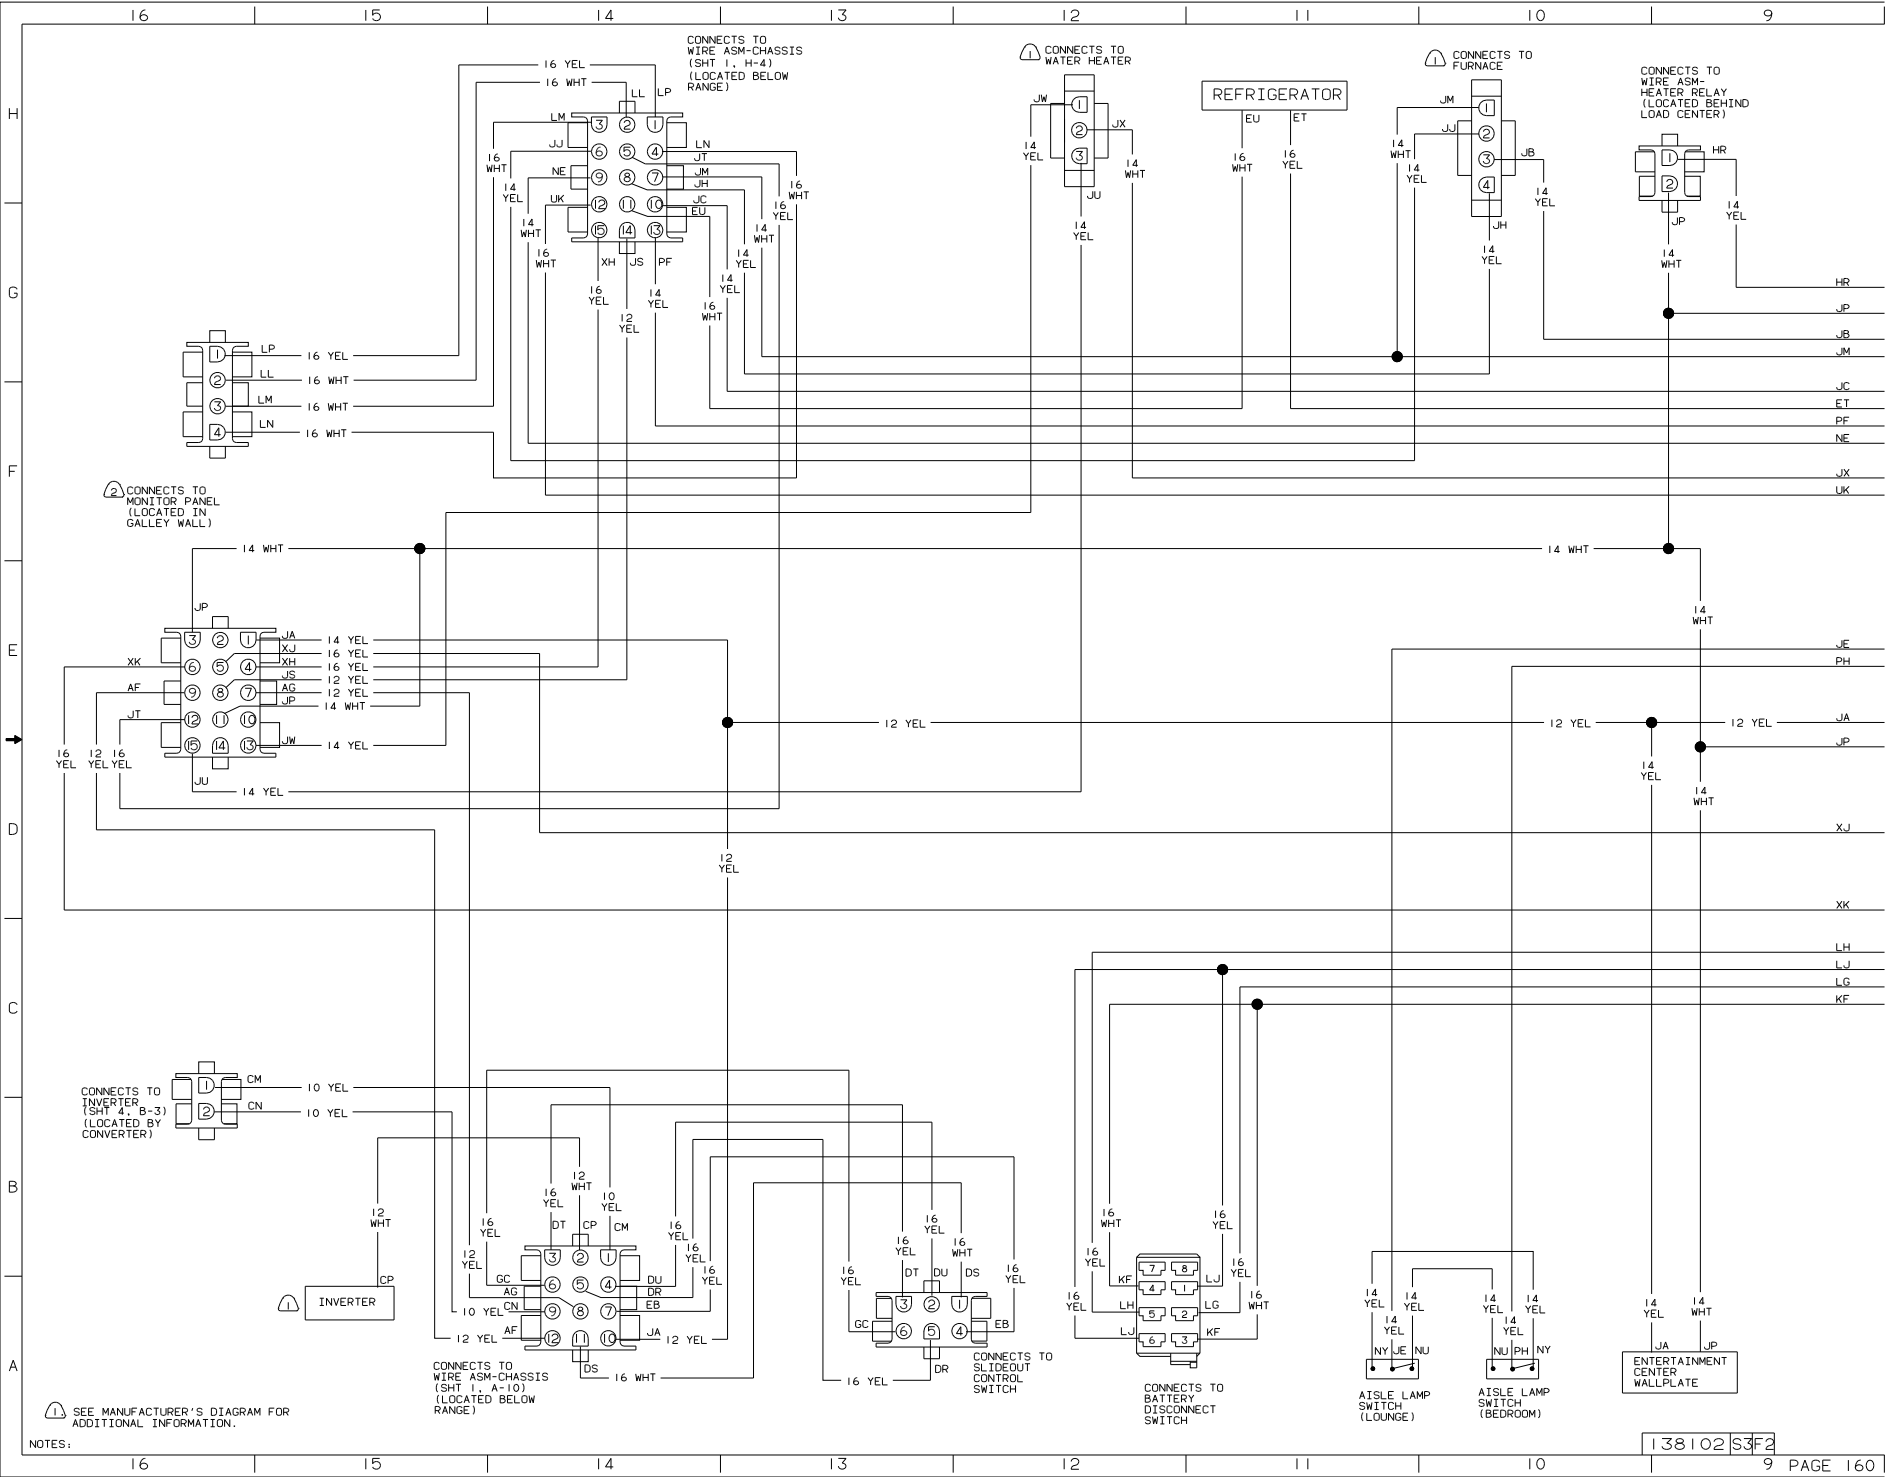


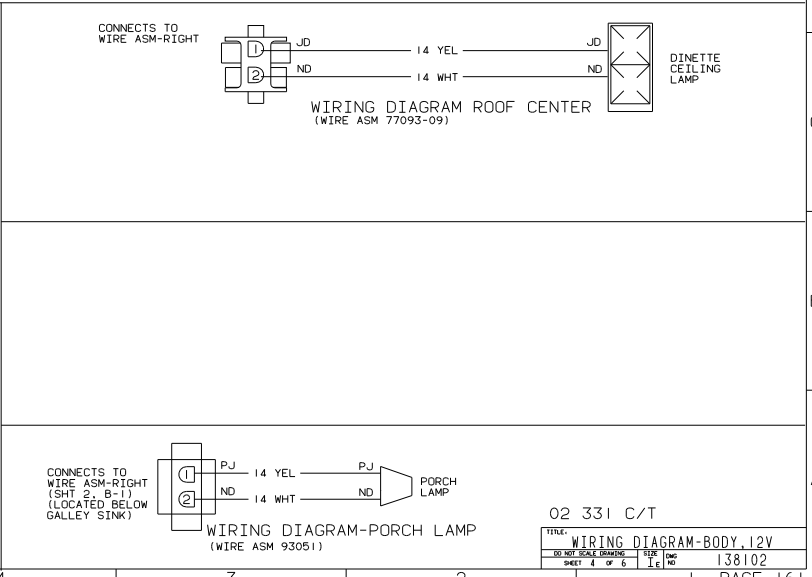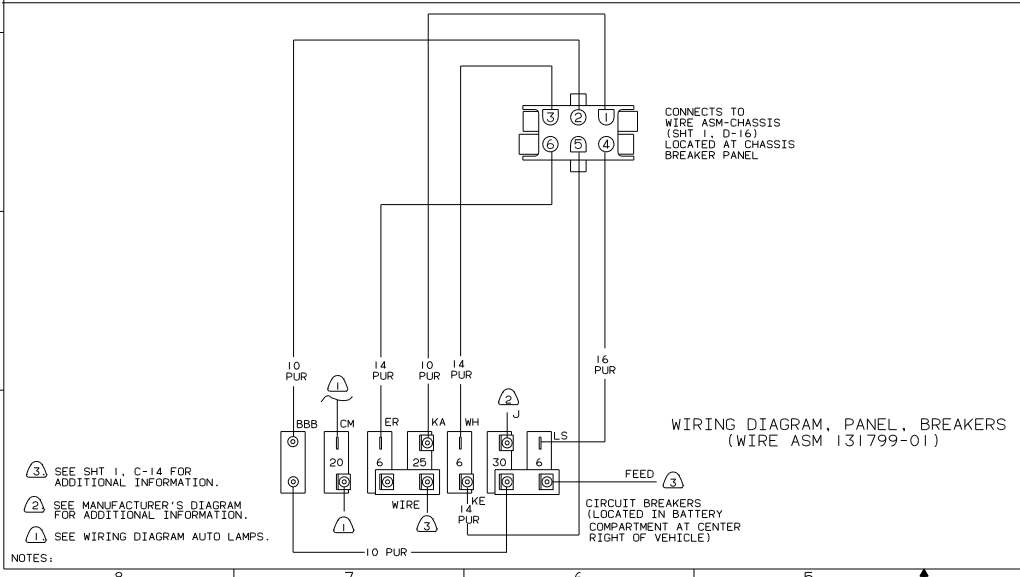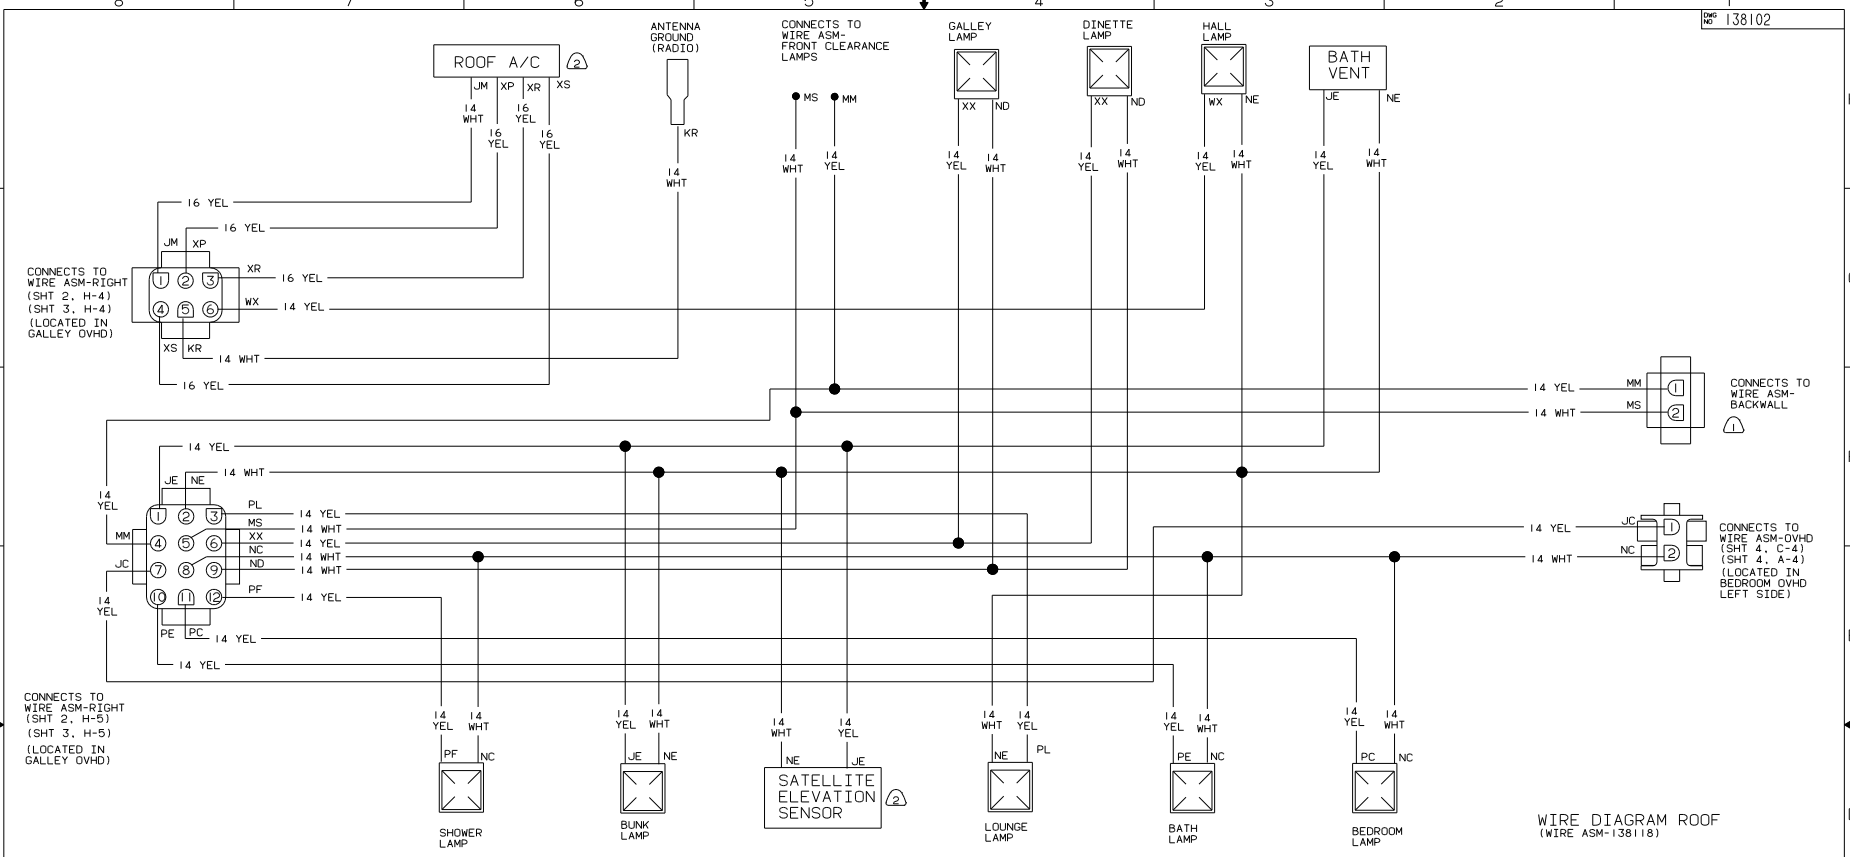

- NOTES:
- ③ SEE SHT 1, C-14 FOR ADDITIONAL INFORMATION.
 - ② SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
 - ① SEE WIRING DIAGRAM AUTO LAMPS.

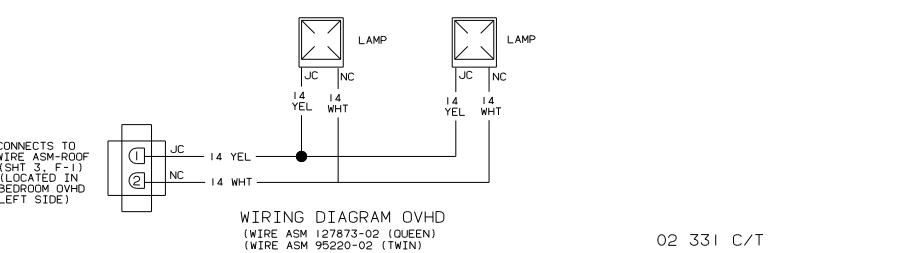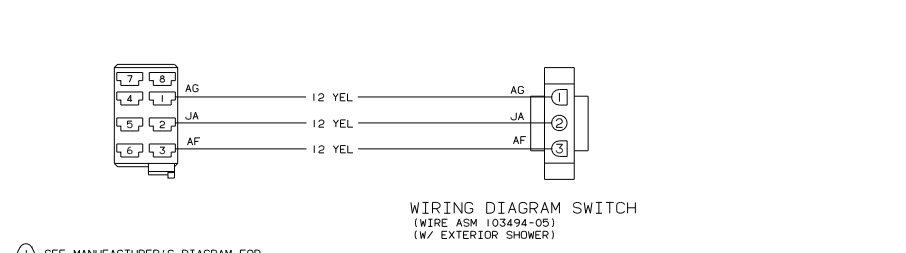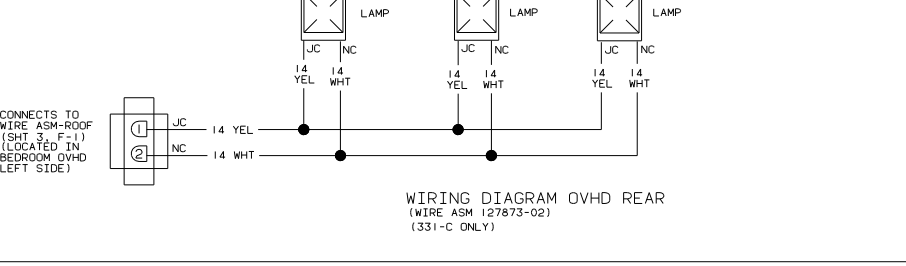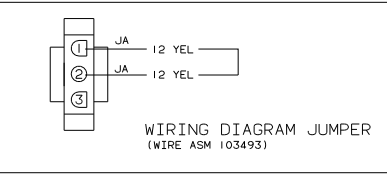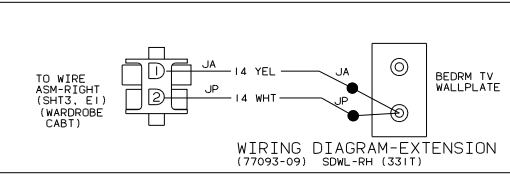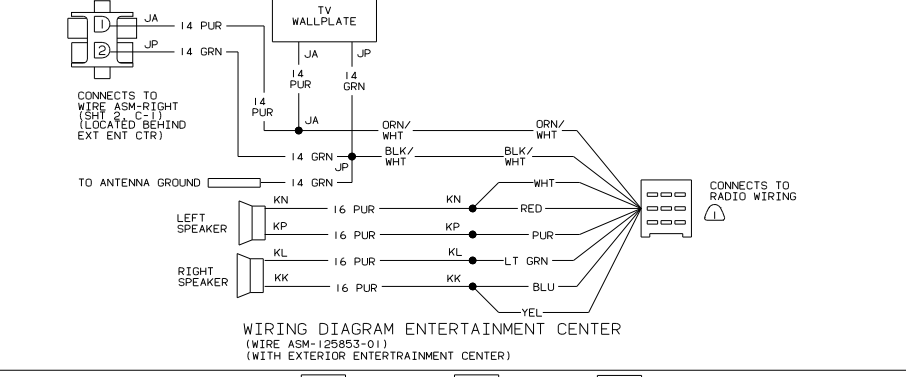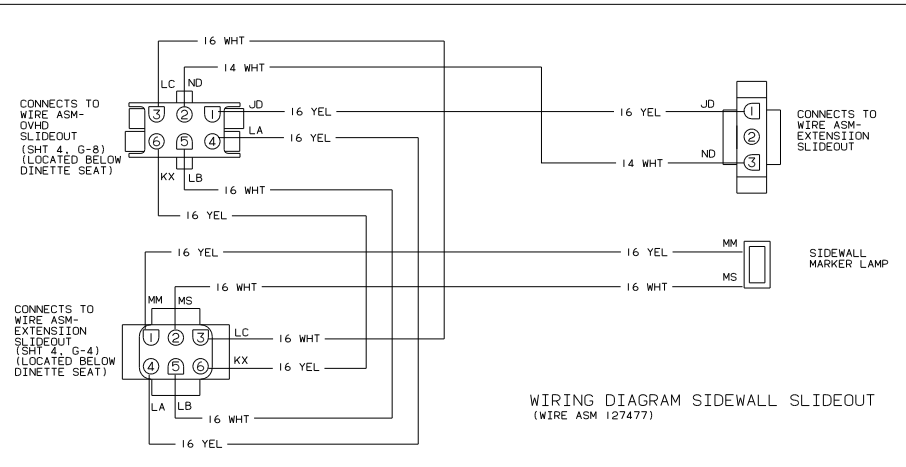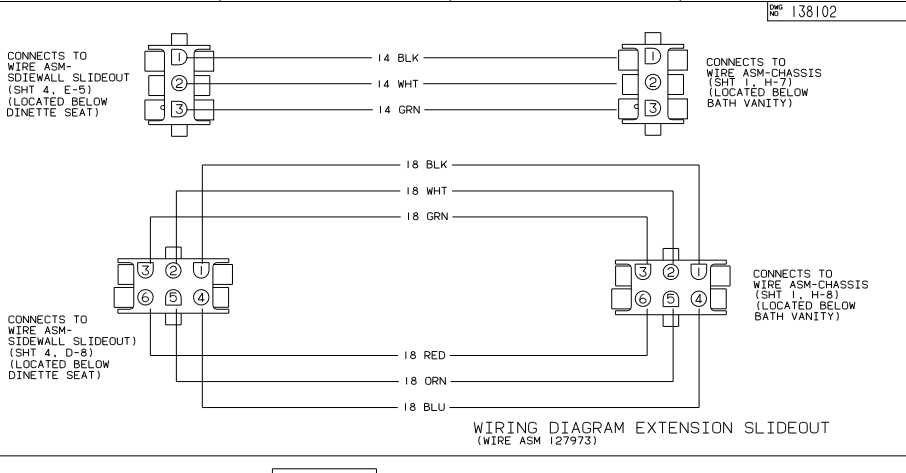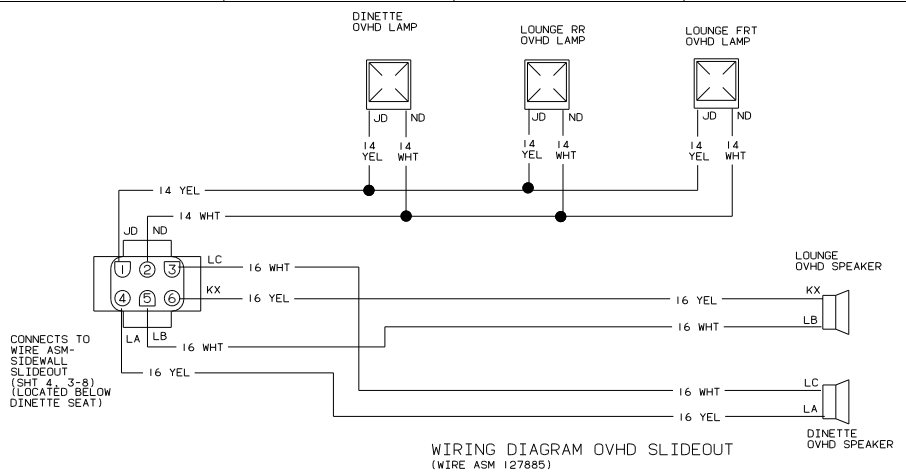


NOTES: SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

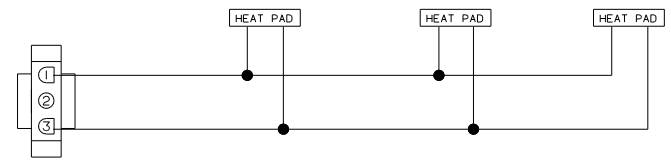

WIRING DIAGRAM HEATER, TANKS
(WIRE ASM 134551-06)

CONNECTS TO WIRE ASM- RIGHT (SHT 2.H9) (BEHIND LOAD CENTER)

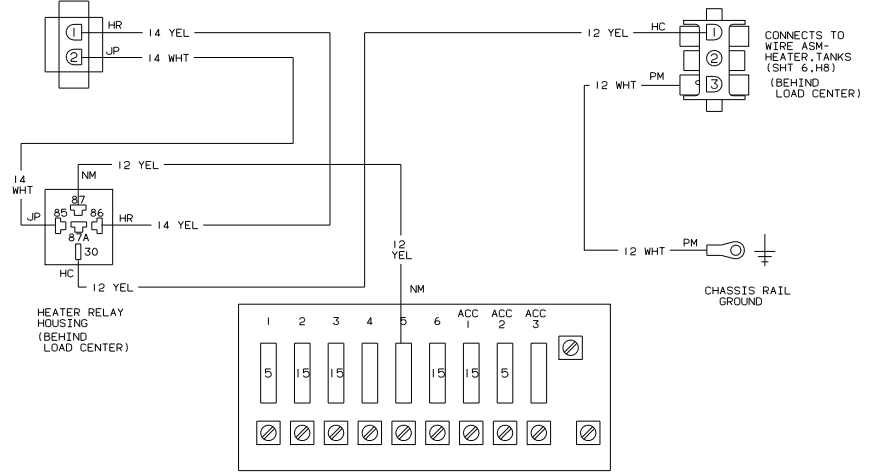

WIRING DIAGRAM HEATER, RELAY
(WIRE ASM 134550)

SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

NOTES:

02 331 C/T

TITLE		WIRING DIAGRAM-BODY, 12V	
DO NOT SCALE DRAWING	SHEET NO	138102	
6 OF 6	IF NO		