




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

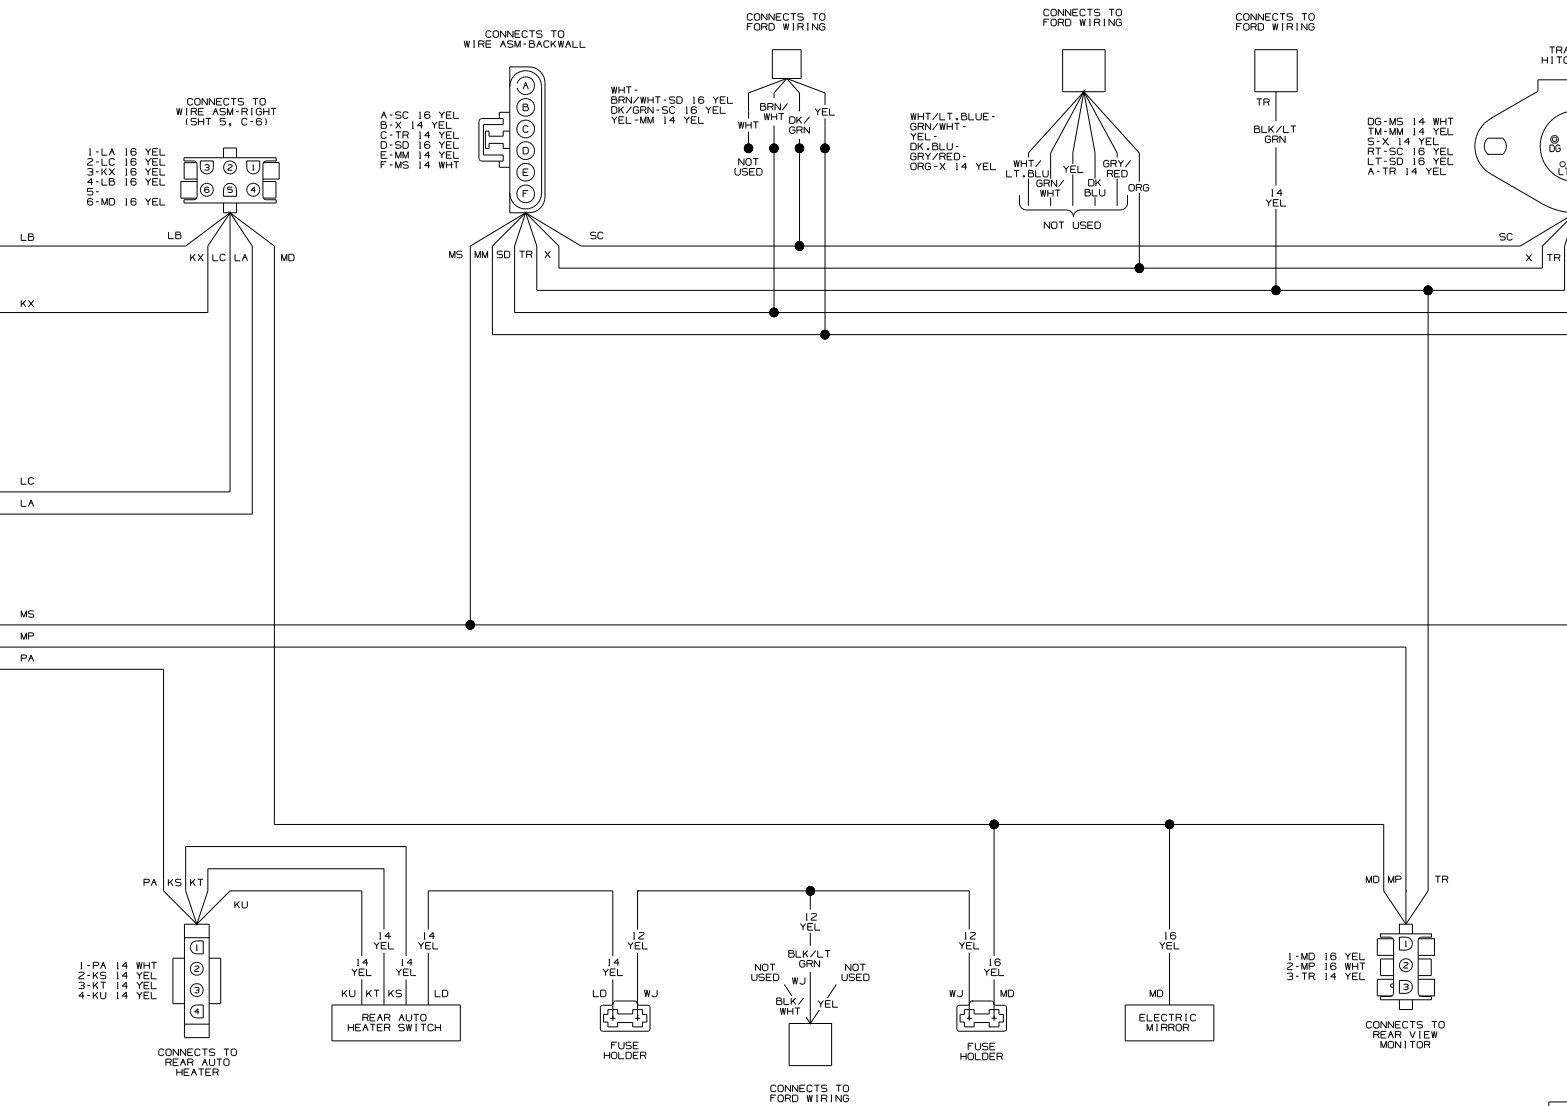


WIRING DIAGRAM-CHASSIS (WIRE ASM 138303)

**WINNEBAGO**



DATE	02/06/01
CHKR	
P.E.	
M.E.	
DRWR	
UNSPECIFIED TOLERANCES ARE:	MATERIAL:
FINISH DIM 100	F
ONE-PLACE 15.001	I
TWO-PLACE 15.001	I
ANGLE	F
THIRD ANGLE PROJECTION	
<b>DO NOT SCALE DRAWING</b>	
<b>TITLE: WIRING DIAGRAM-BODY, 12V</b>	
SHEET 1 of 6	PART NO 138674



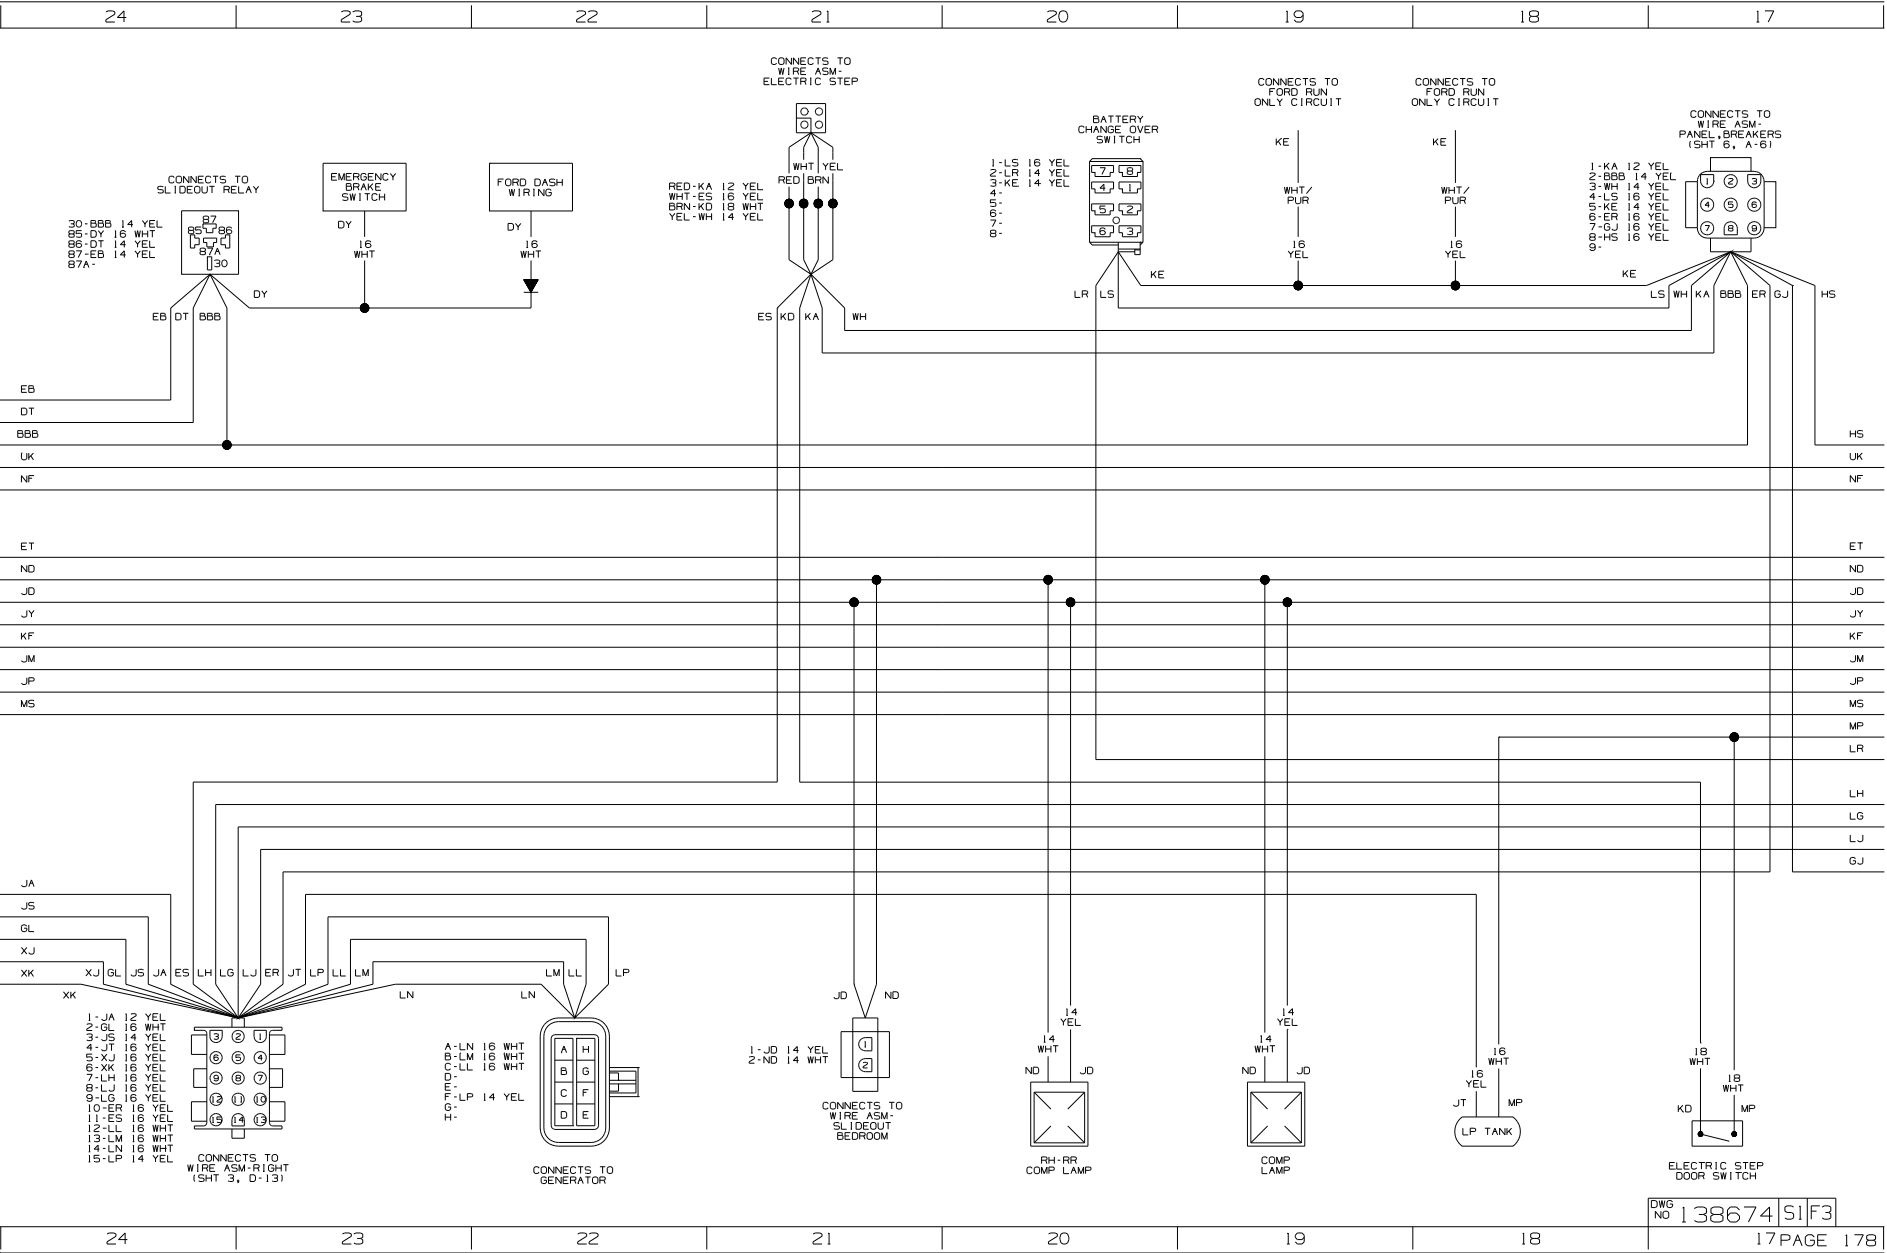




CONNECTS TO COAX INLET  RED  CONNECTS TO WIRE ASM-ROOF

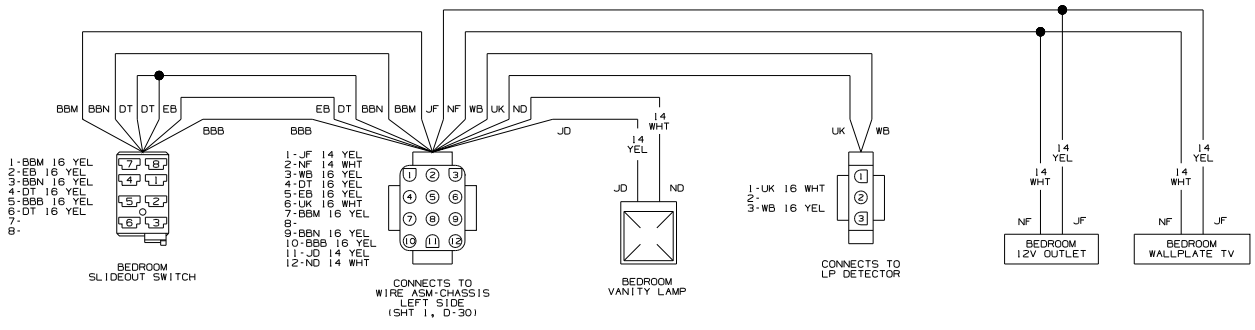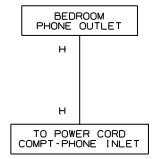


WIRING DIAGRAM-LEFT  
(WIRE ASM 136685)






FIRST USED	02 427 P	
DO NOT SCALE DRAWING		
TITLE:	WIRING DIAGRAM-BODY, 12V	
SHEET	2	PART NO 138674



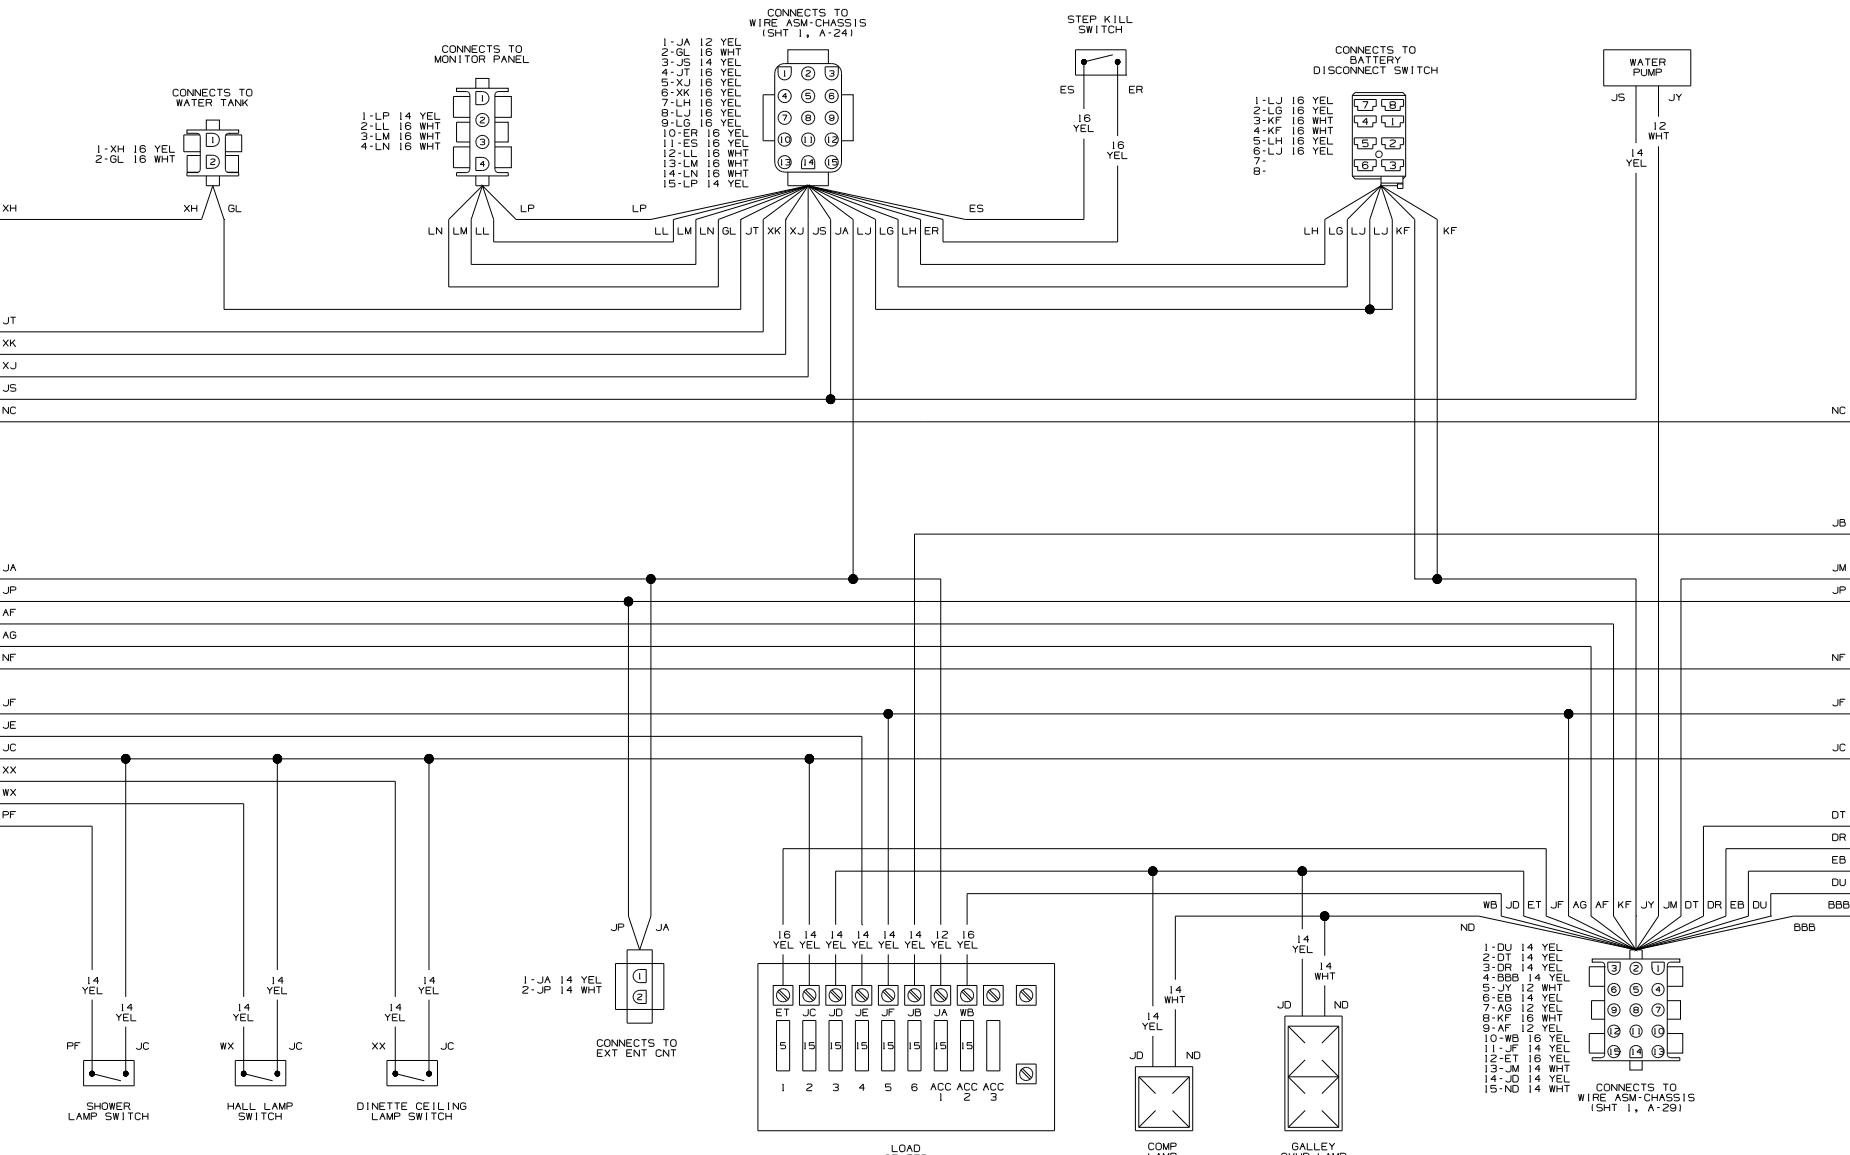


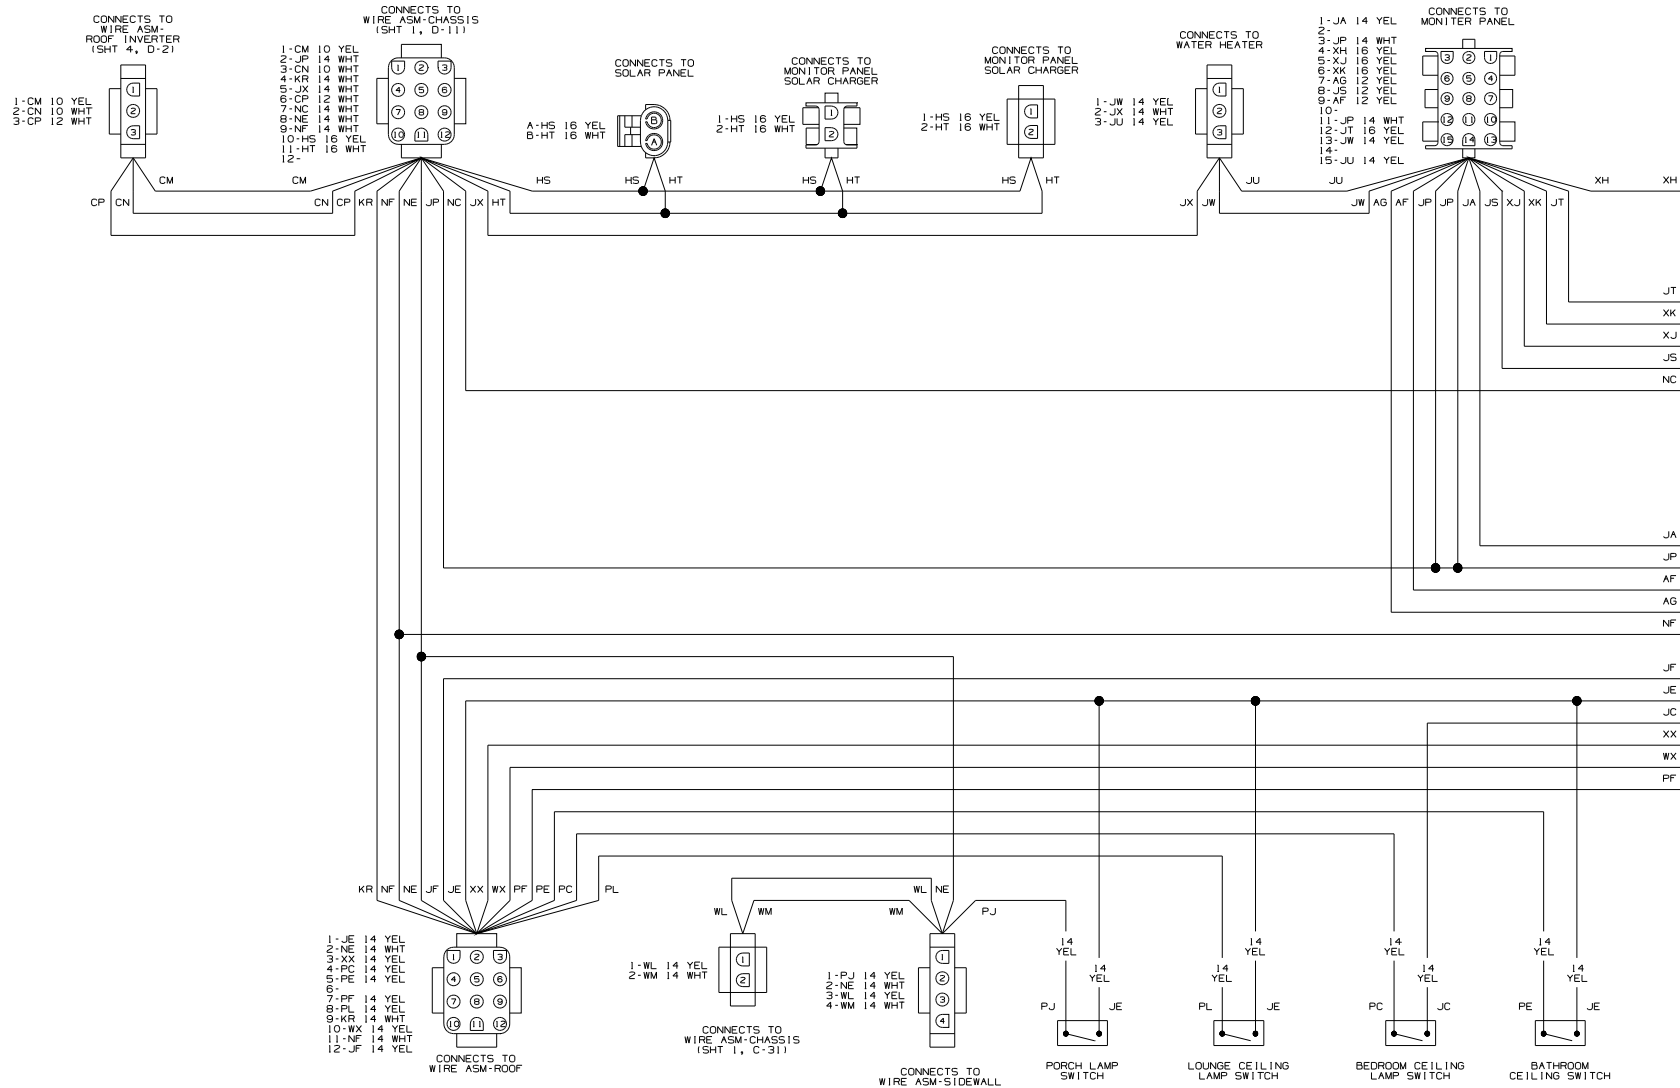




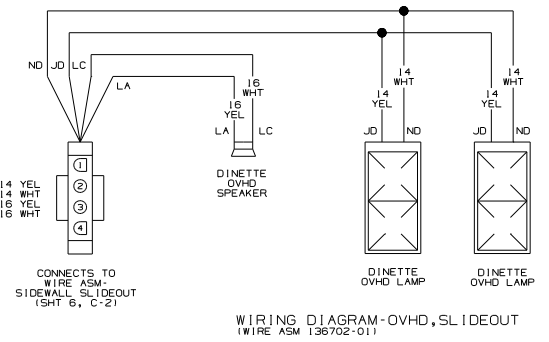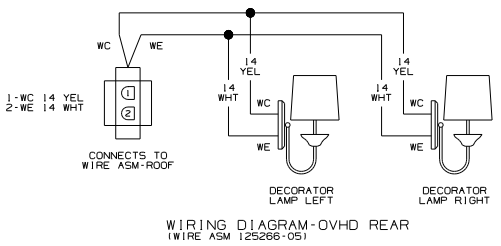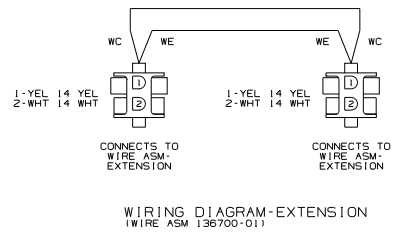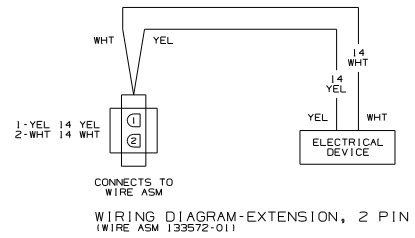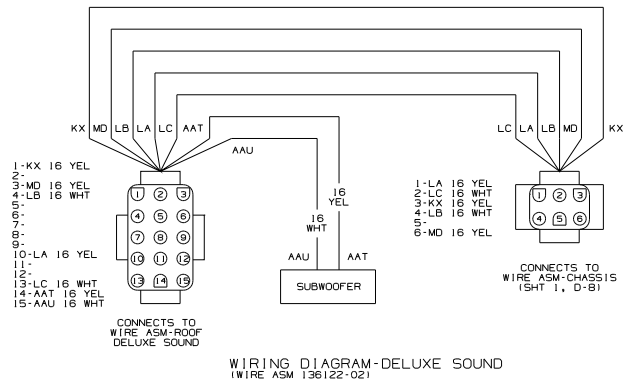


FIRST USED	02 427 P
DO NOT SCALE DRAWING	
TITLE:	WIRING DIAGRAM-BODY, 12V
SHEET	5 PART NO 138674

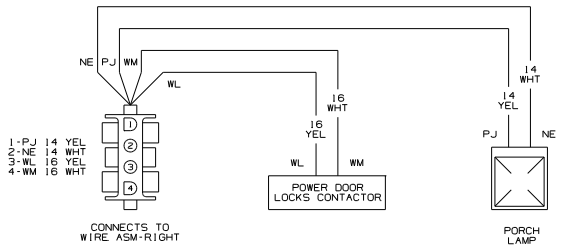

WIRING DIAGRAM-SIDEWALL, RIGHT  
(WIRE ASM 139594-01)

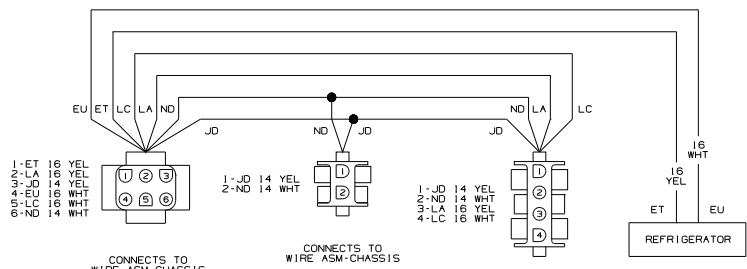

WIRING DIAGRAM-SIDEWALL, SLIDING DOOR  
(WIRE ASM 136666)

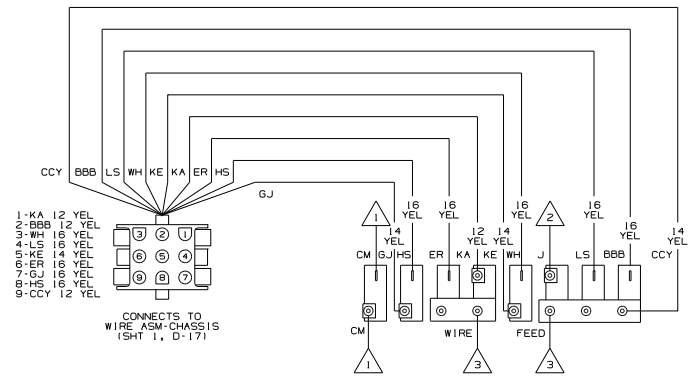

WIRING DIAGRAM-PANEL, BREAKERS  
(WIRE ASM 131799-05)

- NOTES:
- 3 SEE SHT 1, A-12 FOR ADDITIONAL INFORMATION.
  - 2 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
  - 1 SEE WIRING DIAGRAM AUTO LAMPS.

FIRST USED	02 427 P
DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-BODY, 12V	
SHEET 6	PART NO 138674