





DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

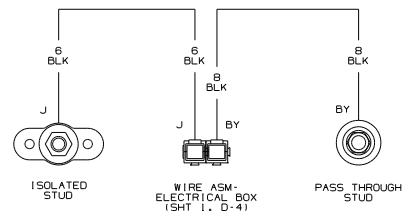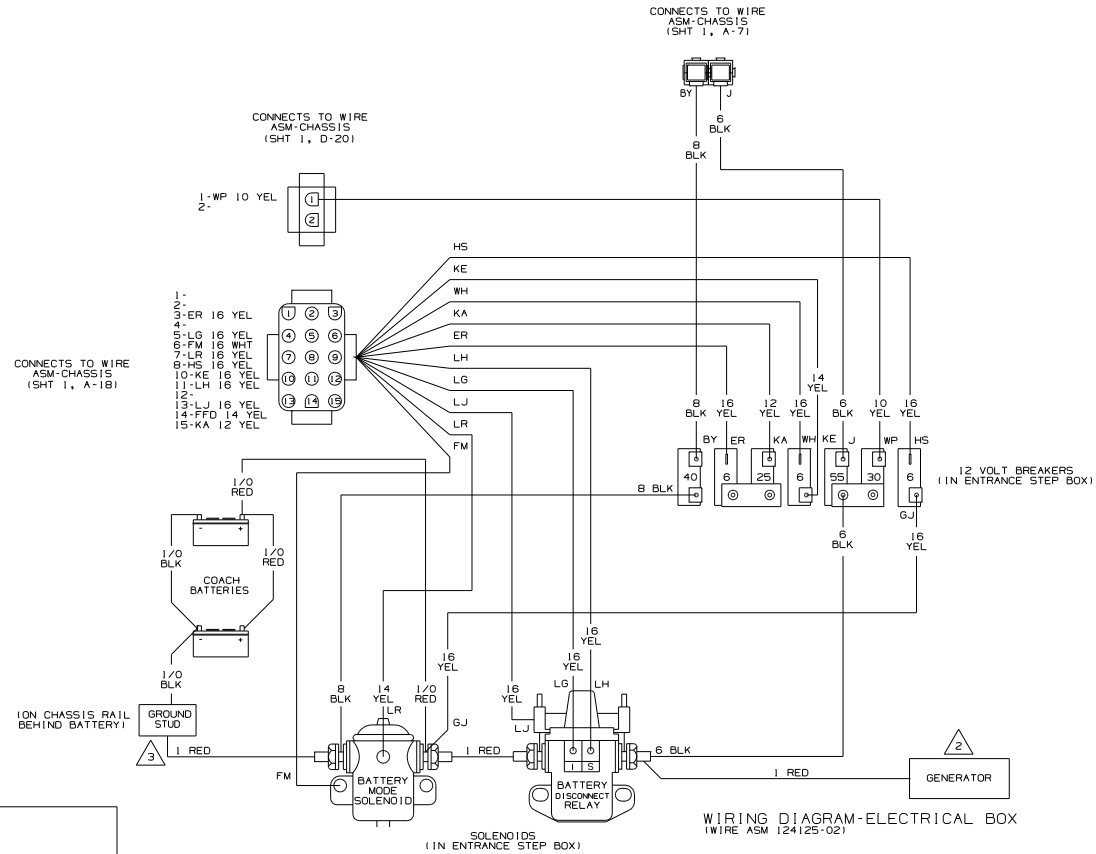

WINNEBAGO

DTR: 01/29/02
 DATE: 01/29/02
 ALL DIMENSIONS ARE IN MILLIMETERS
 FIRST USED: 02 G32V


UNSPECIFIED TOLERANCES ARE: MATERIAL:
 INSIDE DIM 100 ± .1
 ONE-PLACE 15.00 ± .1
 TWO-PLACE 15.00 ± .1
 ANGLE ± .5

THIRD ANGLE PROJECTION

DO NOT SCALE DRAWING








TITLE: WIRING DIAGRAM-BODY, 12V
 SHEET 1 OF 7 PART NO 137067

REF: NONE 1 PAGE 56

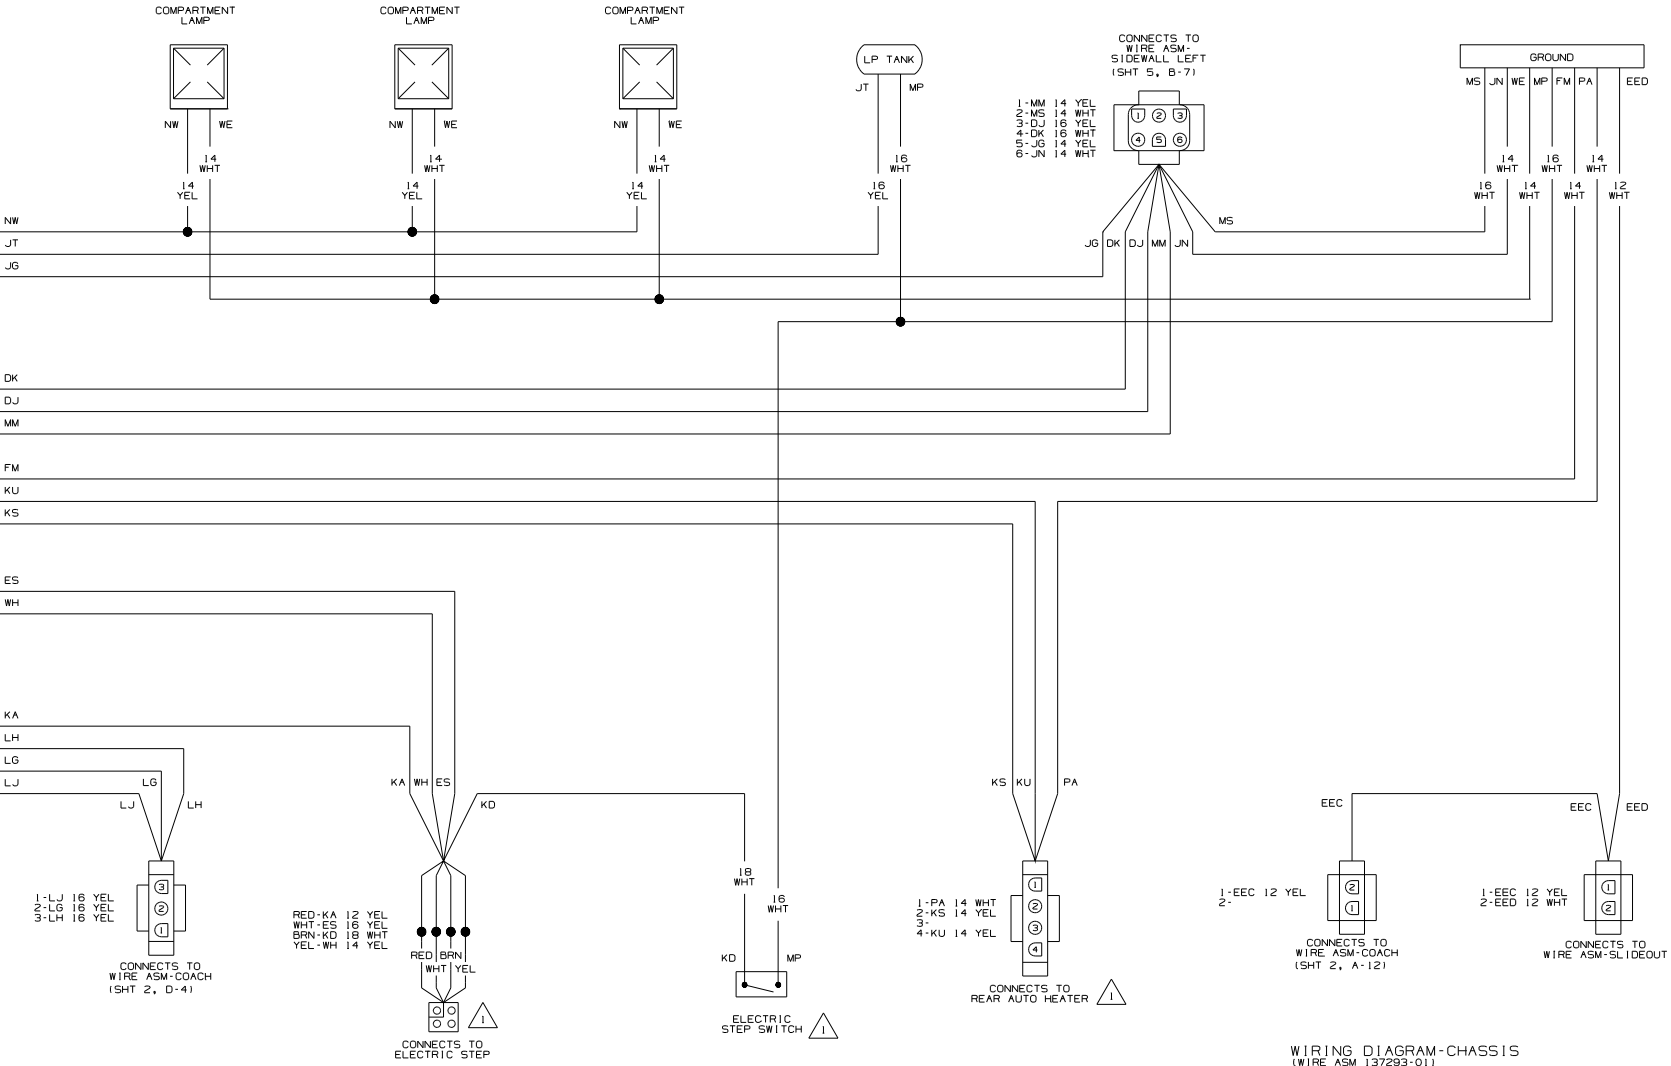


WIRING DIAGRAM-CHASSIS
(WIRE ASM 137293-011)

- A1-WP 10 YEL
- A2-KS 14 YEL
- A3-
- B1-DJ 16 YEL
- B2-DK 16 WHT
- B3-DL 16 YEL
- B4-DM 16 WHT
- C1-KE 14 YEL
- C2-
- D1-LL 16 WHT
- D2-LM 16 WHT
- D3-LN 16 WHT
- D4-LP 16 YEL
- F1-MM 14 YEL
- F2-
- G1-
- G2-LR 14 YEL
- G3-
- G4-
- H1-KU 14 YEL
- H2-
- J1-AAT 16 YEL
- J2-AAU 16 WHT
- J3-AAW 16 YEL
- J4-AAZ 16 WHT
- K1-
- K2-
- K3-

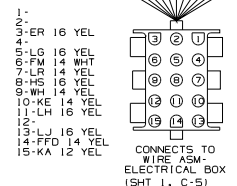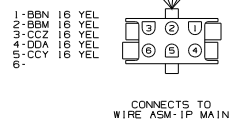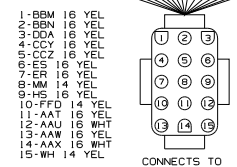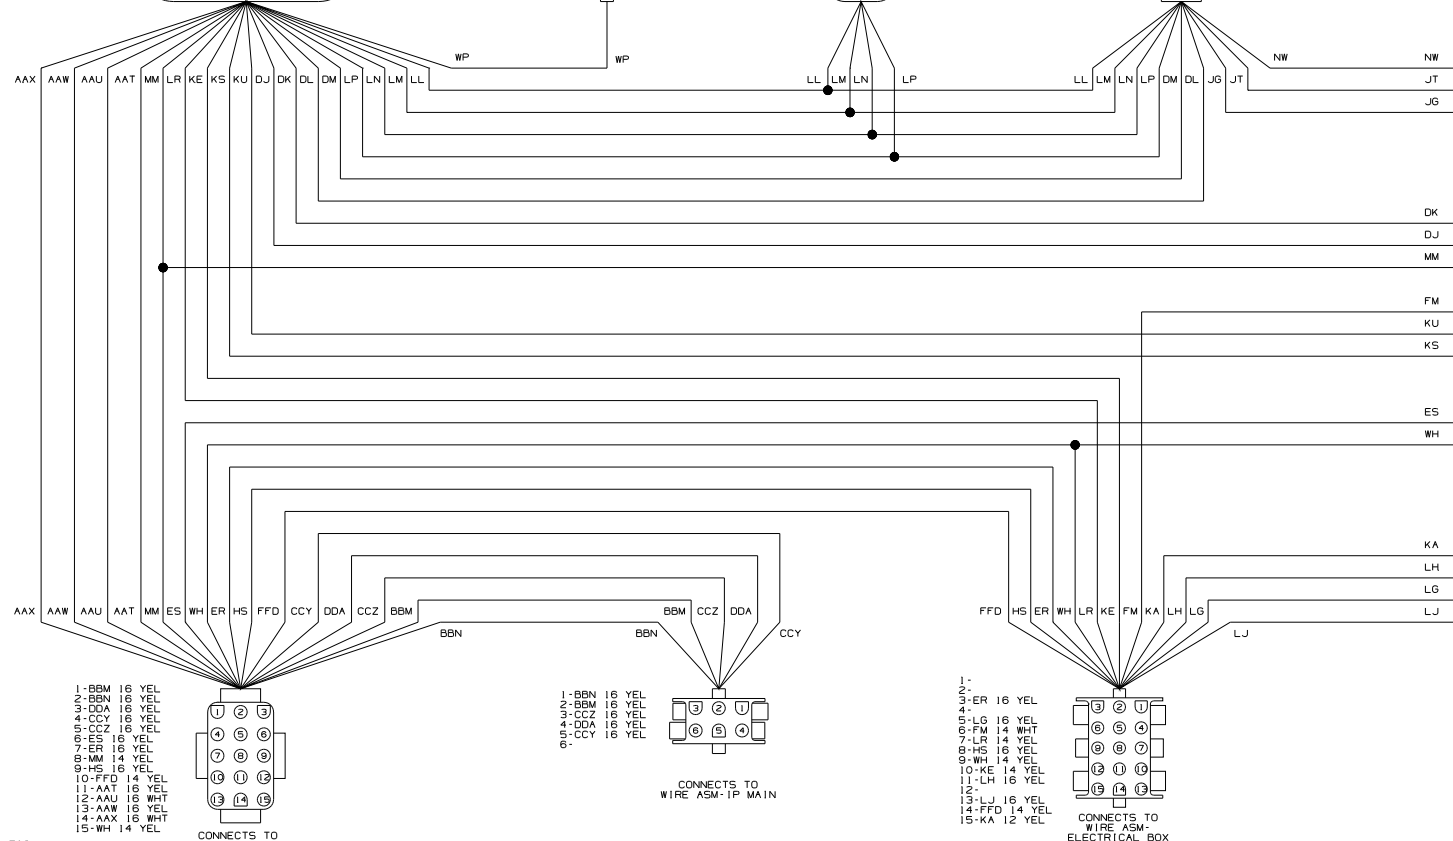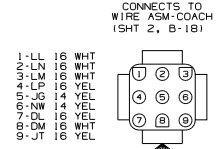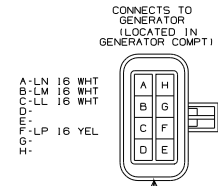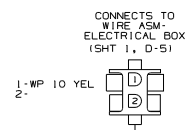



- NOTES:
- 3 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
 - 2 SEE WIRING DIAGRAM-AUTO LAMPS FOR ADDITIONAL INFORMATION.
 - 1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

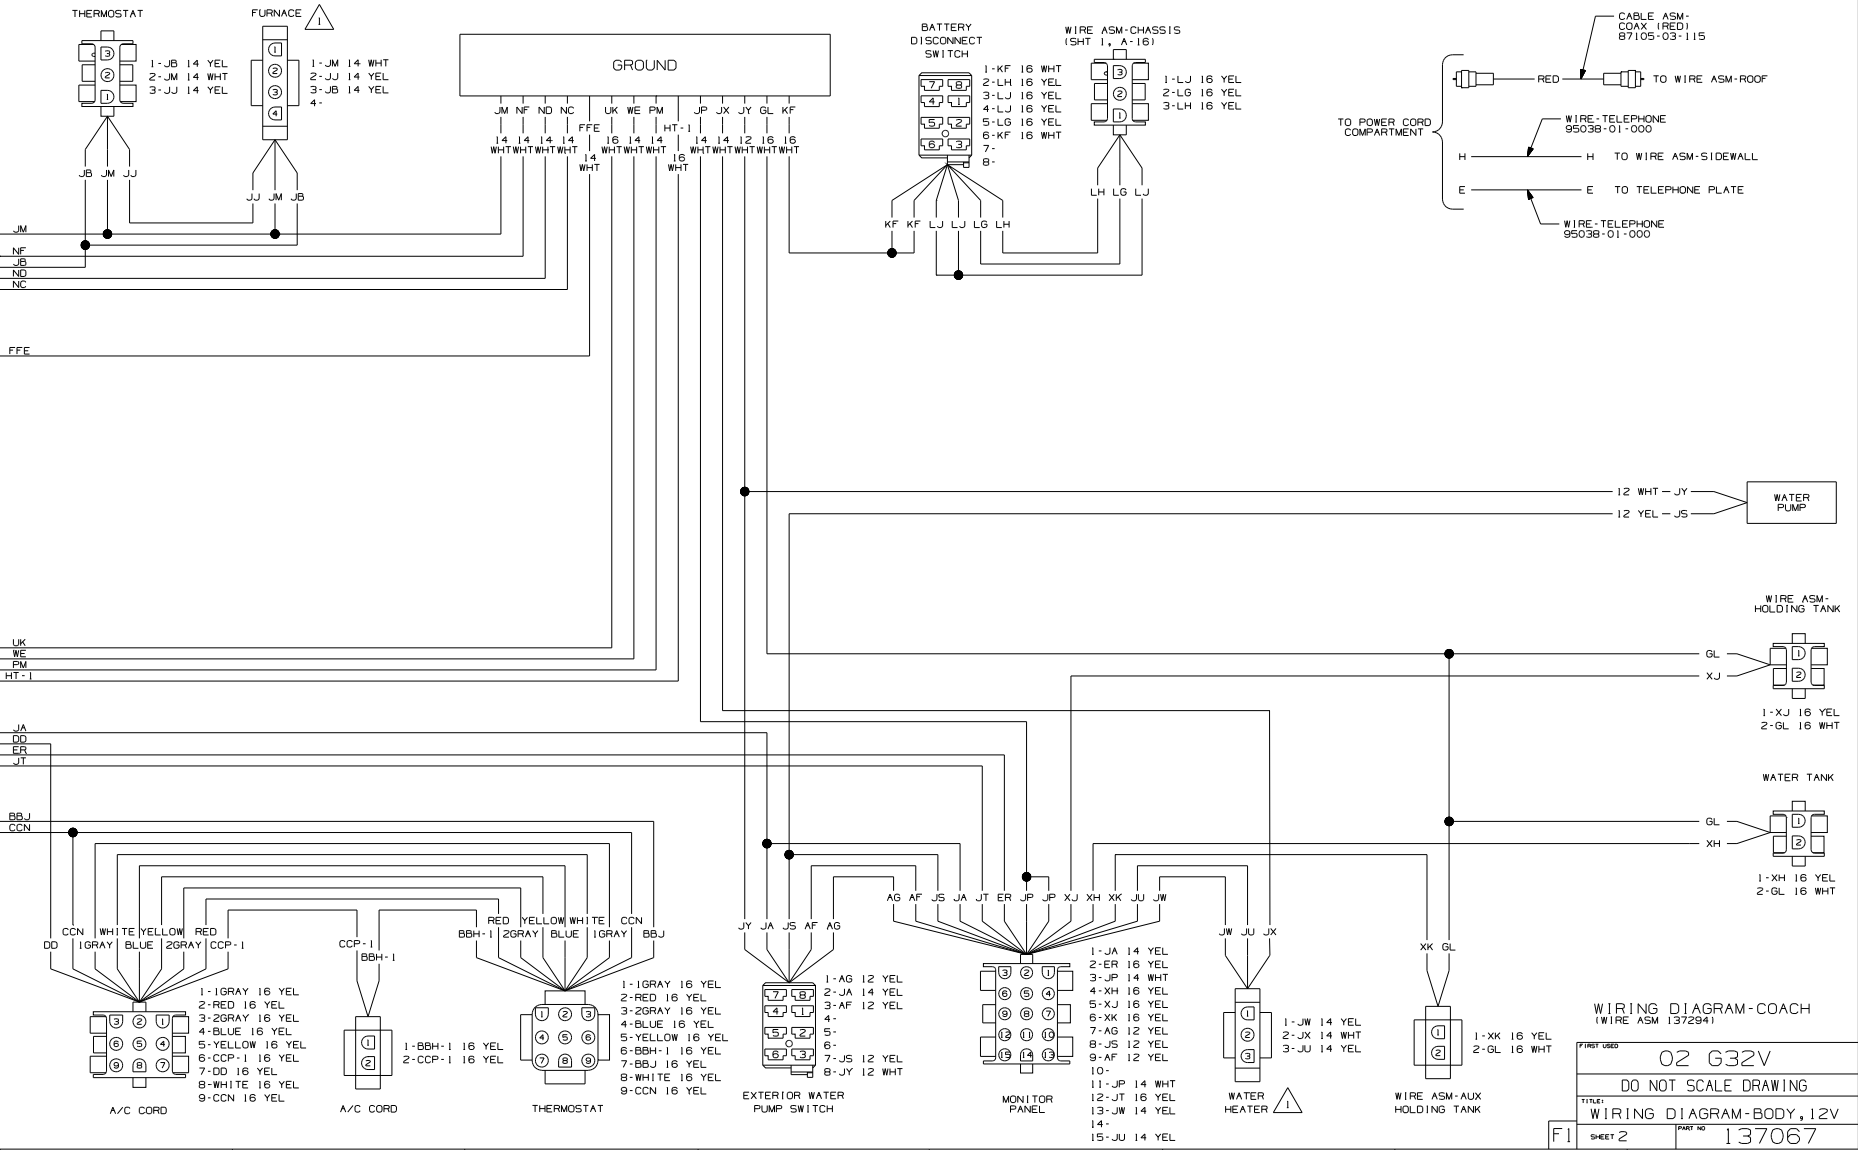


WIRING DIAGRAM-COACH (WIRE ASM 1372941)

FIRST USED	02 G32V
DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-BODY, 12V	
SHEET 2	PART NO 137067

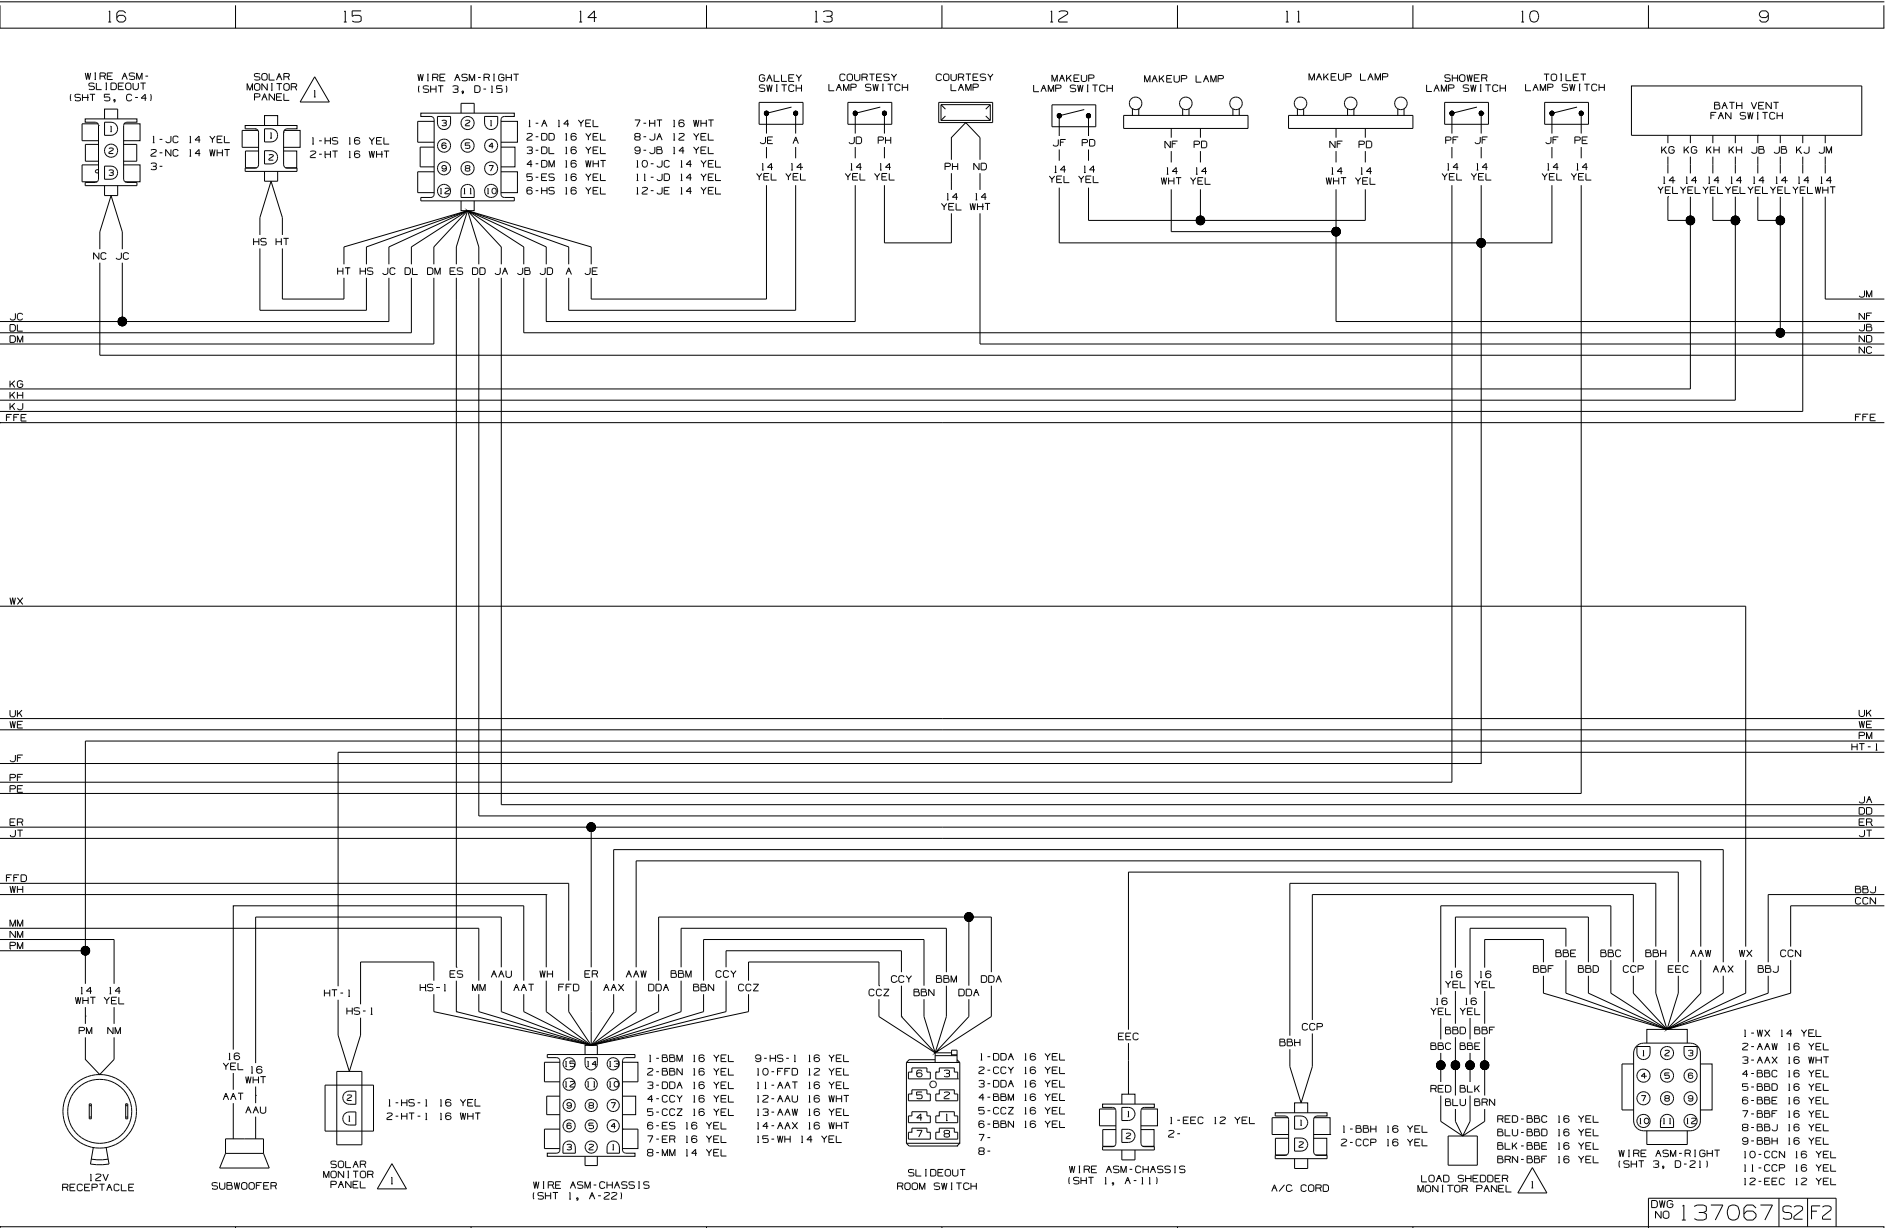

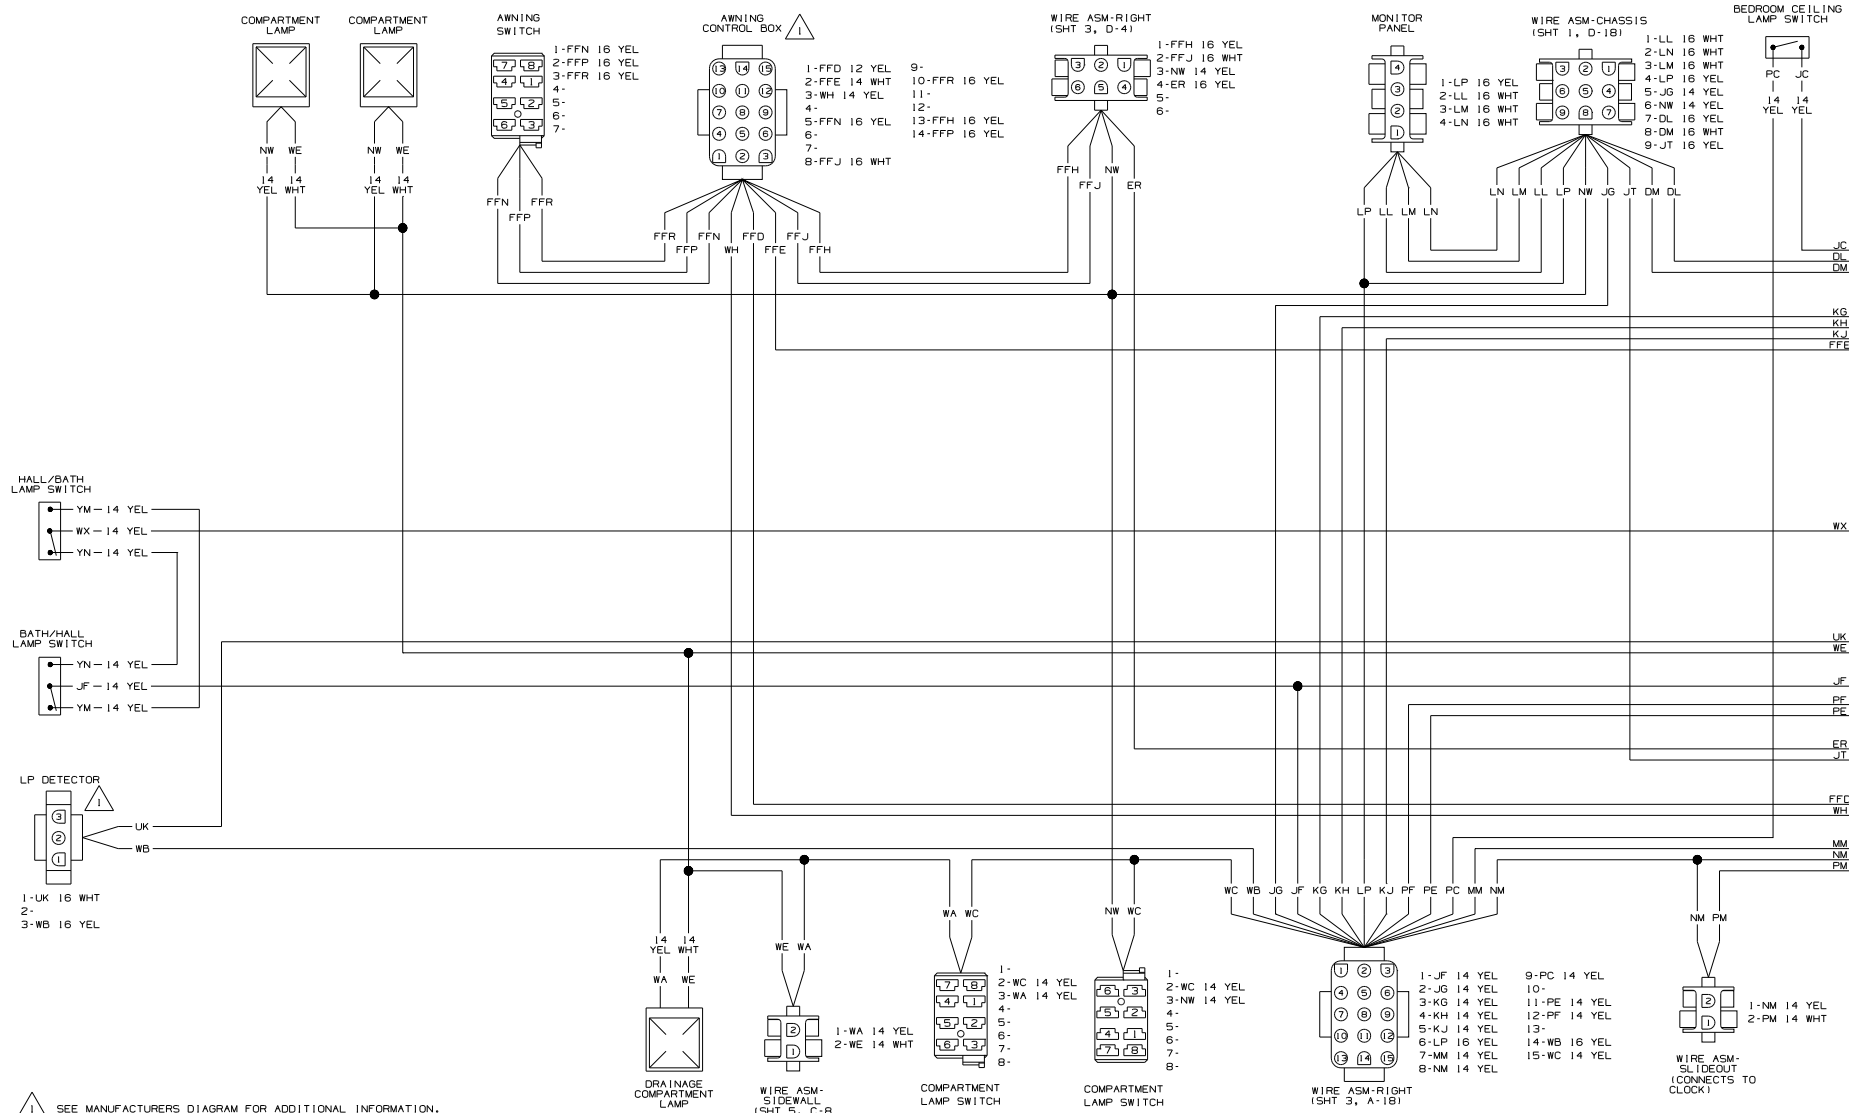


1 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
NOTES:

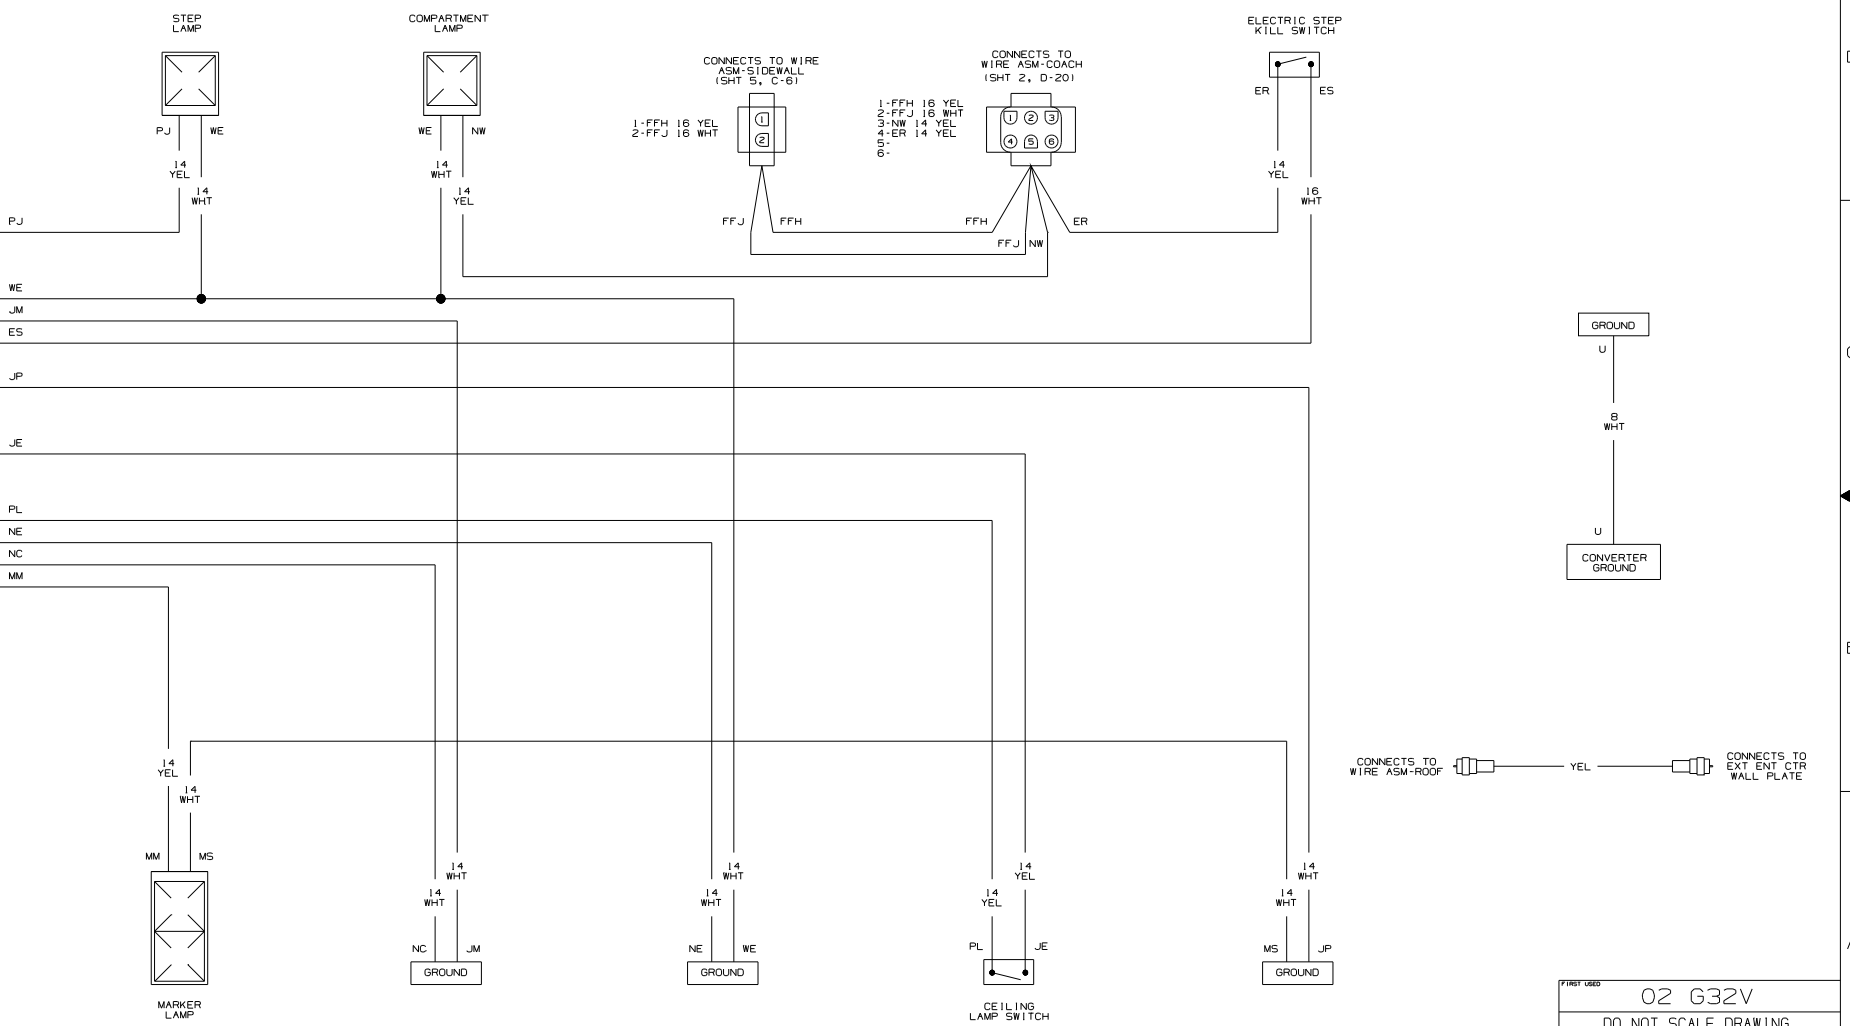

WIRING DIAGRAM-RIGHT
(WIRE ASM 137650)

FIRST USED	02 G32V
TITLE	DO NOT SCALE DRAWING
WIRING DIAGRAM-BODY, 12V	
SHEET 3	PART NO 137067

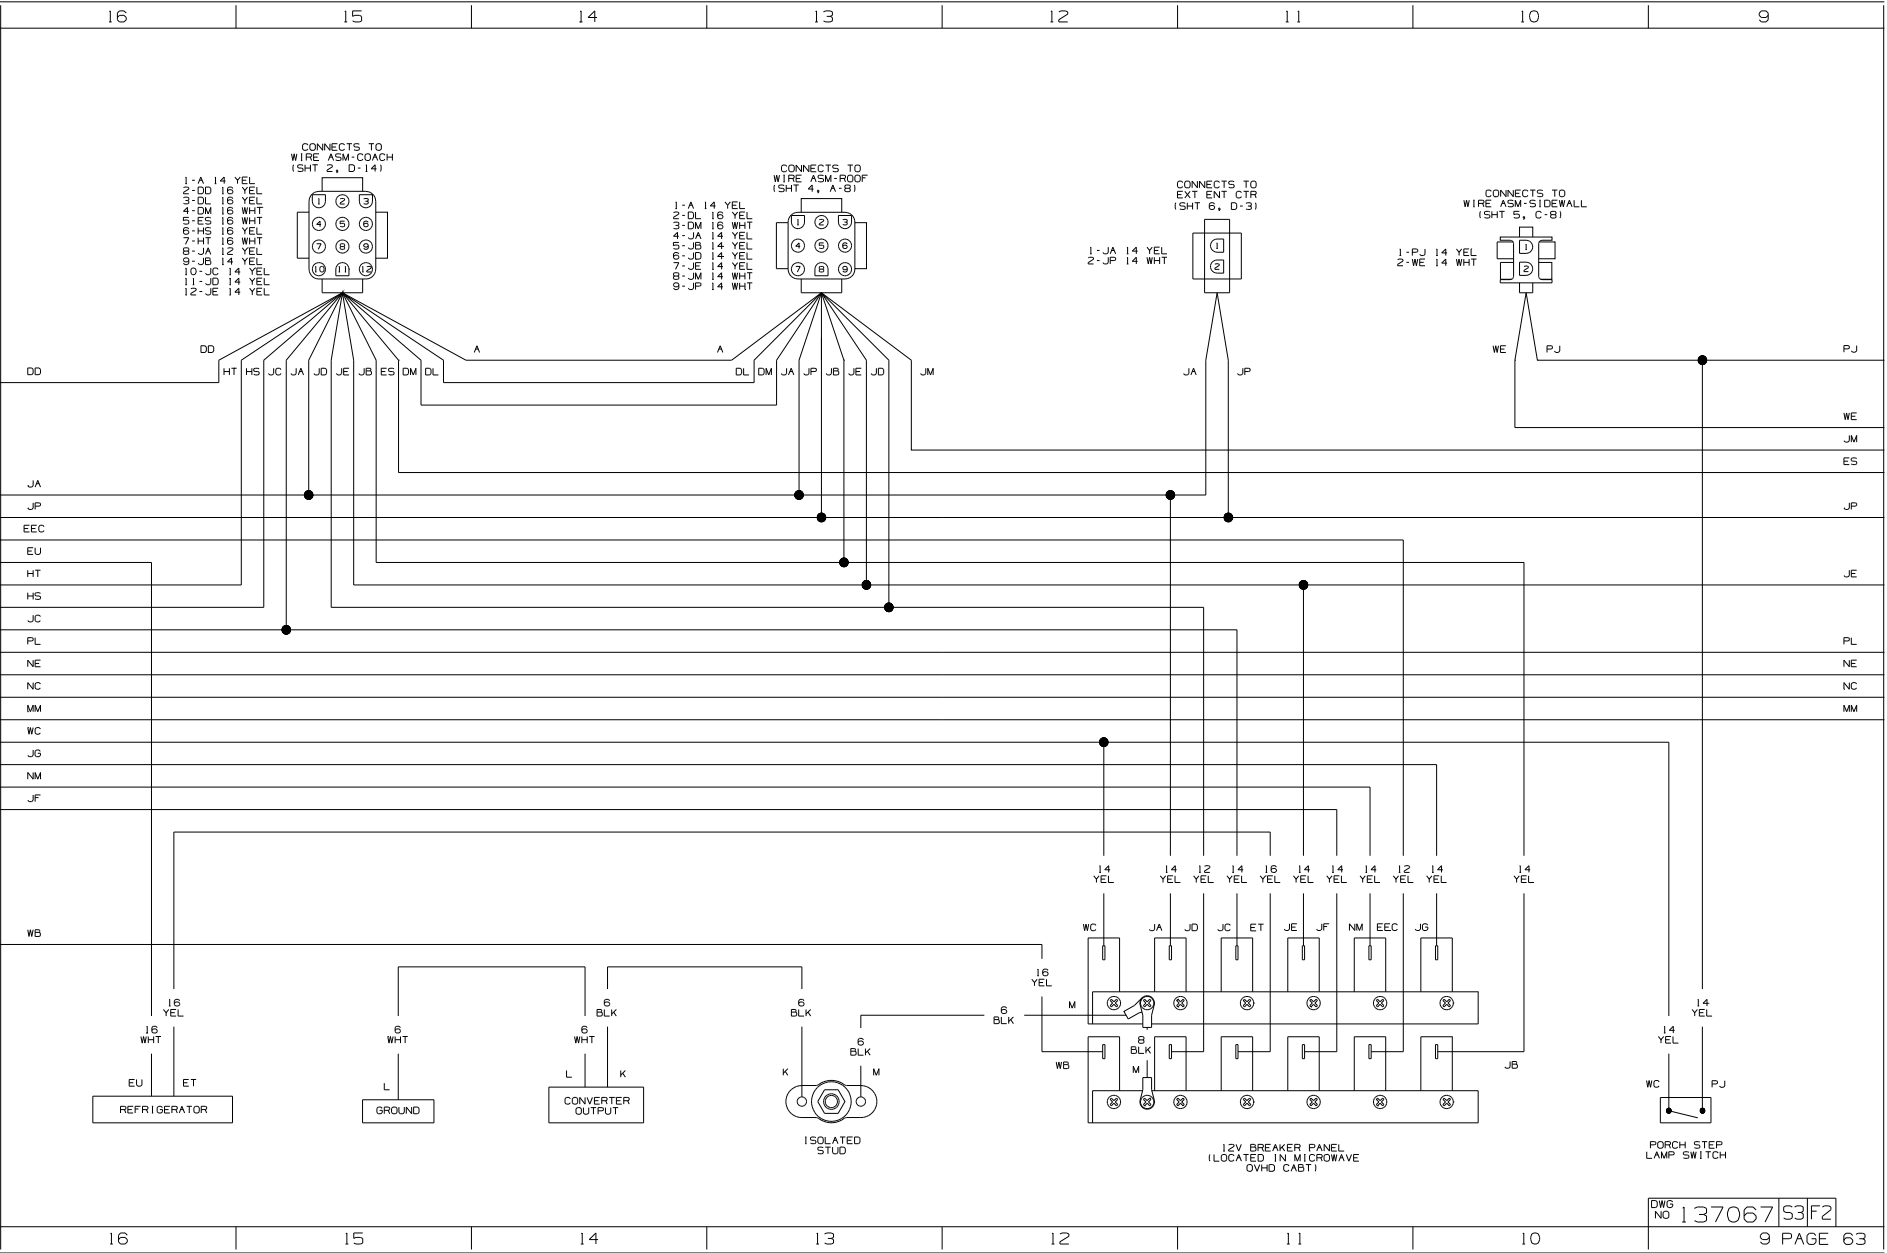

1 CONNCTS TO LOAD SHEDDER CONTROL BOARD

1 CONNCTS TO LOAD SHEDDER CONTROL BOARD




 
 
SUBWOOFER

CONNCTS TO WIRE ASM-COACH (SHT 2, A-9)

1-JA 14 YEL
2-JP 14 WHT
3-CCN 16 YEL
4-BBJ 16 YEL
5-DD 16 YEL
6-BBH 16 YEL
7-CCP 16 YEL
8-LP 16 YEL

RED-BBC 16 YEL
BLU-BBD 16 YEL
BLK-BBE 16 YEL
BRN-BBF 16 YEL

1-WX 14 YEL
2-AAW 16 YEL
3-AAX 16 WHT
4-BBC 16 YEL
5-BBD 16 YEL
6-BBE 16 YEL
7-BBF 16 YEL
8-BBJ 16 YEL
9-BBH 16 YEL
10-CCN 16 YEL
11-CCP 16 YEL
12-EEC 12 YEL

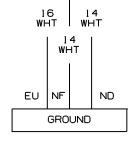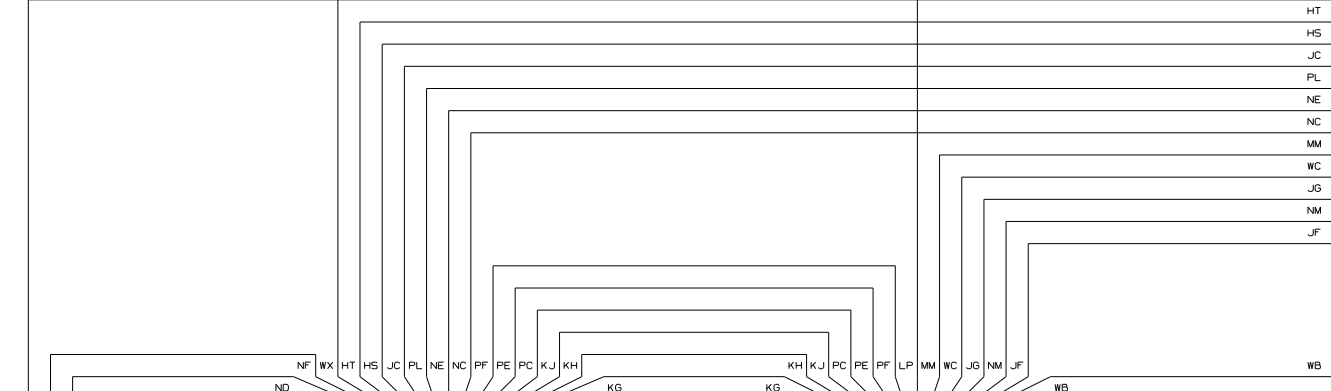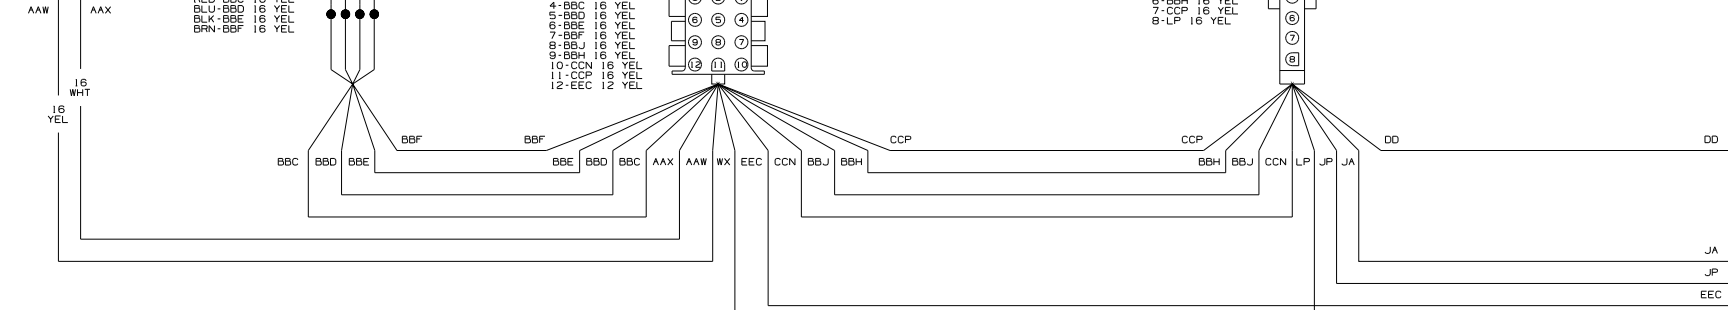


1-KG 14 YEL
2-KH 14 YEL
3-KJ 14 YEL
4-KL 14 WHT
5-ND 14 WHT
6-NE 14 WHT
7-NF 14 WHT
8-PC 14 YEL
9-JC 14 YEL
10-PE 14 YEL
11-PF 14 YEL
12-PL 14 YEL
13-WX 14 YEL
14-HS 16 YEL
15-HT 16 WHT

CONNCTS TO WIRE ASM-ROOF (SHT 4, C-8)

1-JF 14 YEL
2-JG 14 YEL
3-KH 14 YEL
4-KJ 14 YEL
5-KL 14 YEL
6-LP 16 YEL
7-MM 14 YEL
8-NM 14 YEL
9-PC 14 YEL
10-
11-PE 14 YEL
12-PF 14 YEL
13-
14-WB 16 YEL
15-WC 14 YEL

CONNCTS TO WIRE ASM-COACH (SHT 2, A-18)


1 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
NOTES:

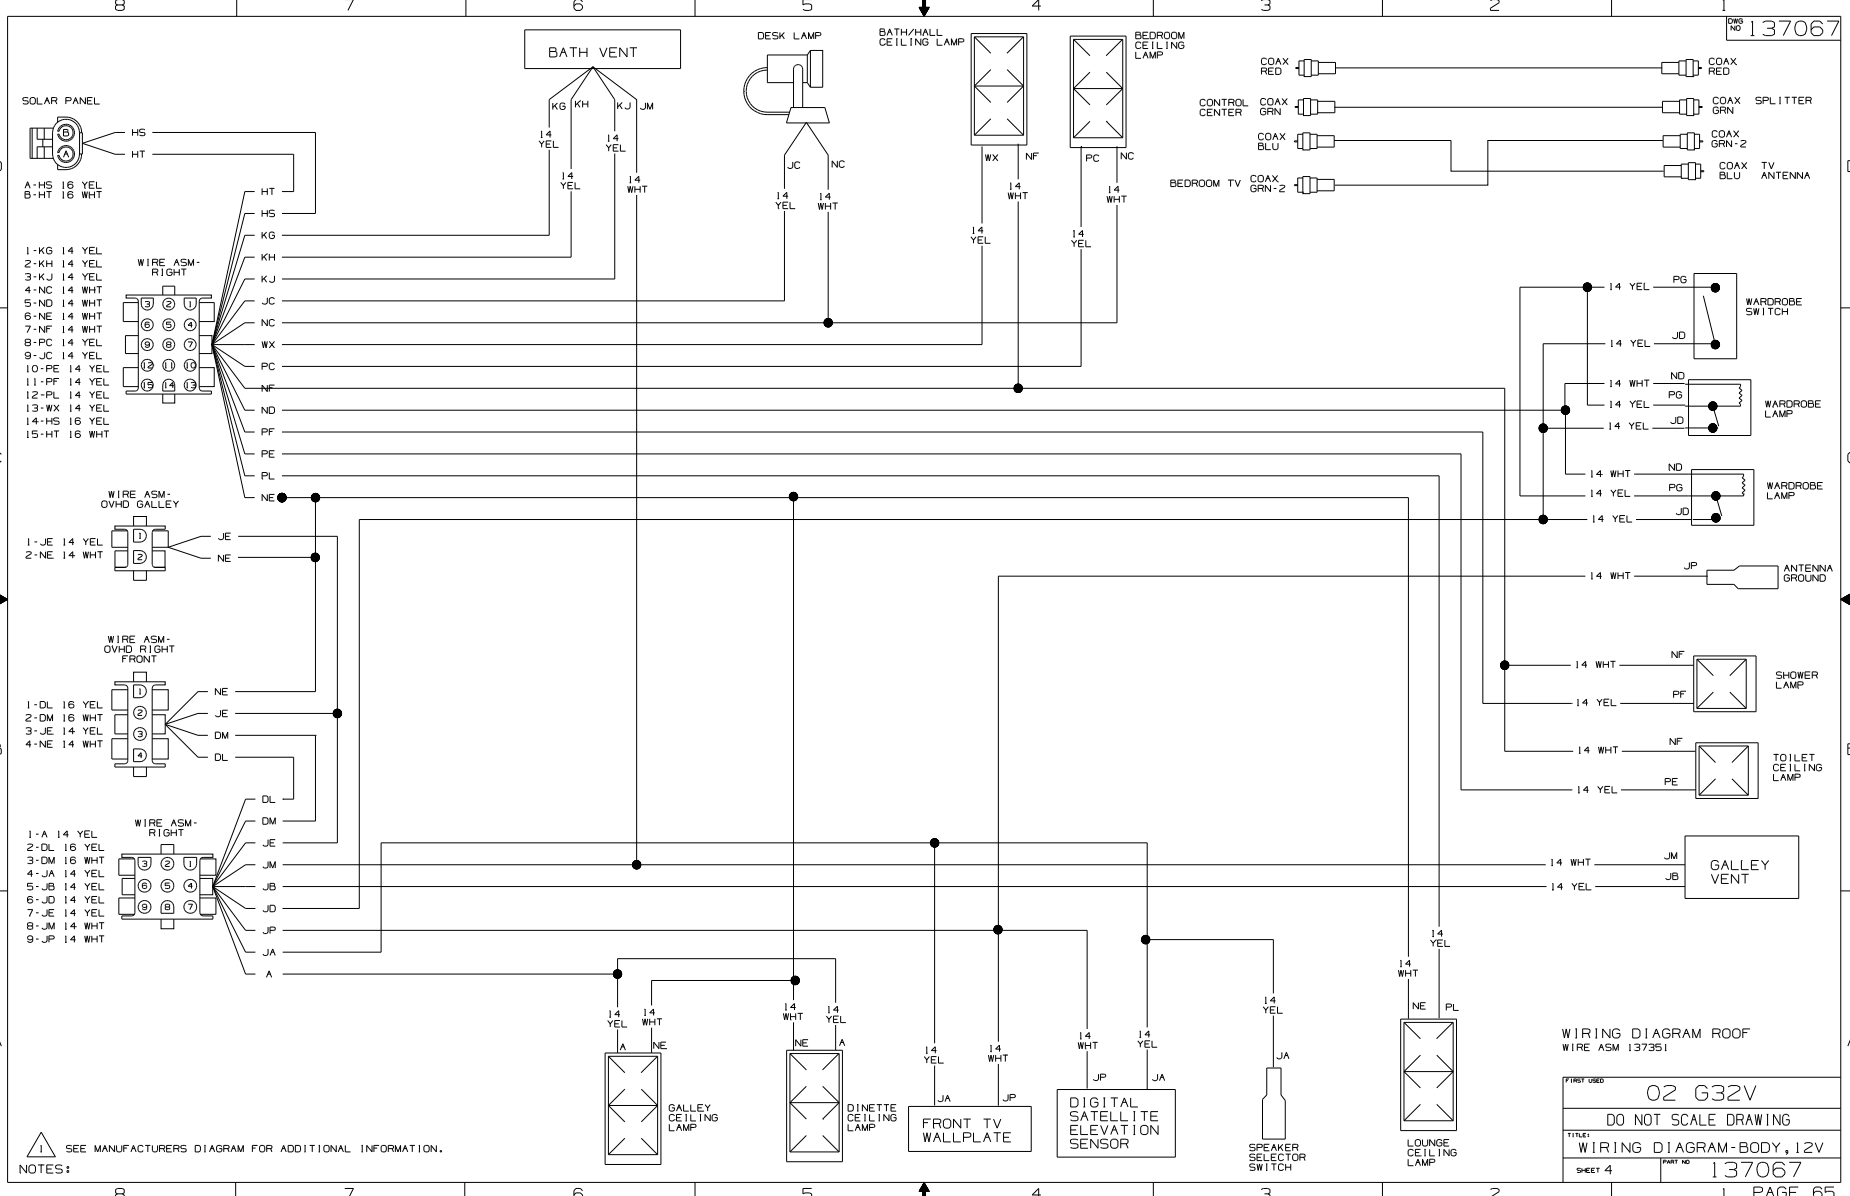


SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
 NOTES:

WIRING DIAGRAM ROOF
 WIRE ASM 137351


FIRST USED	02 G32V
DO NOT SCALE DRAWING	
TITLE:	WIRING DIAGRAM-BODY, 12V
SHEET 4	PART NO 137067

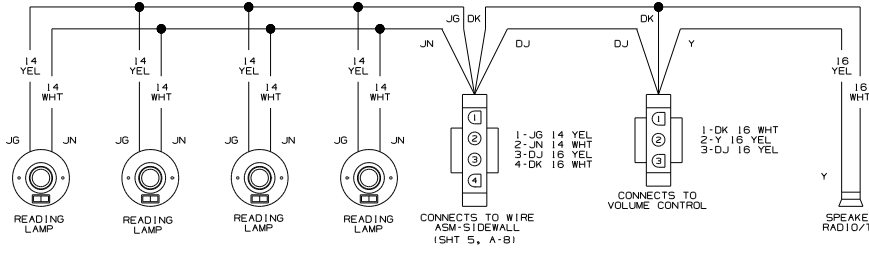


WIRING DIAGRAM-OVHD, LEFT
(WIRE ASM 132424-02)

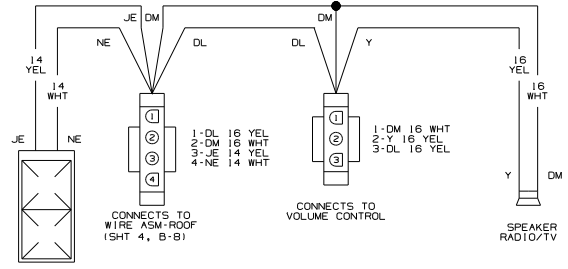


WIRING DIAGRAM-RIGHT
(WIRE ASM 132425-02)

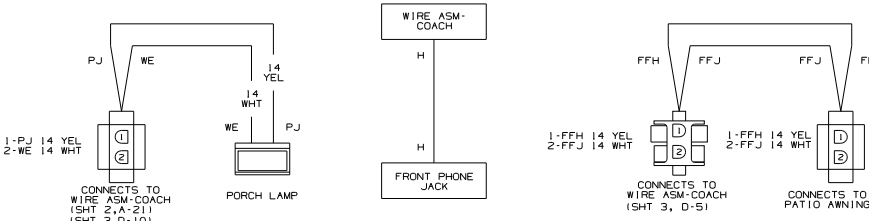


WIRING DIAGRAM-RIGHT, FRT
(WIRE ASM 130772-04)

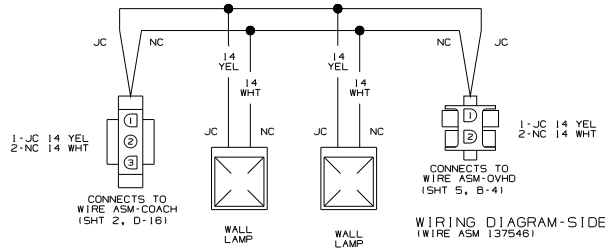


WIRING DIAGRAM-SIDEWALL
(WIRE ASM 137546)

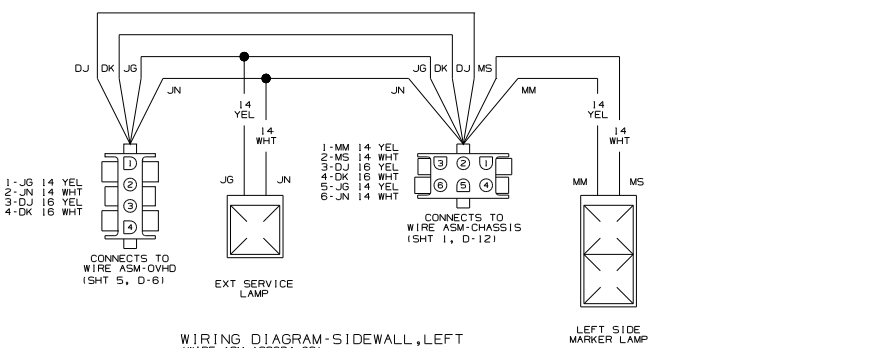

WIRING DIAGRAM-SIDEWALL, LEFT
(WIRE ASM 138934-02)


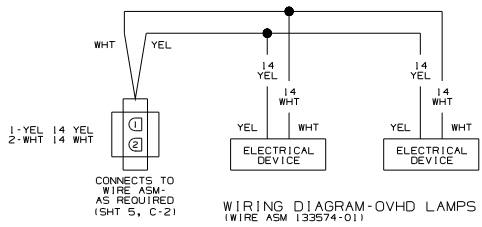


WIRING DIAGRAM-OVHD LAMPS
(WIRE ASM 139574-01)

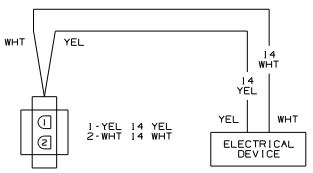

WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 133572-01)

FIRST USED	02 G32V
DO NOT SCALE DRAWING	
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 5	PART NO 137067

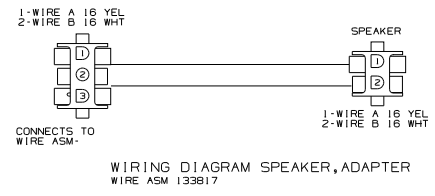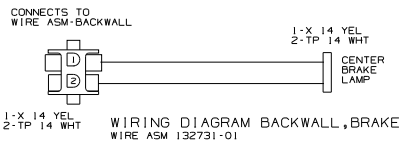

FIRST USED		02 G32V
DO NOT SCALE DRAWING		
TITLE: WIRING DIAGRAM-BODY, 12V		
SHEET 6	PART NO	137067