




DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

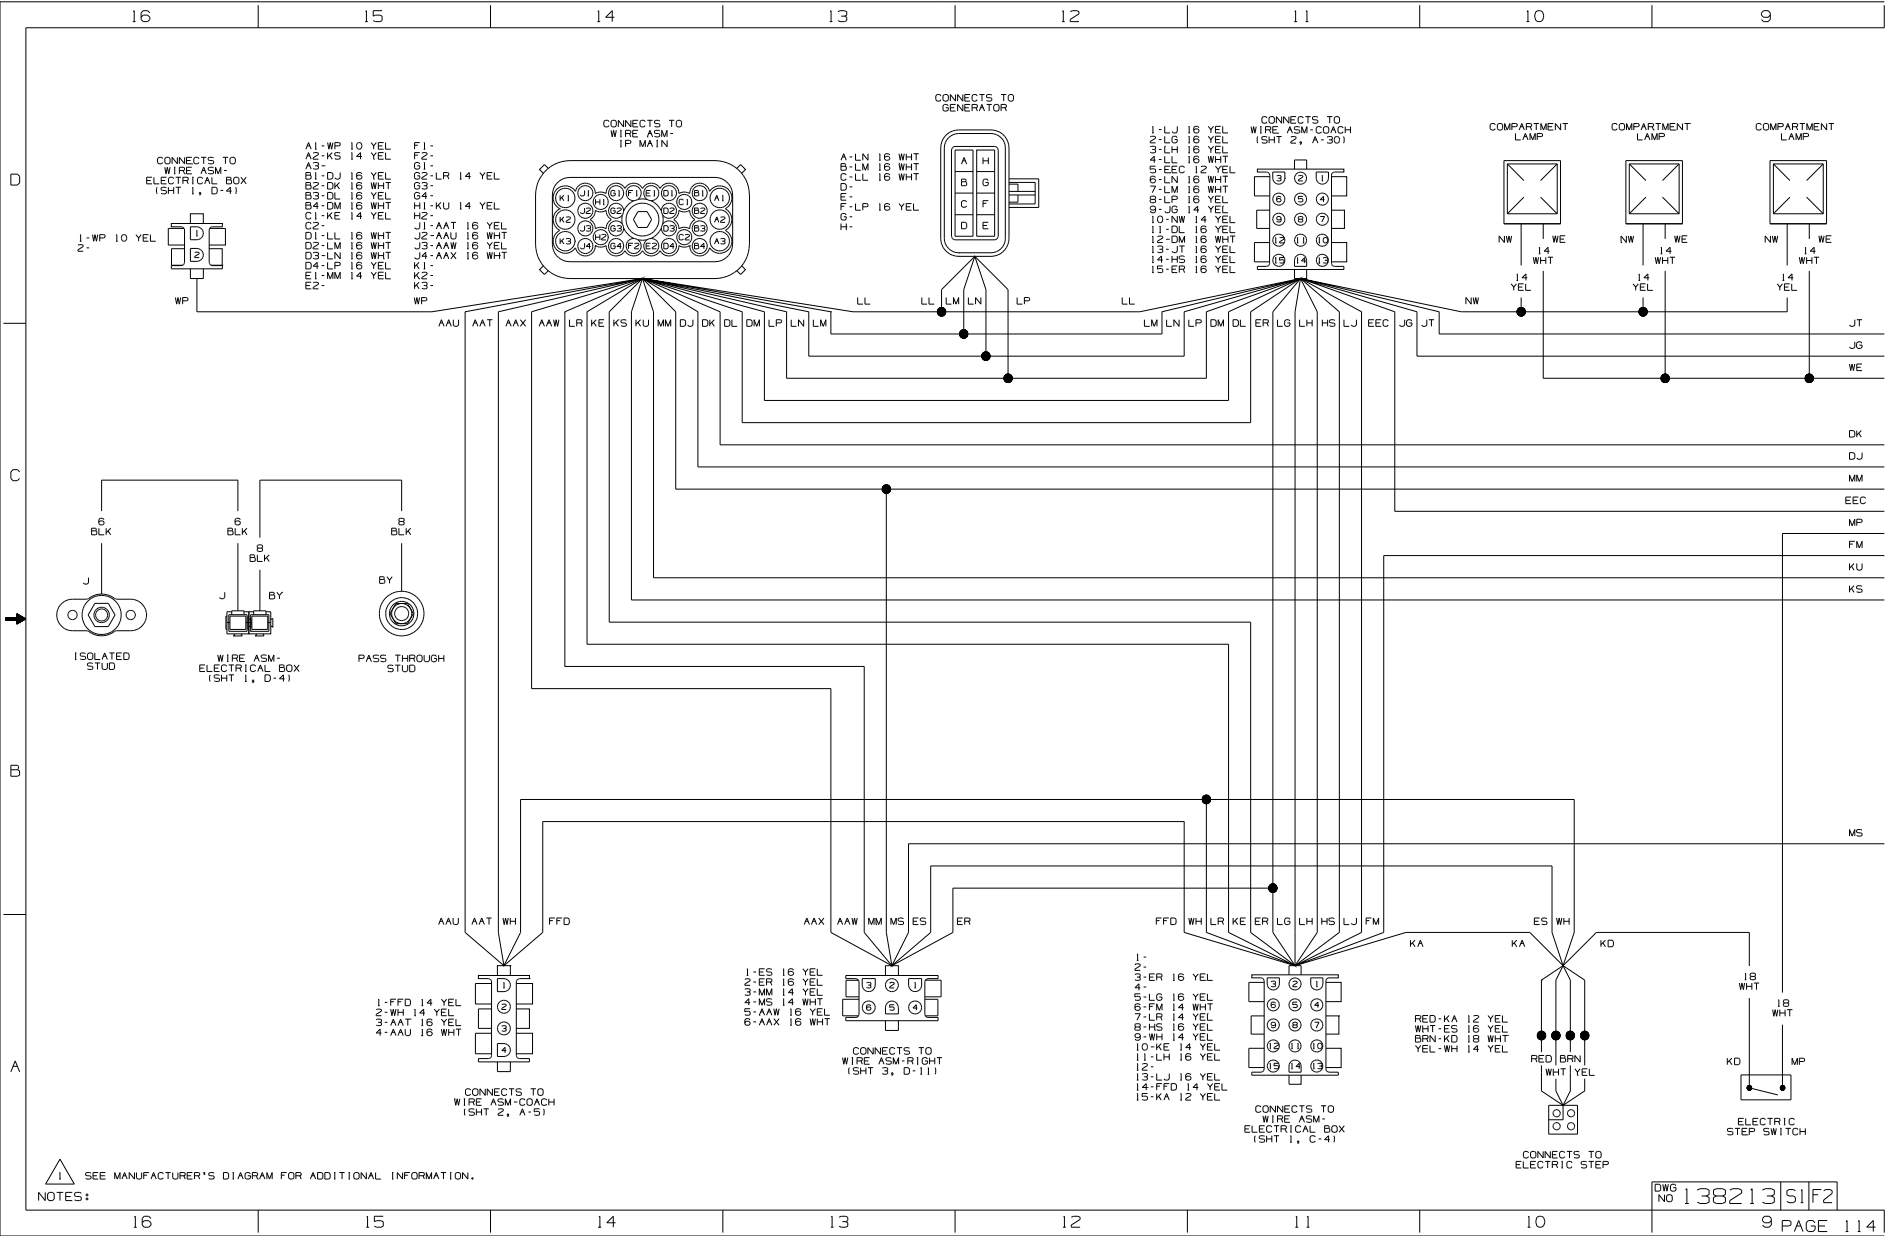

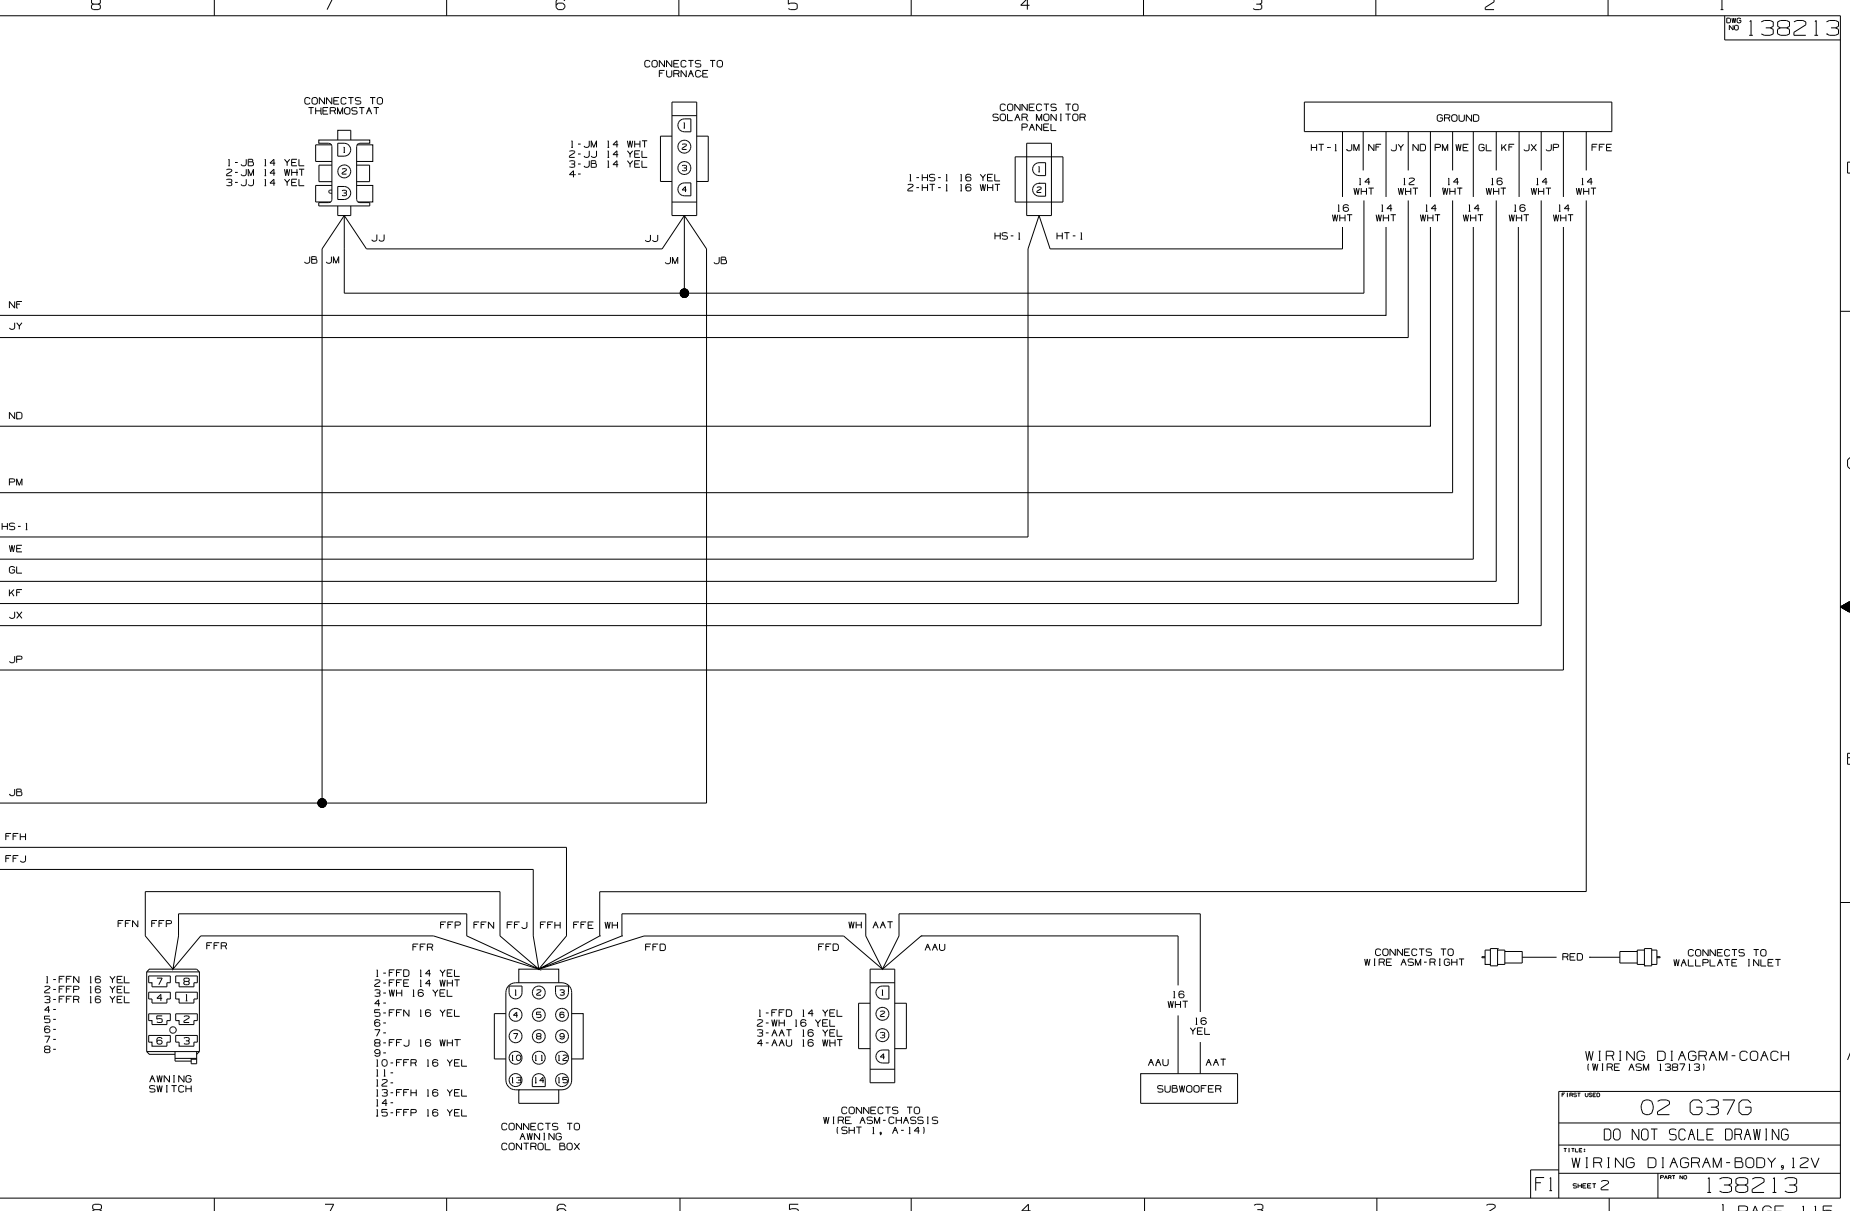


WIRING DIAGRAM-COACH (WIRE ASM 138713)


02 G37G


DO NOT SCALE DRAWING

TITLE: WIRING DIAGRAM-BODY, 12V








SHEET 2 PART NO 138213

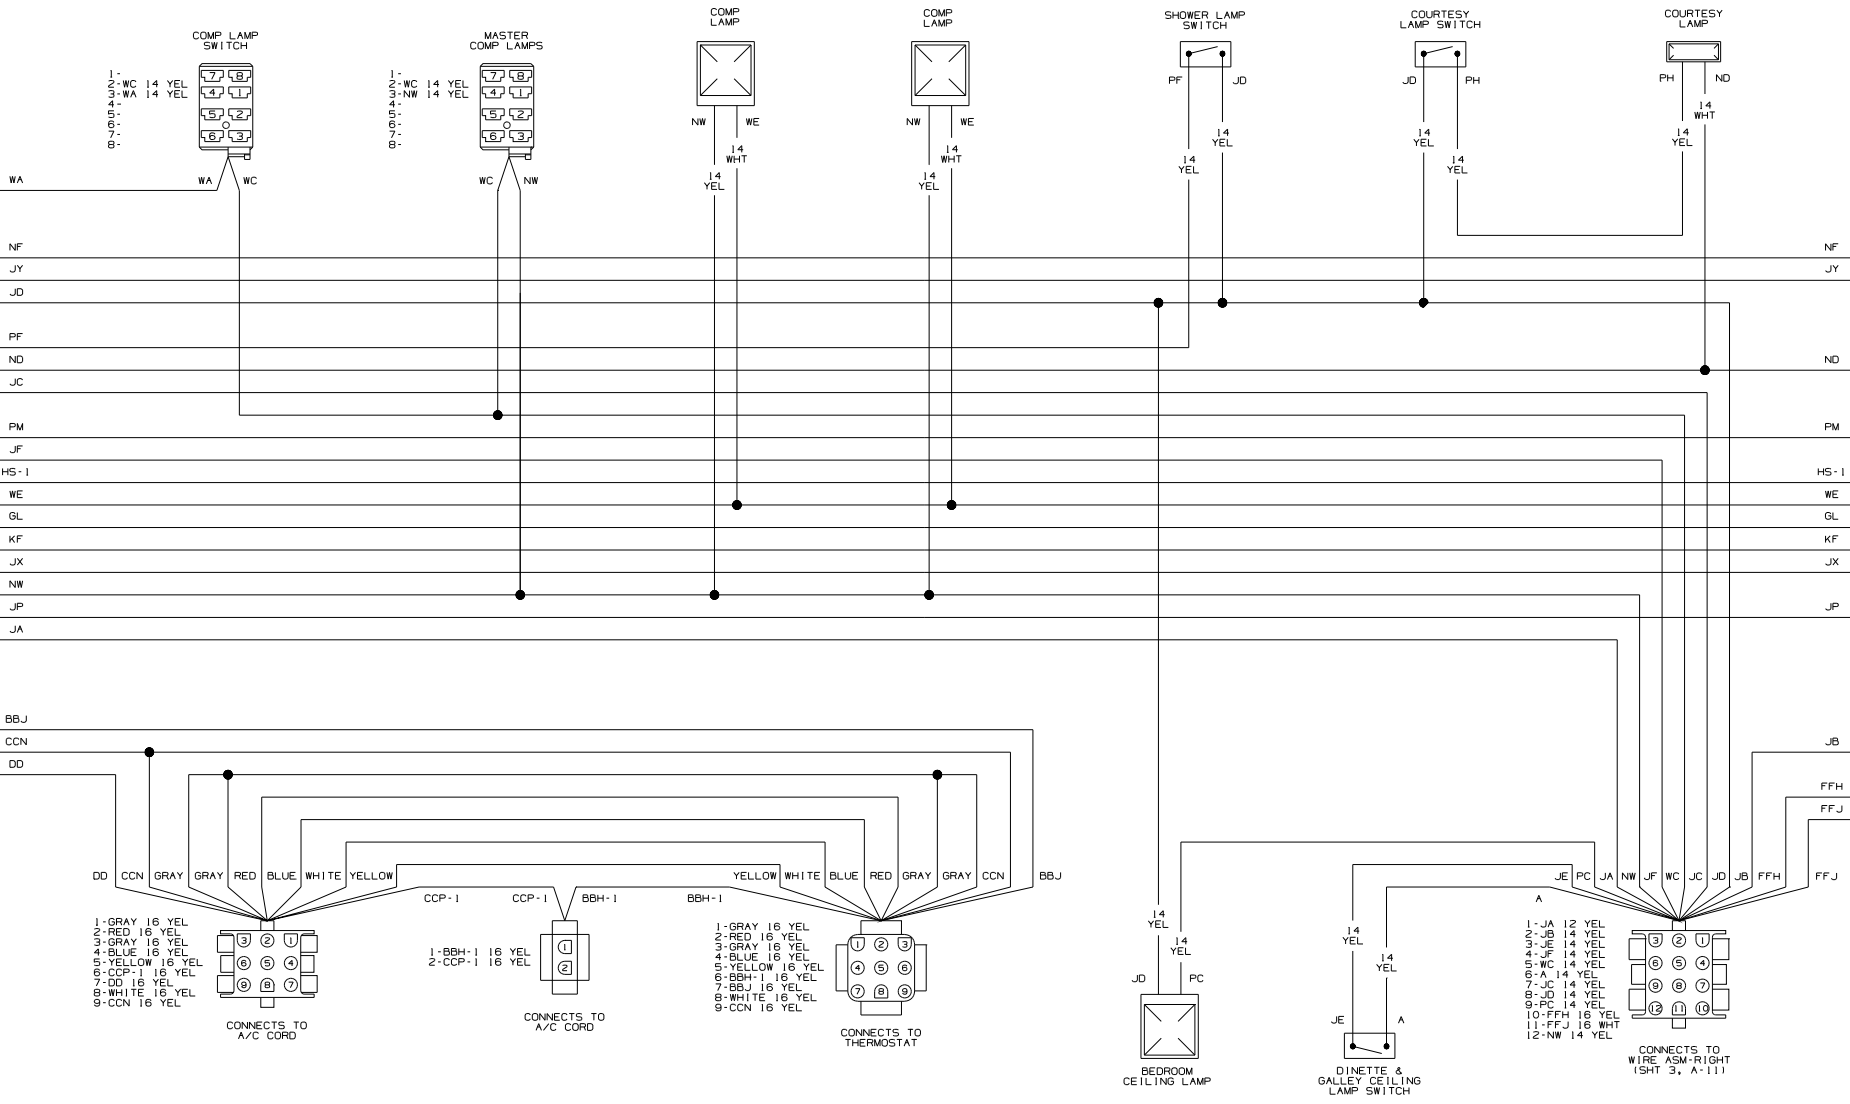

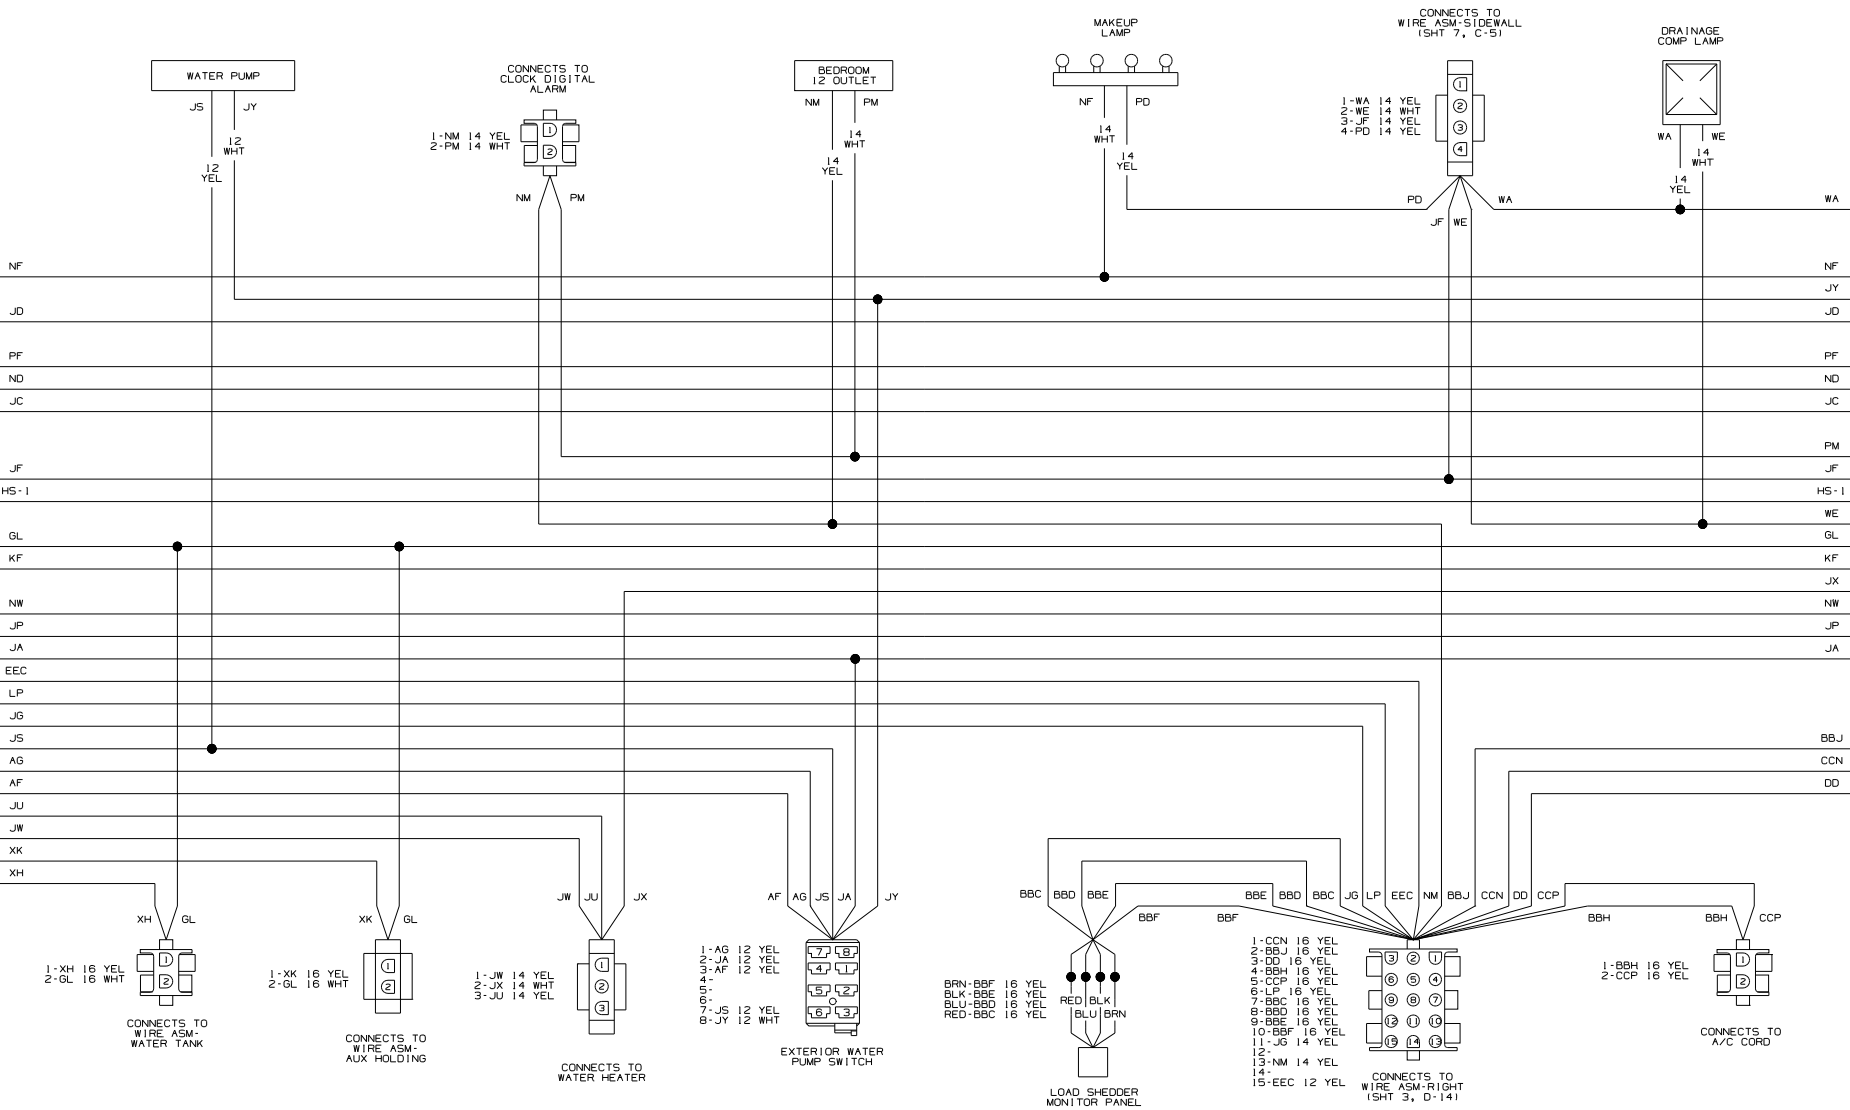

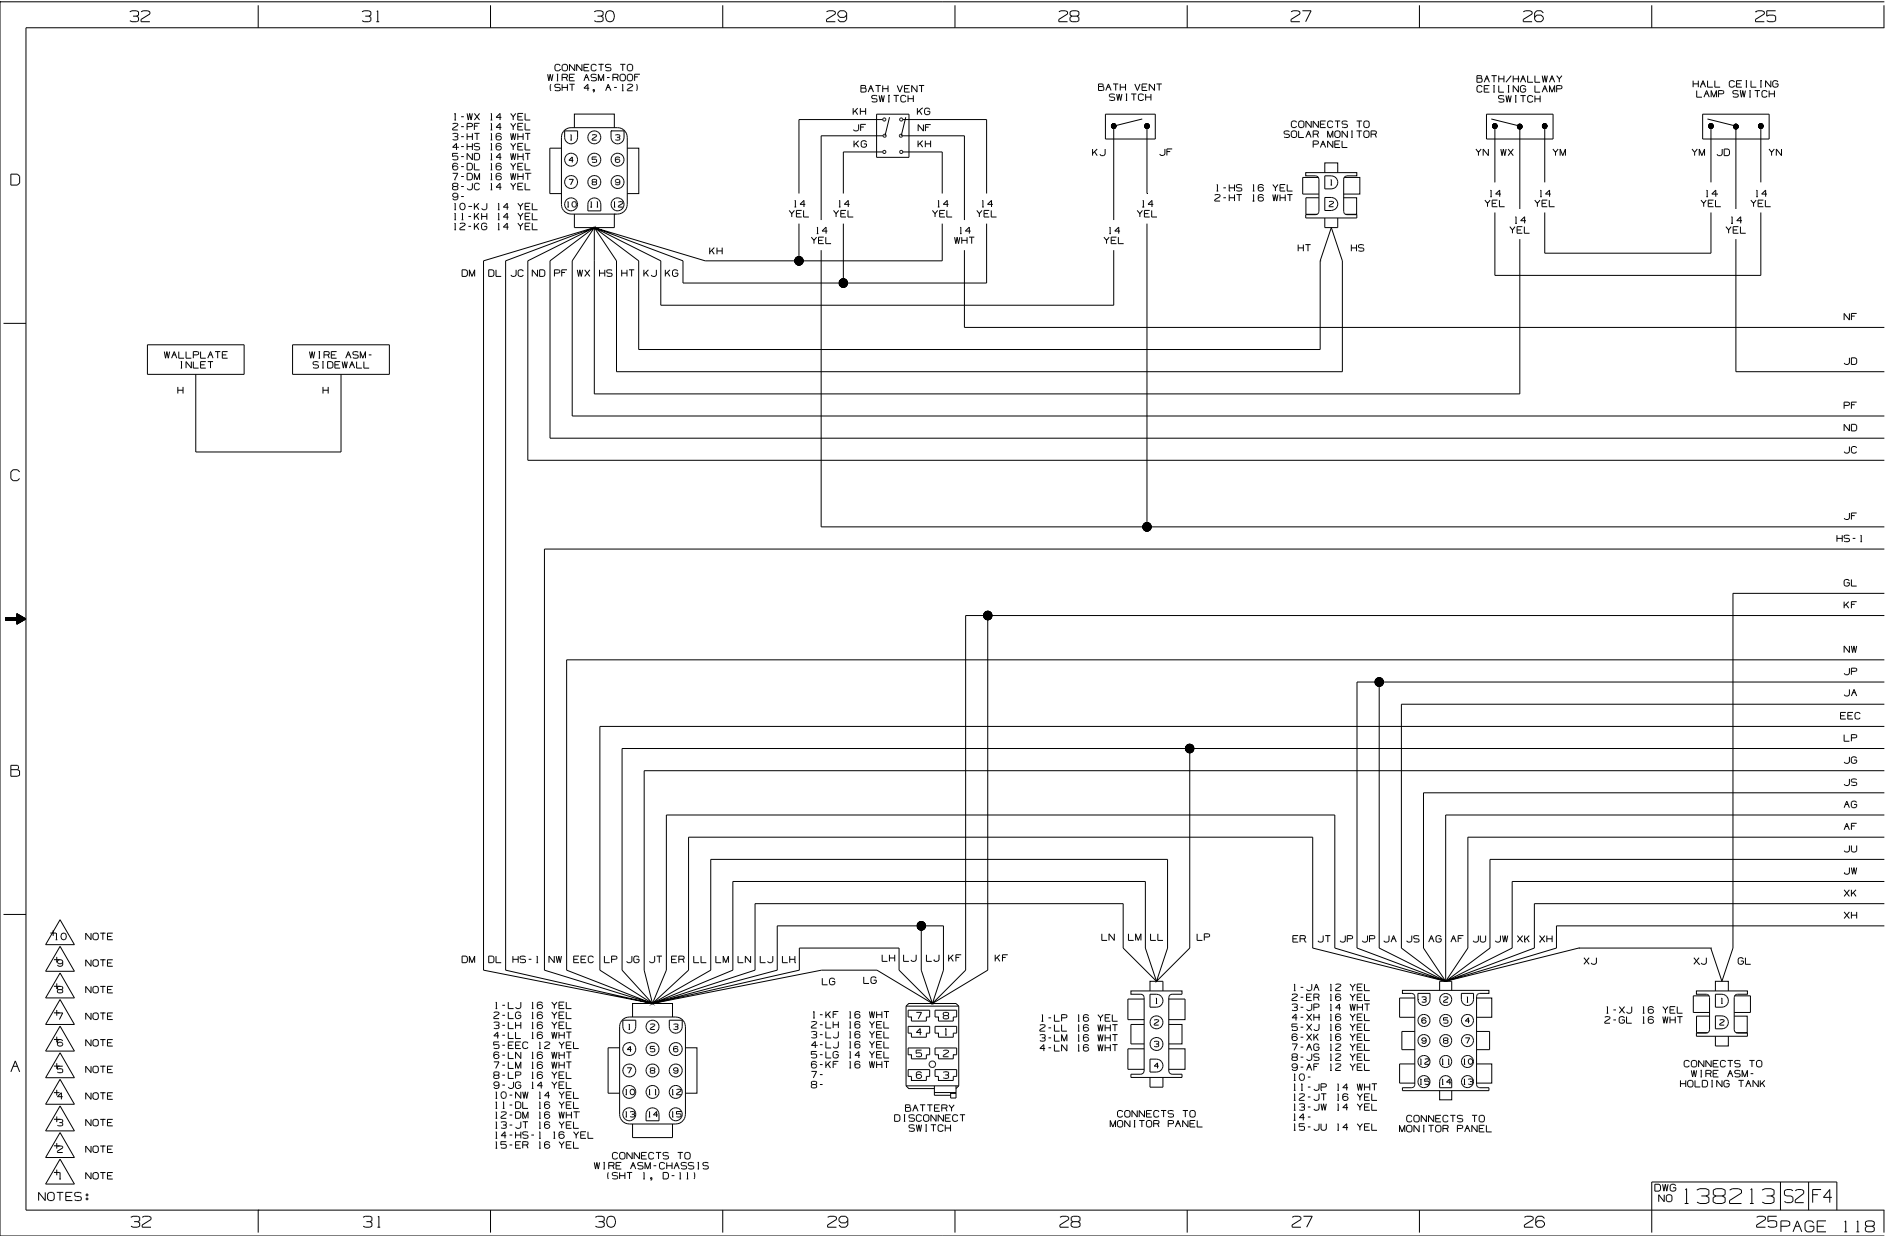


   - CONNECTS TO WIRE ASM-ROOF (SHT 4, A-12)
- 1-WX 14 YEL
 - 2-PF 14 YEL
 - 3-HT 16 WHT
 - 4-HS 16 YEL
 - 5-ND 14 WHT
 - 6-DL 16 YEL
 - 7-DM 16 WHT
 - 8-JC 14 YEL
 - 9-
 - 10-KJ 14 YEL
 - 11-KH 14 YEL
 - 12-KG 14 YEL

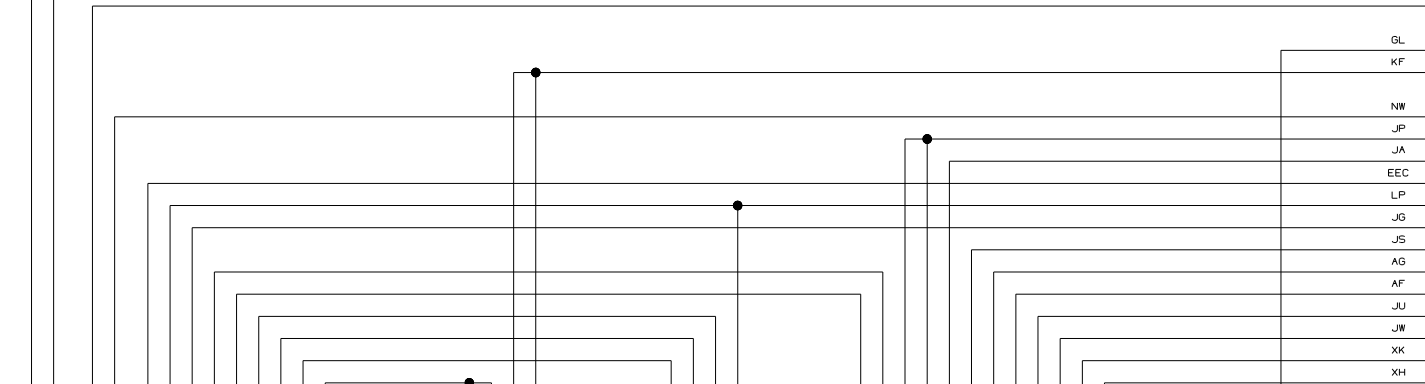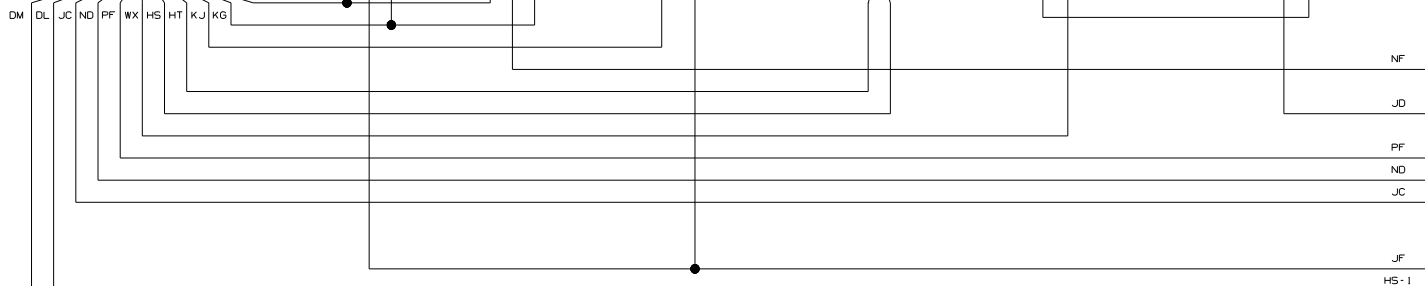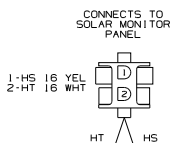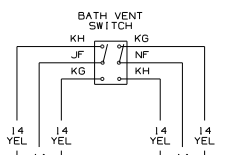


- CONNECTS TO WIRE ASM-CHASSIS (SHT 1, D-11)
- 1-LJ 16 YEL
 - 2-LG 16 YEL
 - 3-LH 16 YEL
 - 4-LL 16 WHT
 - 5-EEC 12 YEL
 - 6-LN 16 WHT
 - 7-LM 16 WHT
 - 8-LP 16 YEL
 - 9-JG 14 YEL
 - 10-NW 14 YEL
 - 11-QL 16 YEL
 - 12-DM 16 WHT
 - 13-JT 16 YEL
 - 14-HS-1 16 YEL
 - 15-ER 16 YEL


- BATTERY DISCONNECT SWITCH
- 1-KF 16 WHT
 - 2-LH 16 YEL
 - 3-LJ 16 YEL
 - 4-LG 16 WHT
 - 5-LK 14 YEL
 - 6-KF 16 WHT
 - 7-
 - 8-

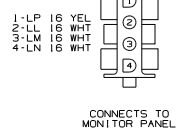

 - CONNECTS TO MONITOR PANEL
- 1-JA 12 YEL
 - 2-ER 16 YEL
 - 3-JP 14 WHT
 - 4-XH 16 YEL
 - 5-XJ 16 YEL
 - 6-XK 16 YEL
 - 7-AG 12 YEL
 - 8-JS 12 YEL
 - 9-AF 12 YEL
 - 10-
 - 11-JP 14 WHT
 - 12-JT 16 YEL
 - 13-JW 14 YEL
 - 14-
 - 15-JU 14 YEL






- NOTES:
- 10
 - 9
 - 8
 - 7
 - 6
 - 5
 - 4
 - 3
 - 2
 - 1

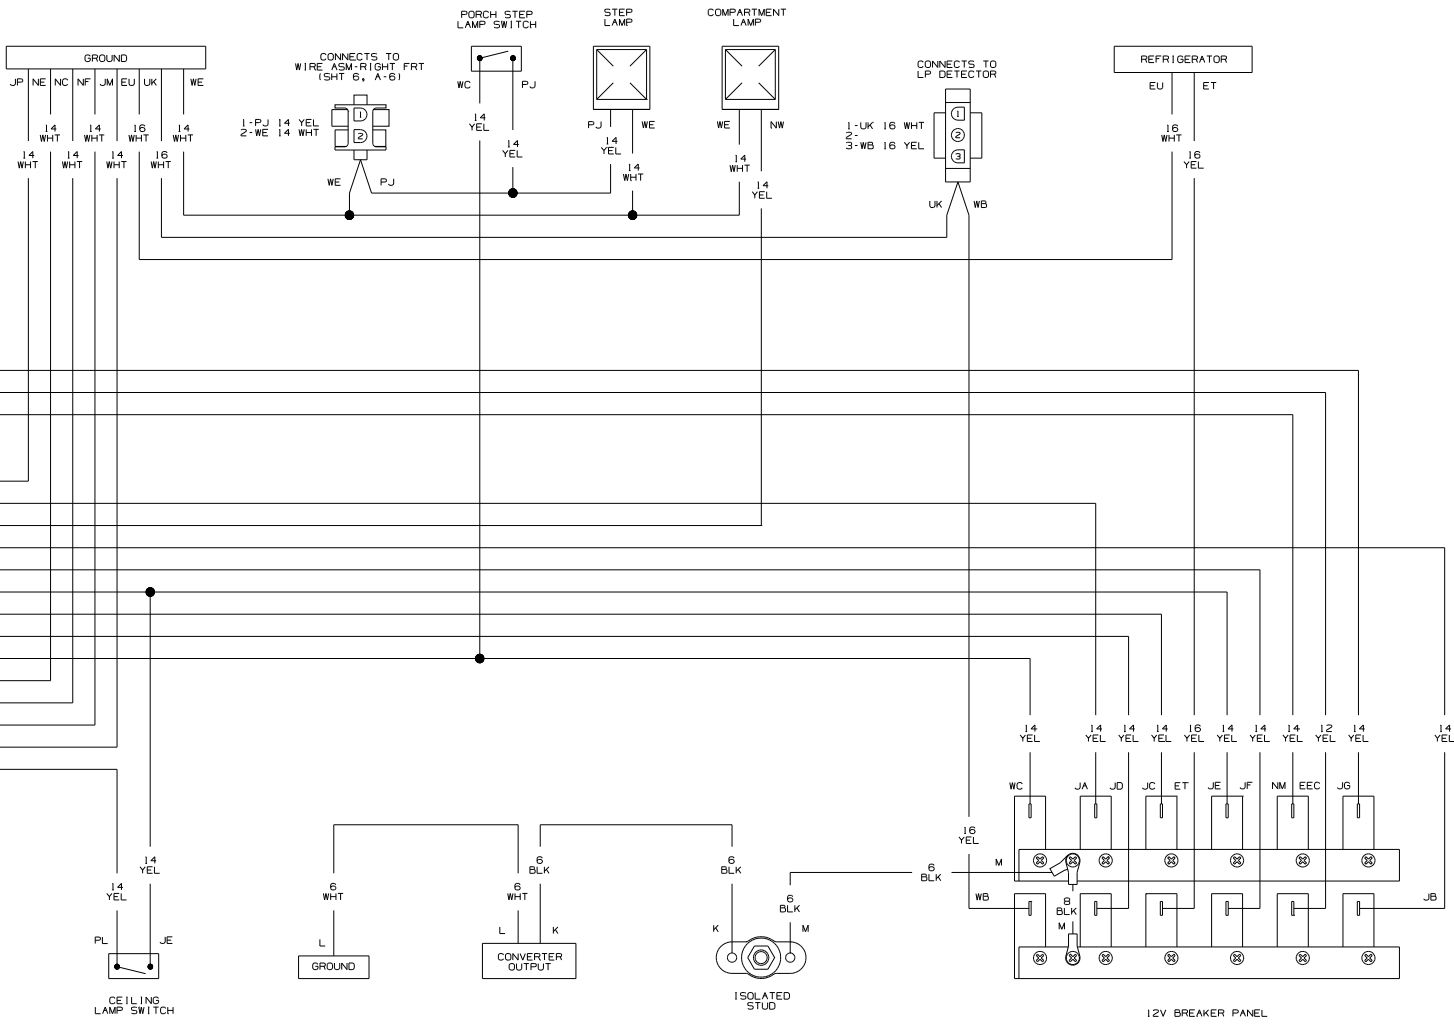

WIRING DIAGRAM-RIGHT
(WIRE ASM 138714)



FIRST USED	02 G37G
TITLE	DO NOT SCALE DRAWING
WIRING DIAGRAM-BODY, 12V	
F1 SHEET 3	PART NO 138213

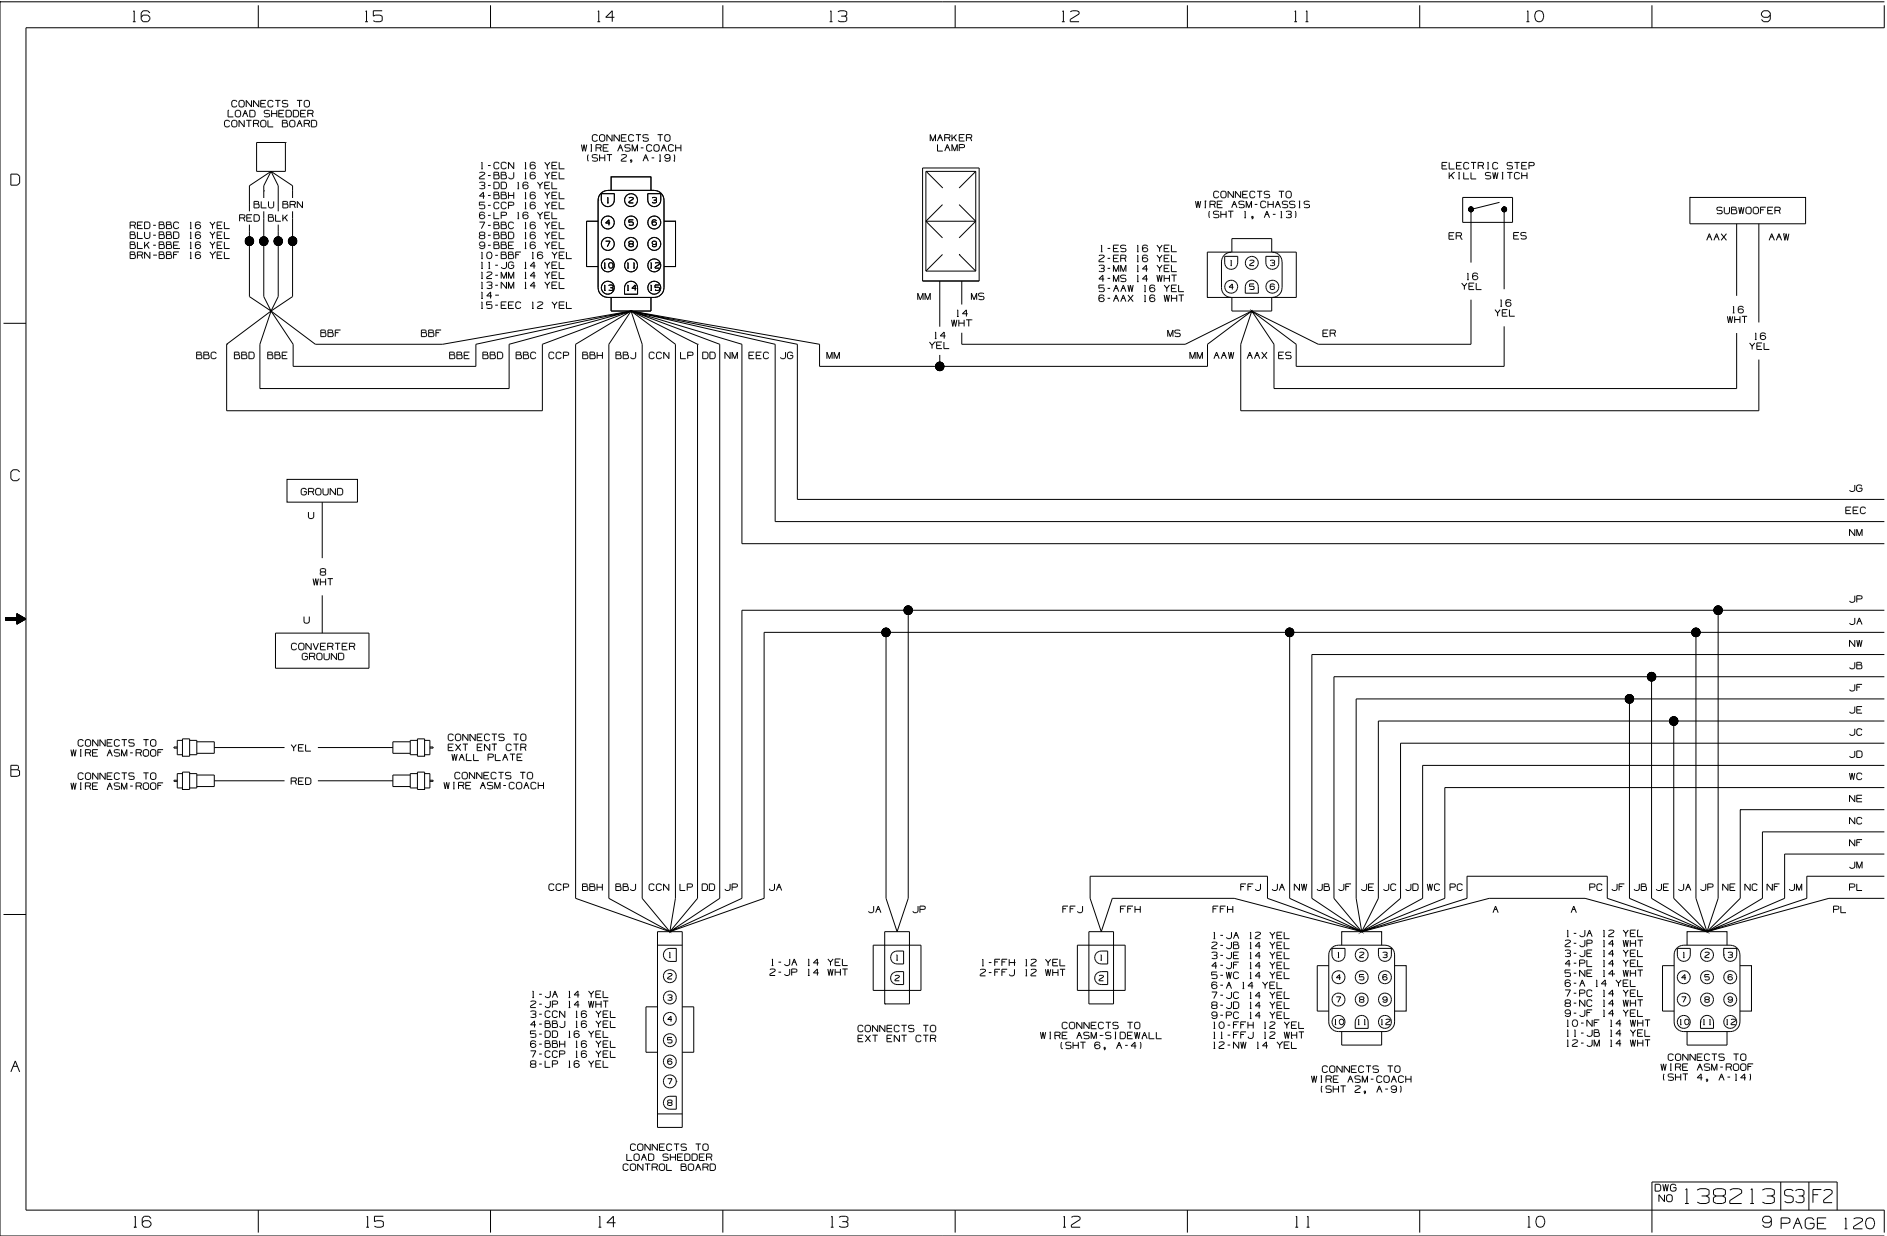

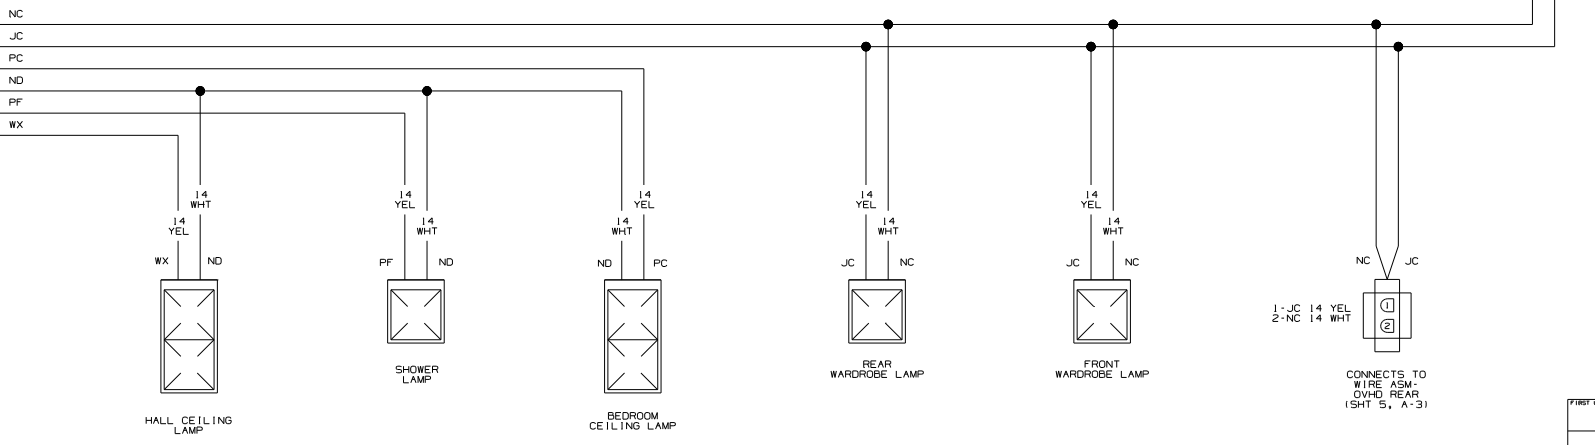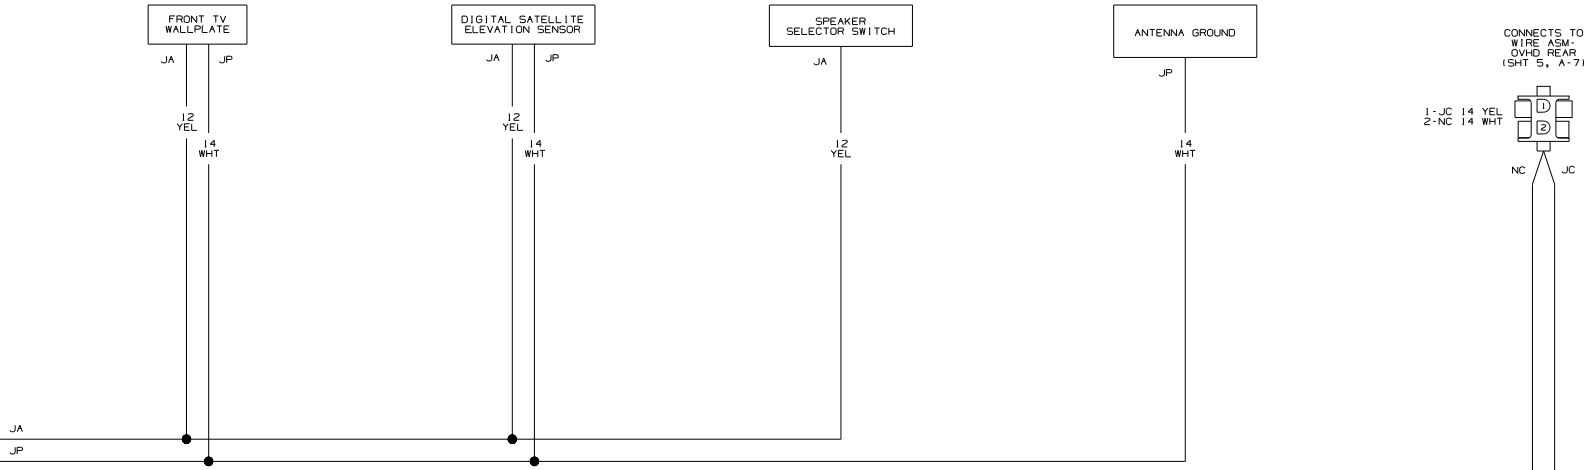

WIRING DIAGRAM-ROOF
(WIRE ASM 138715)

FIRST USED	02 G37G	
TITLE	DO NOT SCALE DRAWING	
	WIRING DIAGRAM-BODY, 12V	
F1	SHEET 4	PART NO 138213

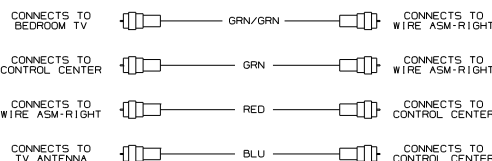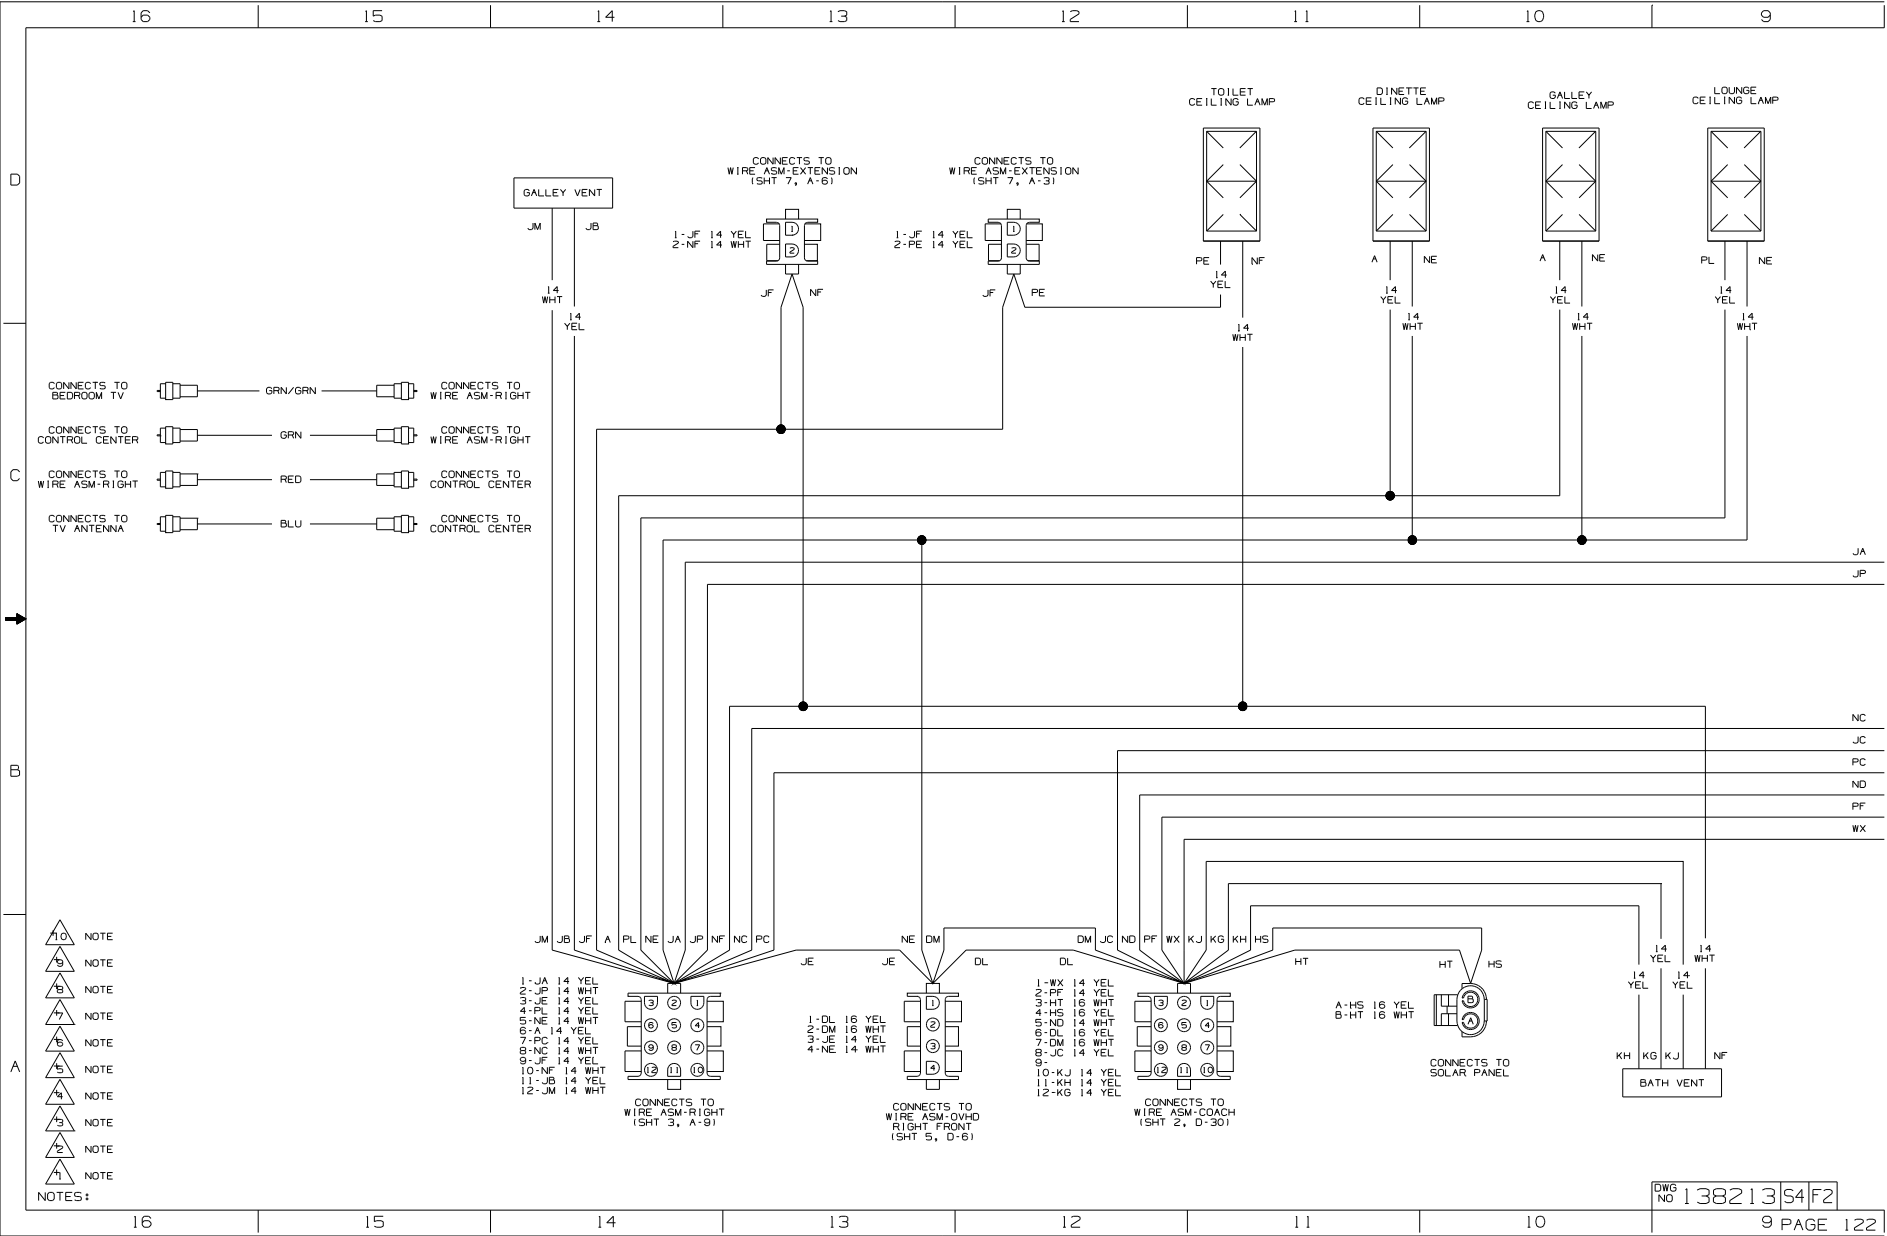


- 10 NOTE
- 9 NOTE
- 8 NOTE
- 7 NOTE
- 6 NOTE
- 5 NOTE
- 4 NOTE
- 3 NOTE
- 2 NOTE
- 1 NOTE


NOTES:




 
CONNECTS TO WIRE ASM-EXTENSION (SHT 7, A-6)




 
CONNECTS TO WIRE ASM-EXTENSION (SHT 7, A-3)





TOILET CEILING LAMP

  



DINETTE CEILING LAMP

  


GALLEY CEILING LAMP

  


LOUNGE CEILING LAMP

  


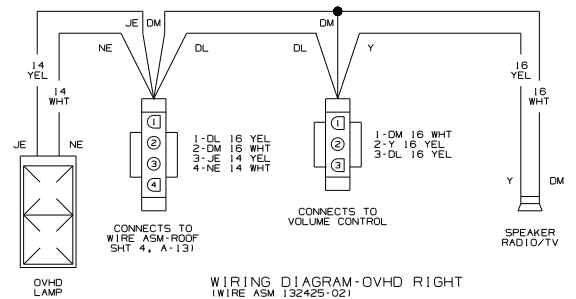


WIRING DIAGRAM-OVHD RIGHT
(WIRE ASM 132425-021)

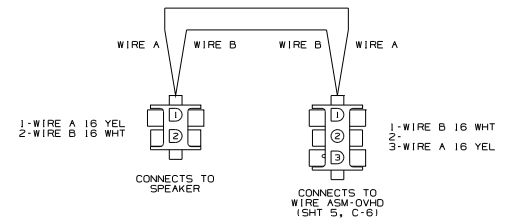

WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 133817-021)




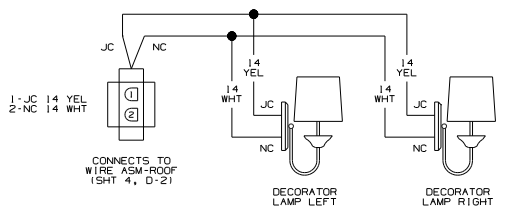


WIRING DIAGRAM-OVHD REAR
(WIRE ASM 125268-061)

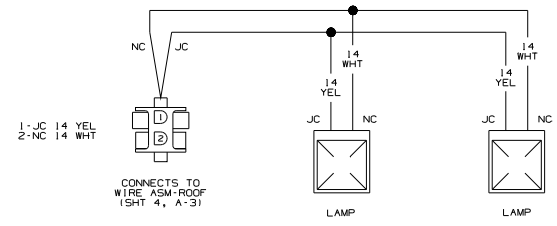


WIRING DIAGRAM-OVHD, REAR
(WIRE ASM 109784-051)


FIRST USED	02 G37G
DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-BODY,12V	
SHEET 5	PART NO 138213

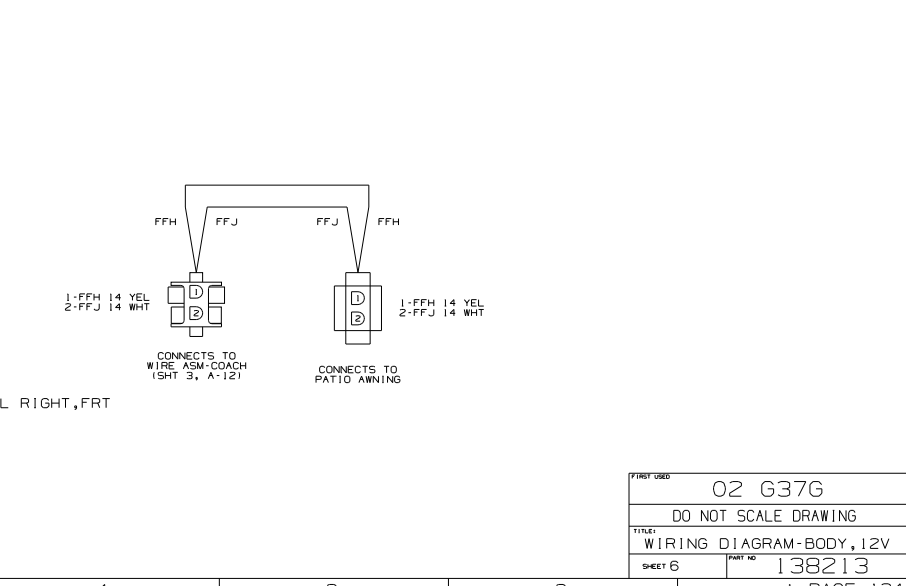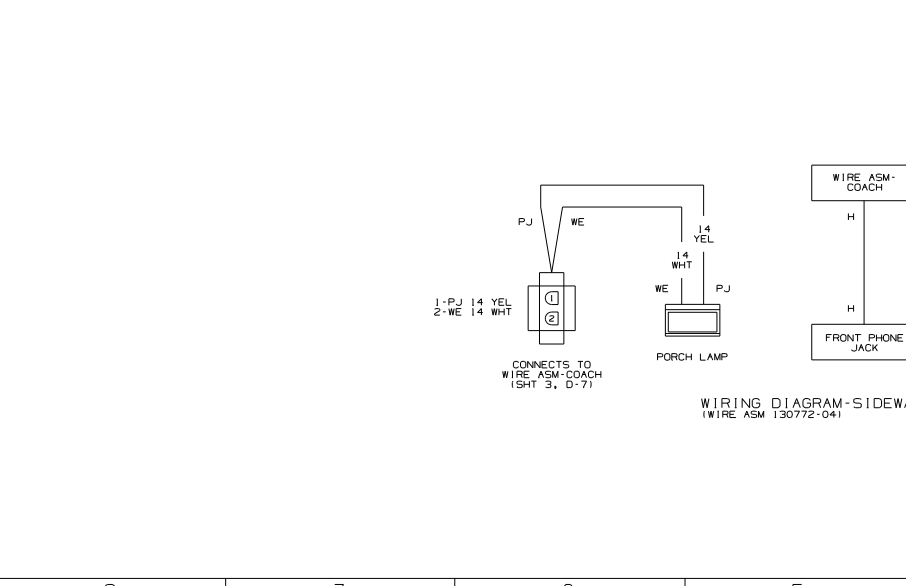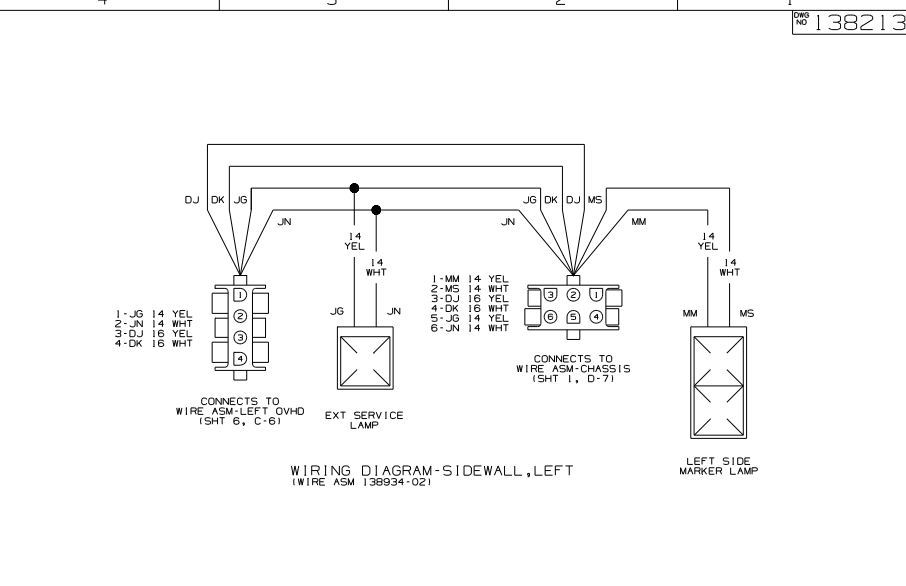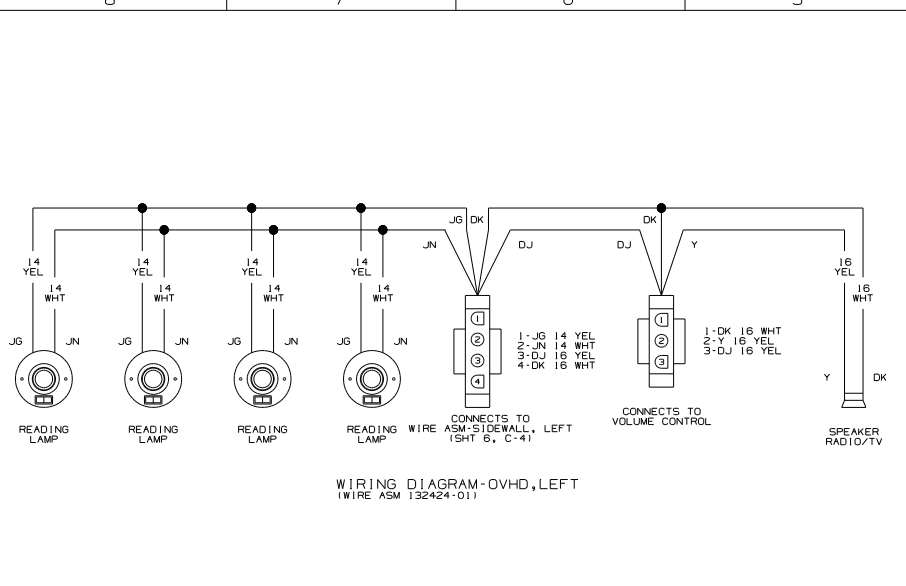


FIRST USED	02 G37G
DO NOT SCALE DRAWING	
TITLE:	WIRING DIAGRAM-BODY, 12V
SHEET 6	PART NO 138213

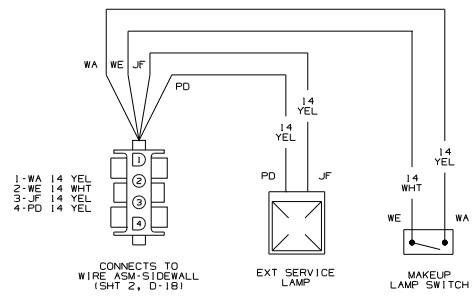

WIRING DIAGRAM-SIDEWALL, LEFT
(WIRE ASM 132942-01)


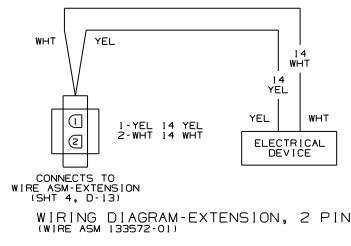


WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 133572-01)

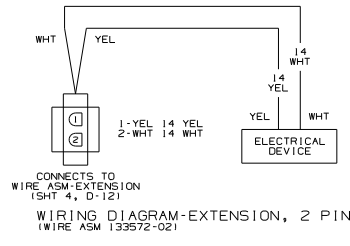

WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 133572-02)

FIRST USED		02 G37G	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-BODY, 12V			
SHEET 7	PART NO	138213	

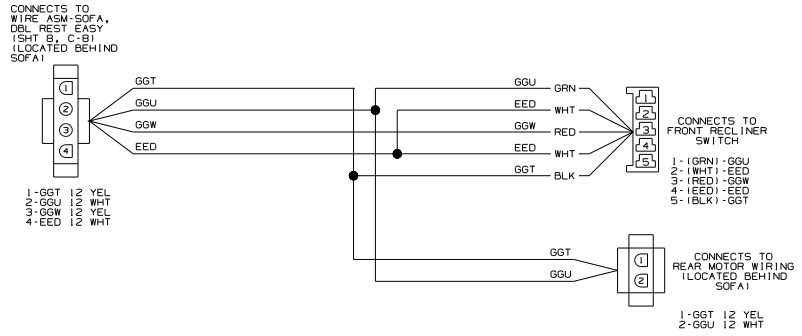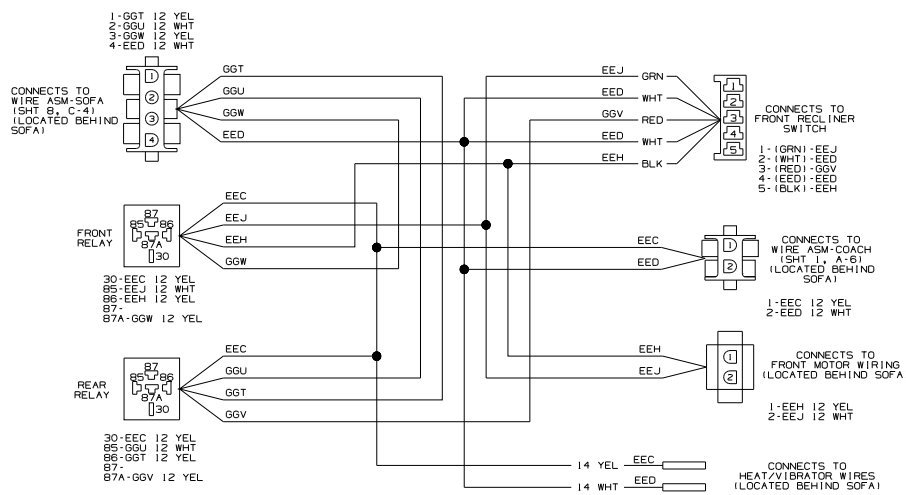

FIRST USED		02 G37G	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-BODY, 12V			
SHEET 8	PART NO	138213	