




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

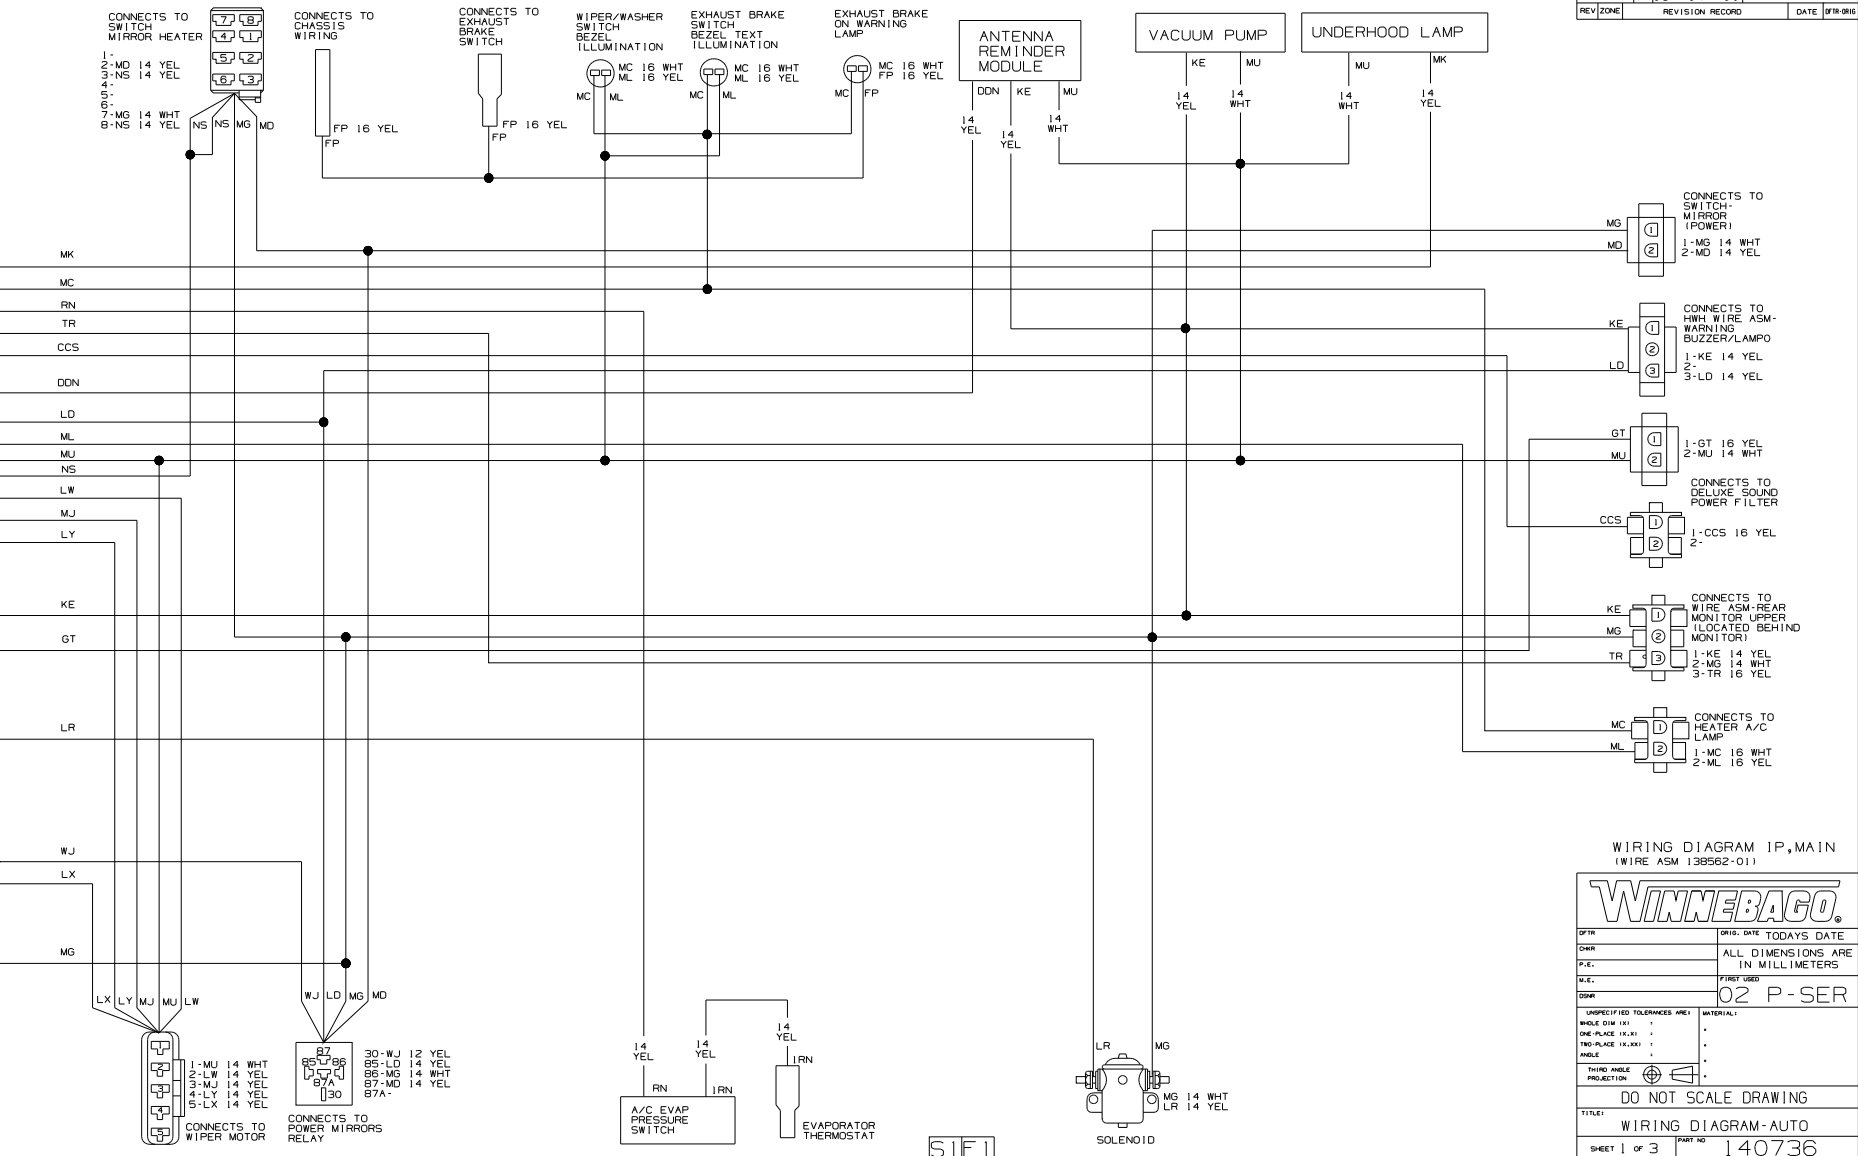

WIRING DIAGRAM IP, MAIN
 (WIRE ASM 136562-011)

WINNEBAGO	
DTB	DATE: TODAY'S DATE
CHR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	
M.E.	FIRST USED
DDN	02 P-SER
UNSPECIFIED TOLERANCES ARE:	MATERIAL:
WIDE DIM .010	
ONE-PLACE .15(.01)	
THO-PLACE .15(.001)	
ANGLE	
THIRD ANGLE PROJECTION	
DO NOT SCALE DRAWING	
WIRING DIAGRAM-AUTO	
SHEET 1 OF 3	PART NO 140736
REF: NONE	PAGE 1

SIF1

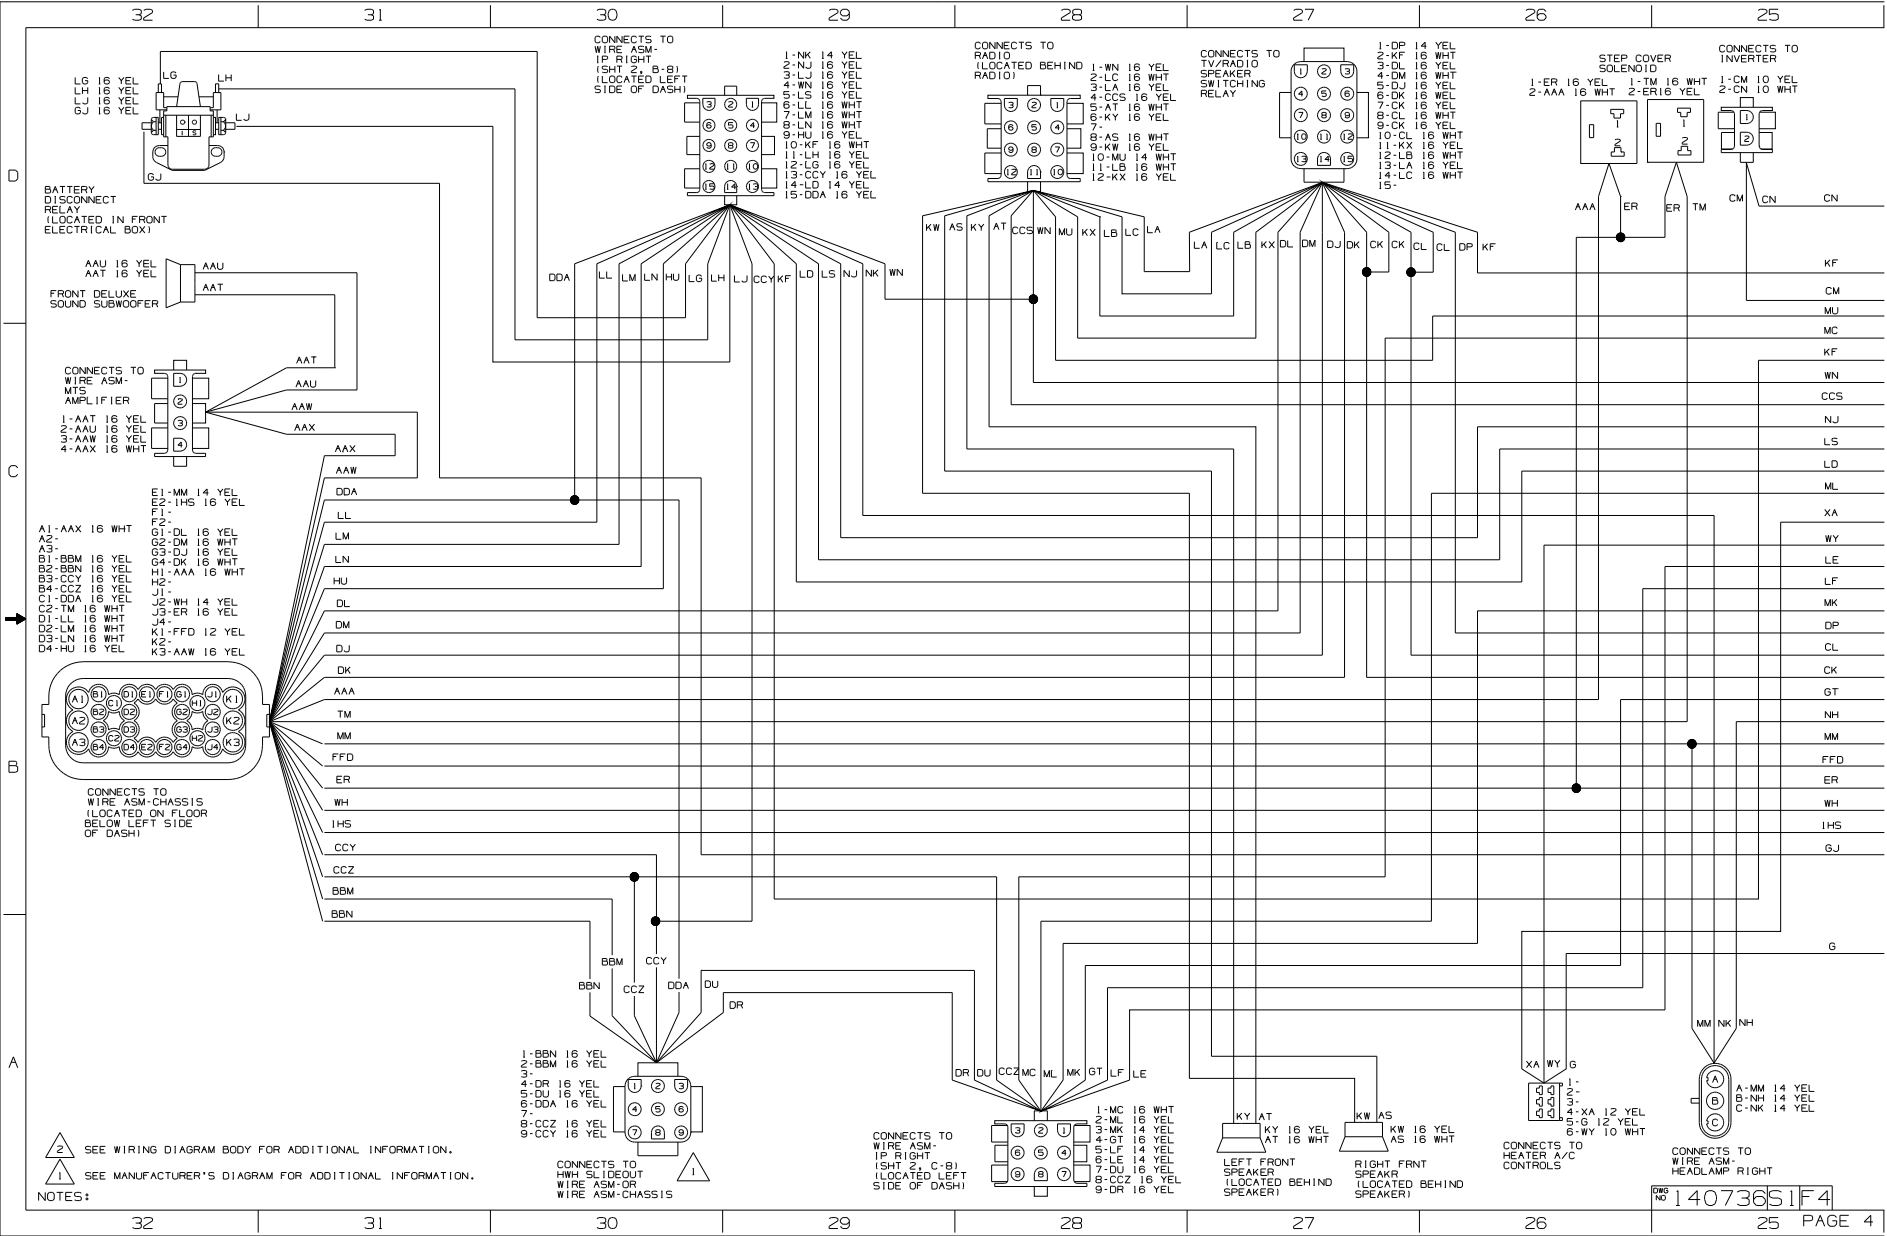


BATTERY DISCONNECT RELAY (LOCATED IN FRONT ELECTRICAL BOX)

FRONT DELUXE SOUND SUBWOOFER

CONNECTS TO WIRE ASM - MTS AMPLIFIER

 
1-AAU 16 YEL
 2-AAU 16 YEL
 3-AAW 16 YEL
 4-AAX 16 WHT
 E1-MM 14 YEL
 E2-IHS 16 YEL
 F1-
 F2-
 G1-DL 16 YEL
 G2-DM 16 WHT
 G3-DJ 16 YEL
 G4-DK 16 WHT
 H1-AAA 16 WHT
 H2-
 J1-
 J2-NH 14 YEL
 J3-ER 16 YEL
 J4-
 K1-FFD 12 YEL
 K2-
 K3-AAW 16 YEL



CONNECTS TO WIRE ASM - CHASSIS (LOCATED ON FLOOR BELOW LEFT SIDE OF DASH)


2 SEE WIRING DIAGRAM BODY FOR ADDITIONAL INFORMATION.
 1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

 CONNECTS TO WIRE ASM - IP RIGHT (SHT 2, B-B) (LOCATED LEFT SIDE OF DASH)



1-NK 14 YEL
 2-NJ 16 YEL
 3-LJ 16 YEL
 4-WN 16 YEL
 5-LS 16 YEL
 6-LL 16 WHT
 7-LM 16 WHT
 8-LN 16 WHT
 9-HU 16 YEL
 10-KF 16 WHT
 11-LH 16 YEL
 12-LB 16 YEL
 13-CCY 16 YEL
 14-LD 14 YEL
 15-DDA 16 YEL

 CONNECTS TO RADIO (LOCATED BEHIND RADIO)




1-WN 16 YEL
 2-LC 16 WHT
 3-LA 16 YEL
 4-CCS 16 YEL
 5-AT 16 WHT
 6-KY 16 YEL
 7-
 8-AS 16 WHT
 9-KW 16 YEL
 10-MU 14 YEL
 11-LB 16 WHT
 12-KX 16 YEL

CONNECTS TO TV/RADIO SPEAKER SWITCHING RELAY



1-DP 14 YEL
 2-KF 16 WHT
 3-DL 16 YEL
 4-DM 16 WHT
 5-DJ 16 YEL
 6-DK 16 WEL
 7-CK 16 YEL
 8-CL 16 WHT
 9-CK 16 YEL
 10-CL 16 WHT
 11-KX 16 YEL
 12-LB 16 WHT
 13-LA 16 YEL
 14-LC 16 WHT
 15-

 
STEP COVER SOLENOID



CONNECTS TO INVERTER



 CONNECTS TO WIRE ASM - OR WIRE ASM - CHASSIS



1-MC 16 WHT
 2-ML 16 YEL
 3-MK 14 YEL
 4-ST 16 YEL
 5-LF 14 YEL
 6-LE 14 YEL
 7-DJ 16 YEL
 8-CCZ 16 YEL
 9-DR 16 YEL


LEFT FRONT SPEAKER (LOCATED BEHIND SPEAKER)
 RIGHT FRNT SPEAKER (LOCATED BEHIND SPEAKER)

CONNECTS TO HEATER A/C CONTROLS



CONNECTS TO WIRE ASM - HEADLAMP RIGHT



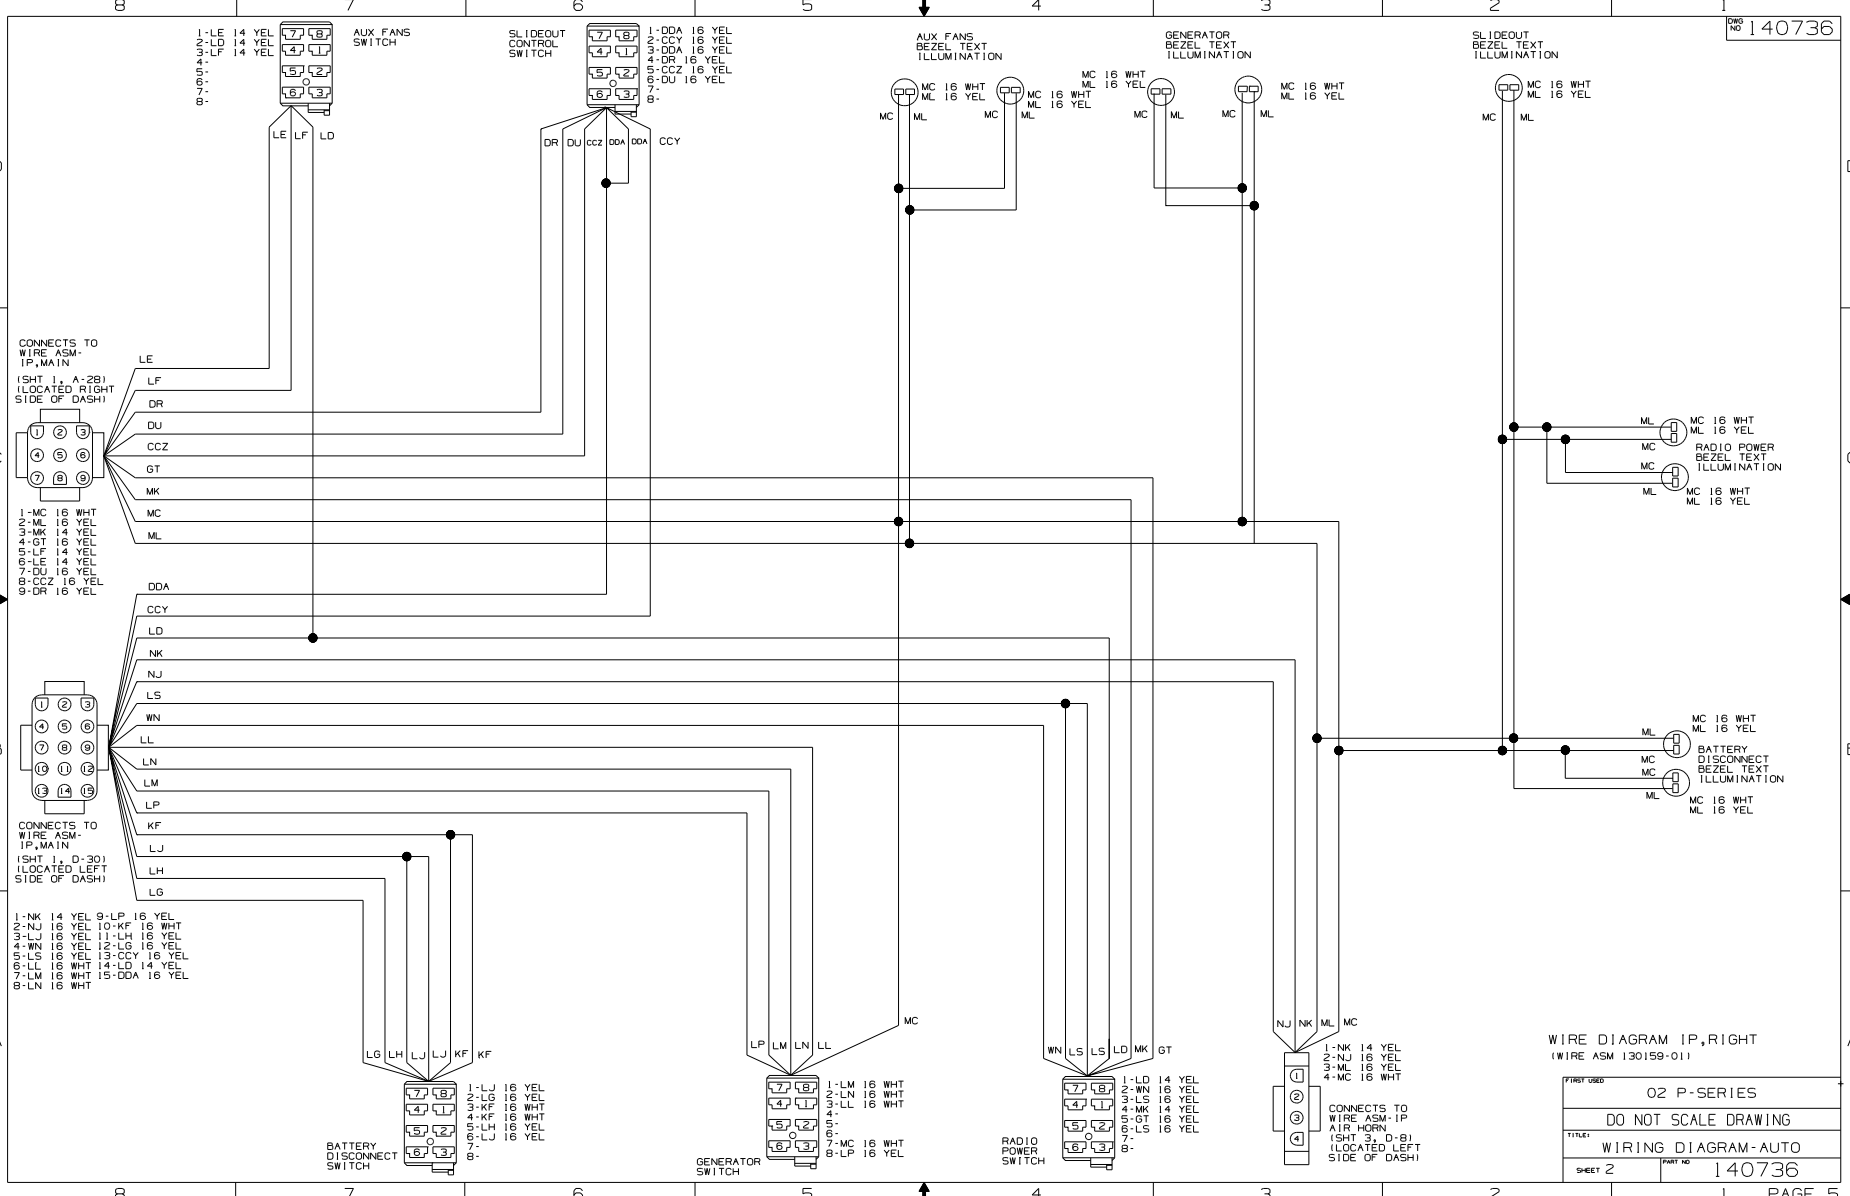







CONNECTS TO WIRE ASM-IP, MAIN (SHT 1, A-28) (LOCATED RIGHT SIDE OF DASH)

CONNECTS TO WIRE ASM-IP, MAIN (SHT 1, D-30) (LOCATED LEFT SIDE OF DASH)

CONNECTS TO WIRE ASM-IP AIR HORN (SHT 3, D-8) (LOCATED LEFT SIDE OF DASH)

WIRE DIAGRAM IP, RIGHT (WIRE ASM 130159-011)

FIRST USED		02 P-SERIES	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-AUTO			
SHEET 2	PART NO	140736	

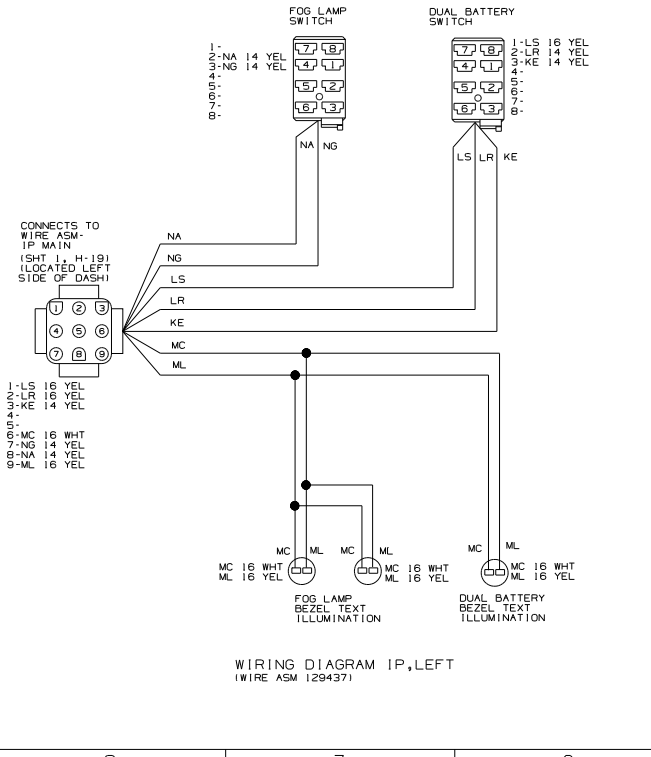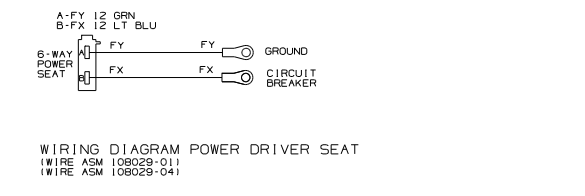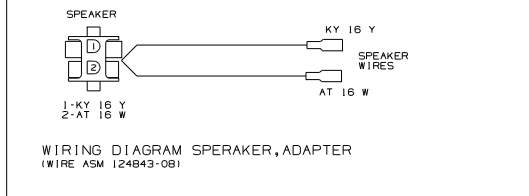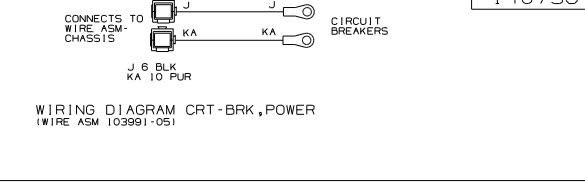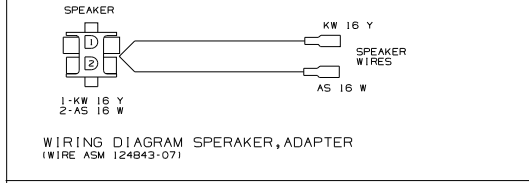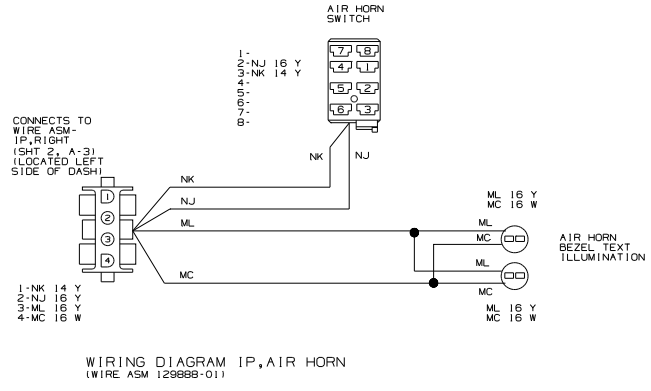

FIRST USED	02 P-SERIES
DO NOT SCALE DRAWING	
TITLE:	WIRING DIAGRAM-AUTO
SHEET 3	PART NO 140736