






DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

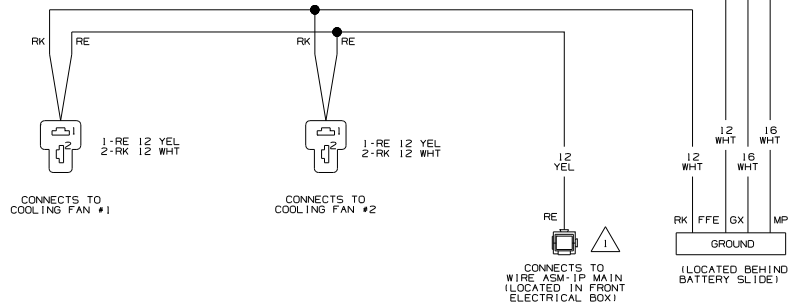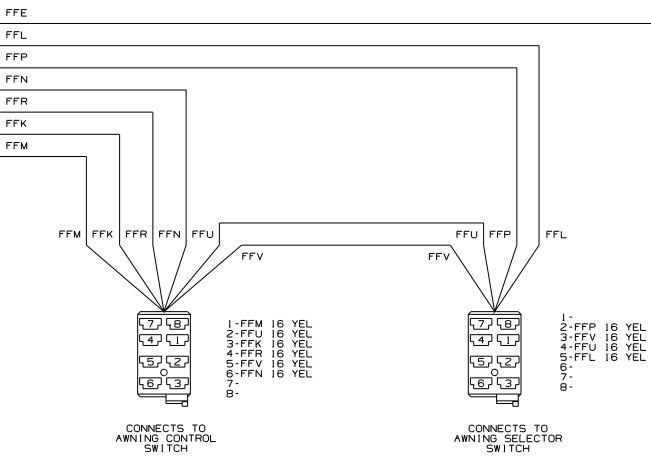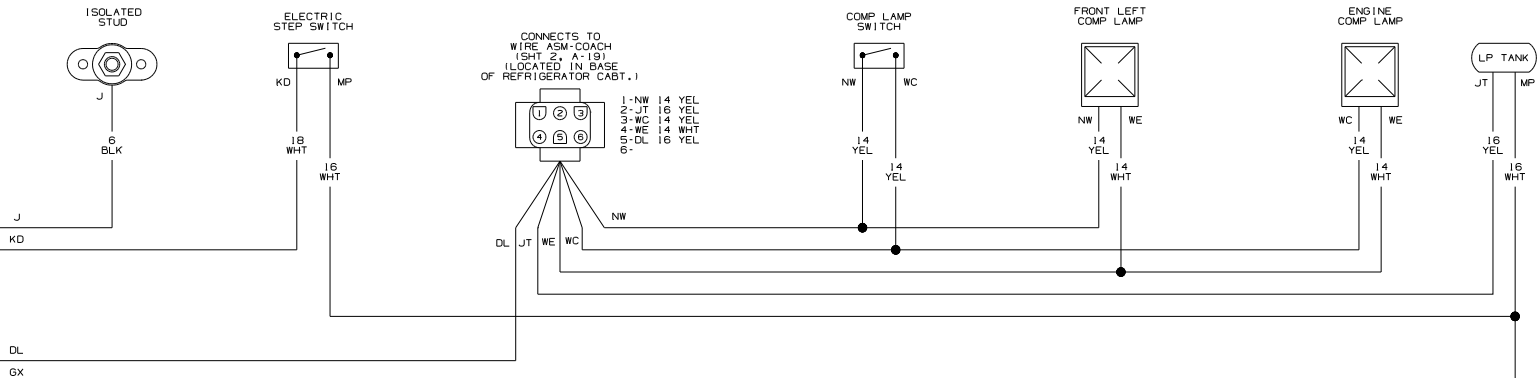



WINNEBAGO

DATE: 09-18-01
 ALL DIMENSIONS ARE IN MILLIMETERS
 MATERIAL: 02 P34H/HD
 DO NOT SCALE DRAWING
 WIRING DIAGRAM-BODY, 12V
 SHEET 1 OF 9 PART NO 140212

SIF1

- A1-AAX 16 WHT
- A2-
- A3-
- B1-BBM 16 YEL
- B2-BBN 16 YEL
- B3-CCY 16 YEL
- B4-CCZ 16 YEL
- C1-DDA 16 YEL
- C2-TM 16 WHT
- D1-LL 16 WHT
- D2-LM 16 WHT
- D3-LN 16 WHT
- D4-HU 16 YEL
- E1-MM 14 YEL
- E2-IHS 16 YEL
- F1-
- F2-
- G1-DL 16 YEL
- G2-DM 16 WHT
- G3-DJ 14 YEL
- G4-DK 16 WHT
- H1-AA 16 WHT
- H2-
- J1-
- J2-WH 16 YEL
- J3-ER 16 YEL
- J4-
- K1-FFD 12 YEL
- K2-
- K3-AAW 16 YEL

 
CONNECTS TO WIRE ASM-IP MAIN (LOCATED BELOW DRIVER) 1

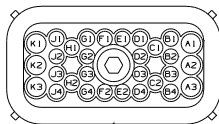


STEP COVER SWITCH




 
ELECTRIC STEP SWITCH



CONNECTS TO ELECTRIC STEP

 

 WIRE ASM-CRT BRK POWER IN FRONT ELECTRICAL

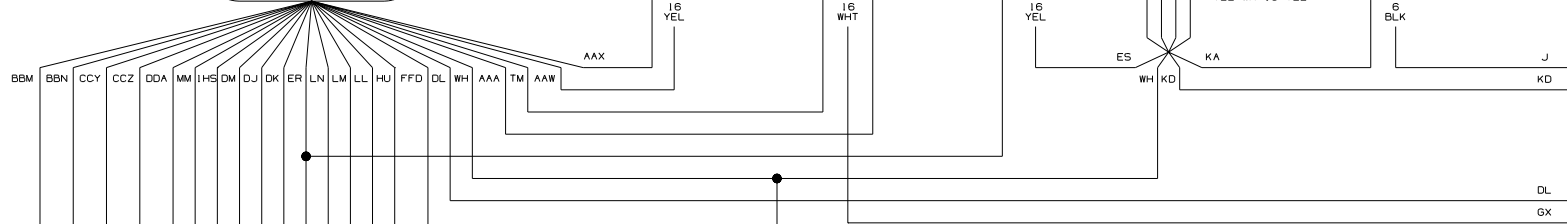

- BBM
- BBN
- CCY
- CCZ
- DDA
- MM
- IHS
- DM
- DJ
- DK
- ER
- LN
- LM
- LL
- HU
- FFD
- DL
- WH
- AAA
- TM
- AAW

CONNECTS TO WIRE ASM-COACH (SHT 2, A-39) (LOCATED IN BASE OF REFRIGERATOR CABT.1

- 1-BBM 16 YEL
- 2-BBN 16 YEL
- 3-DDA 16 YEL
- 4-CCY 16 YEL
- 5-CCZ 16 YEL
- 6-DM 16 WHT
- 7-DJ 16 YEL
- 8-DK 16 WHT
- 9-LL 16 WHT
- 10-LM 16 WHT
- 11-LN 16 WHT
- 12-LP 16 YEL
- 13-IHS 16 YEL
- 14-MM 14 YEL
- 15-ER 16 YEL

CONNECTS TO WIRE ASM- GENERATOR ADAPT (SHT 5, C-5) (LOCATED ON TOP OF GENERATOR)

- A-LN 16 WHT
- B-HU 16 YEL
- C-LL 16 WHT
- D-LP 16 YEL
- E-LM 16 WHT

CONNECTS TO AWNING CONTROL BOX (LOCATED IN FRONT RIGHT STORAGE COMPT.1

 

 

 





 
- 1-FFD 12 YEL
- 2-FFE 12 WHT
- 3-WH 16 YEL
- 4-FFK 16 YEL
- 5-FFN 16 YEL
- 6-
- 7-FFG 12 WHT
- 8-FFJ 12 WHT
- 9-FFM 16 YEL
- 10-FFR 16 YEL
- 11-
- 12-FFF 12 WHT
- 13-FFH 12 YEL
- 14-FFL 16 YEL
- 15-FFP 16 YEL

CONNECTS TO WIRE ASM-SIDEWALL (SHT 3, D-7) (LOCATED IN PASSENGER CONSOLE) 1

- 1-FFF 12 YEL
- 2-FFG 12 WHT
- 3-FFH 12 YEL
- 4-FFJ 12 WHT

2 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
 1 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.

(LOCATED IN POWERCORD COMPT.)

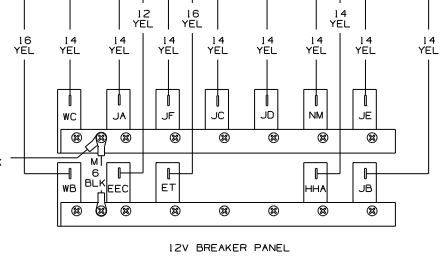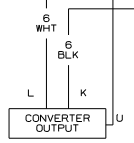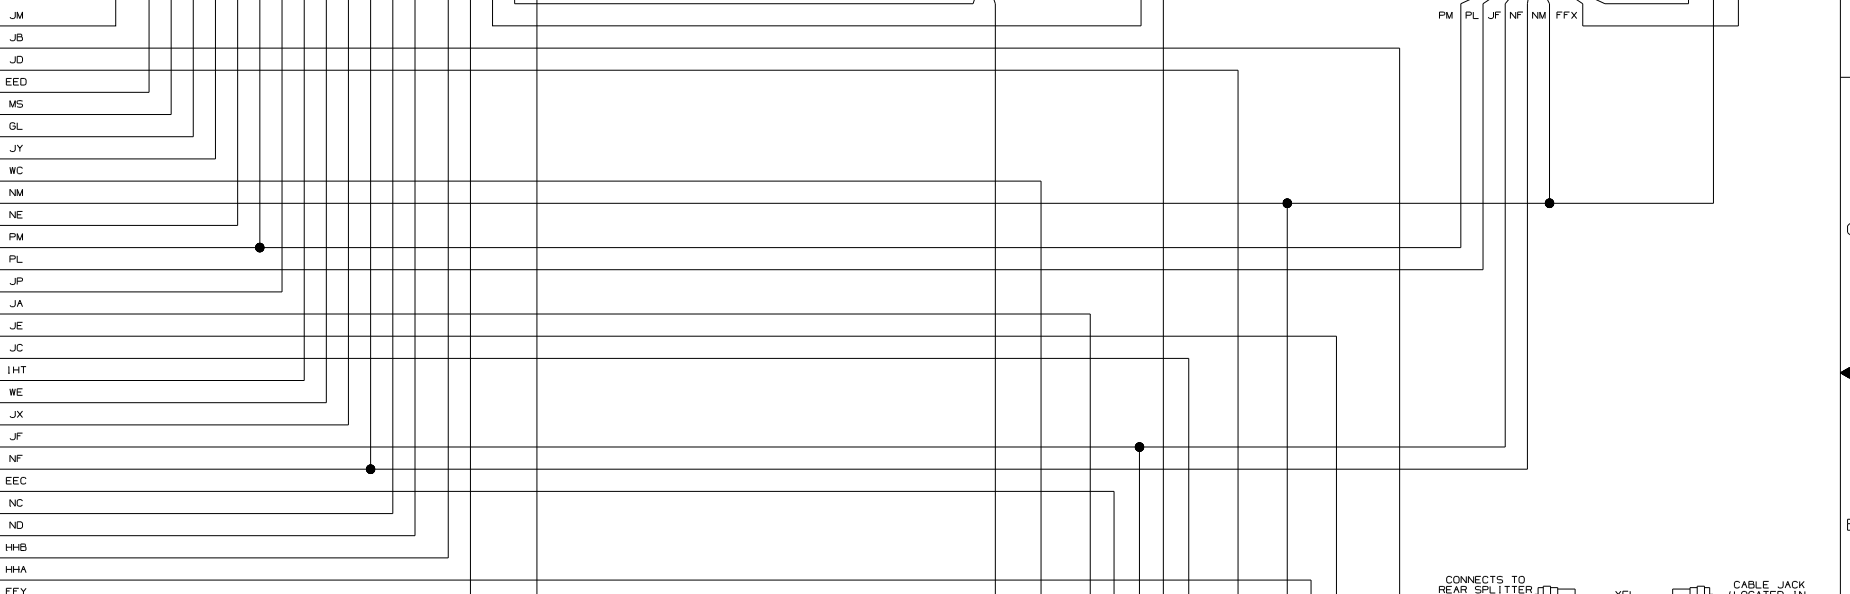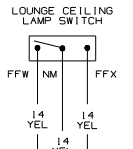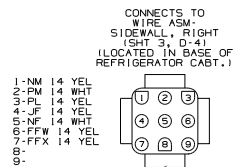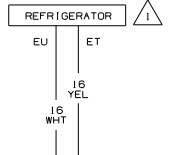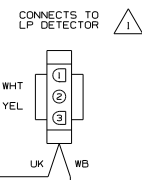




CONNECTS TO REAR ASM-RESISTOR (SHT 7, A-7) (LOCATED BEHIND BORM CEILING FAN SWITCH)


ISOLATED STUD (LOCATED IN BASE OF REFRIGERATOR CABT.)

WIRING DIAGRAM-COACH (WIRE ASM 140209)


| | |
|--------------------------|----------------------|
| FIRST USED | 02 P34H/HD |
| TITLE | DO NOT SCALE DRAWING |
| WIRING DIAGRAM-BODY, 12V | |
| SHEET 2 | PART NO 140212 |

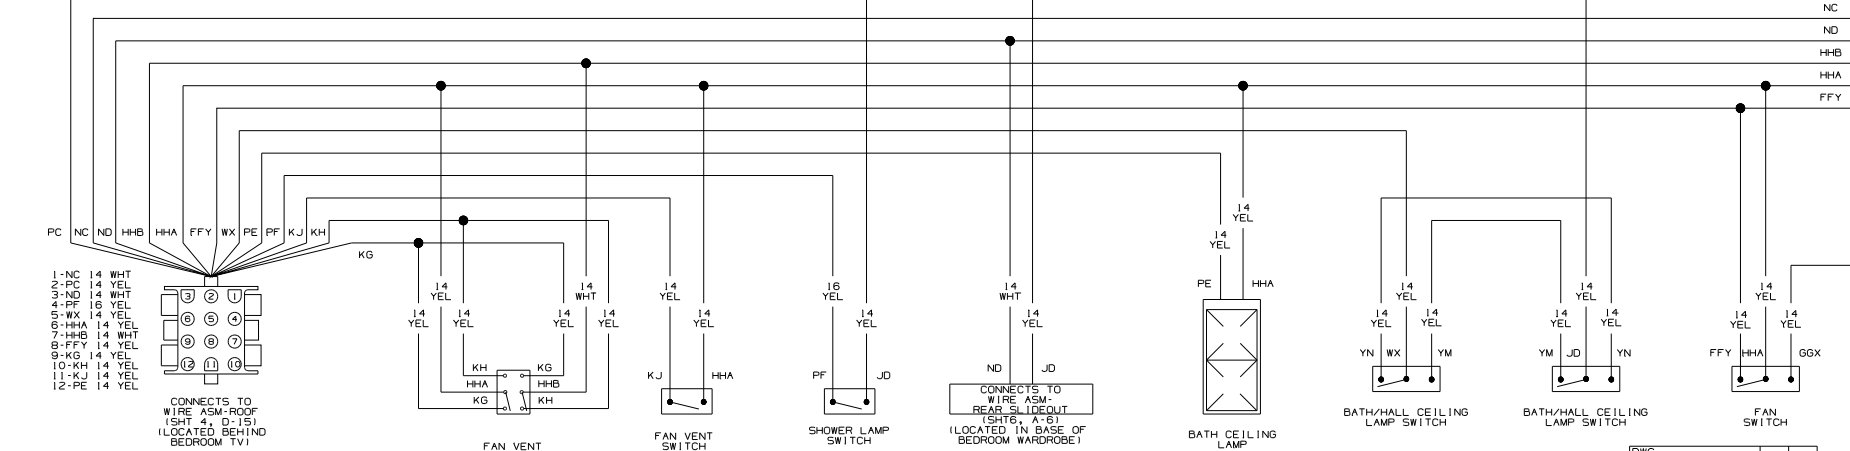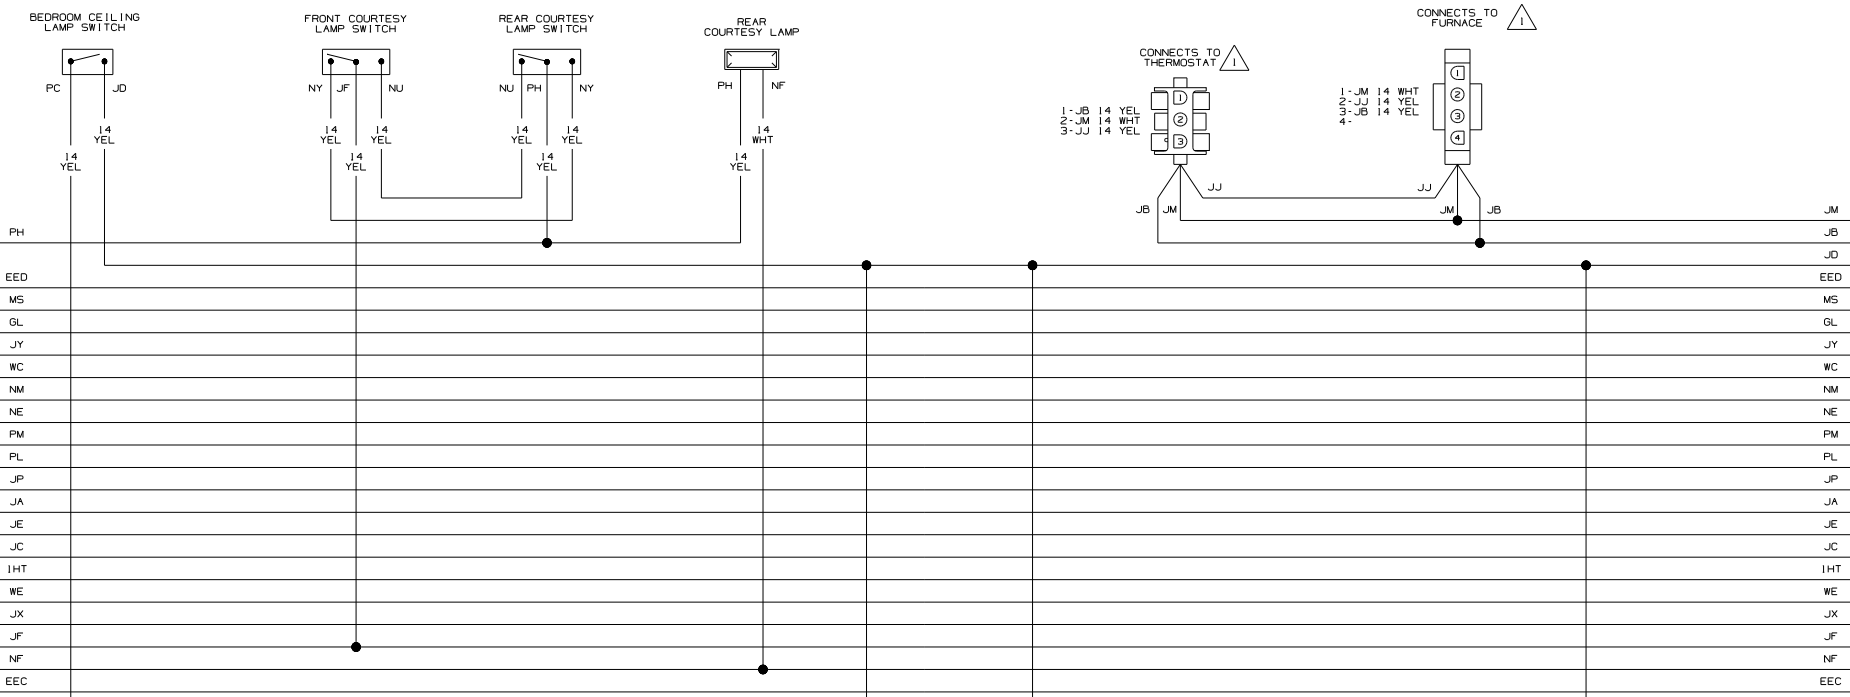




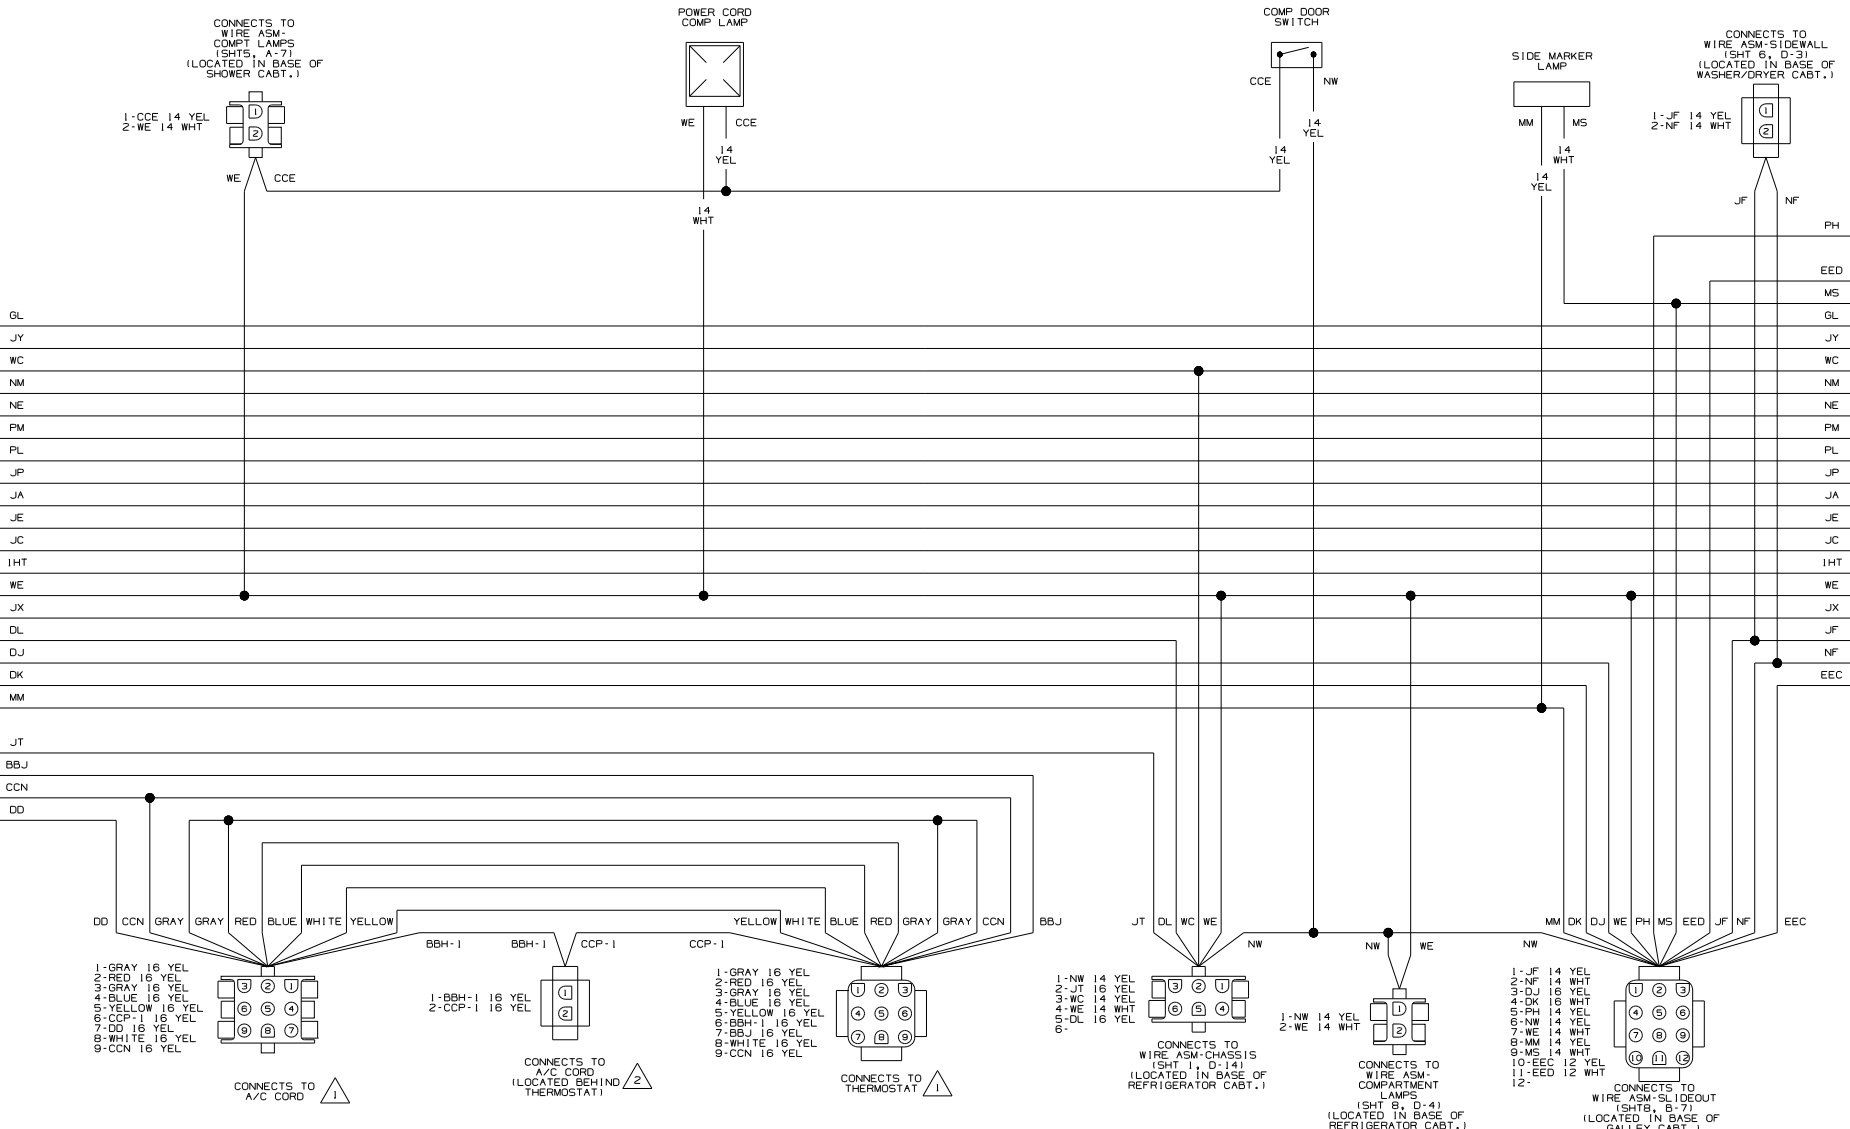


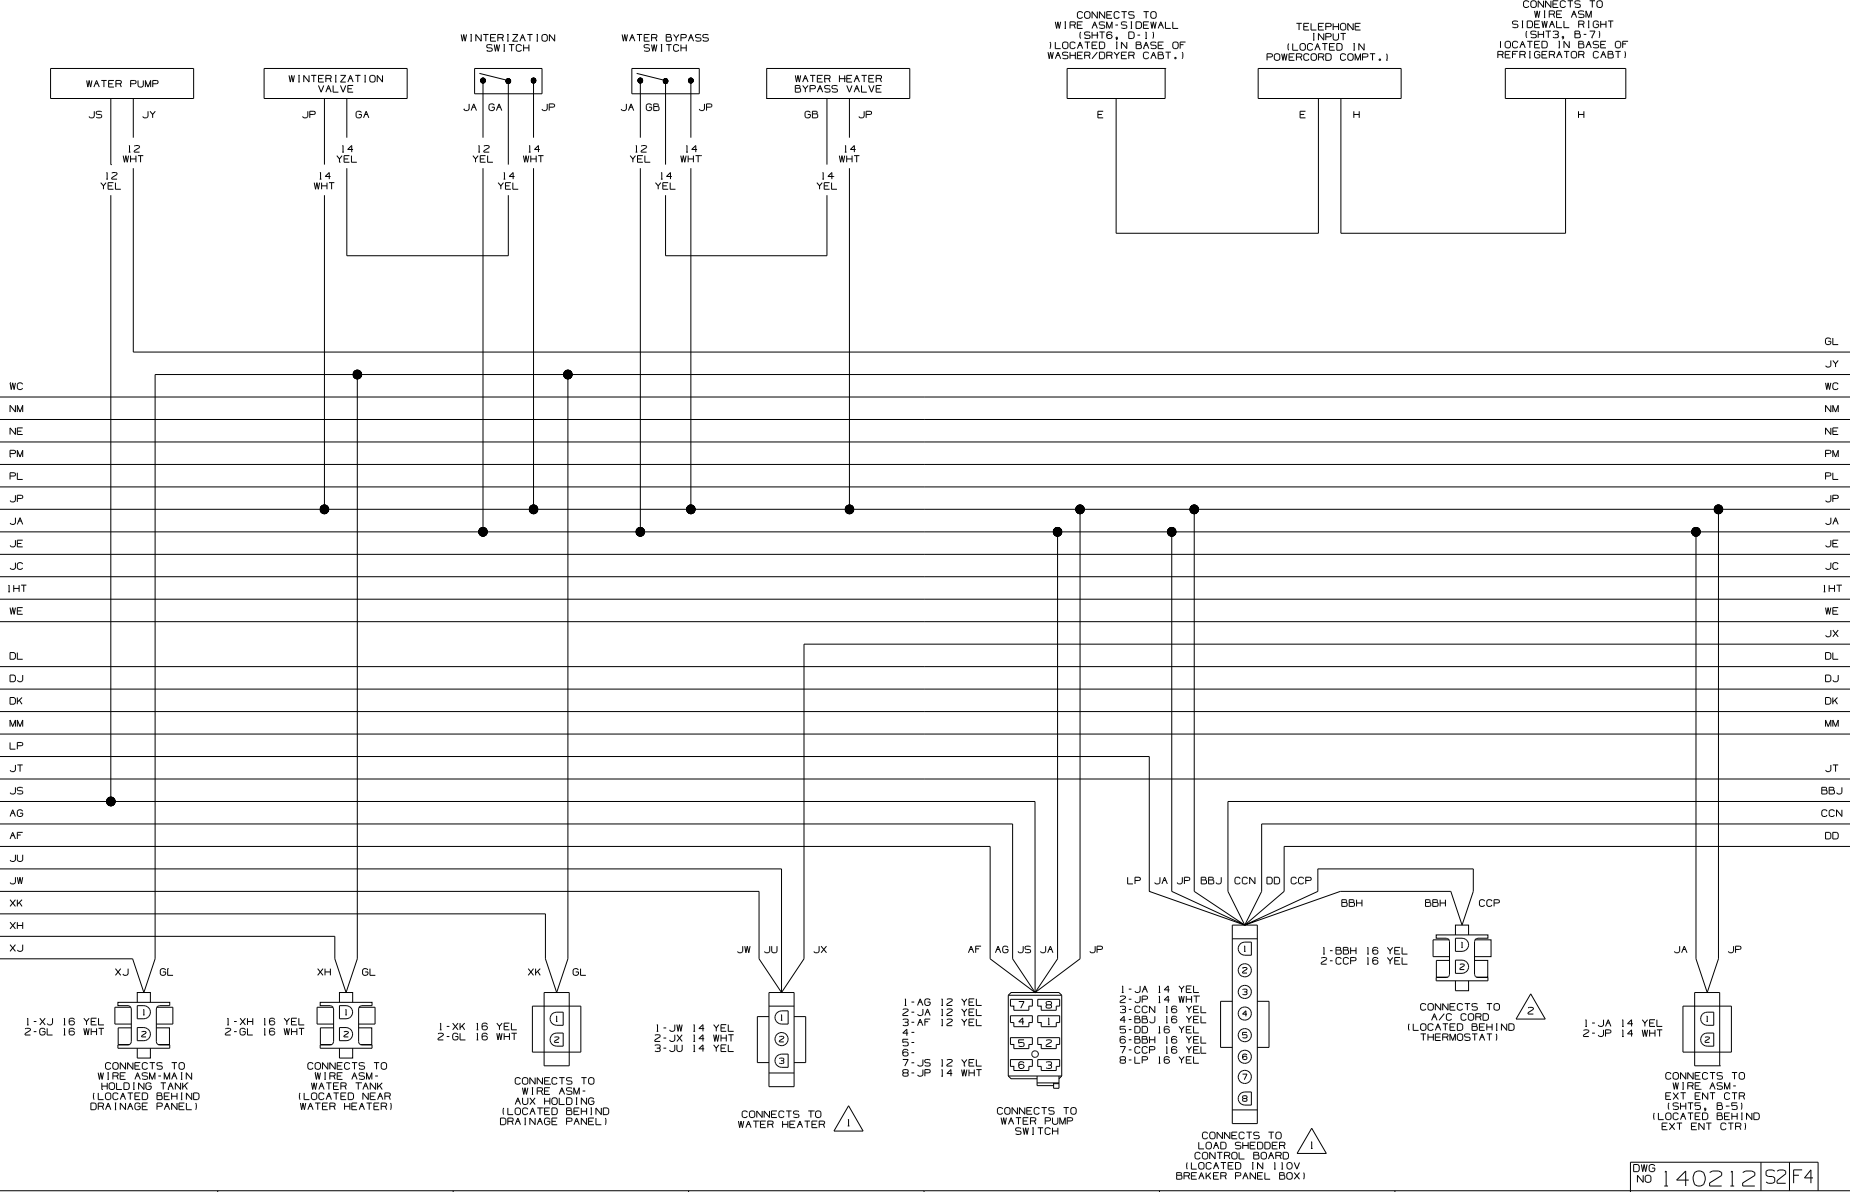

| | |
|-----|-----|
| WC | GL |
| NM | JY |
| NE | WC |
| PM | NM |
| PL | NE |
| JP | PM |
| JA | PL |
| JE | JP |
| JC | JA |
| IHT | JE |
| WE | JC |
| JX | IHT |
| DL | WE |
| DJ | JX |
| DK | DL |
| MM | DJ |
| LP | DK |
| JT | MM |
| JS | JT |
| AG | BBJ |
| AF | CCN |
| JU | DD |
| JW | JT |
| XK | BBJ |
| XH | CCN |
| XJ | DD |

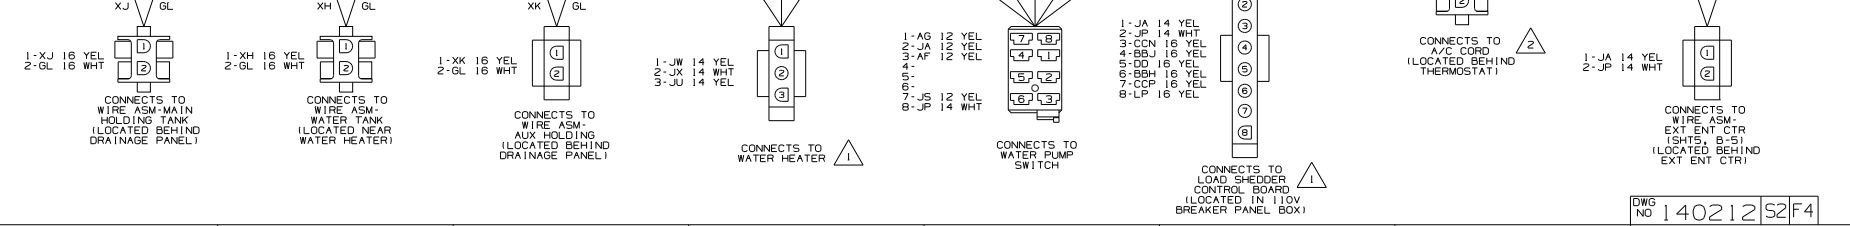

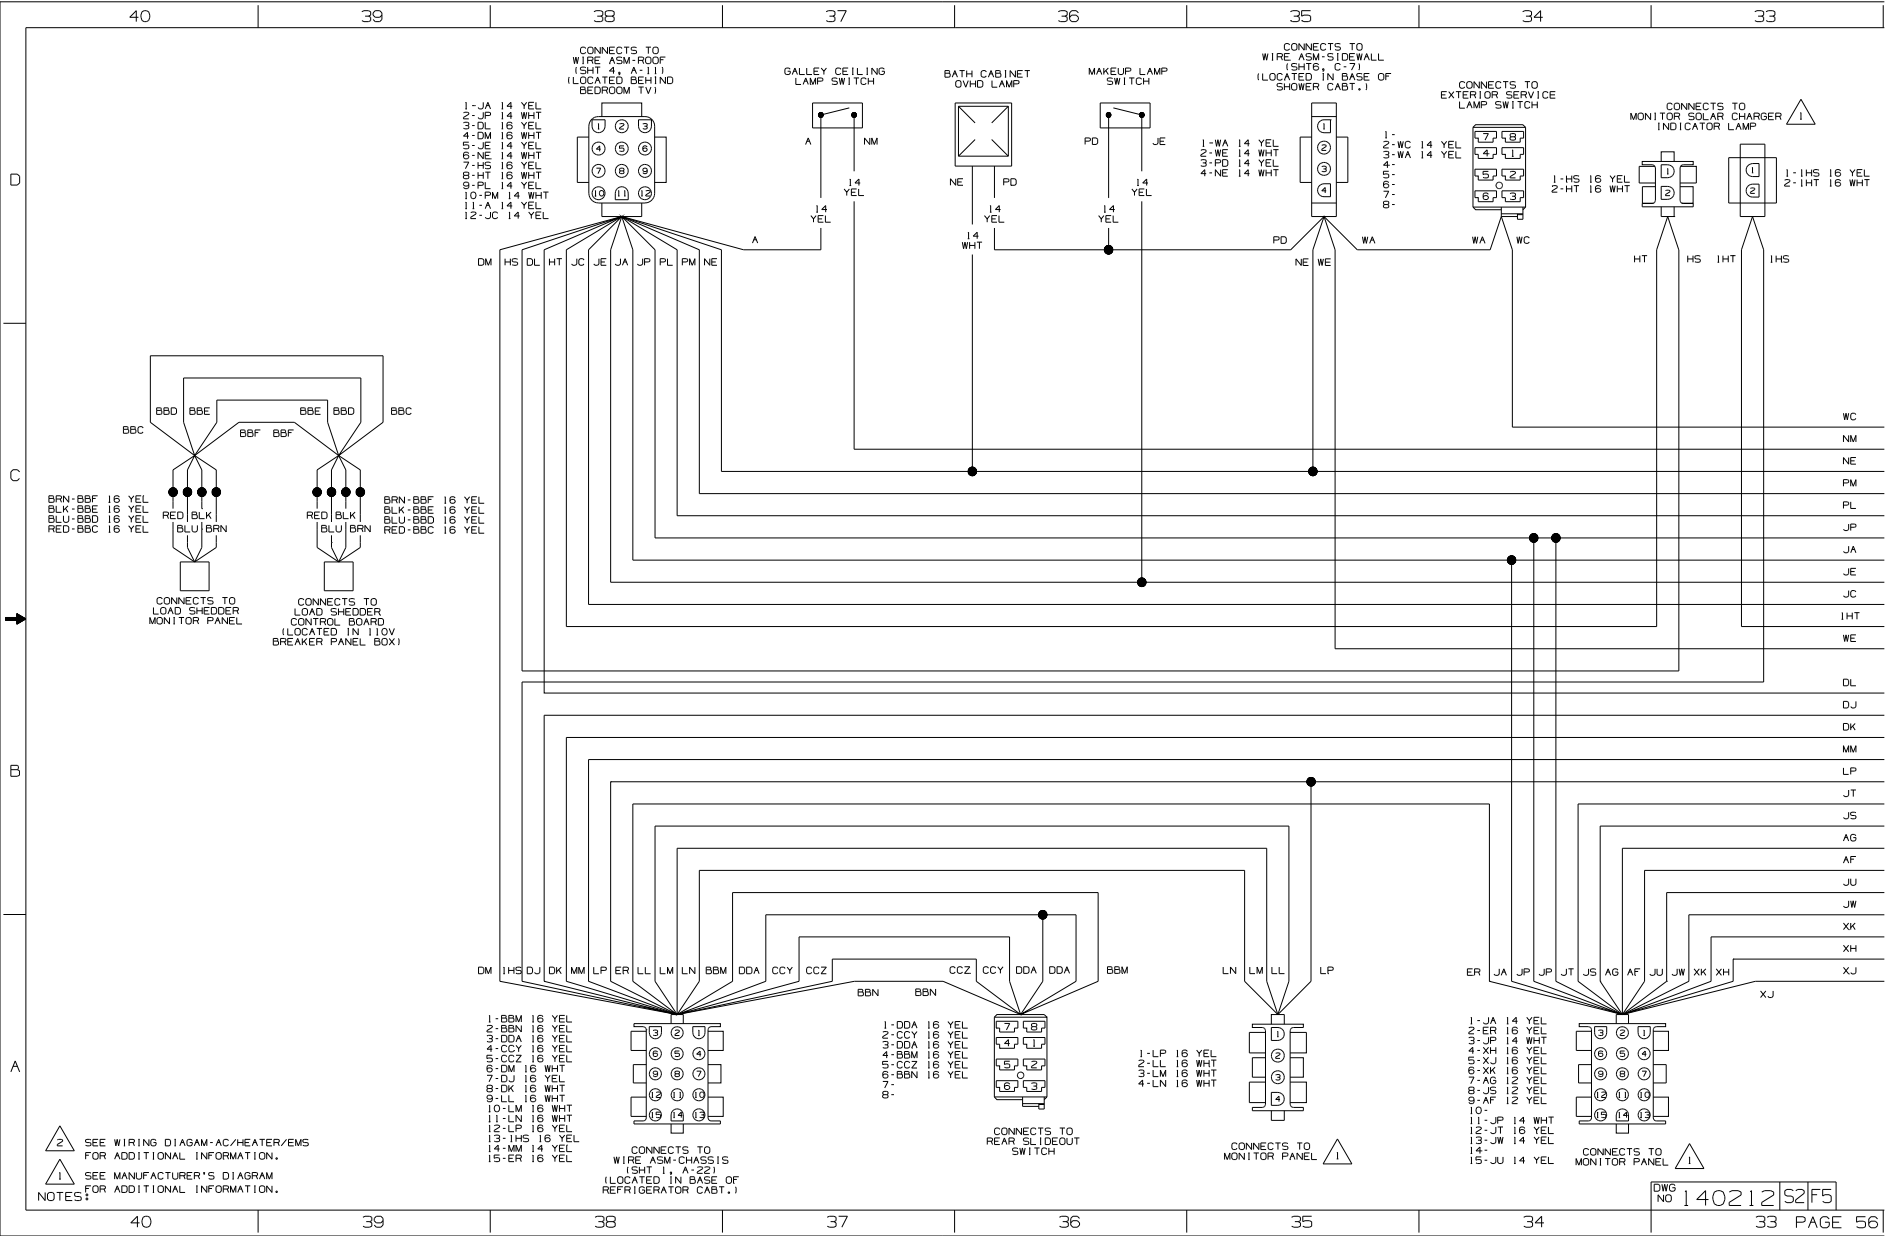


 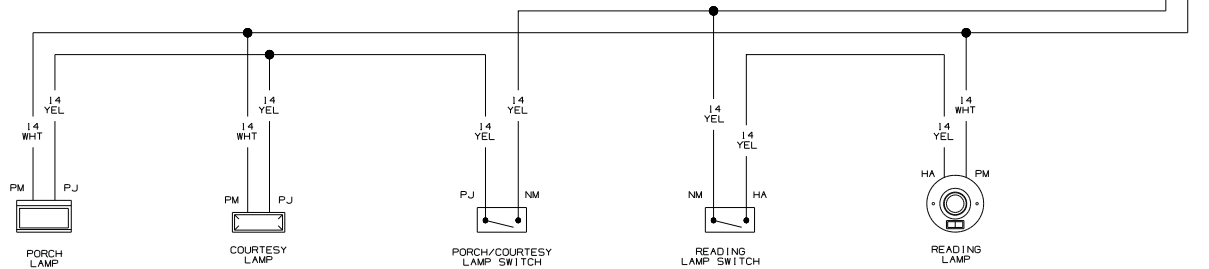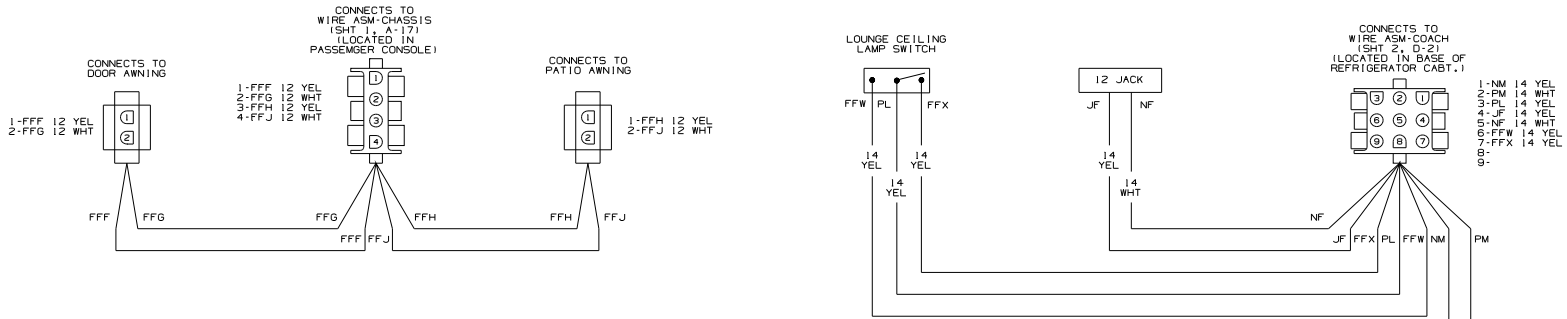

WIRING DIAGRAM-SIDEWALL, RIGHT (WIRE ASM 140902)




NOTES:
1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

| | |
|----------------------|--------------------------|
| FIRST USED | 02 P34H/HD |
| DO NOT SCALE DRAWING | |
| TITLE: | WIRING DIAGRAM-BODY, 12V |
| SHEET 3 | PART NO 140212 |

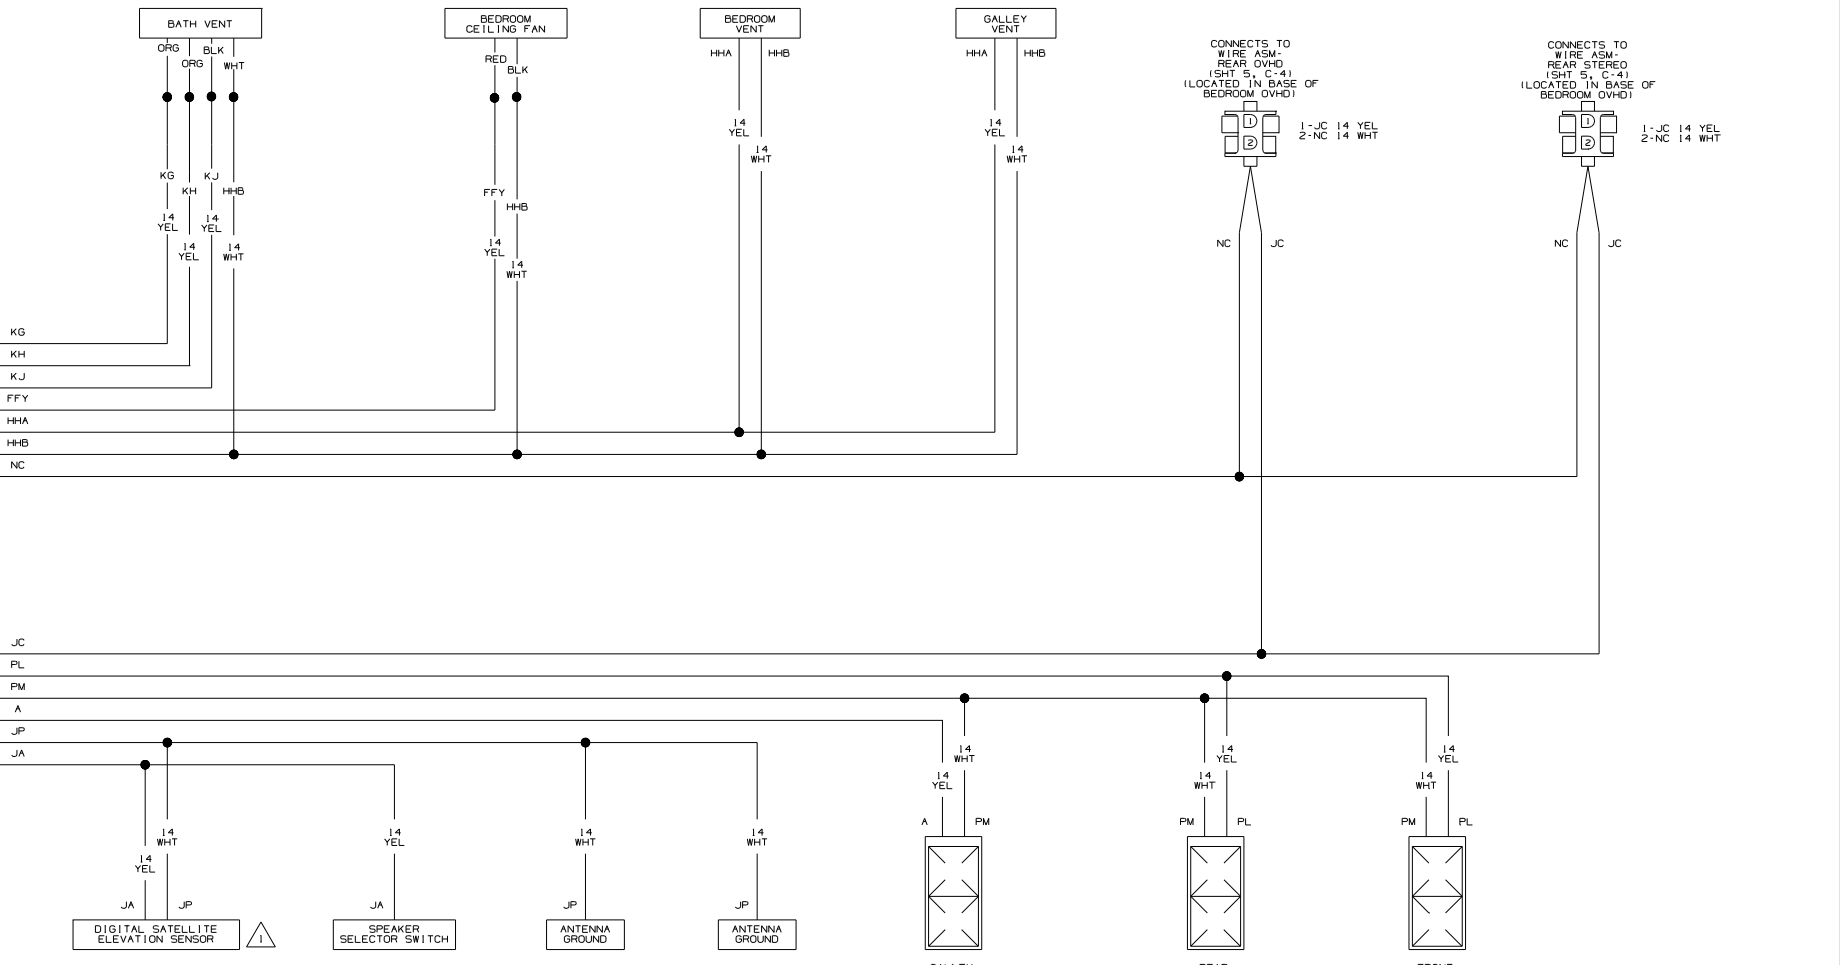








WIRING DIAGRAM-ROOF
(WIRE ASM 140463)

| | | | |
|--------------------------|---------|--------------|--------|
| FIRST USED | | 02 P3634H/HD | |
| DO NOT SCALE DRAWING | | | |
| TITLE | | | |
| WIRING DIAGRAM-BODY, 12V | | | |
| S4 F1 | SHEET 4 | PART NO | 140212 |

 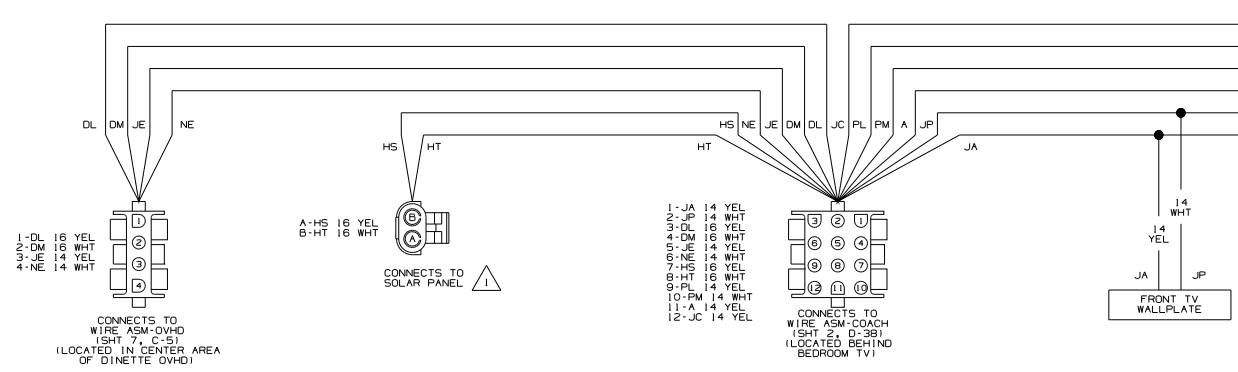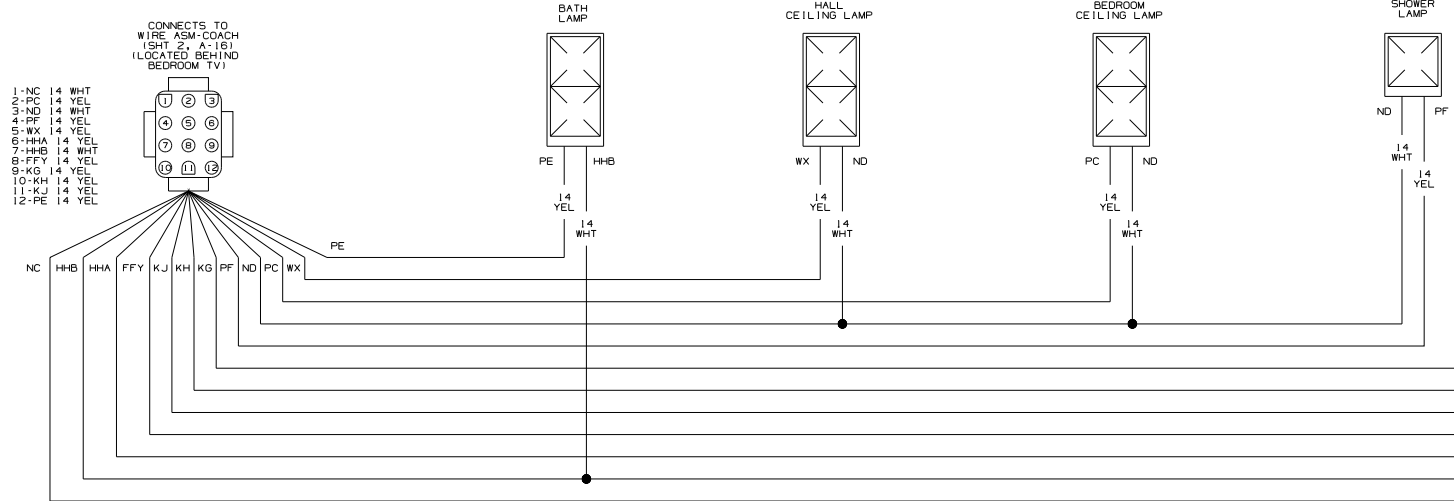


1 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.


NOTES:

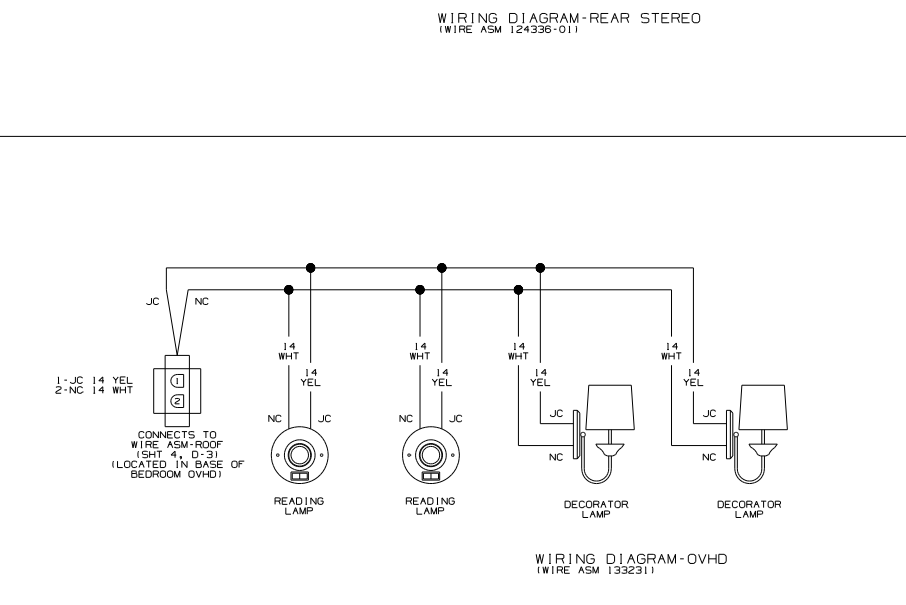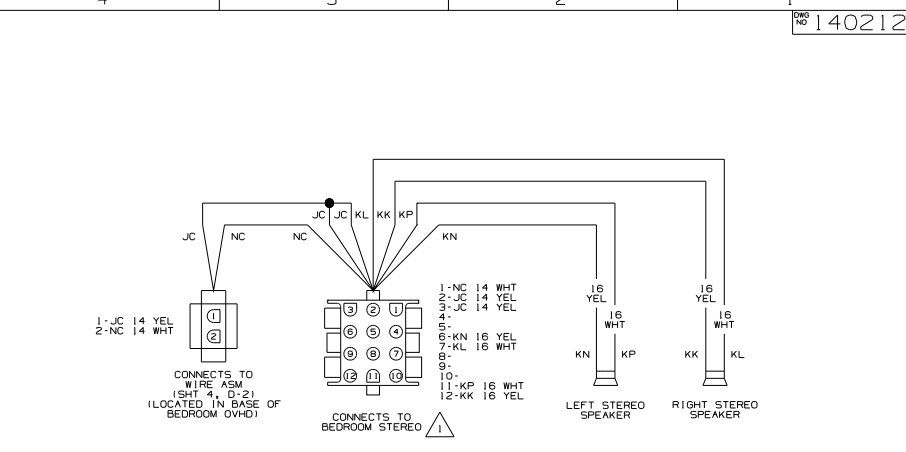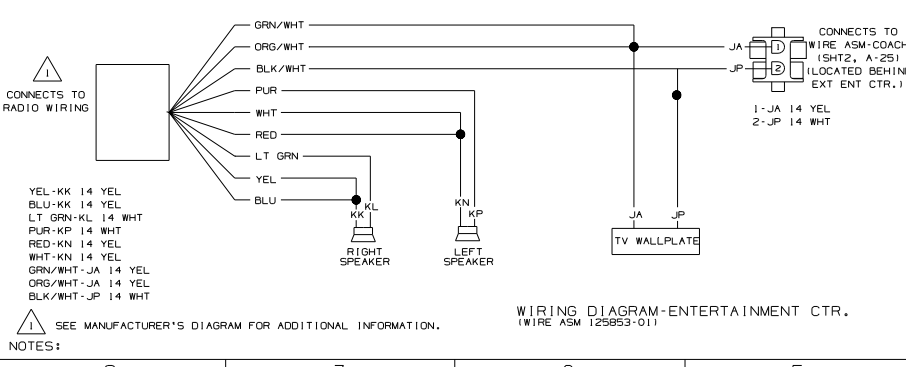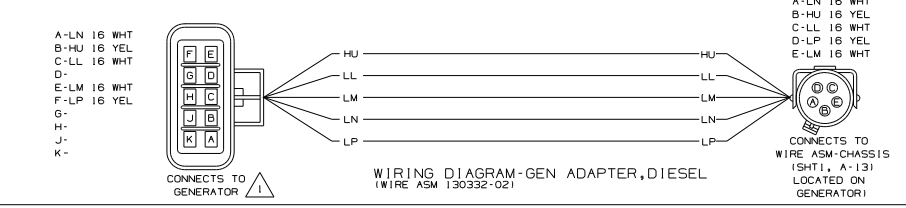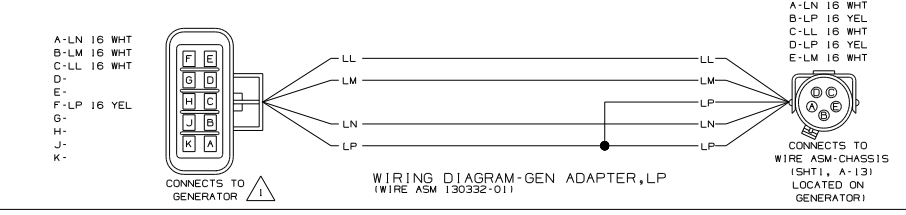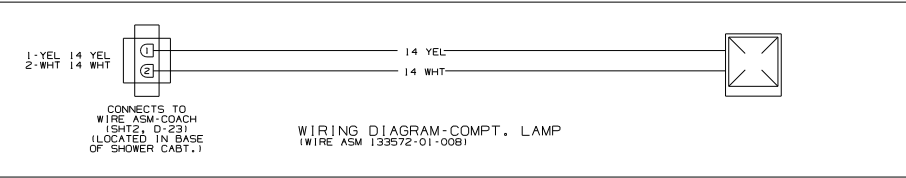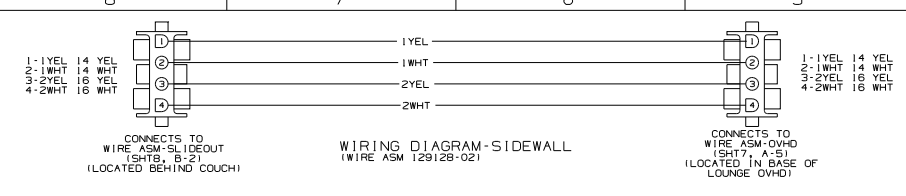



| | |
|--------------------------|----------------------|
| FIRST USED | 02 P34H/HD |
| TITLE: | DO NOT SCALE DRAWING |
| WIRING DIAGRAM-BODY, 12V | |
| SHEET | 5 |
| PART NO | 140212 |

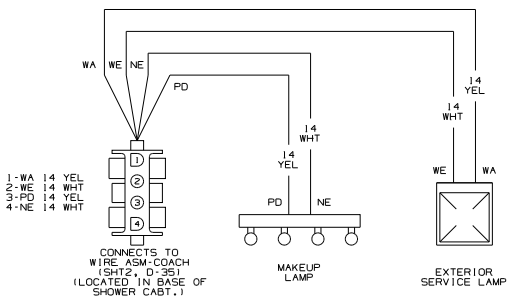

WIRING DIAGRAM-SIDEWALL
(WIRE ASM 140487)



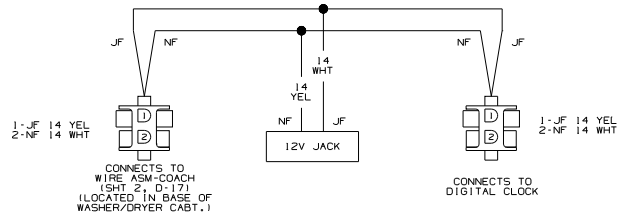


WIRING DIAGRAM-SIDEWALL, RR
(WIRE ASM 134061-03)


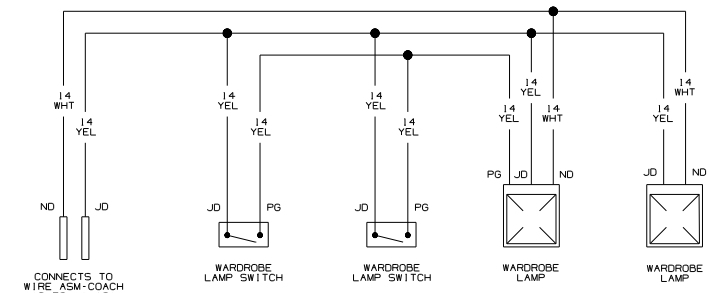
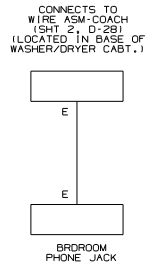


WIRING DIAGRAM-SLIDEOUT, REAR
(WIRE ASM 137456)


| | | |
|------------|--------------------------|--------|
| FIRST USED | 02 P34H/HD | |
| TITLE: | DO NOT SCALE DRAWING | |
| TITLE: | WIRING DIAGRAM-BODY, 12V | |
| SHEET 6 | PART NO | 140212 |

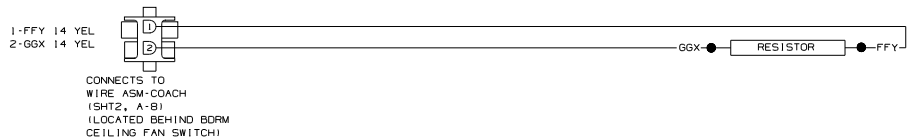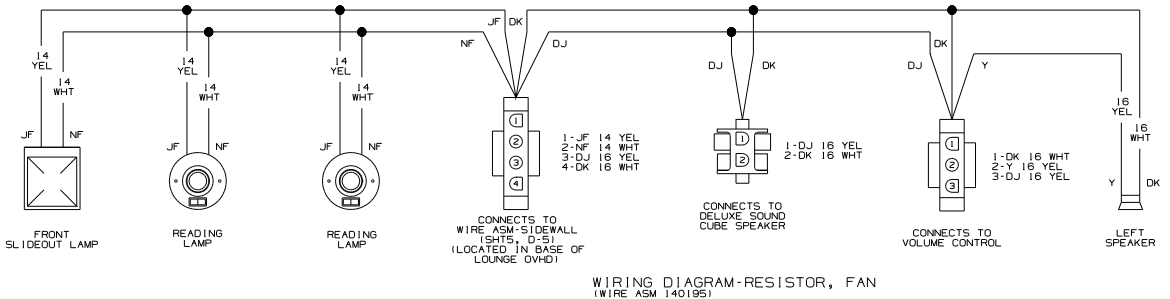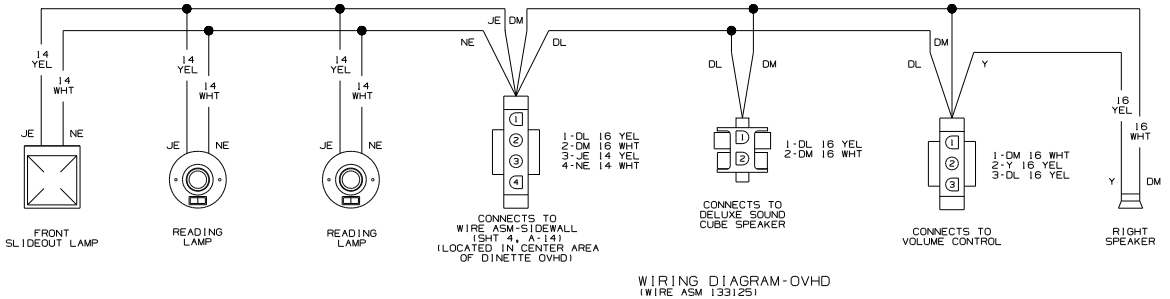


| | | | |
|------------------------------------|---|------------|--------|
| FIRST USED | | 02 P34H/HD | |
| DO NOT SCALE DRAWING | | | |
| TITLE: WIRING DIAGRAM-BODY, 12V | | | |
| SHEET | 7 | PART NO | 140212 |

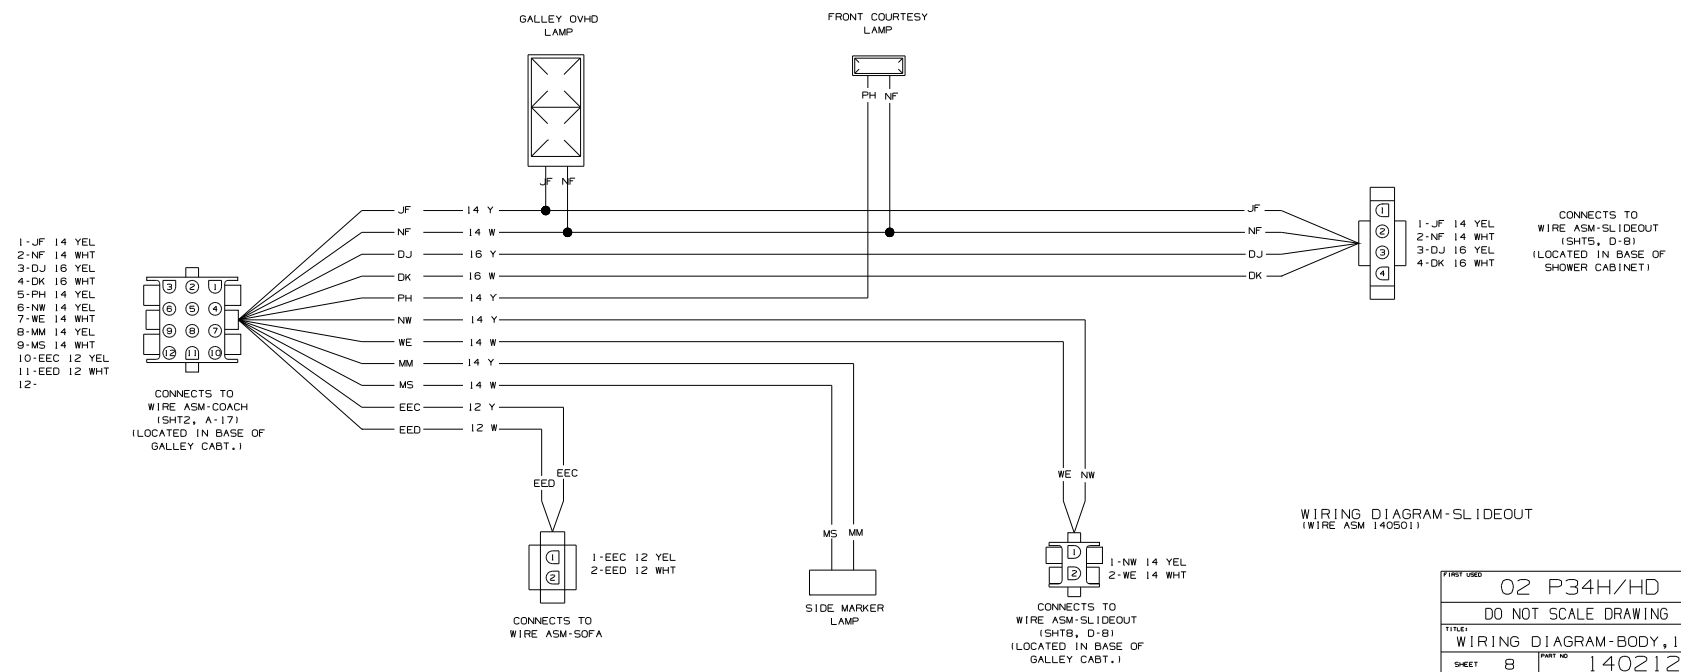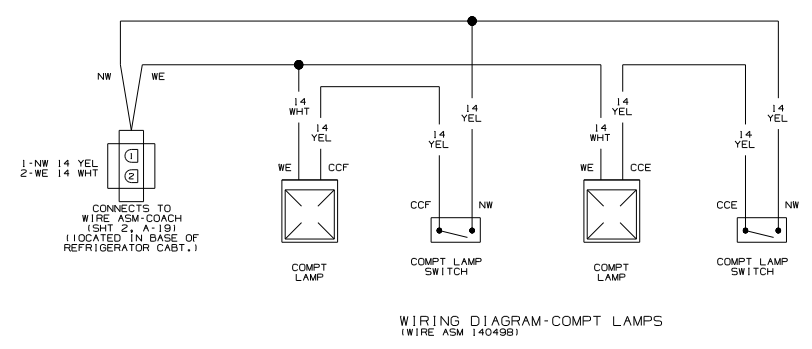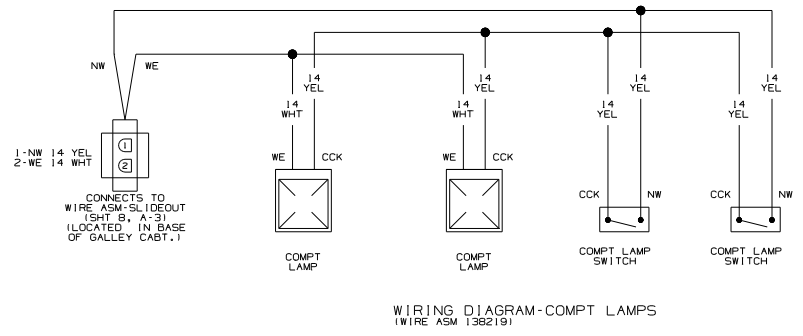

| | |
|----------------------|-------------------------|
| FIRST USED | 02 P34H/HD |
| DO NOT SCALE DRAWING | |
| TITLE: | WIRING DIAGRAM-BODY,12V |
| SHEET | 8 PART NO 140212 |

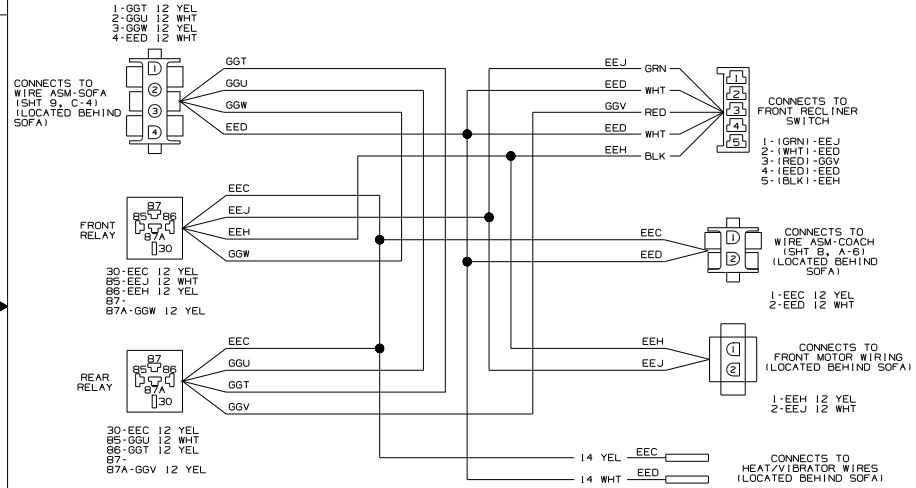

WIRING DIAGRAM-SOFA, DBL REST EASY
WIRE ASM 139563-01

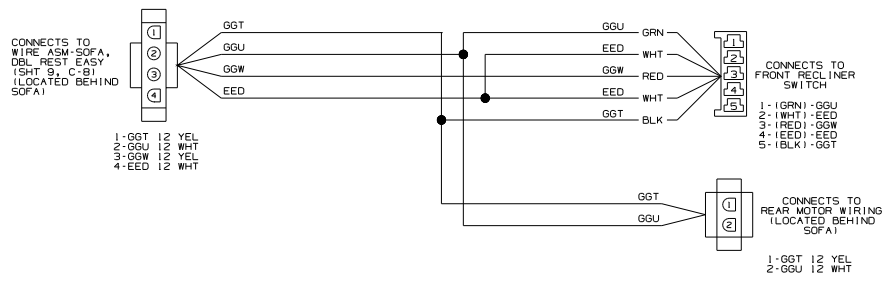

WIRING DIAGRAM-SOFA, DBL REST EASY
WIRE ASM 139563-02

| | | |
|------------|--------------------------|--------|
| FIRST USED | 02 P34H/HD | |
| TITLE: | DO NOT SCALE DRAWING | |
| TITLE: | WIRING DIAGRAM-BODY, 12V | |
| SHEET 9 | PART NO | 140212 |