




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

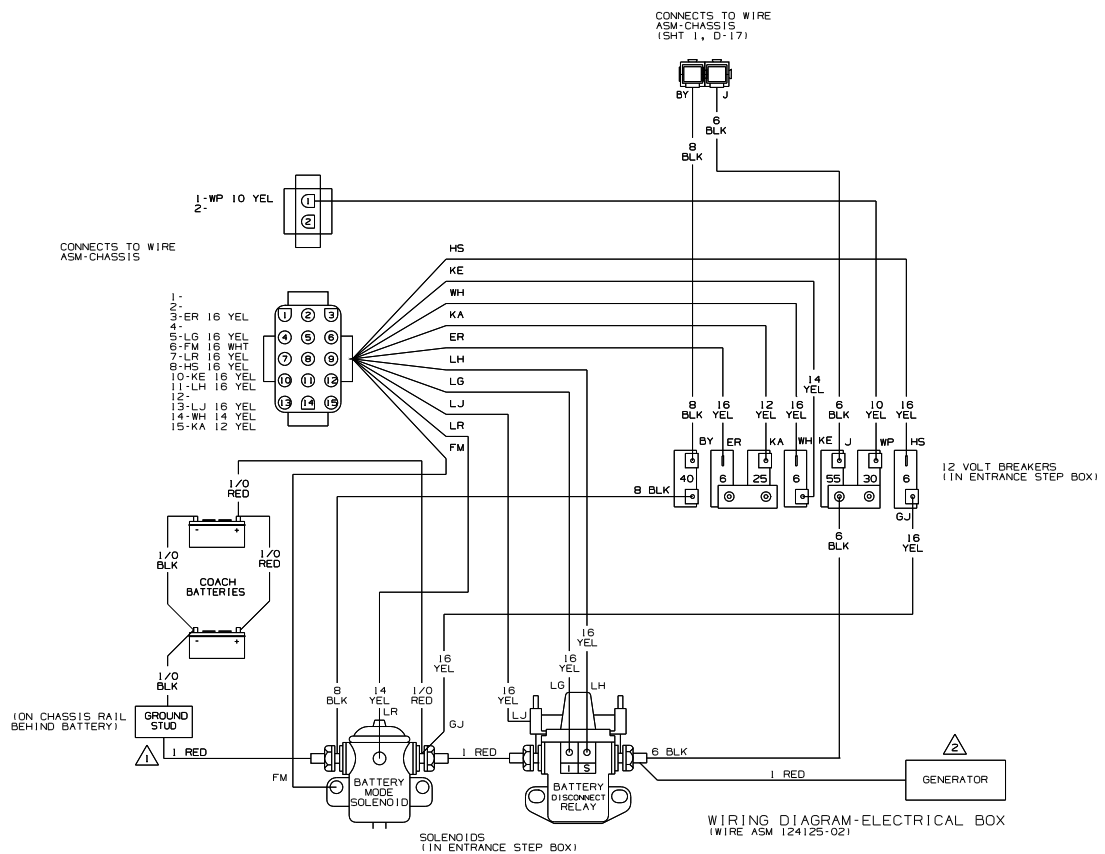

**WINNEBAGO**

DATE: 05/31/01

OWNER: ALL DIMENSIONS ARE IN MILLIMETERS

P.E.:

M.E.:

DESIGN: 02 P390D

UNSPECIFIED TOLERANCES ARE:

INSIDE DIM	±	MATERIAL:	
ONE-PLACE	±		
TWO-PLACE	±		
ANGLE	±		




THIRD ANGLE PROJECTION

DO NOT SCALE DRAWING

TITLE: WINNEBAGO DIAGRAM-BODY, 12V

SHEET 1 OF 6 PART NO 140735


REF: 1 PAGE 194

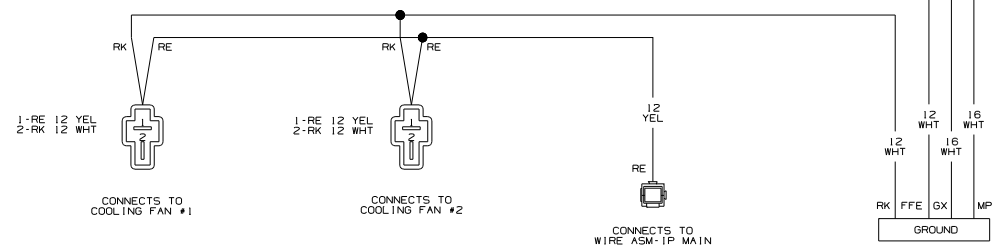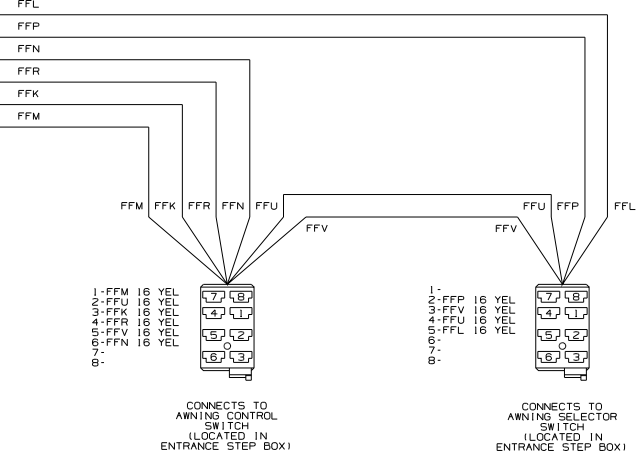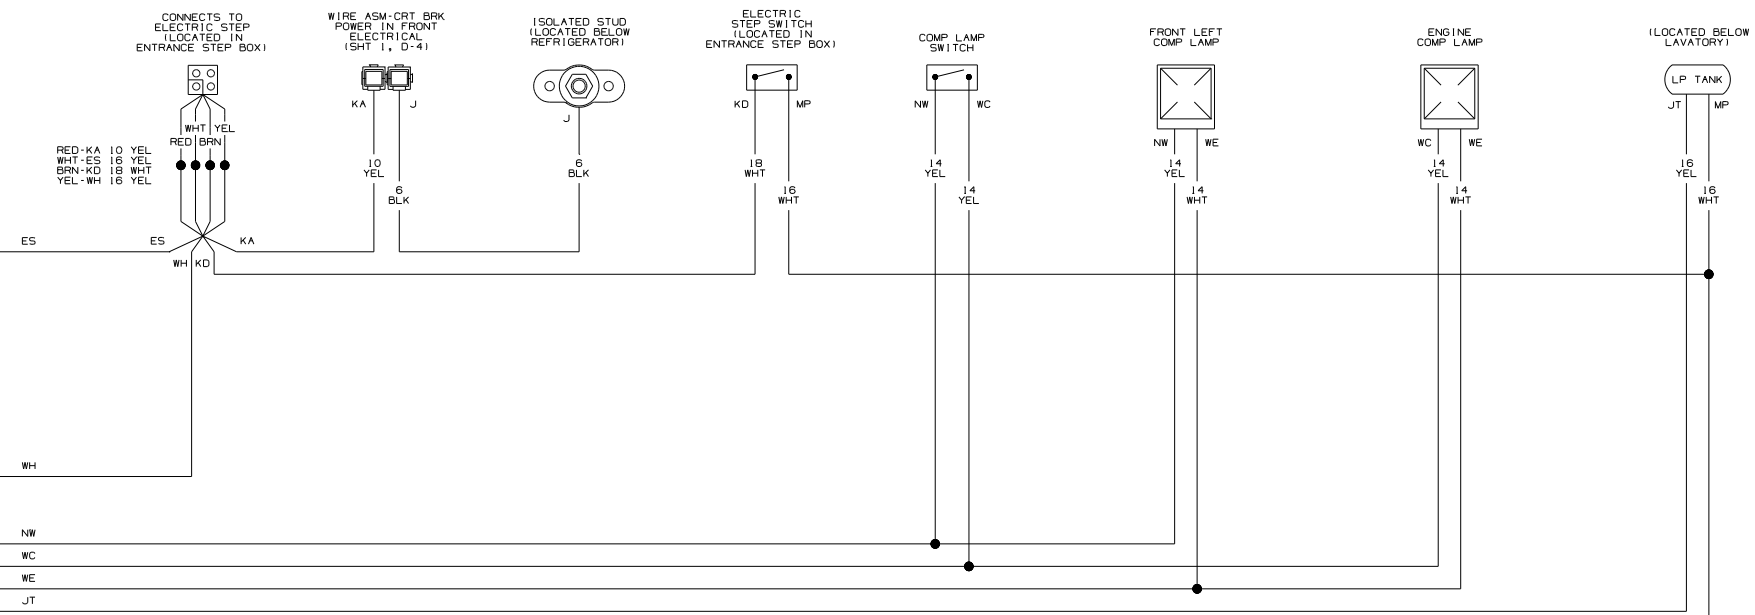


WIRING DIAGRAM-CHASSIS (WIRE ASM 14006B)

- A1-AAX 16 WHT
- A2-
- B1-BBM 16 YEL
- B2-BBN 16 YEL
- B3-CCY 16 YEL
- B4-CCZ 16 YEL
- C1-DDA 16 YEL
- C2-TM 16 WHT
- D1-LL 16 WHT
- D2-LM 16 WHT
- D3-LN 16 WHT
- D4-HJ 16 YEL
- E1-MM 14 YEL
- E2-HS 16 YEL
- F1-
- F2-
- G1-DL 16 YEL
- G2-DM 16 WHT
- G3-DJ 14 YEL
- G4-DK 16 WHT
- H1-AAA 16 WHT
- H2-
- J1-
- J2-WH 16 YEL
- J3-ER 16 YEL
- J4-
- K1-FFD 12 YEL
- K2-
- K3-AAW 16 YEL

CONNECTS TO WIRE ASM-IP MAIN (LOCATED IN FLOOR BY DRIVER)

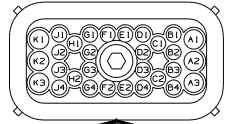


RIGHT SUBWOOFER

 


CONNECTS TO WIRE ASM-COACH (SHT 2, D-36) (LOCATED BELOW LAVATORY)



 
- 1-DL 16 YEL
- 2-DM 16 WHT
- 3-DJ 16 YEL
- 4-DK 16 WHT
- 5-HS 16 YEL
- 6-



STEP COVER SWITCH

 

ELECTRIC STEP SWITCH

 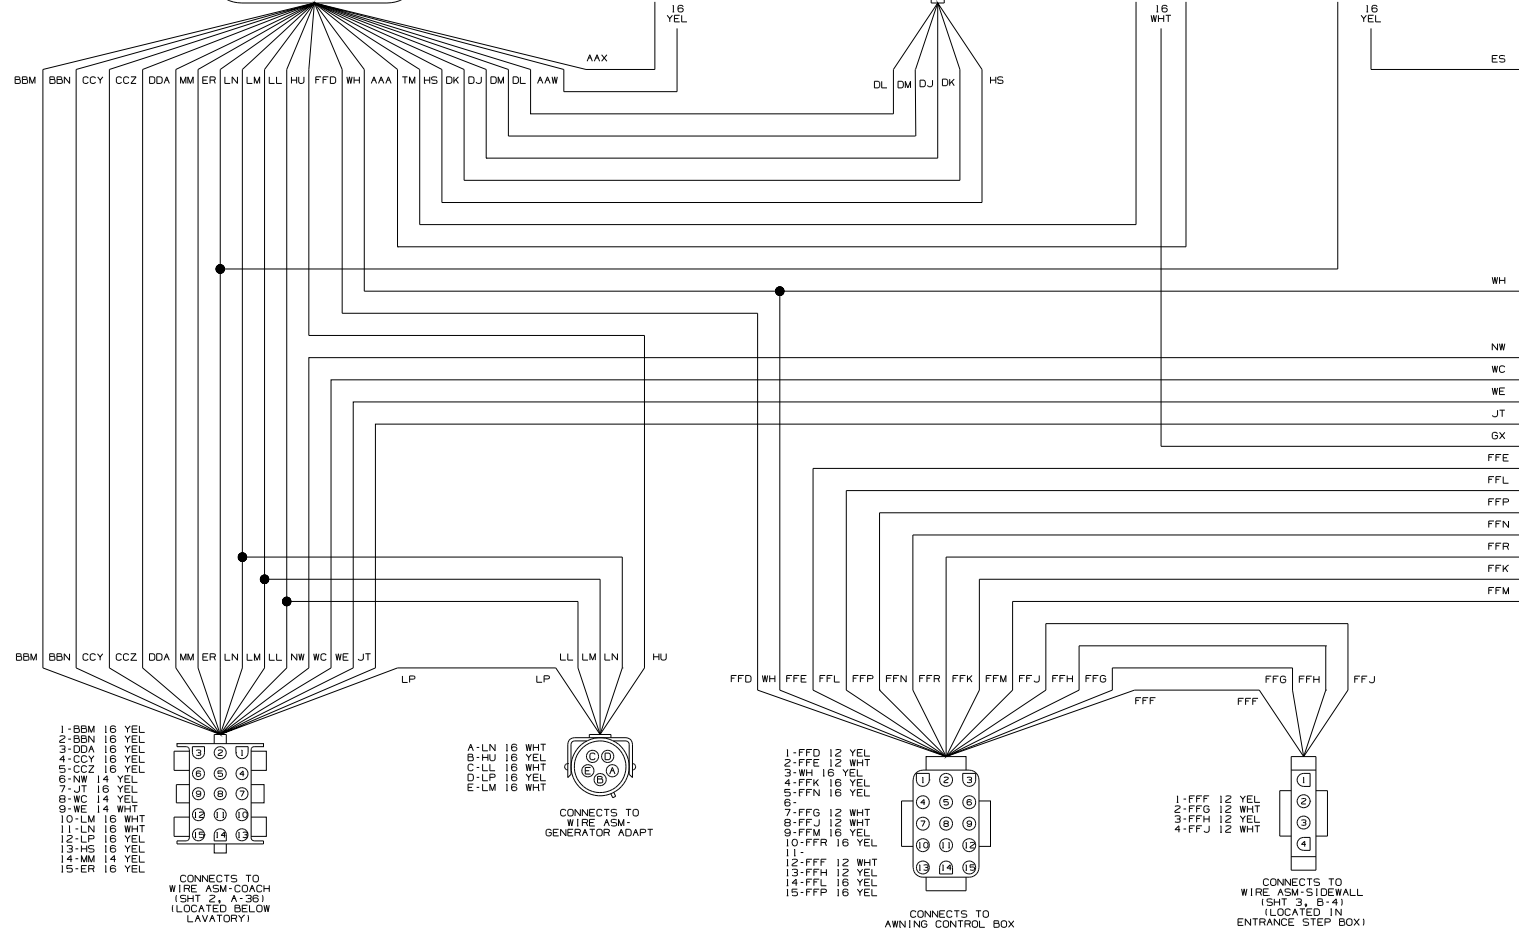 


- 1-BBM 16 YEL
- 2-BBN 16 YEL
- 3-DDA 16 YEL
- 4-CCY 16 YEL
- 5-CCZ 16 YEL
- 6-NW 14 YEL
- 7-JT 16 YEL
- 8-WC 14 YEL
- 9-WE 14 WHT
- 10-LM 16 WHT
- 11-LN 16 WHT
- 12-LP 16 YEL
- 13-HS 16 YEL
- 14-MM 14 YEL
- 15-ER 16 YEL

CONNECTS TO WIRE ASM-COACH (SHT 2, A-36) (LOCATED BELOW LAVATORY)

- A-LN 16 WHT
- B-HJ 16 YEL
- C-LL 16 WHT
- D-LP 16 YEL
- E-LM 16 WHT



 CONNECTS TO WIRE ASM-GENERATOR ADAPT




- 1-FFD 12 YEL
- 2-FFE 12 WHT
- 3-WH 16 YEL
- 4-FFK 16 YEL
- 5-FFN 16 YEL
- 6-
- 7-FFG 12 WHT
- 8-FFJ 12 WHT
- 9-FFM 16 YEL
- 10-FFR 16 YEL
- 11-
- 12-FFF 12 WHT
- 13-FFH 12 YEL
- 14-FFL 16 YEL
- 15-PPP 16 YEL

CONNECTS TO AWNING CONTROL BOX



- 1-FFF 12 YEL
- 2-FFG 12 WHT
- 3-FFH 12 YEL
- 4-FFJ 12 WHT

CONNECTS TO WIRE ASM-SIDEMALL (SHT 3, B-4) (LOCATED IN ENTRANCE STEP BOX)

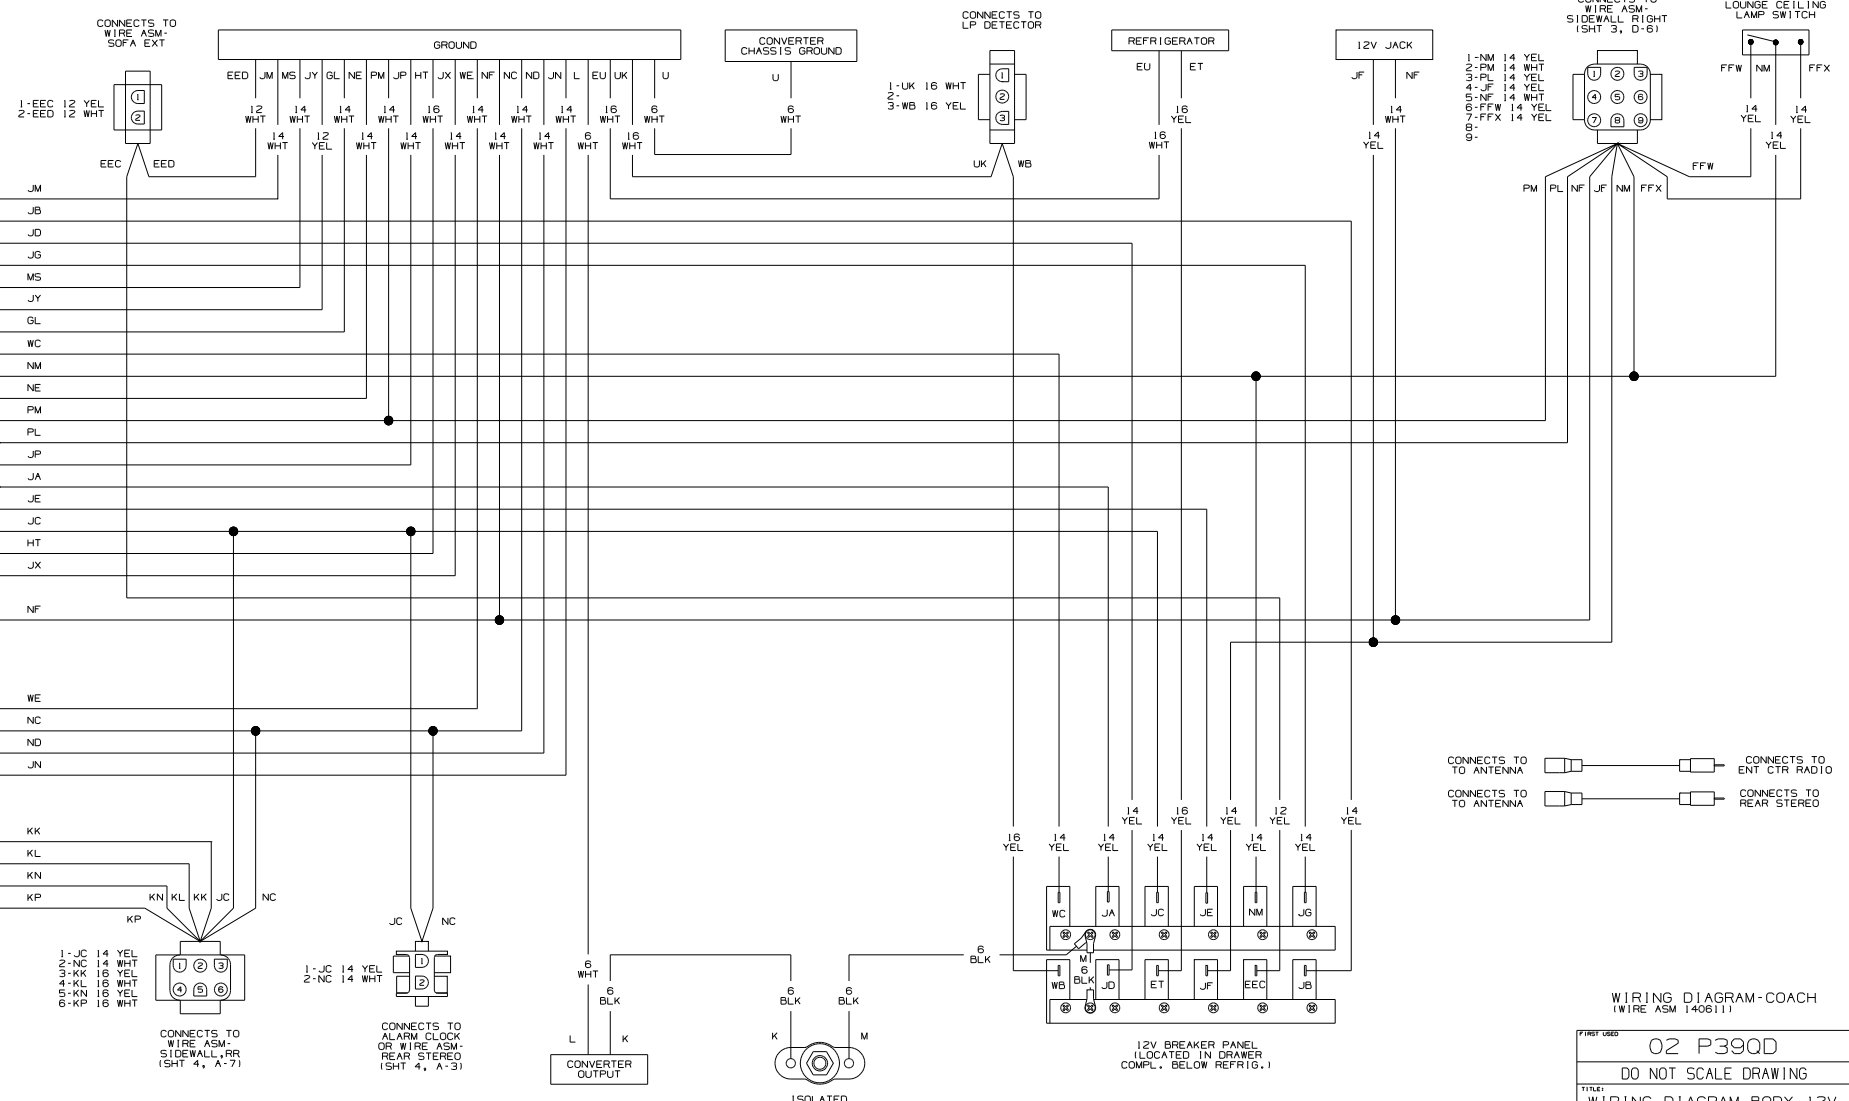


CONNECTS TO TO ANTENNA

CONNECTS TO TO ANTENNA


CONNECTS TO ENT CTR RADIO


CONNECTS TO REAR STEREO

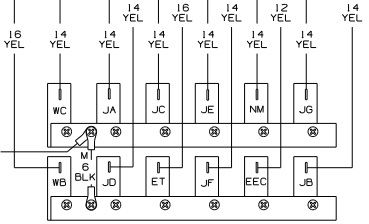


WIRING DIAGRAM-COACH (WIRE ASM 140611)


FIRST USED	02 P390D
TITLE	DO NOT SCALE DRAWING
WIRING DIAGRAM-BODY, 12V	
SXF1	SHEET 2 PART NO 140175


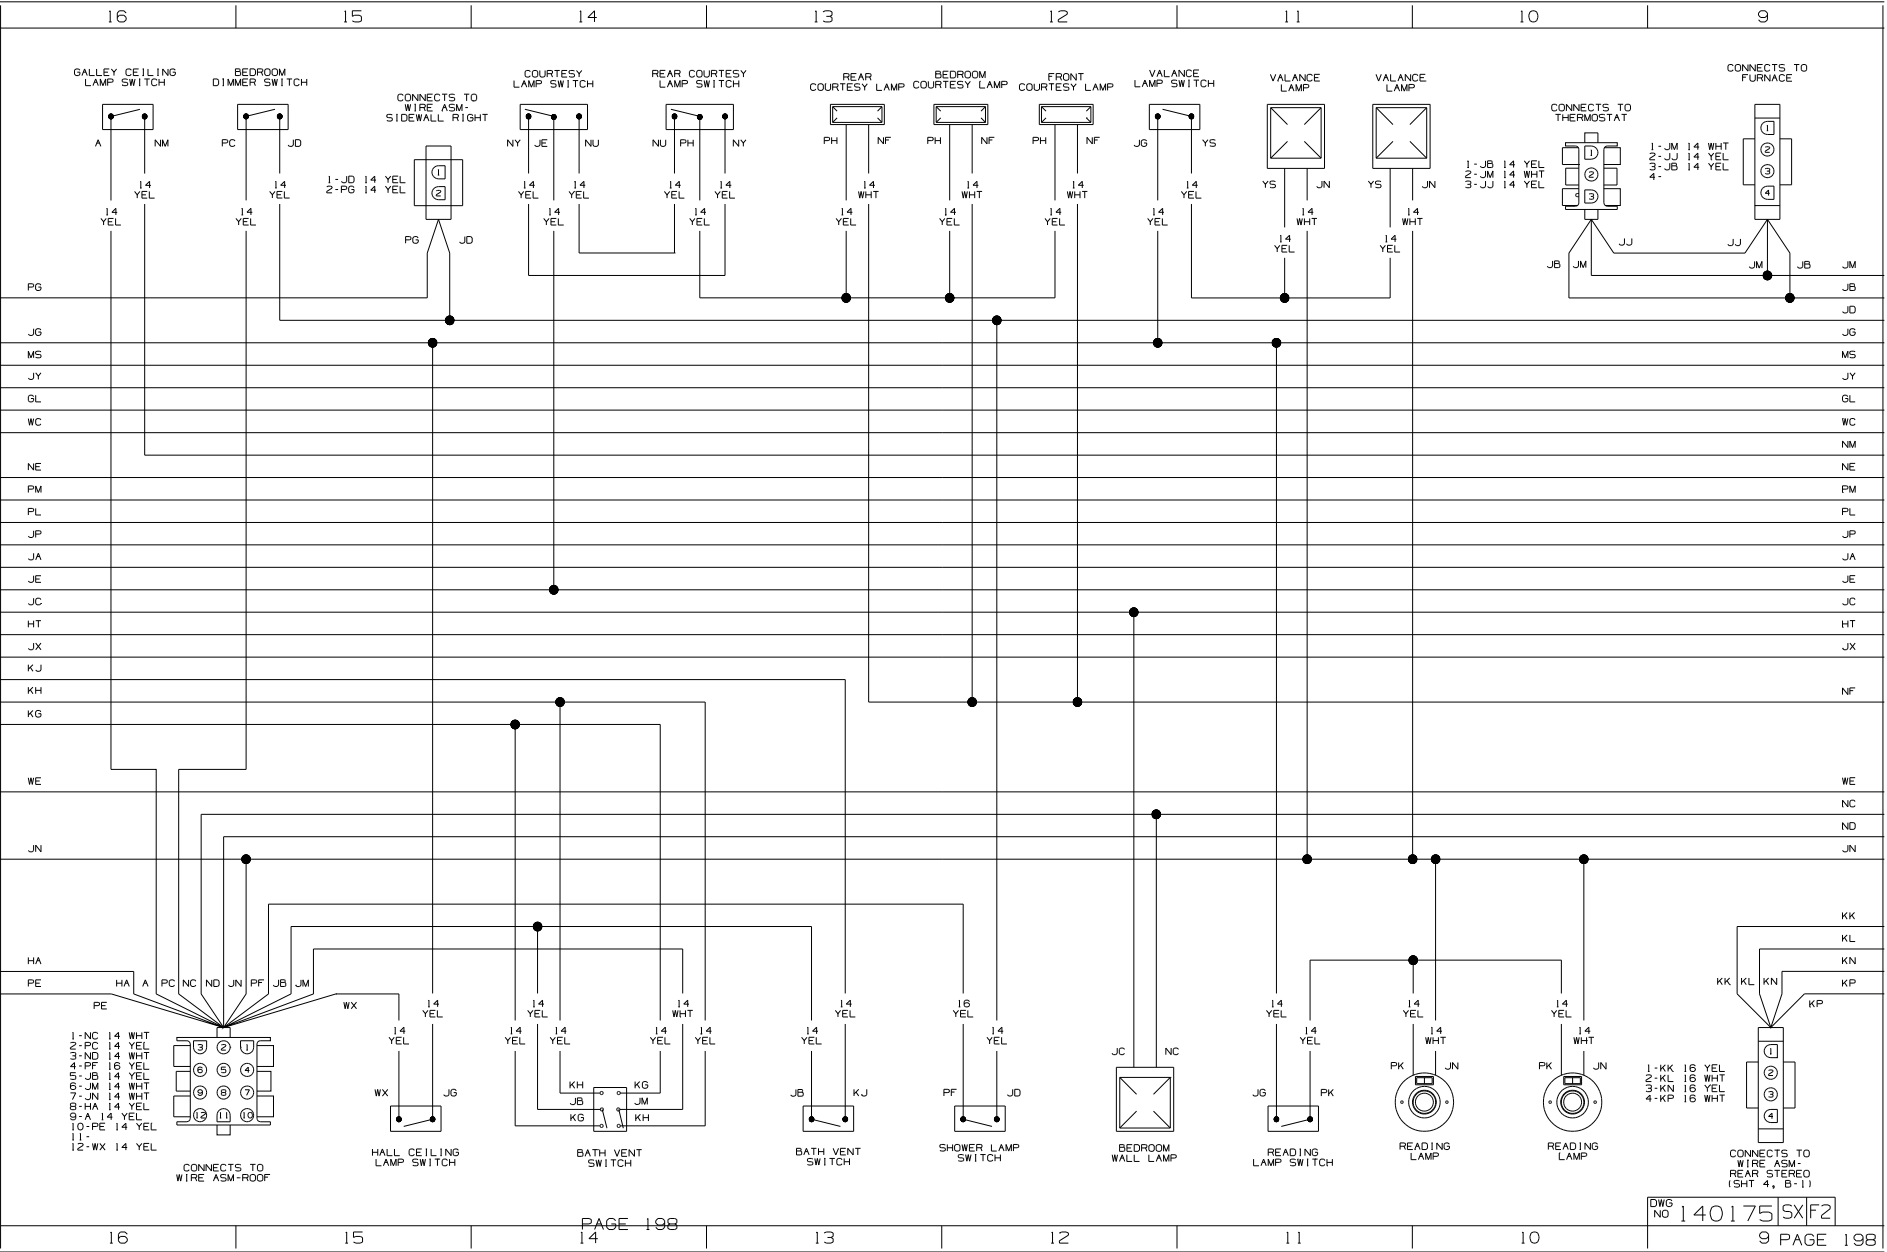


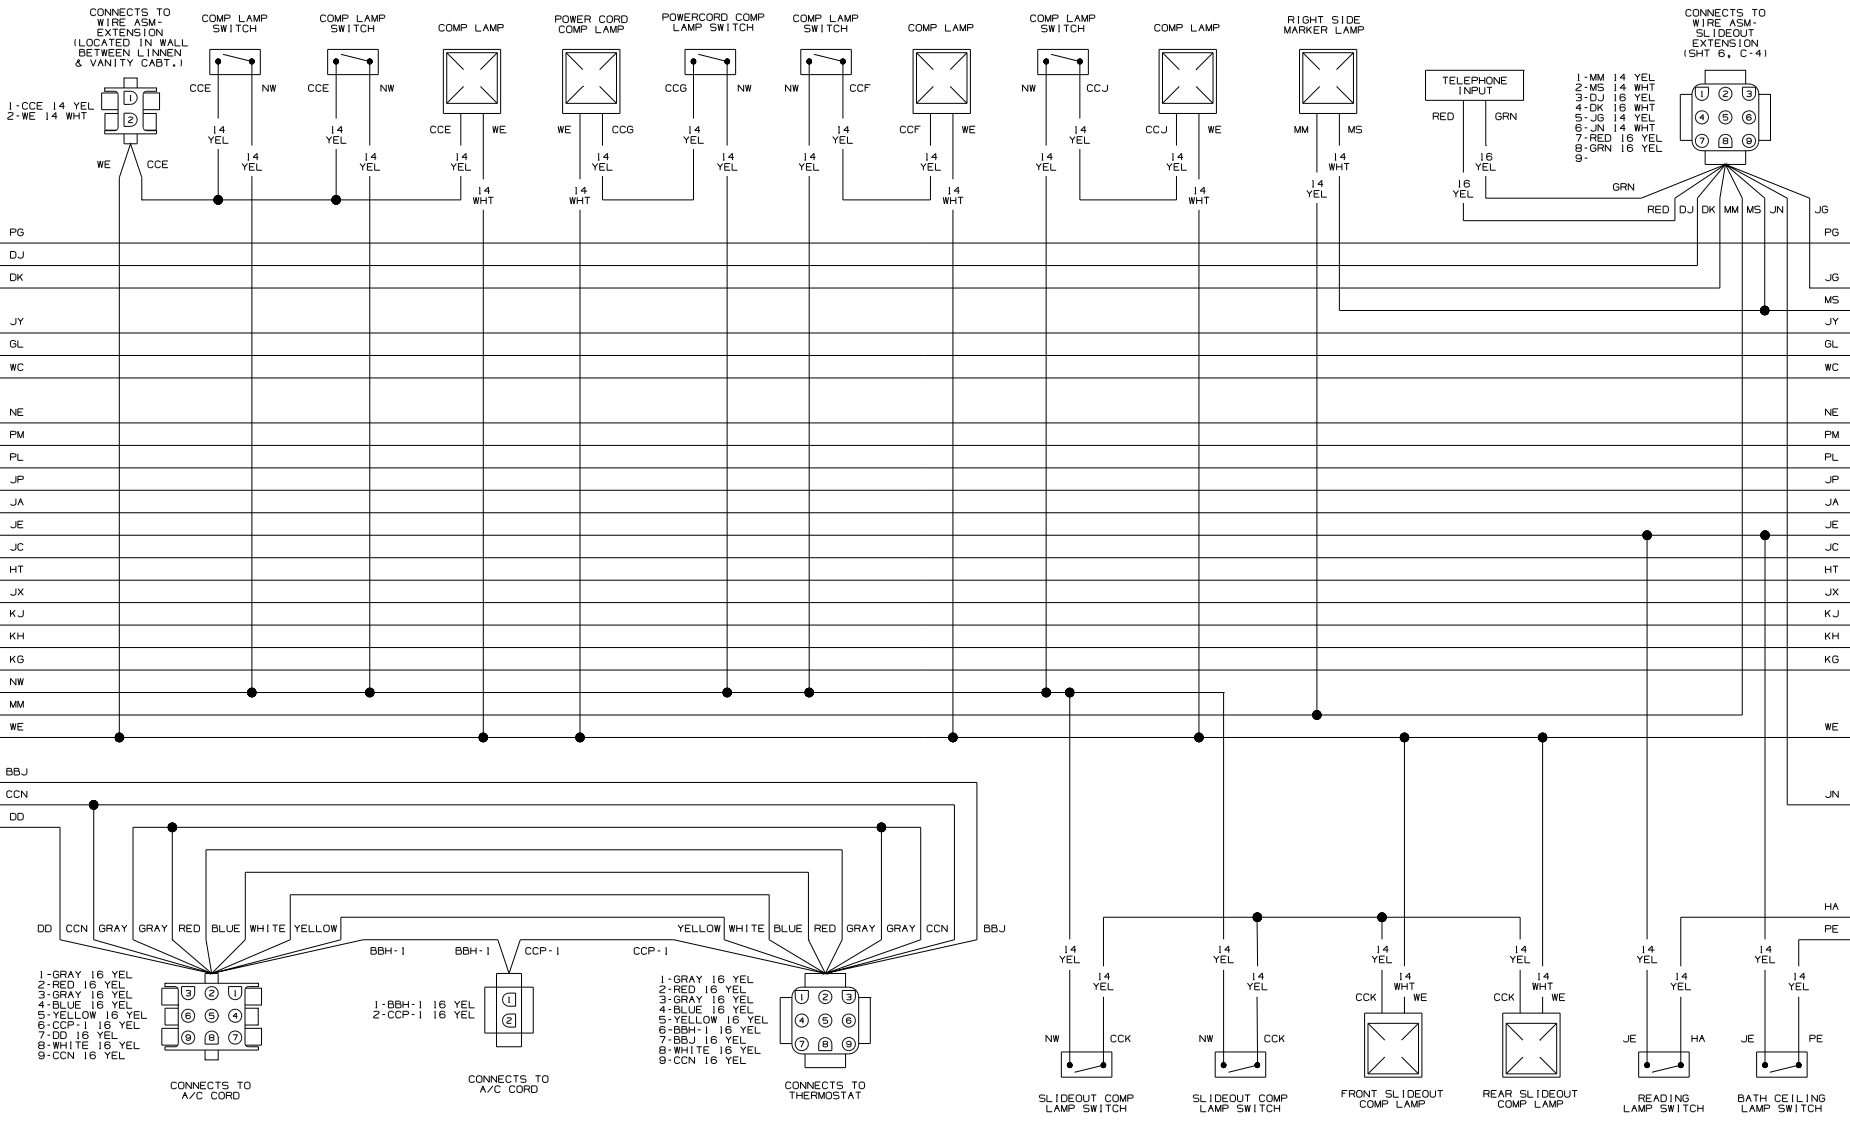

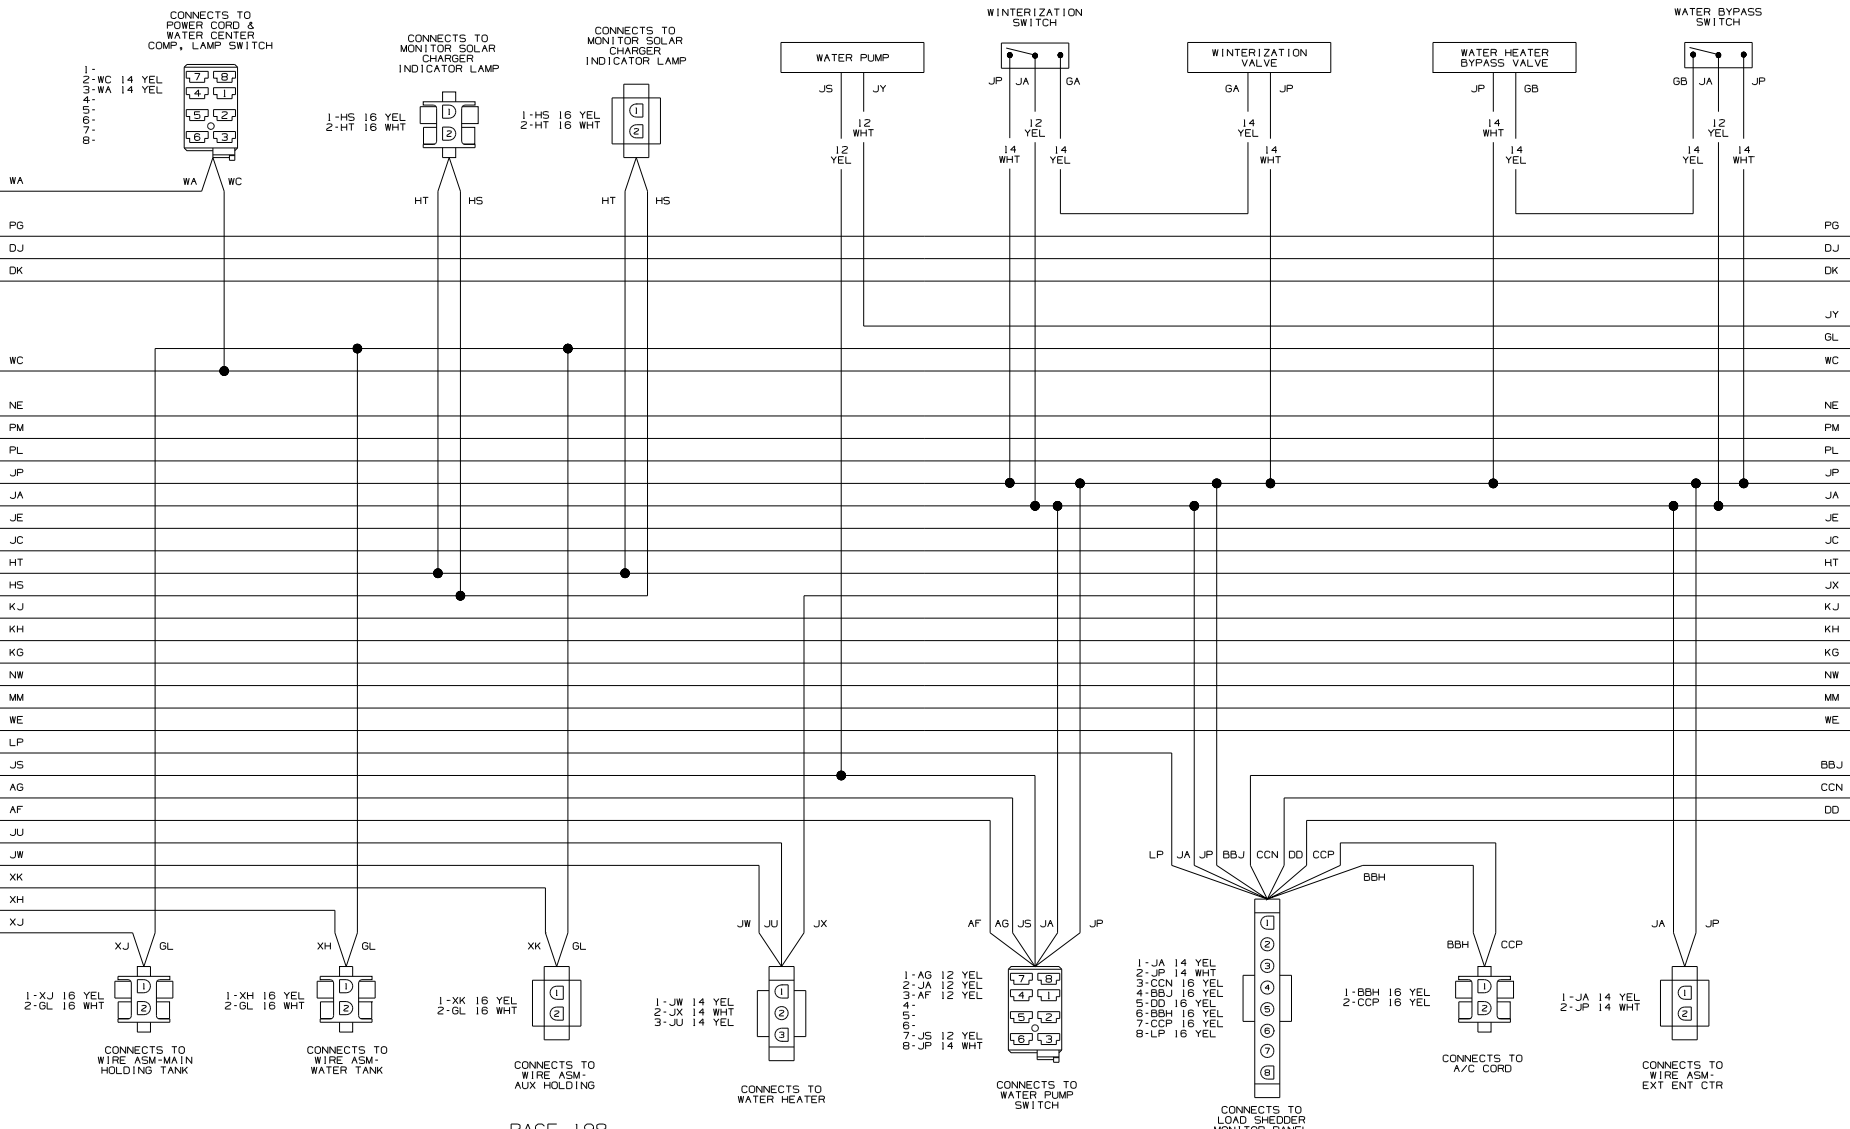




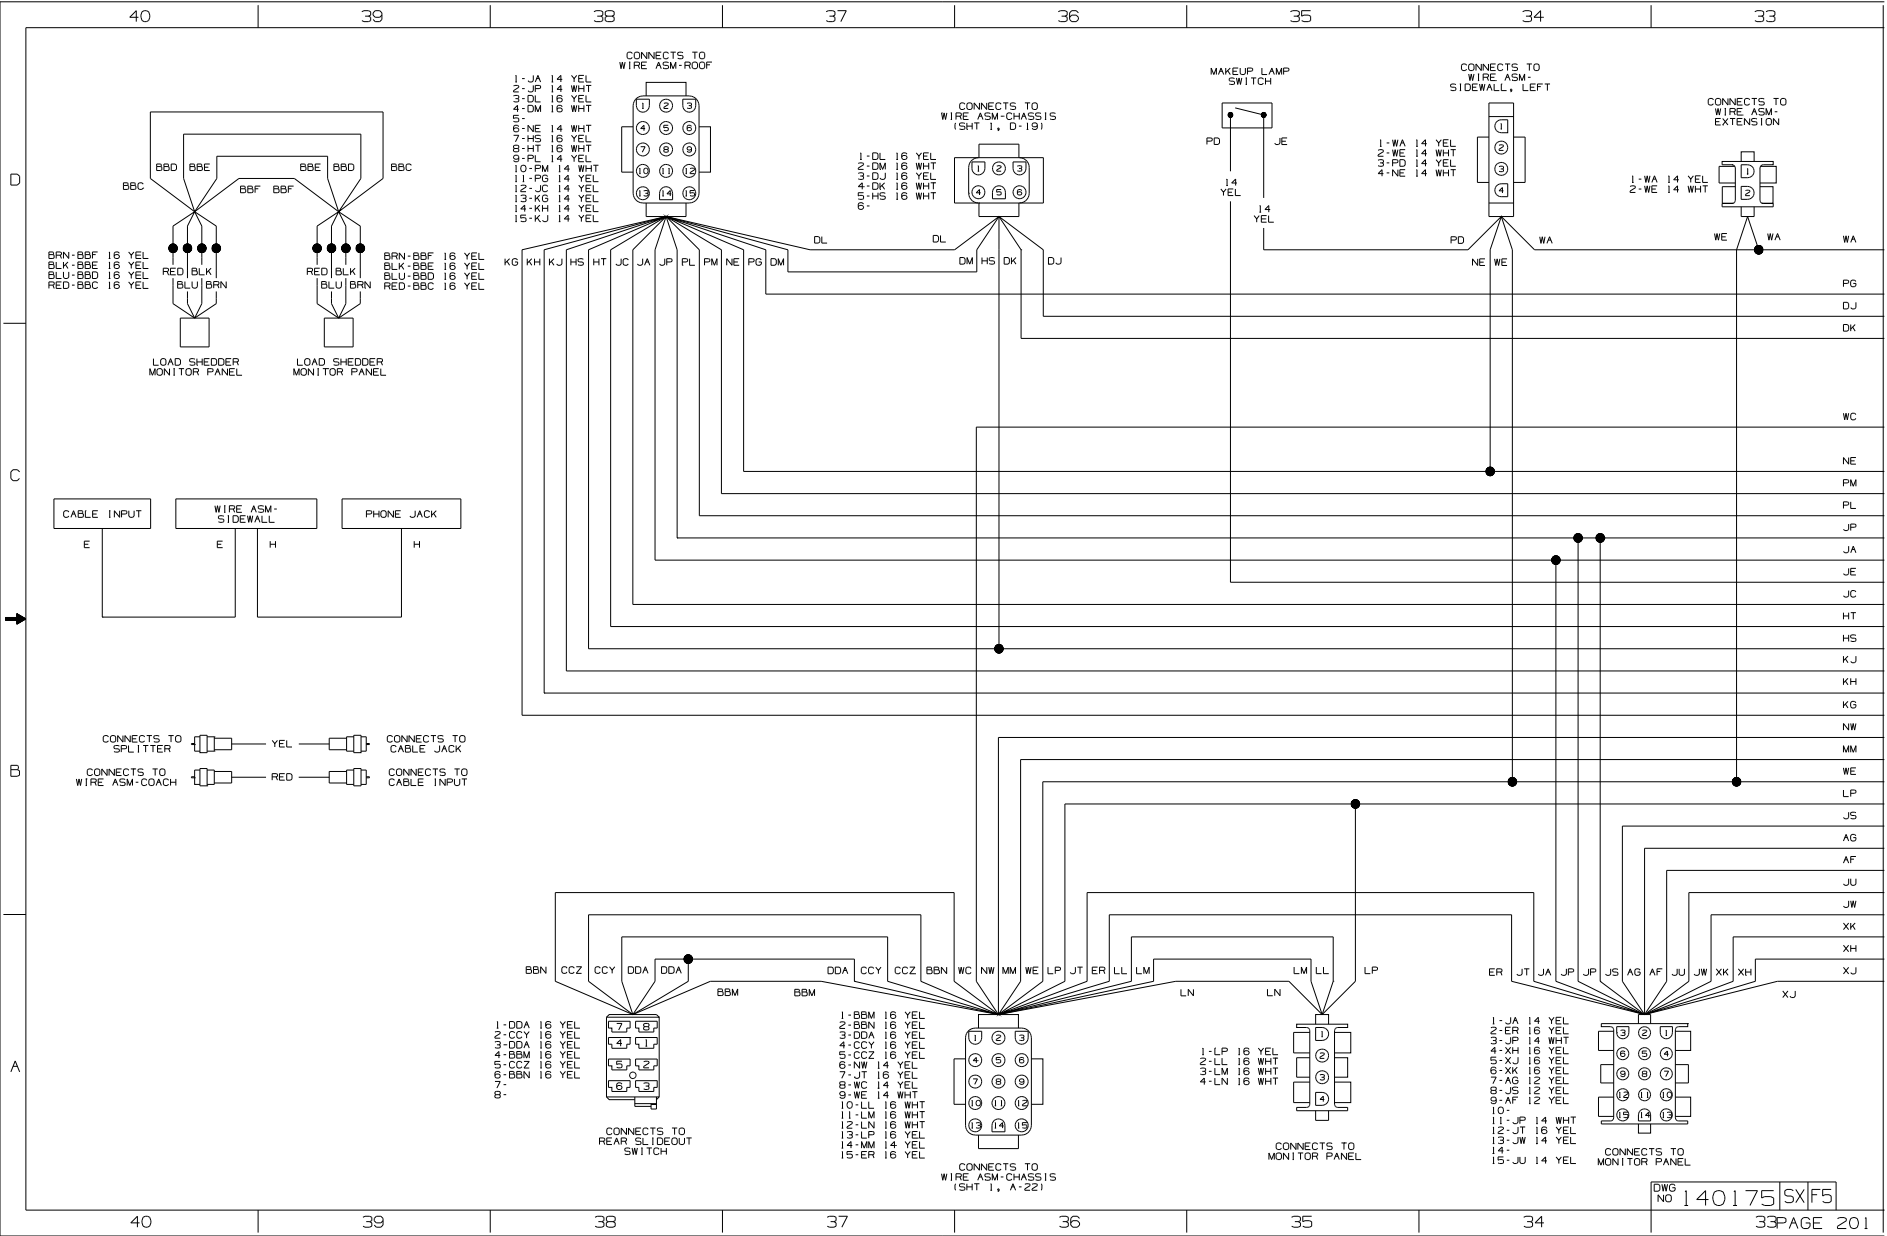

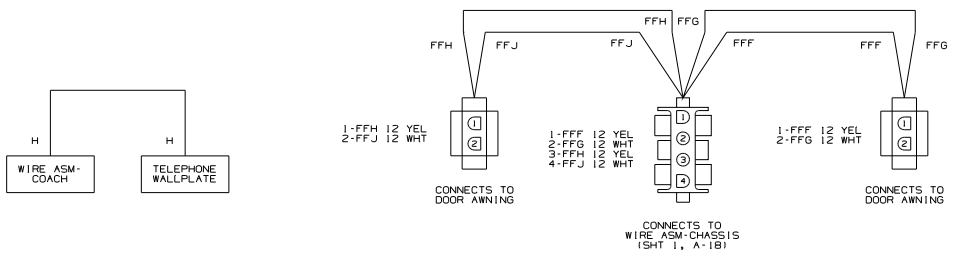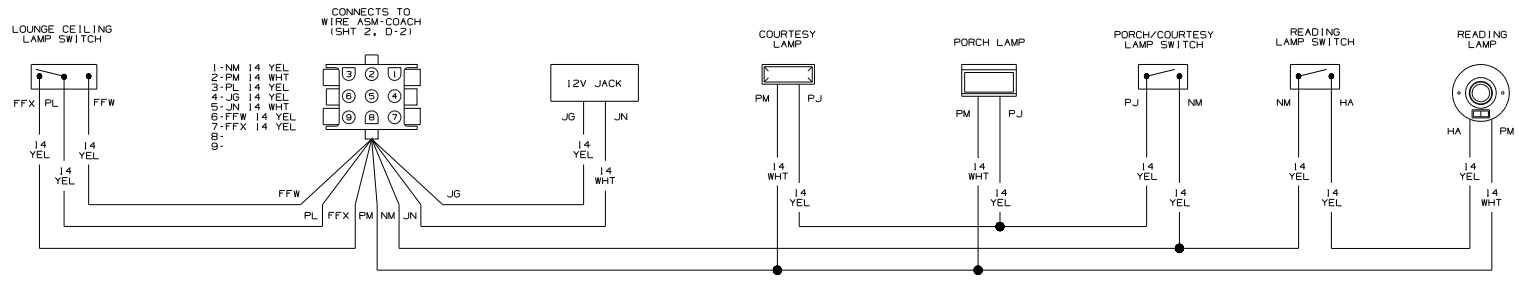


WIRING DIAGRAM-SIDEWALL, RIGHT  
(WIRE ASM 141311)


FIRST USED	02 P39QD
DO NOT SCALE DRAWING	
TITLE:	WIRING DIAGRAM-BODY, 12V
SHEET 3	PART NO 140735

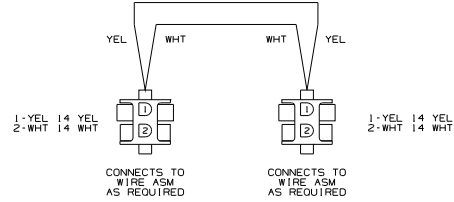


WIRING DIAGRAM-EXTENSION, 2HSG  
(WIRE ASM 137479)

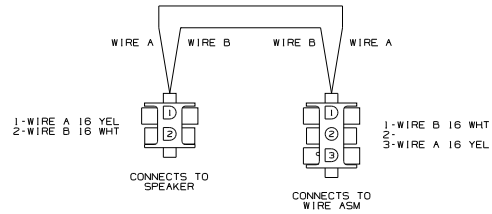

WIRING DIAGRAM-SPEAKER, ADAPTER  
(WIRE ASM 133617-02)

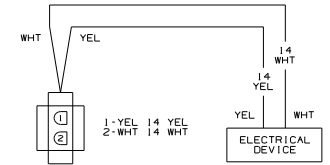


WIRING DIAGRAM-EXTENSION, 2 PIN  
(WIRE ASM 133572-01)

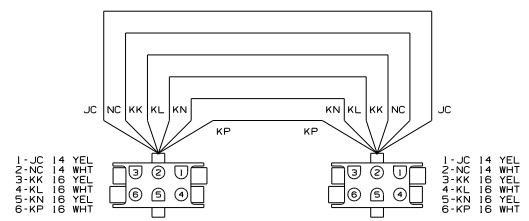

CONNECTS TO WIRE ASM-COACH  
(SHT 2, A-B)  
(LOCATED BELOW LAVATORY)

CONNECTS TO WIRE ASM-OVHD REAR  
(SHT 2, A-B)

WIRING DIAGRAM-SIDEWALL, LEFT  
(WIRE ASM 140722-01)

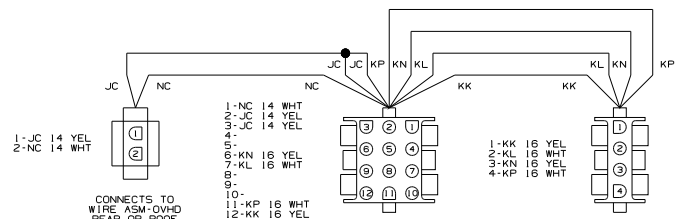



CONNECTS TO WIRE ASM-OVHD REAR OR ROOF  
(SHT 2, A-7)

CONNECTS TO RADIO AM/FM STEREO CASSETTE



CONNECTS TO WIRE ASM-SLIDEOUT ROOM  
(SHT 2, A-9)

WIRING DIAGRAM-REAR STEREO  
(WIRE ASM 124335-14)

FIRST USED	02 P390D
TITLE:	DO NOT SCALE DRAWING
WIRING DIAGRAM-BODY, 12V	
SHEET 4	PART NO 140735

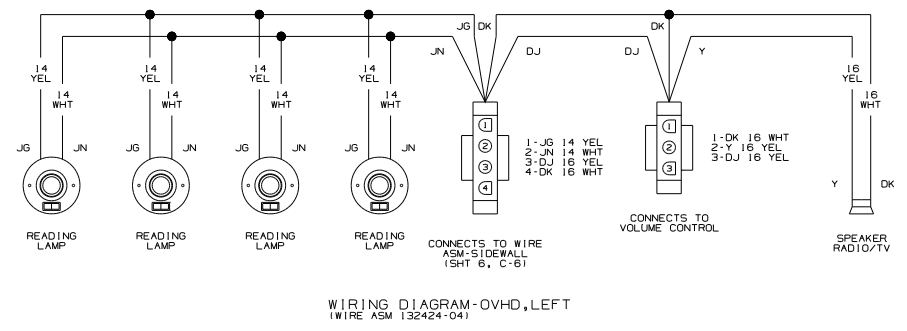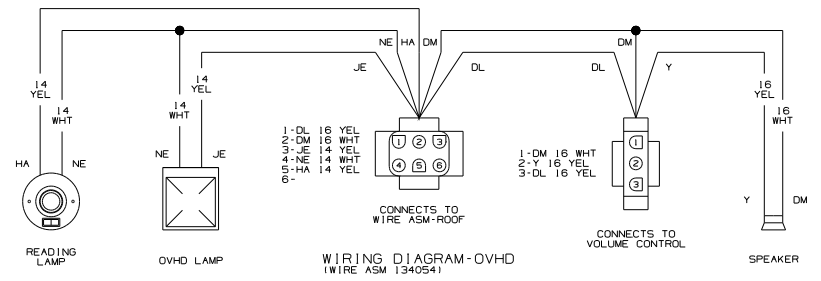

FIRST USED	02 P39QD	
TITLE:	DO NOT SCALE DRAWING	
SHEET	5	PART NO 140735

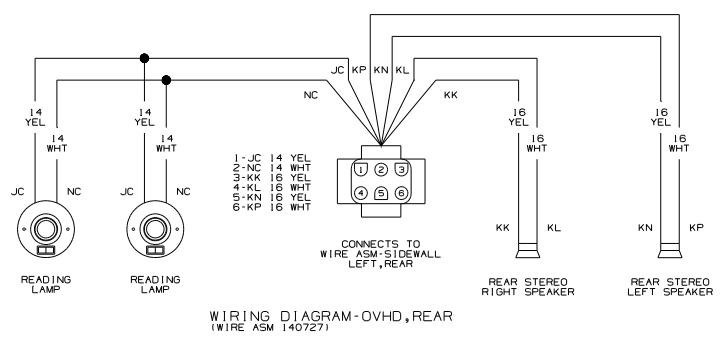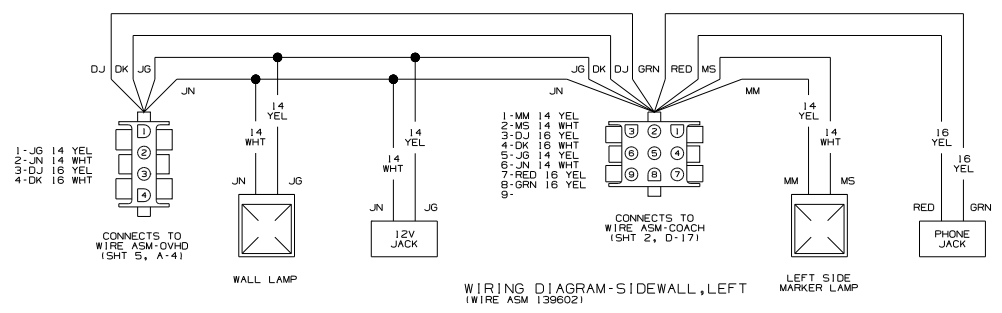

FIRST USED		02 P39QD	
DO NOT SCALE DRAWING			
TITLE:			
WIRING DIAGRAM-BODY, 12V			
SHEET	6	PART NO	140735