




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

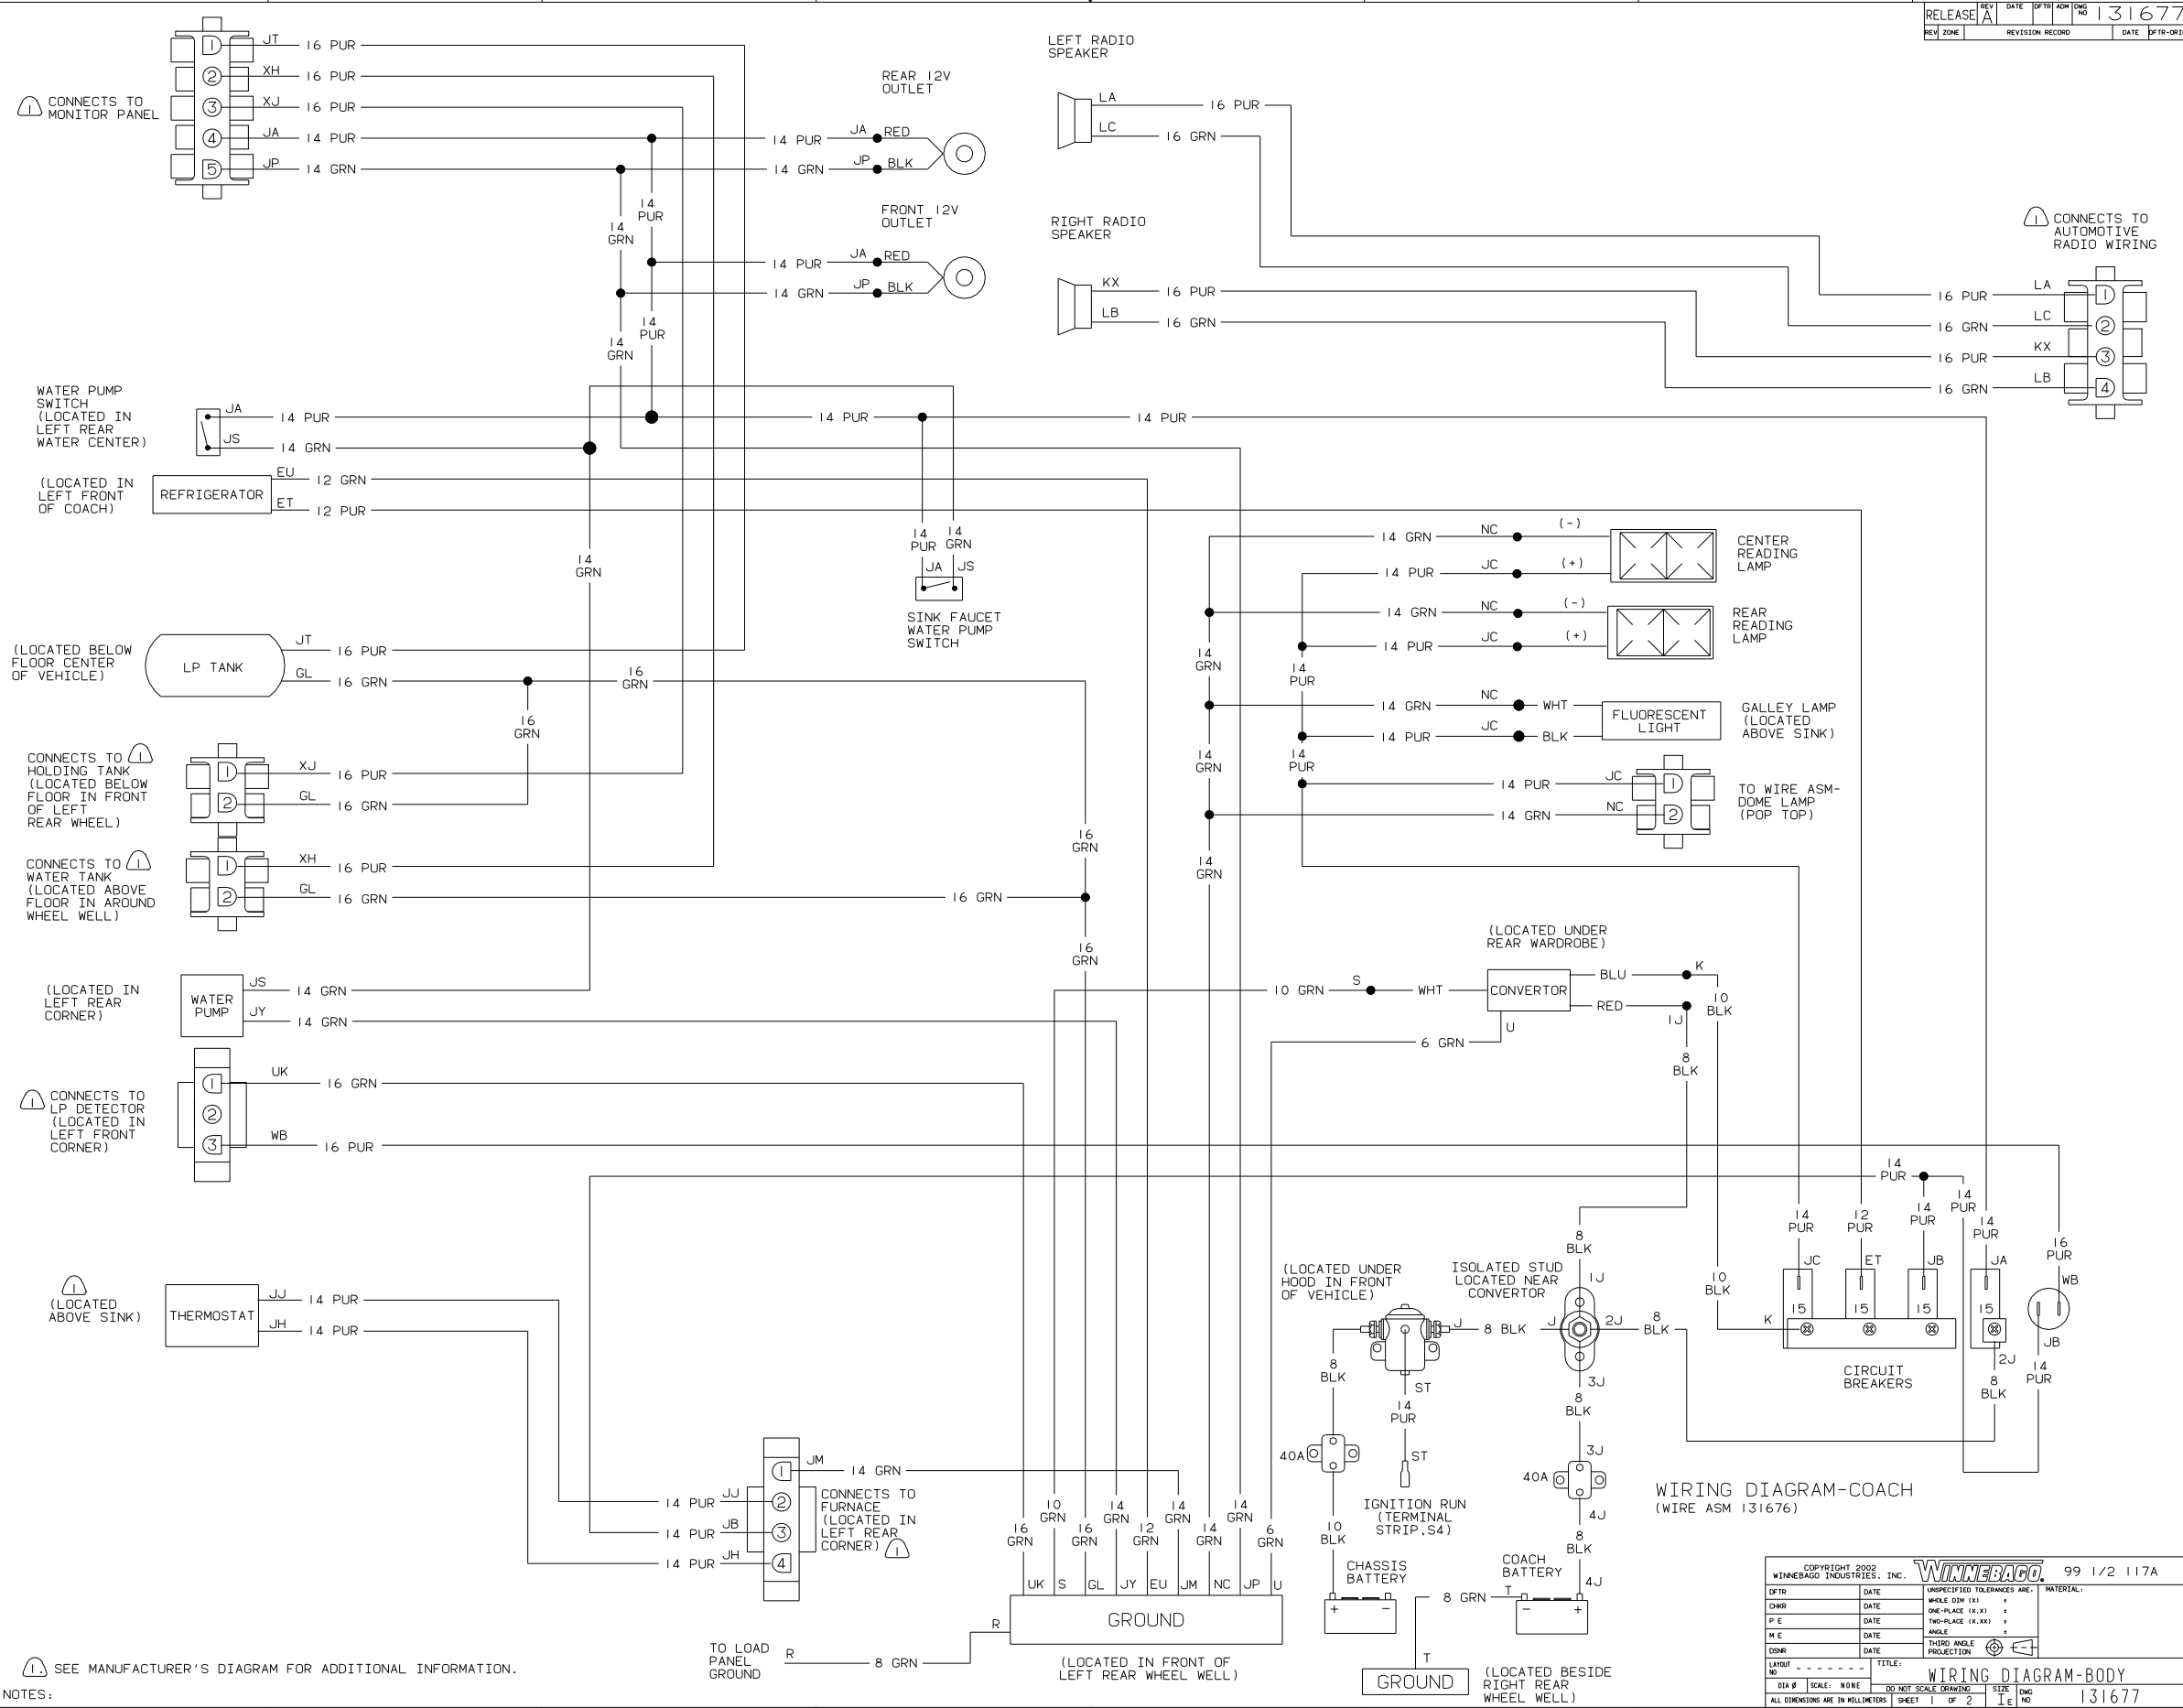

NOTES:
1. SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

WIRING DIAGRAM-COACH
(WIRE ASM 131676)

COPYRIGHT 2002 WINNEBAGO INDUSTRIES, INC. WINNEBAGO 99 1/2 117A			
DATE	DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL:
CHNR	DATE	WHOLE DIM (X, Y) ±	
P E	DATE	ONE-PLACE (X, Y) ±	
M E	DATE	TWO-PLACE (X, Y) ±	
CHNR	DATE	ANGLE	
DATE	DATE	THIRD ANGLE PROJECTION	
LAYOUT NO	TITLE: WIRING DIAGRAM-BODY		
DIA #	SCALE: NONE	DO NOT SCALE DRAWING	SHEET NO 131677
ALL DIMENSIONS ARE IN MILLIMETERS			
SHEET 1 OF 2		I.e. NO	

