




DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

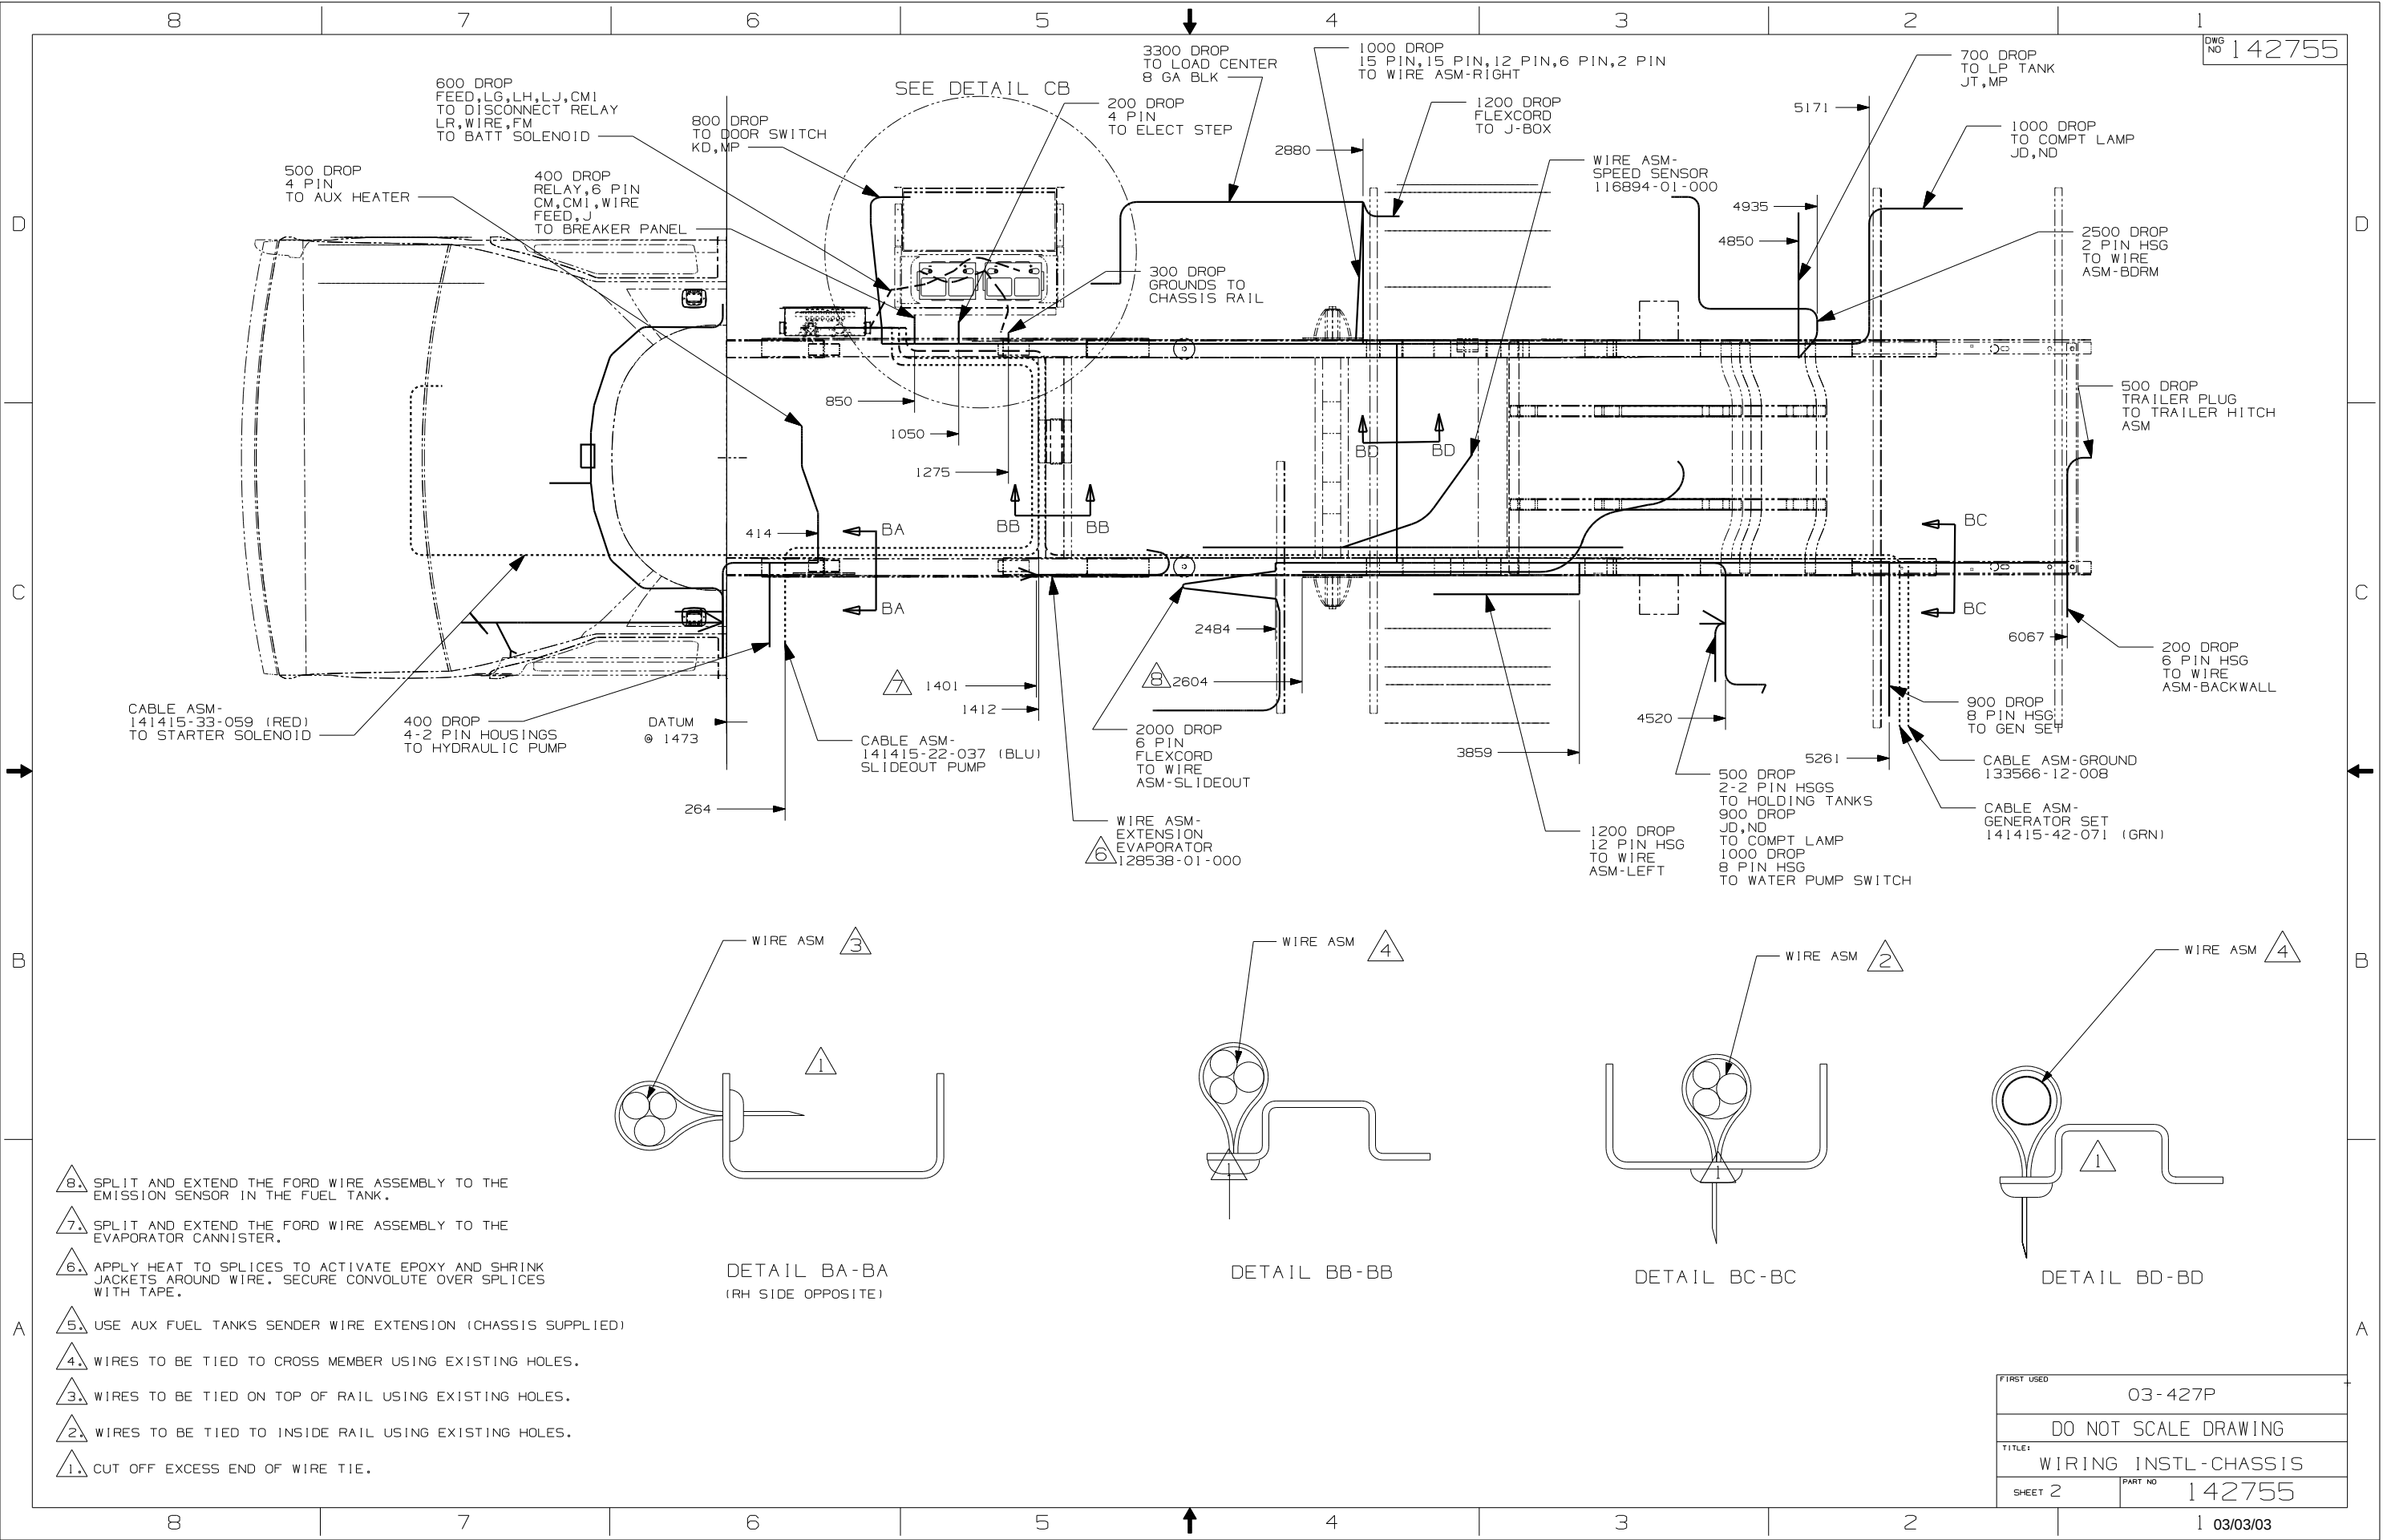


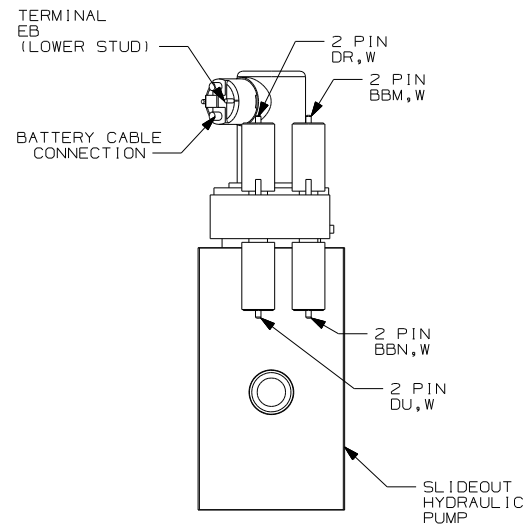


VIEW CA
(TOP VIEW)

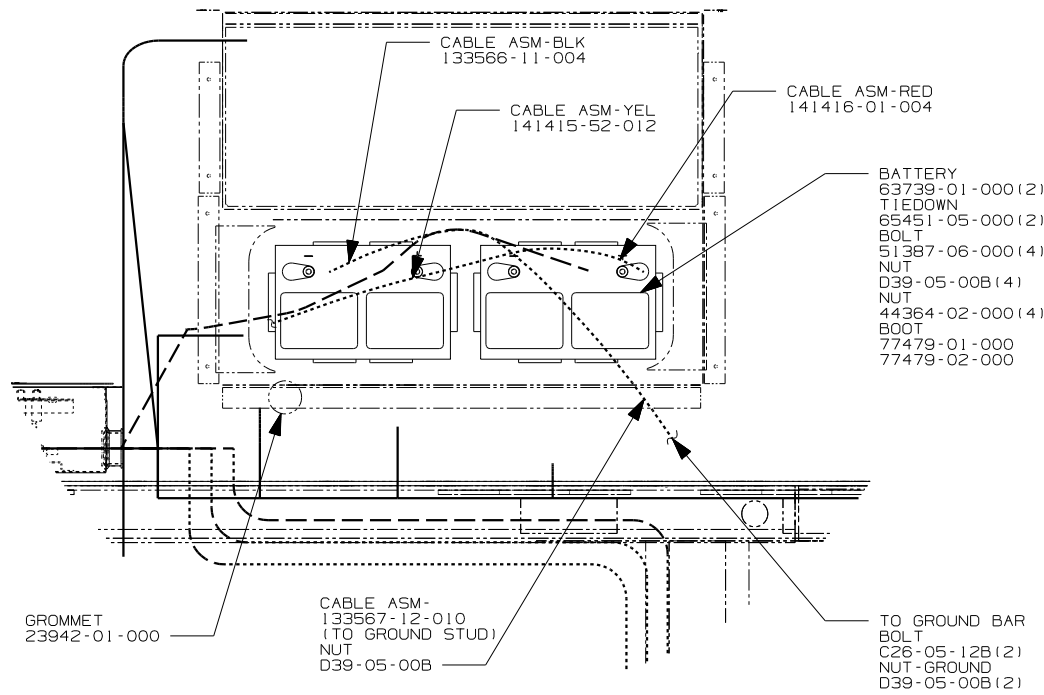


DETAIL CB

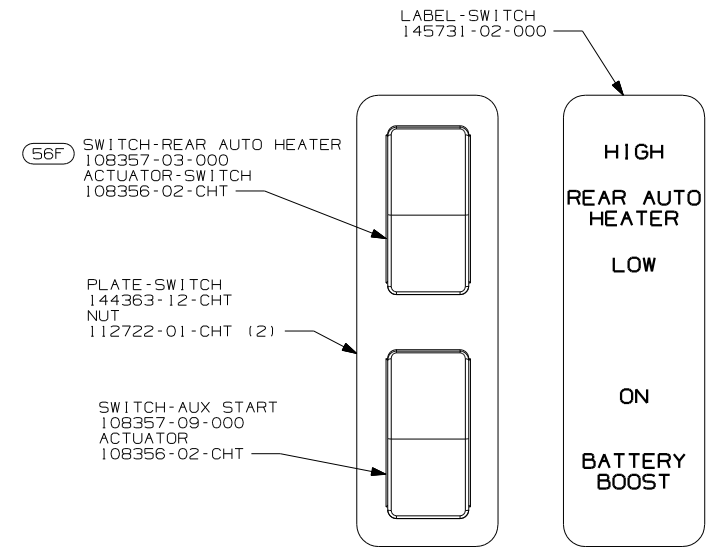

VIEW CC

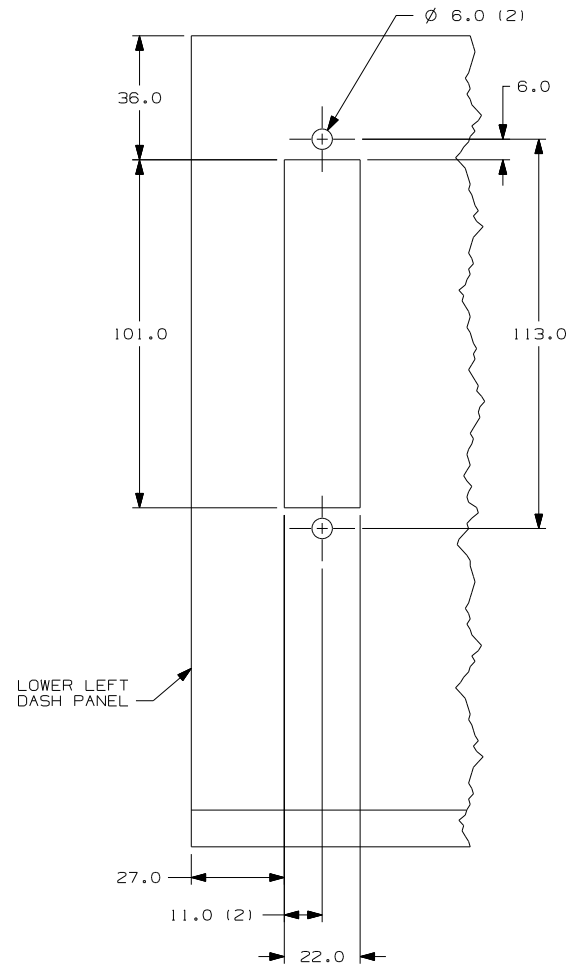


VIEW CD

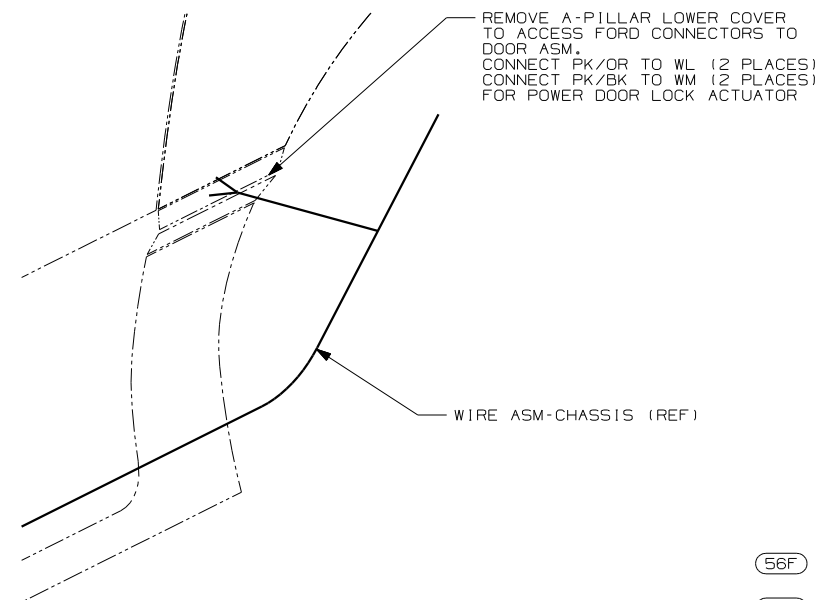


DETAIL CE

- 56F HEATER-AUXILIARY AUTOMOTIVE
- 40F INVERTER-DC/AC-130W
- 22W BATTERY-TWO


FIRST USED	03-427P
TITLE	DO NOT SCALE DRAWING
WIRING INSTL-CHASSIS	
SHEET 3	PART NO 142755

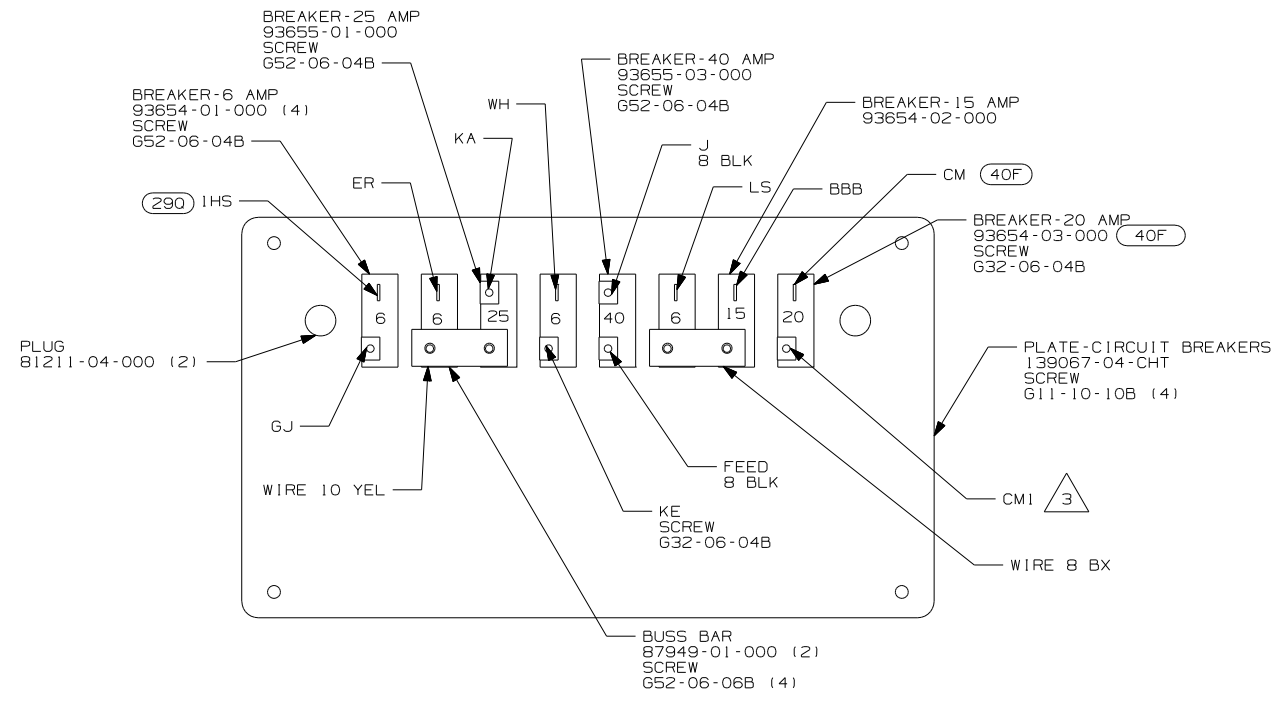


DETAIL DC

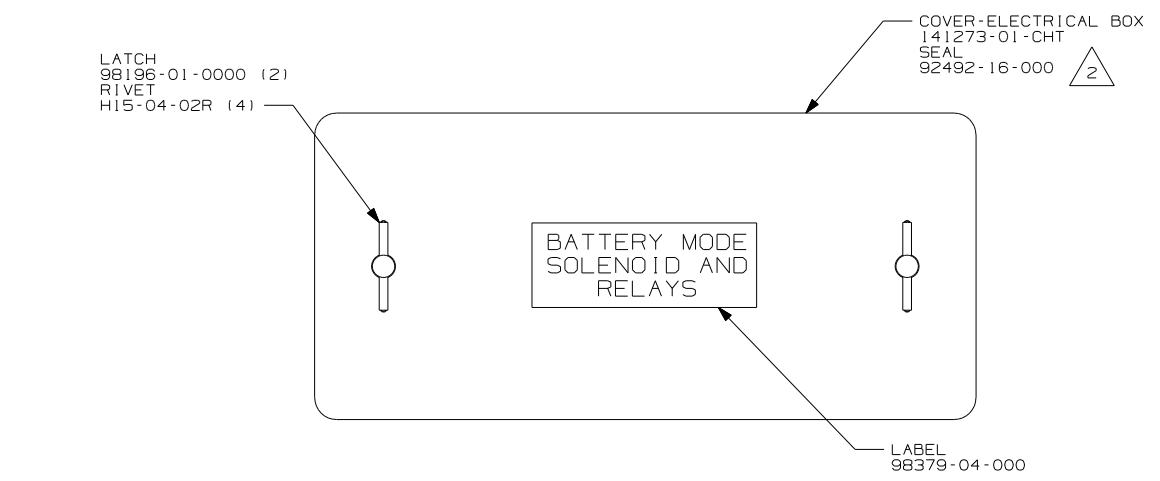

DETAIL DB

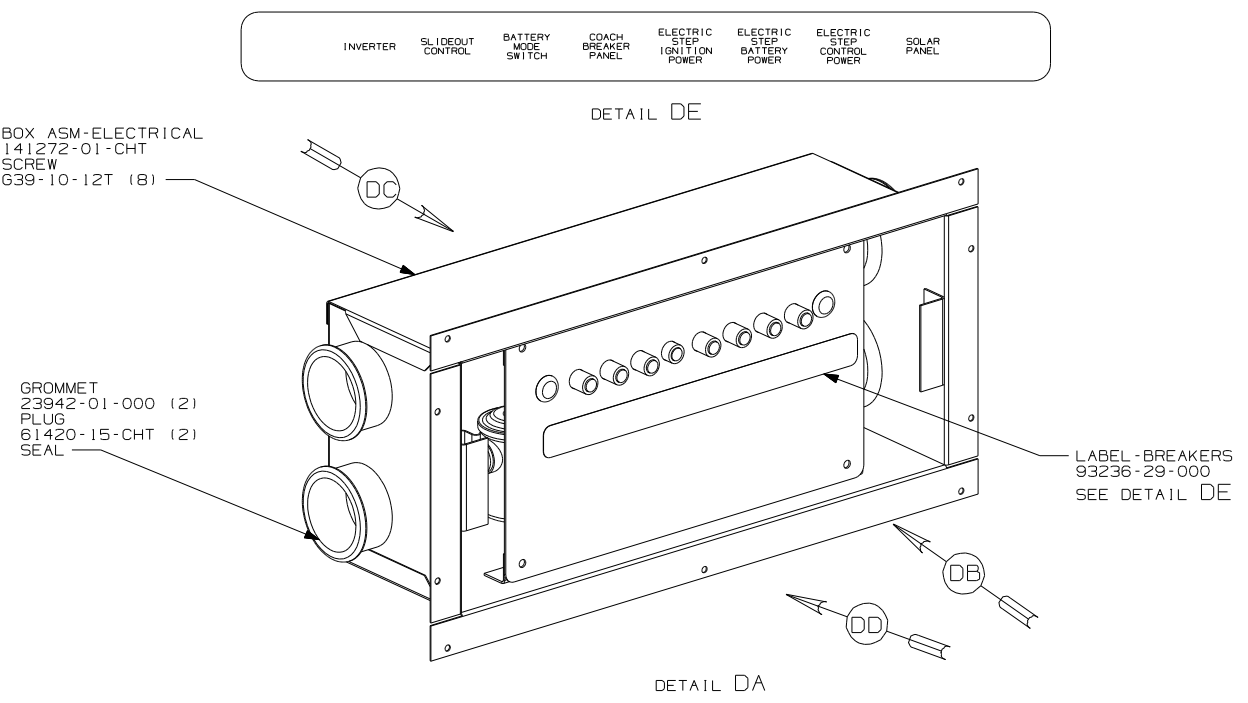

DETAIL DA

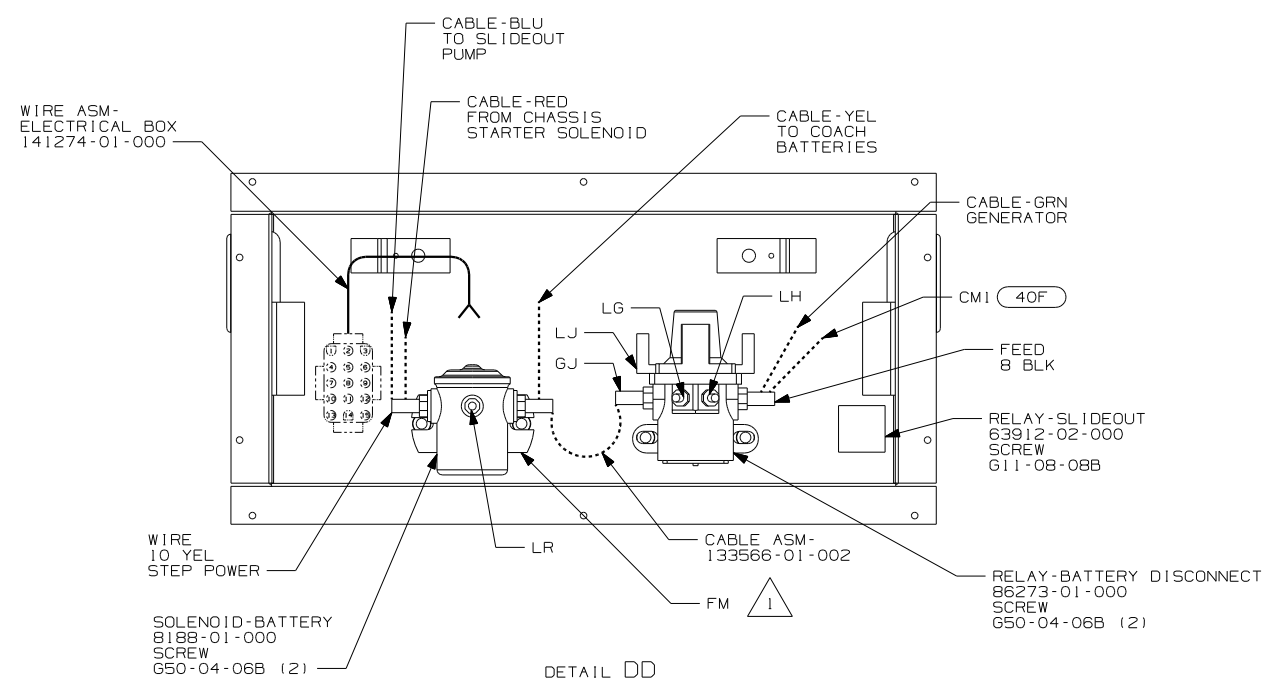

DETAIL DD

NOTES:


3 LEAD ONLY USED WITH (40F). WHEN LEAD NOT USED, PROTECT TERMINAL WITH TAPE 8363-01-000 AND SECURE TO MAIN WIRE ASM.

2 PLACE AROUND ENTIRE PERIMETER OF DOOR WITH SEAM AT TOP.

1 SECURE WITH SOLENOID MOUNTING SCREW.

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

X-X FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

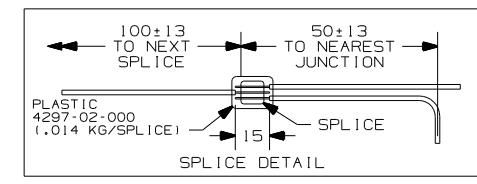

(290) SOLAR PANEL

(40F) INVERTER-DC/AC-130 WATT

FIRST USED	03-427P	
TITLE	DO NOT SCALE DRAWING	
	WIRING INSTL-CHASSIS	
SHEET	4	PART NO 142755
1 03/03/03		