




DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

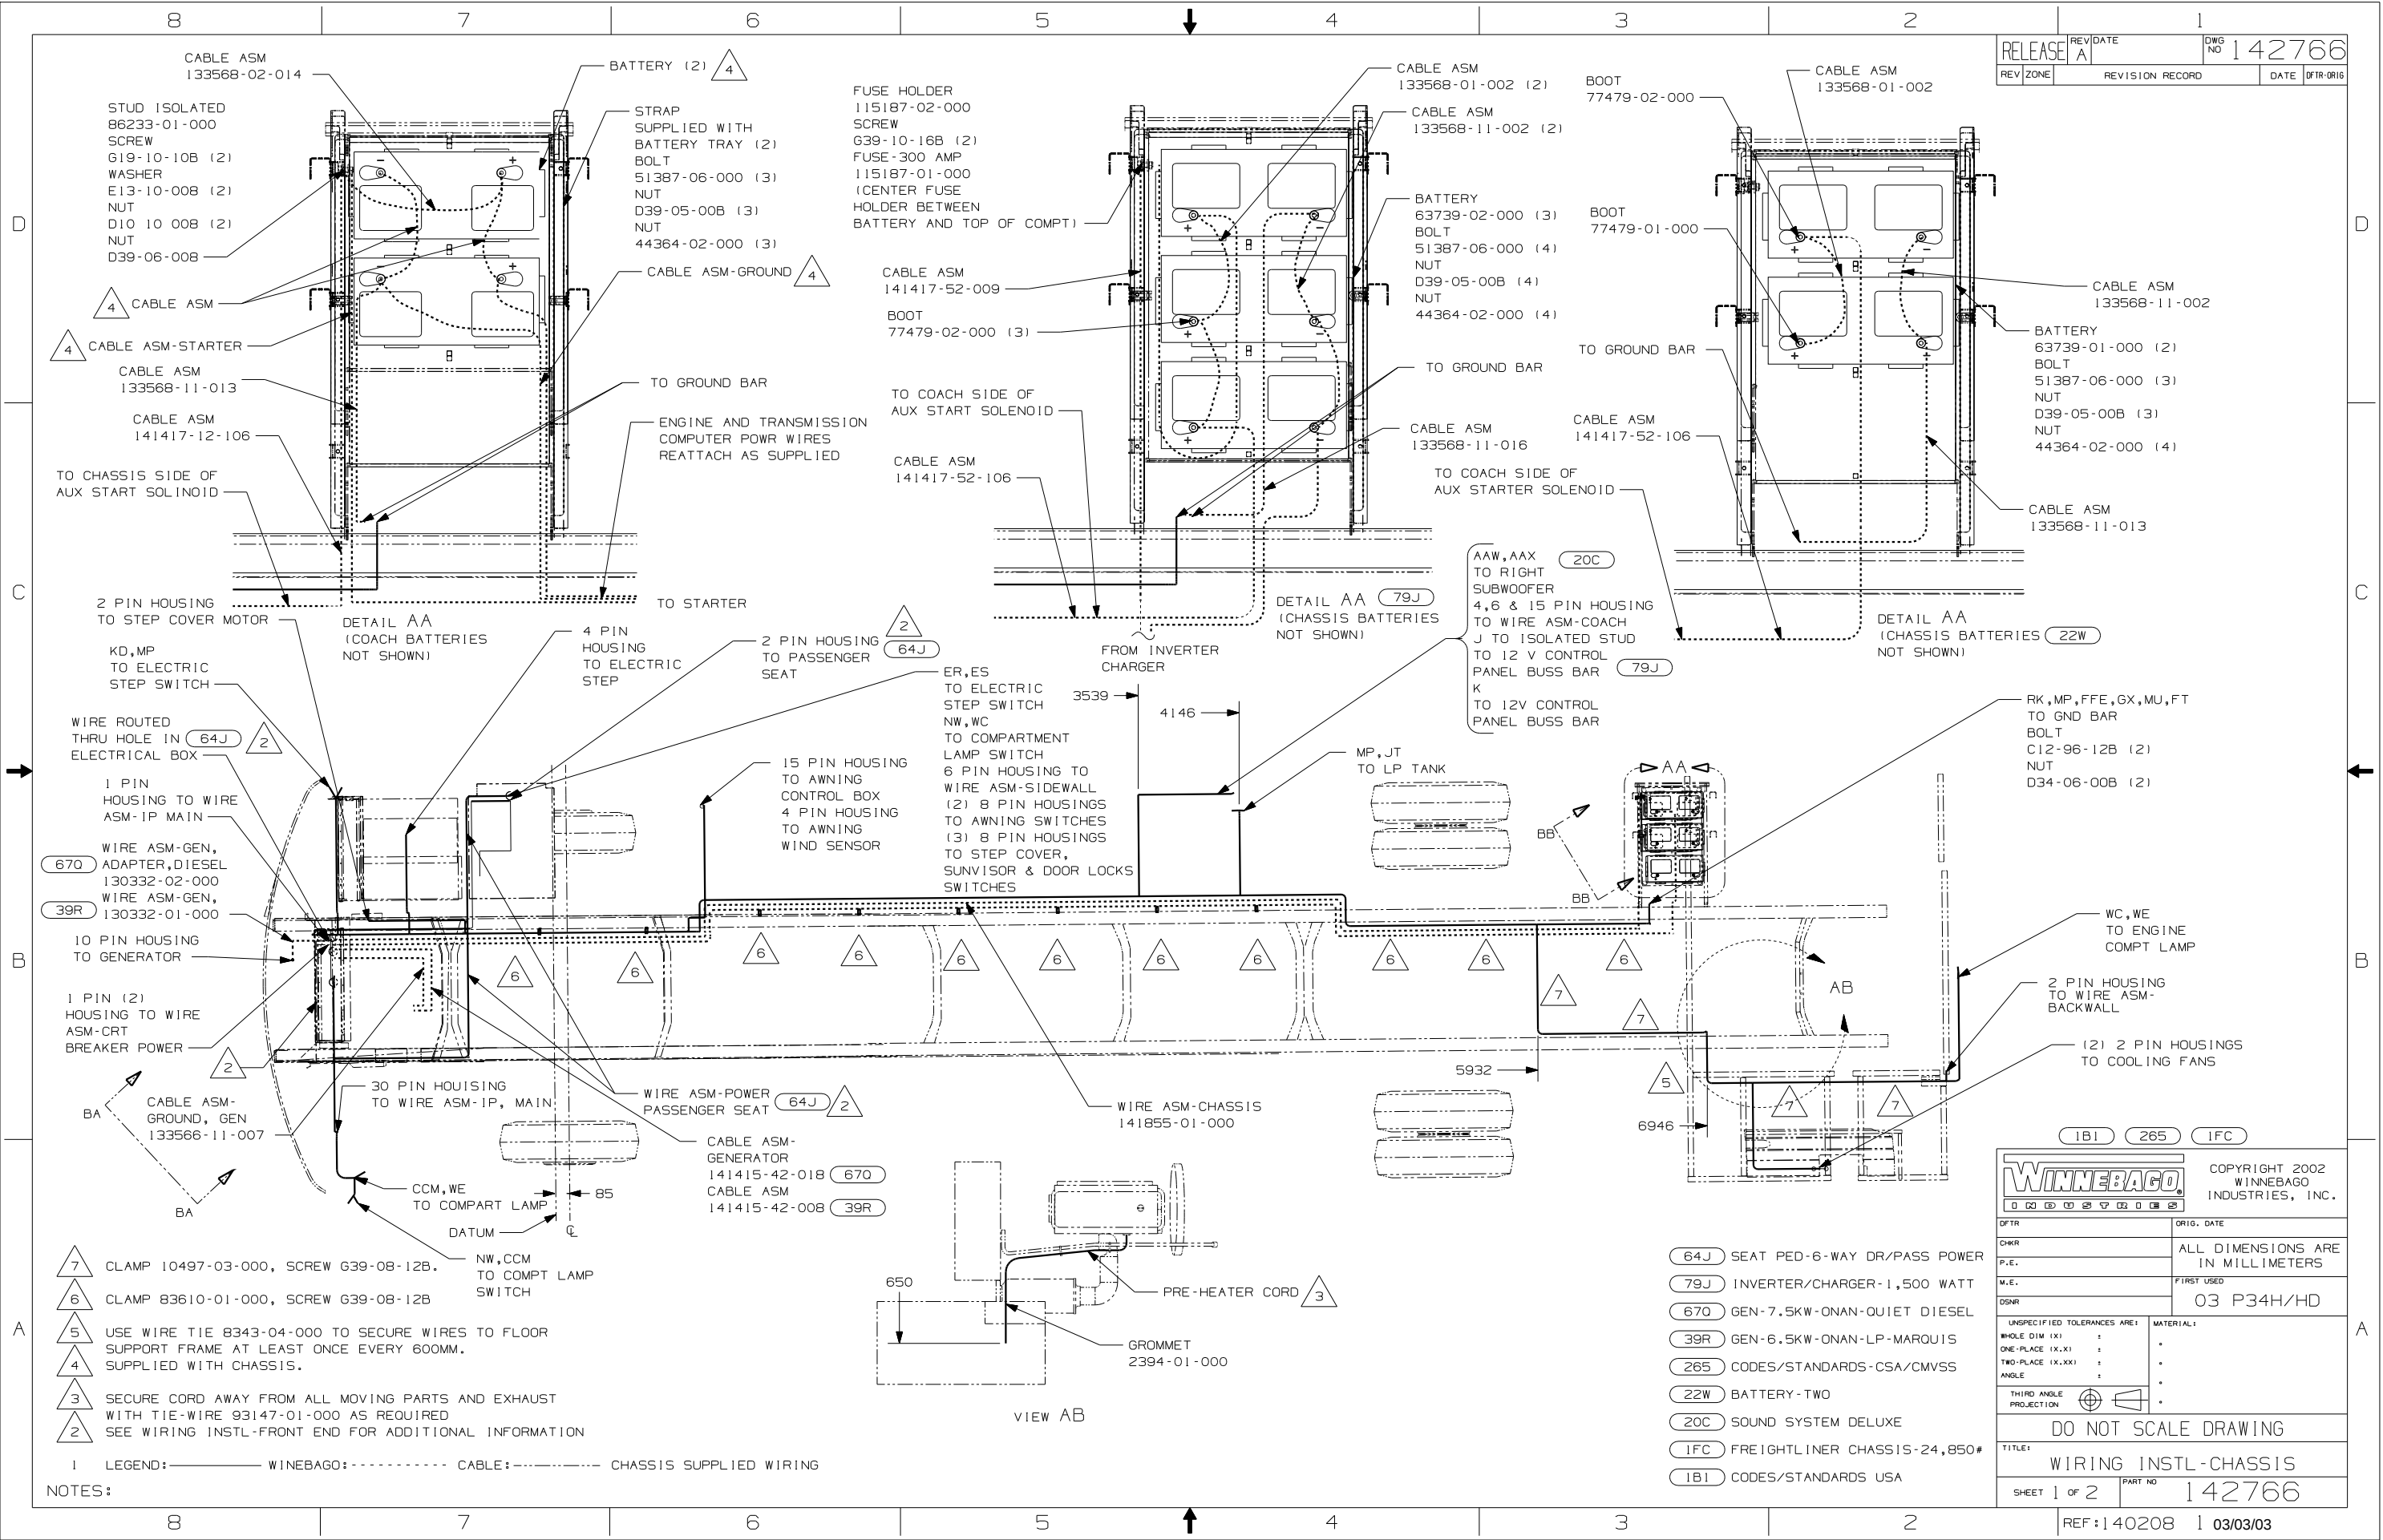

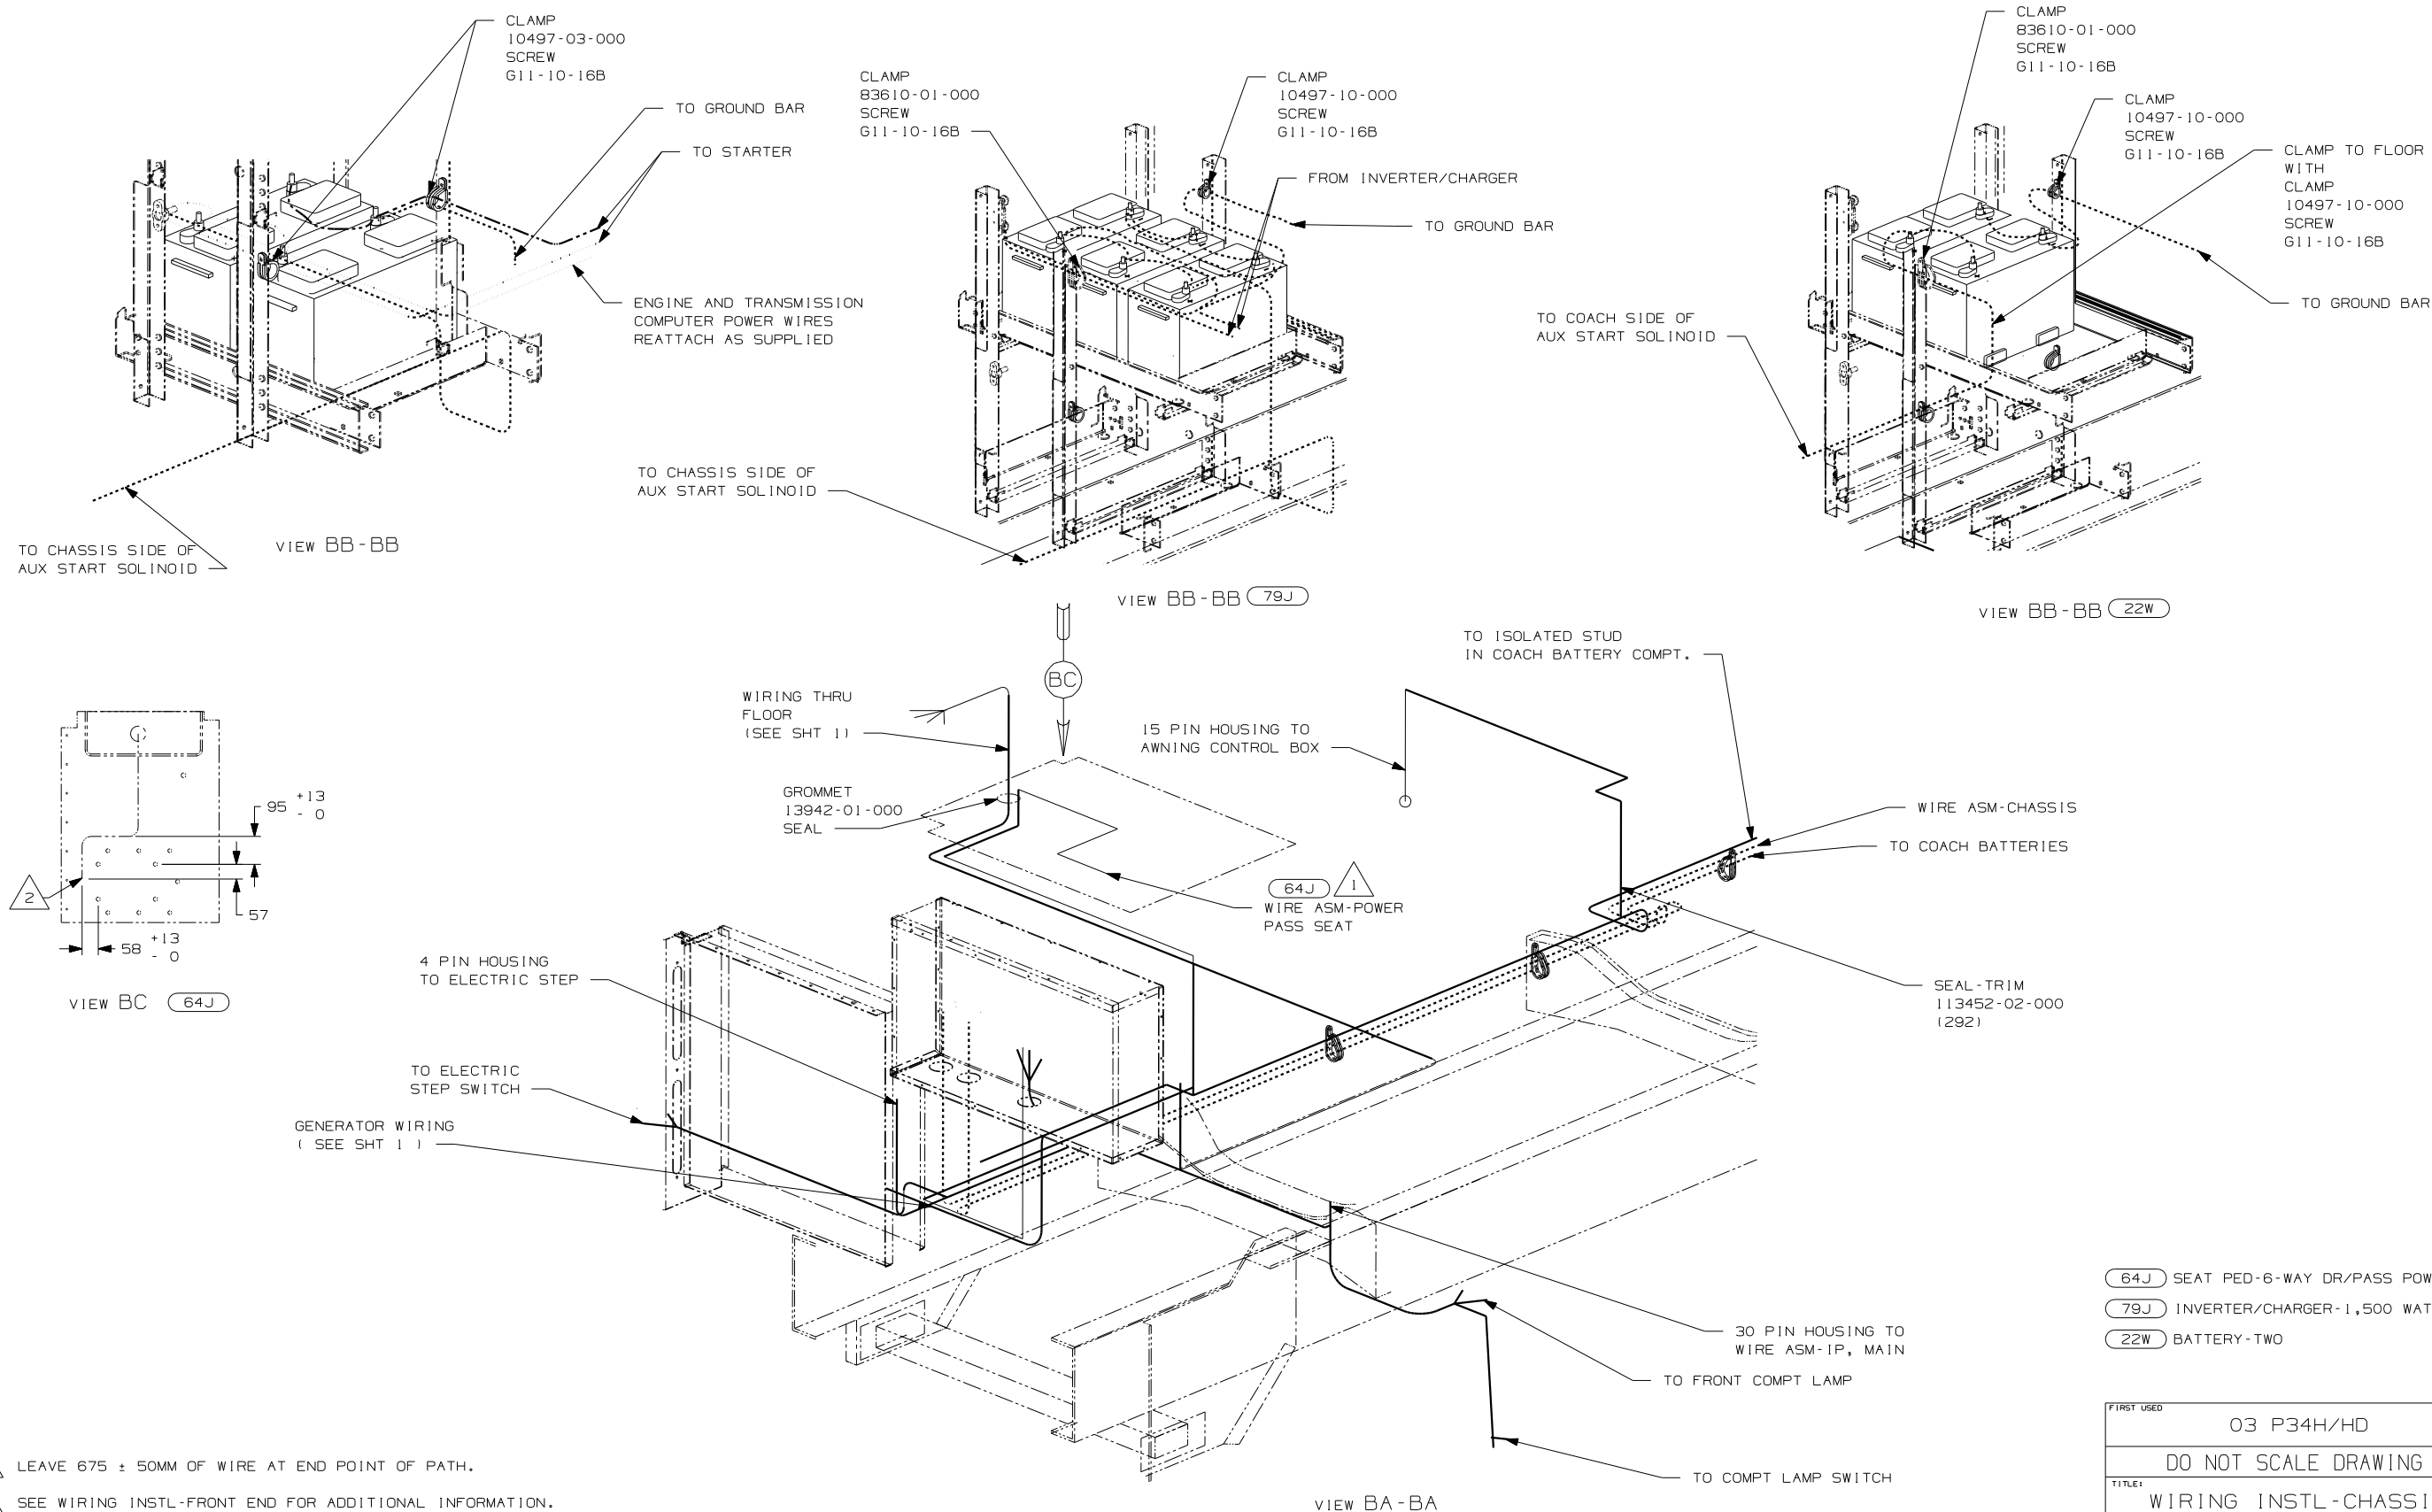

NOTES:

2 LEAVE 675 ± 50MM OF WIRE AT END POINT OF PATH.

1 SEE WIRING INSTL-FRONT END FOR ADDITIONAL INFORMATION.

(64J) SEAT PED-6-WAY DR/PASS POWER

(79J) INVERTER/CHARGER-1,500 WATT

(22W) BATTERY-TWO

FIRST USED		03 P34H/HD	
DO NOT SCALE DRAWING			
TITLE: WIRING INSTL-CHASSIS			
SHEET	2	PART NO	142766