



DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


CONNECTS TO GENERATOR 4

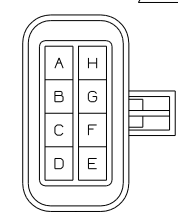


- A-LN 16 WHT
- B-LM 16 WHT
- C-LL 16 WHT
- D-
- E-
- F-LP 16 YEL
- G-
- H-

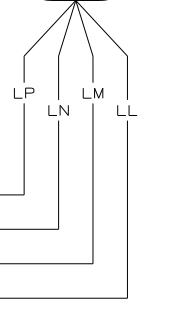

LP TANK

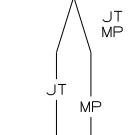


CONNECTS TO WIRE ASM-RIGHT (SHT 5, C-8) (LOCATED BELOW REFRIGERATOR)

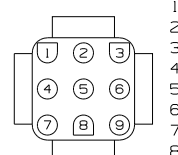


- 1-EU 16 WHT
- 2-UK 16 WHT
- 3-NC 14 WHT
- 4-JM 14 WHT
- 5-JP 14 WHT
- 6-XP 16 YEL
- 7-XR 16 YEL
- 8-XS 16 YEL
- 9-BBH 16 YEL




CONNECTS TO WIRE ASM-LEFT (SHT 3, D-14) (LOCATED BELOW VANITY)

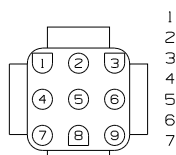

- 1-JY 12 WHT
- 2-GL 16 WHT
- 3-ND 14 WHT
- 4-JX 14 WHT
- 5-
- 6-JM 14 WHT
- 7-JP 14 WHT
- 8-KF 16 WHT
- 9-NC 14 WHT


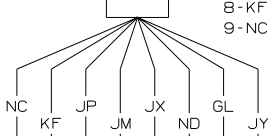


- KF 16 WHT
- FM 14 WHT
- MP 16 WHT
- UK 16 WHT
- JY 12 WHT
- ND 14 WHT
- JX 14 WHT
- JP 14 WHT
- NC 14 WHT
- GL 16 WHT
- EU 16 WHT
- JM 14 WHT

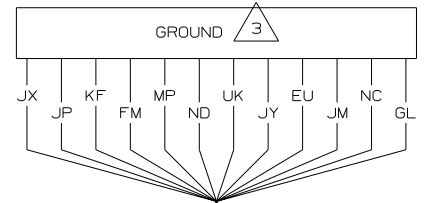

- LP
- LN
- LM
- LL
- JT
- XS
- XR
- XP
- BBH
- GND

 DOME LAMP

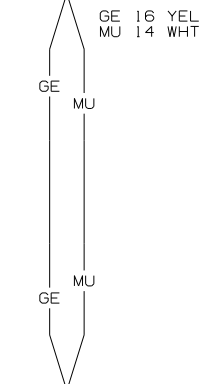


- GE 16 YEL
- MU 14 WHT
- BLK-MU 14 WHT
- BLK/LT BLU-GE 16 YEL
- LT GRN/YEL-NOT USED


CONNECTS TO FORD WIRING (LOCATED IN STEP WELL)

JA

FEED

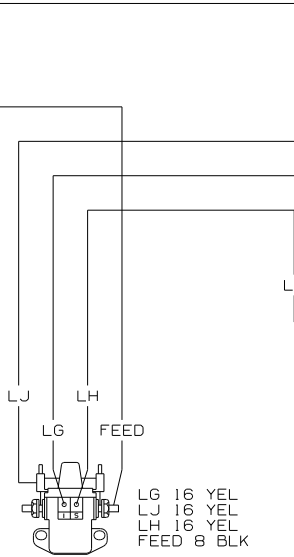


BATTERY DISCONNECT RELAY

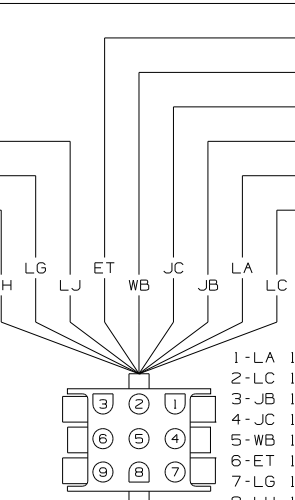


- 1-LA 16 YEL
- 2-LC 16 WHT
- 3-JB 14 YEL
- 4-JC 14 YEL
- 5-WB 16 YEL
- 6-ET 16 YEL
- 7-LG 16 YEL
- 8-LH 16 YEL
- 9-LJ 16 YEL

CONNECTS TO WIRE ASM-LEFT (SHT 3, D-12) (LOCATED BELOW BATH VANITY)

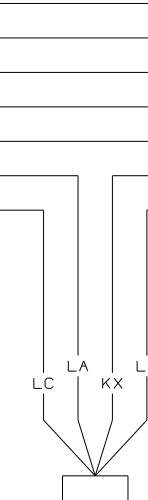


- RED/WHT-KX 16 YEL
- DK BLU/WHT-LA 16 YEL
- GRN/WHT-LC 16 WHT
- YEL/RED-LB 16 WHT
- DK BLU/RED-NOT USED
- YEL/BLK-NOT USED

CONNECTS TO FORD WIRING (LOCATED BEHIND DRIVER DOOR)

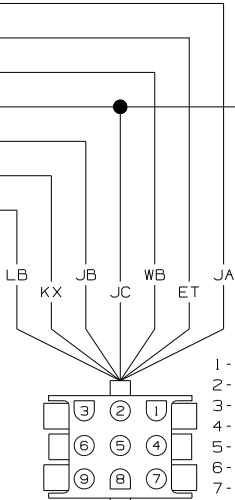


- 1-KX 16 YEL
- 2-LB 16 WHT
- 3-JB 14 YEL
- 4-JC 14 YEL
- 5-WB 16 YEL
- 6-ET 16 YEL
- 7-JA 14 YEL
- 8-
- 9-

CONNECTS TO WIRE ASM-RIGHT (SHT 5, D-8) (LOCATED BELOW REFRIGERATOR)

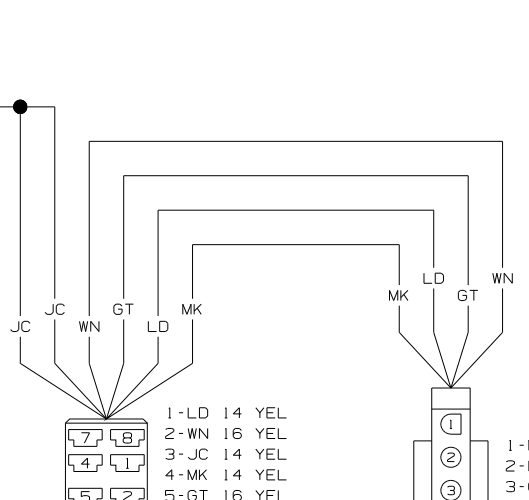

- 1-LD 14 YEL
- 2-WN 16 YEL
- 3-JC 14 YEL
- 4-MK 14 YEL
- 5-GT 16 YEL
- 6-JC 14 YEL
- 7-
- 8-

CONNECTS TO RADIO SWITCH

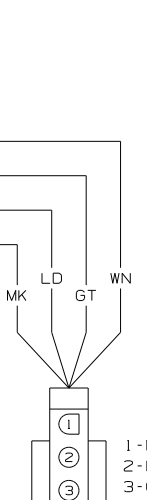

- 1-MK 14 YEL
- 2-LD 14 YEL
- 3-GT 16 YEL
- 4-WN 16 YEL

CONNECTS TO DASH RADIO ASM



WIRING DIAGRAM-CHASSIS, FORD (WIRE ASM 146686 REV-D)

WINNEBAGO		COPYRIGHT 2003 WINNEBAGO INDUSTRIES, INC.	
DFT#	ORIG. DATE	ALL DIMENSIONS ARE IN MILLIMETERS	
CHR#		M.E.	
P.E.		FIRST USED	
DSCR		04 322E	
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
WHOLE DIM (XX)	:		
ONE-PLACE (X.X)	:		
TWO-PLACE (X.XX)	:		
ANGLE	:		
THIRD ANGLE PROJECTION			



DO NOT SCALE DRAWING

TITLE: WIRING DIAGRAM-BODY, 12V

SHEET 1 of 5 PART NO 146691

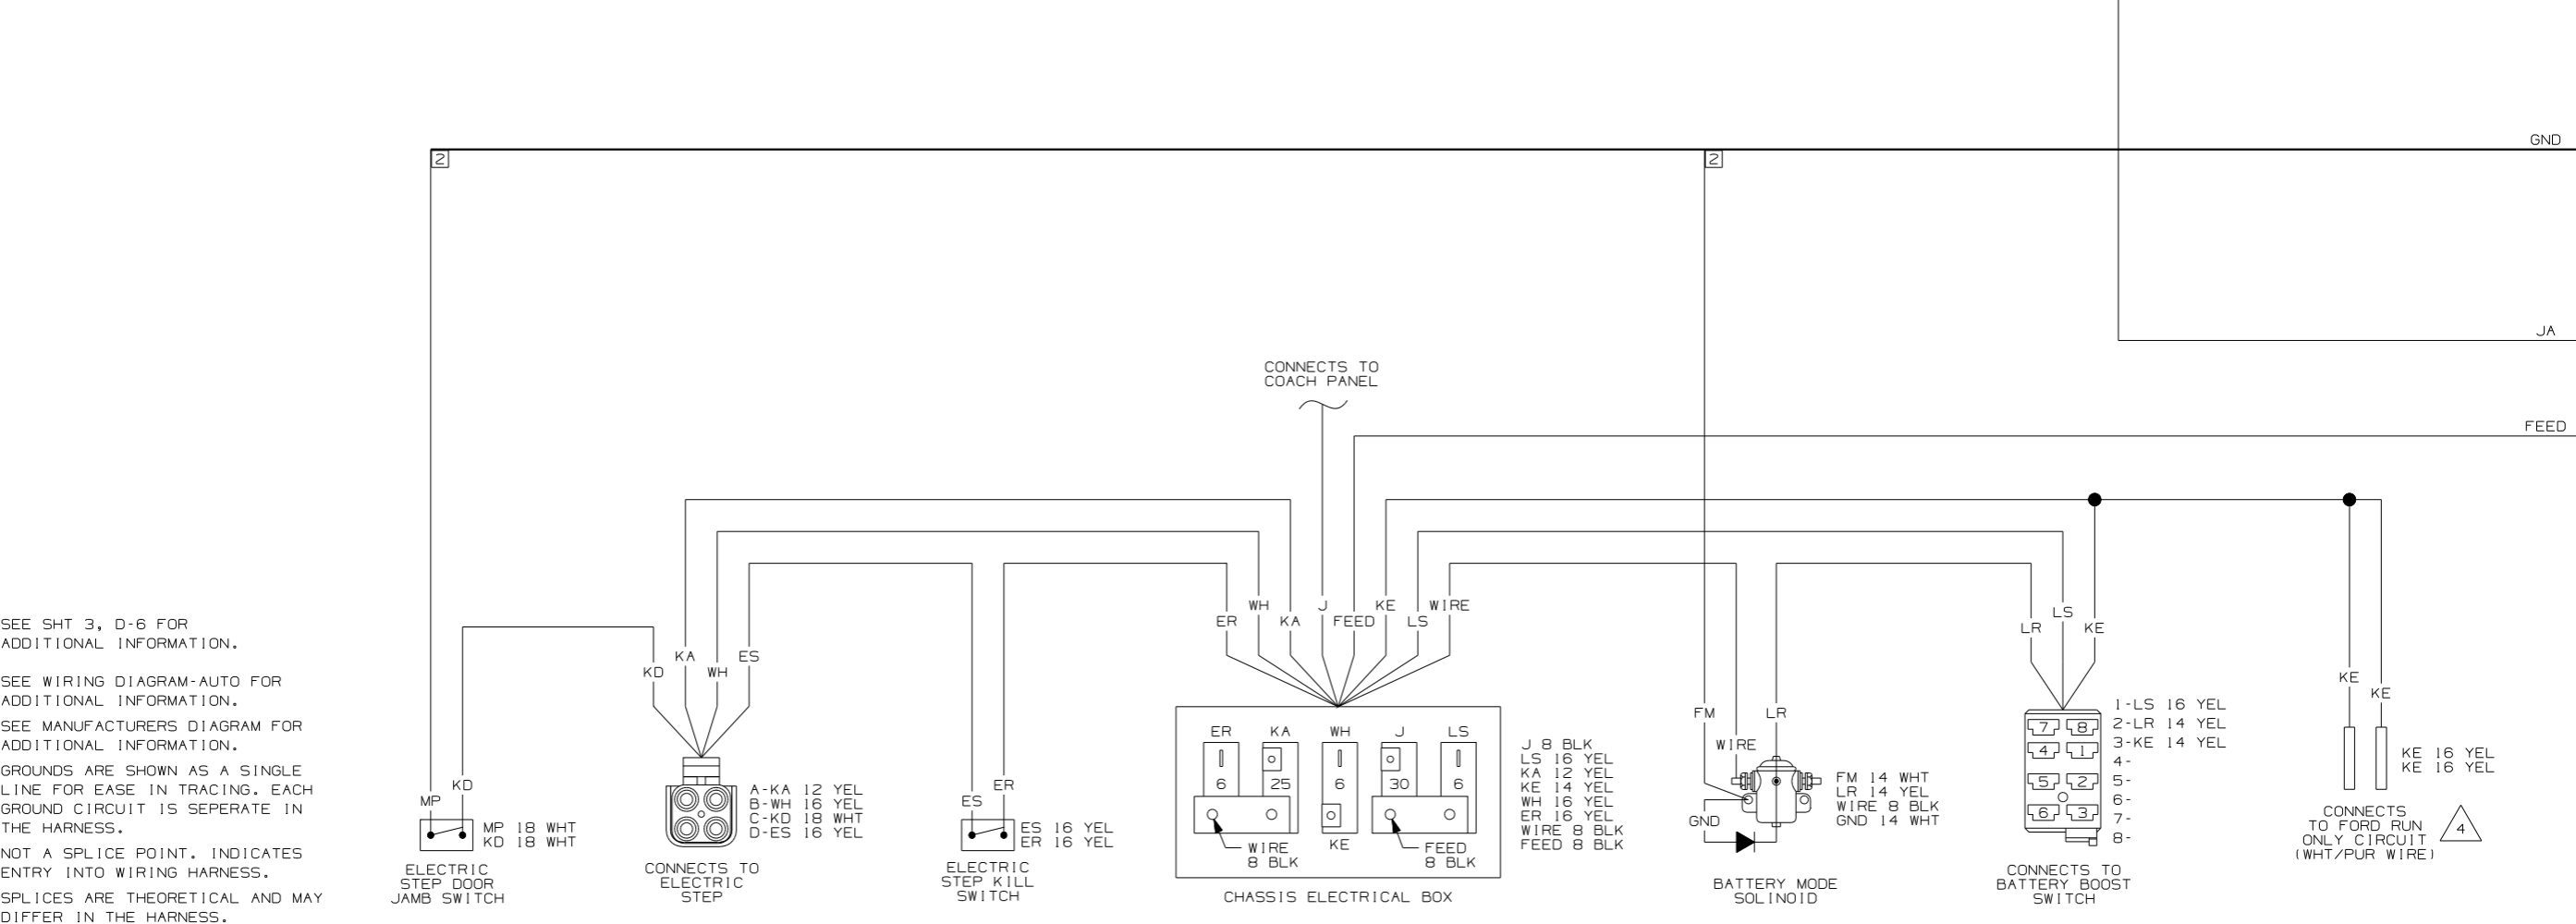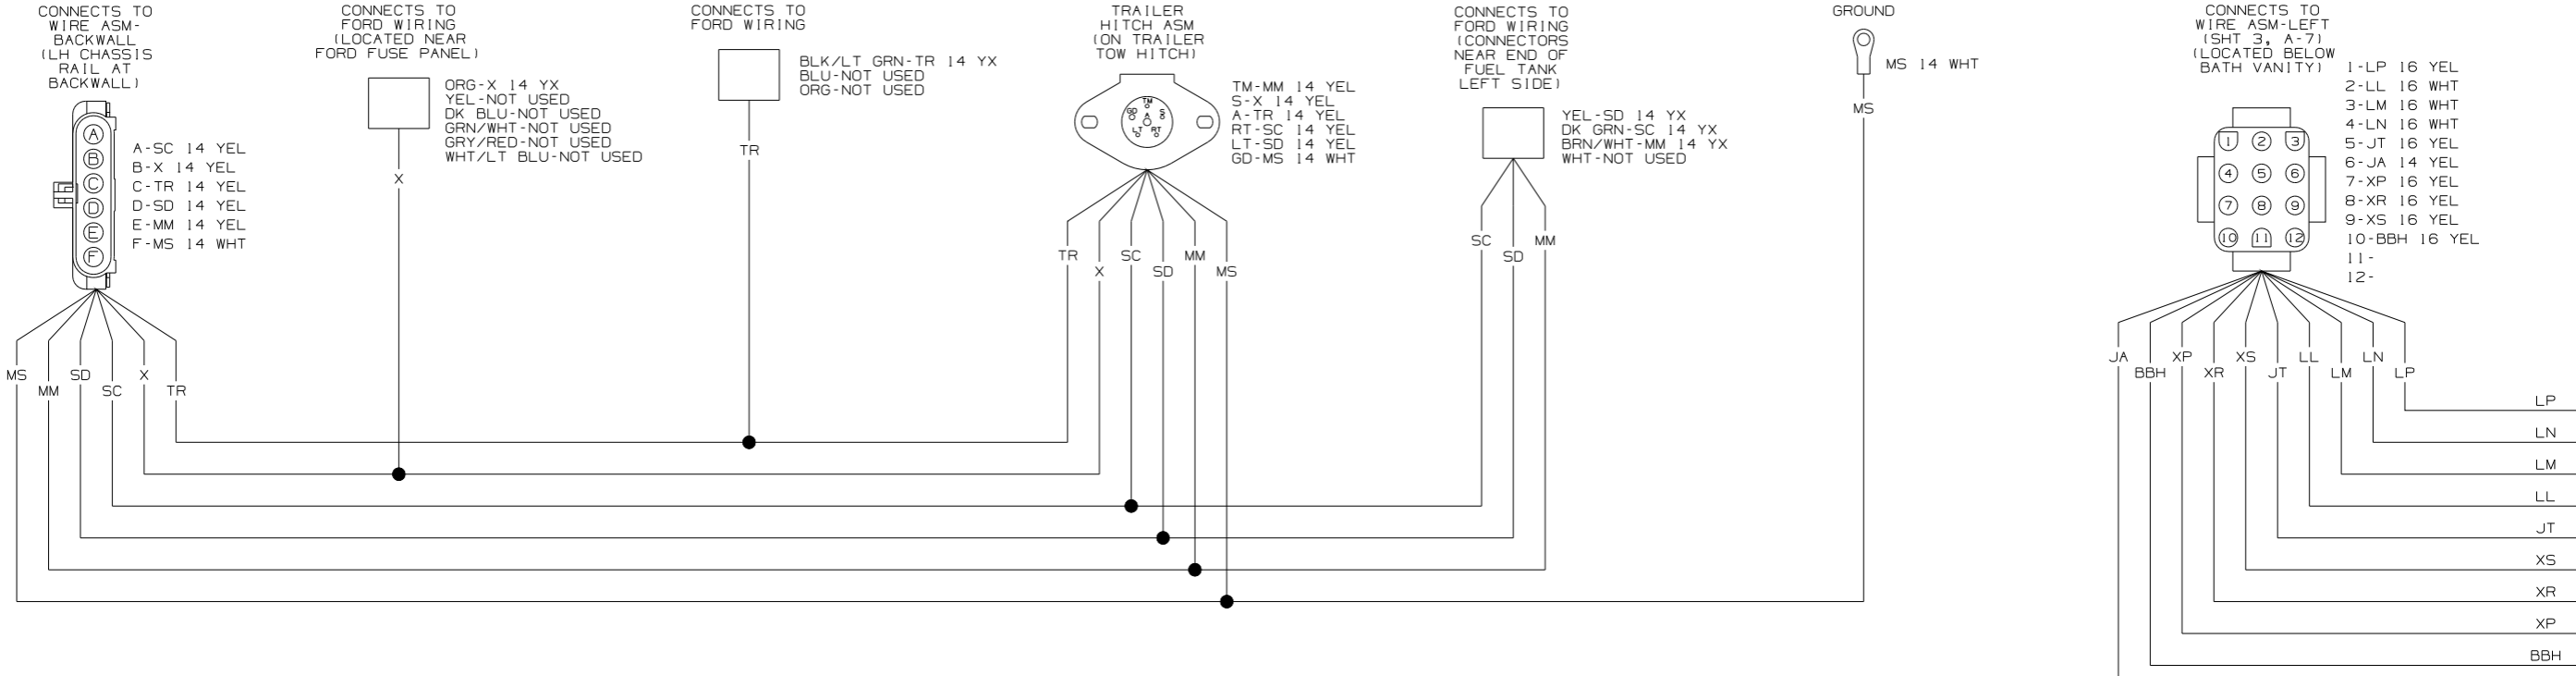



- 6 SEE SHT 3, D-6 FOR ADDITIONAL INFORMATION.
 - 5 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
 - 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
 - 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
 - 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
- NOTES:
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

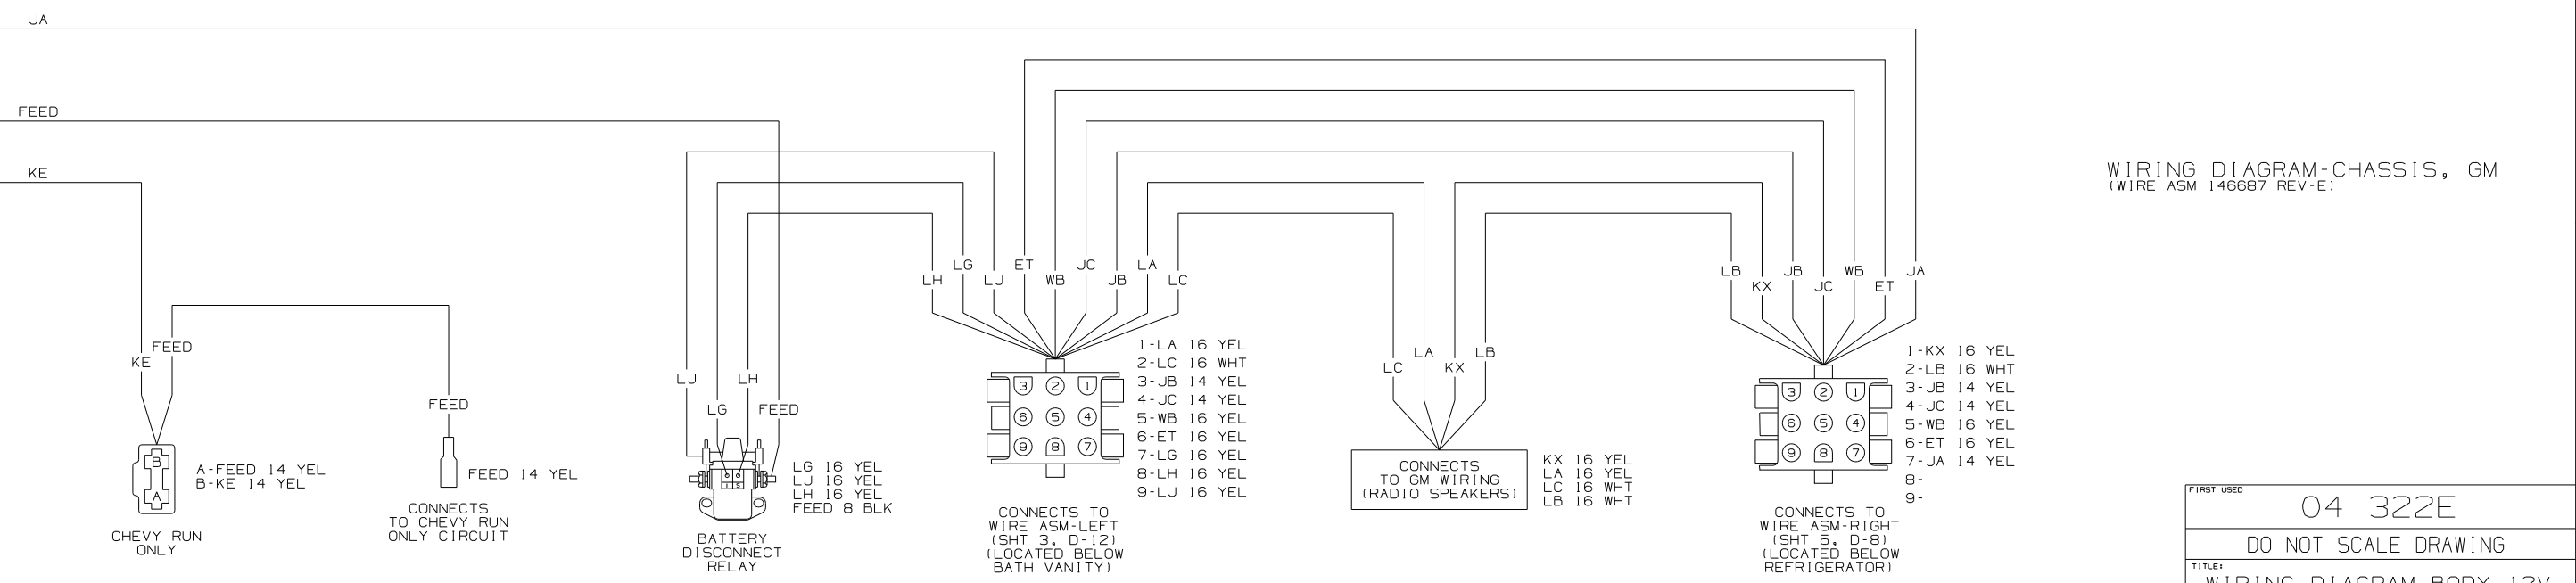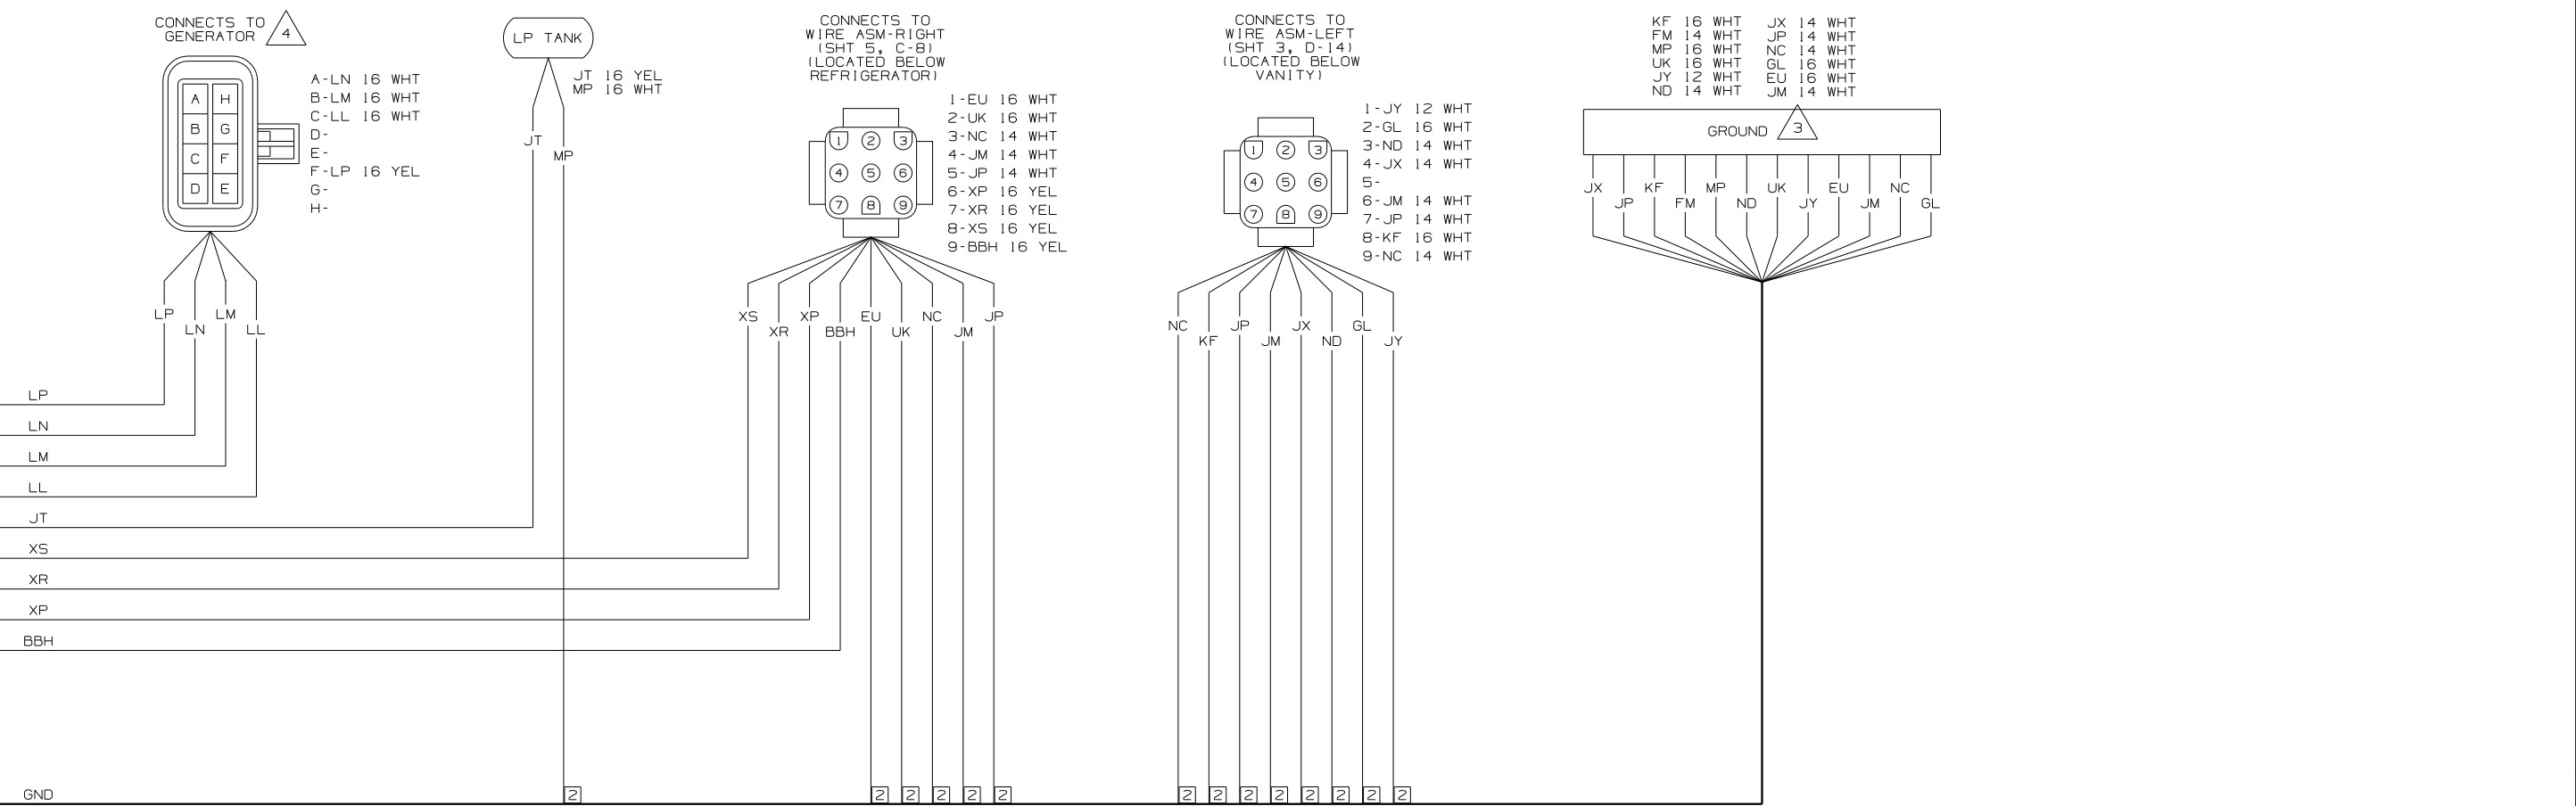


WIRING DIAGRAM-CHASSIS, GM
(WIRE ASM 146687 REV-E)

FIRST USED	04 322E	
TITLE	DO NOT SCALE DRAWING	
TITLE	WIRING DIAGRAM-BODY, 12V	
SHEET 2	PART NO	146691

D
C
B
A

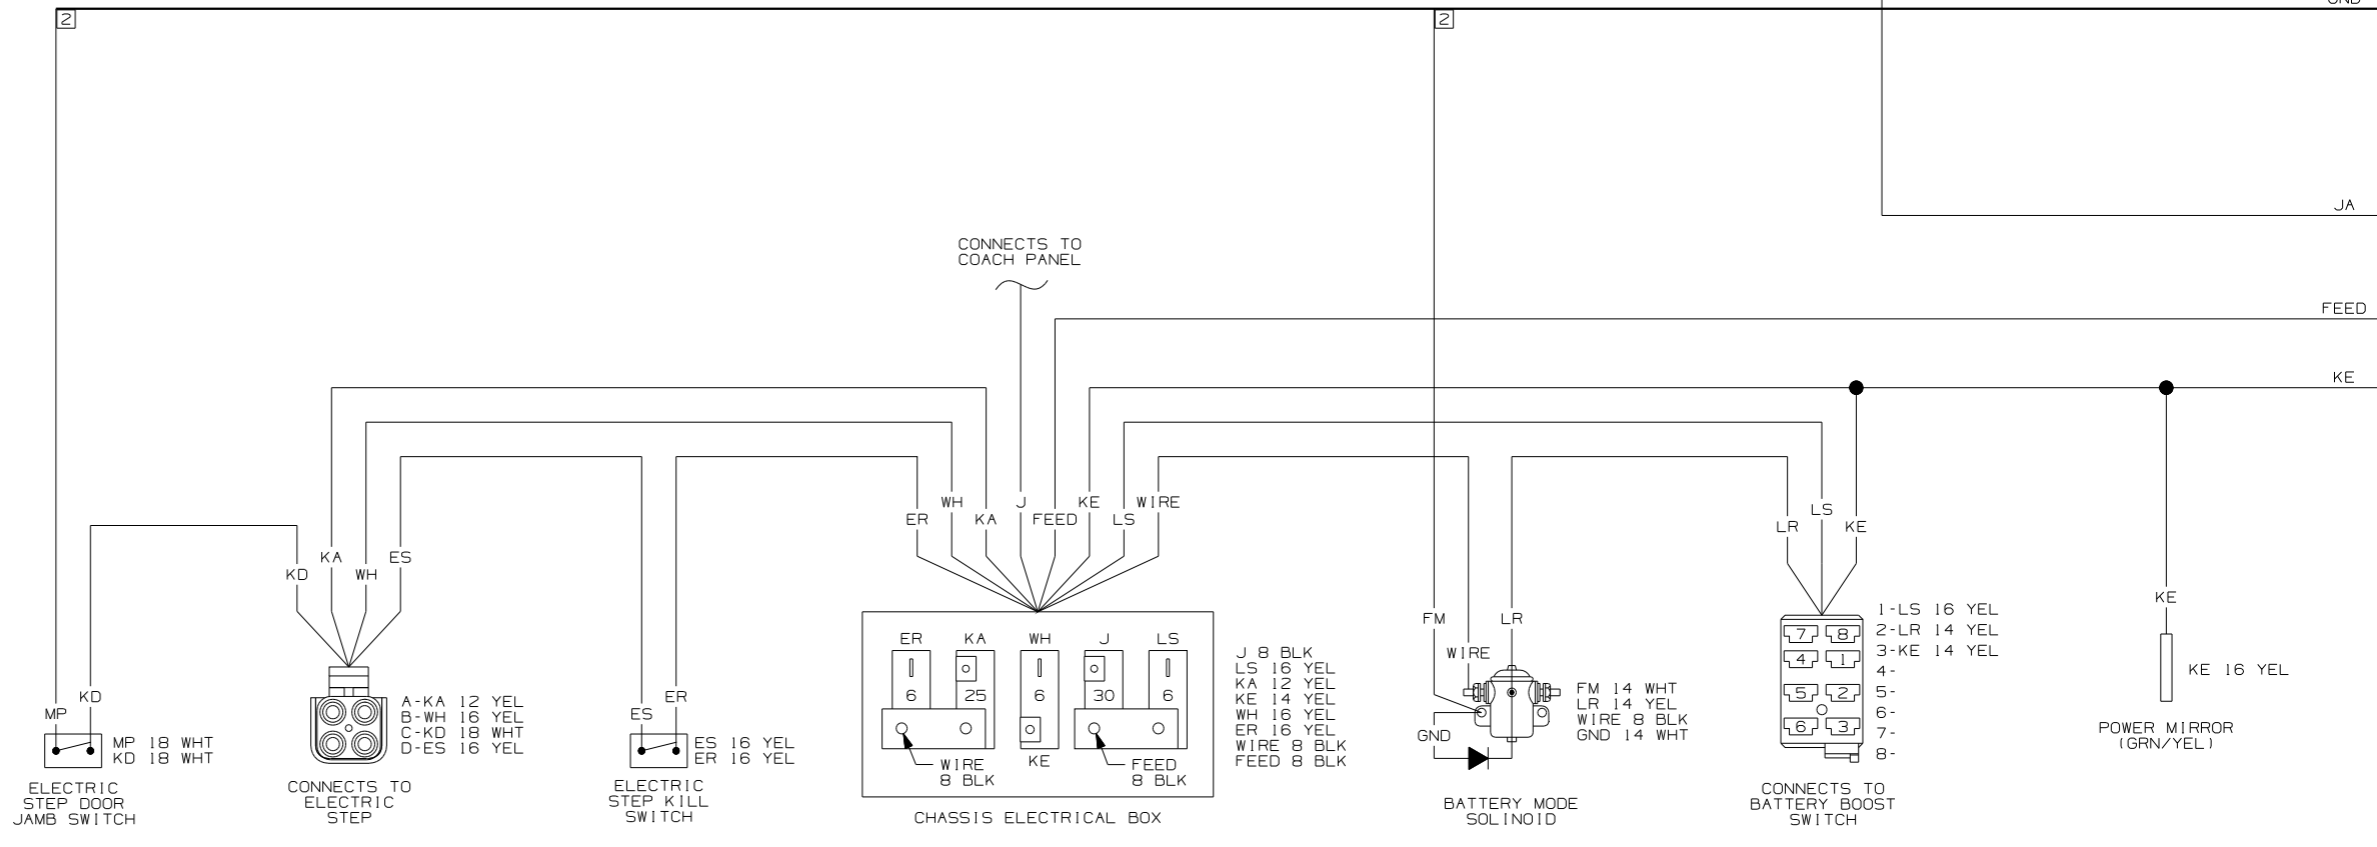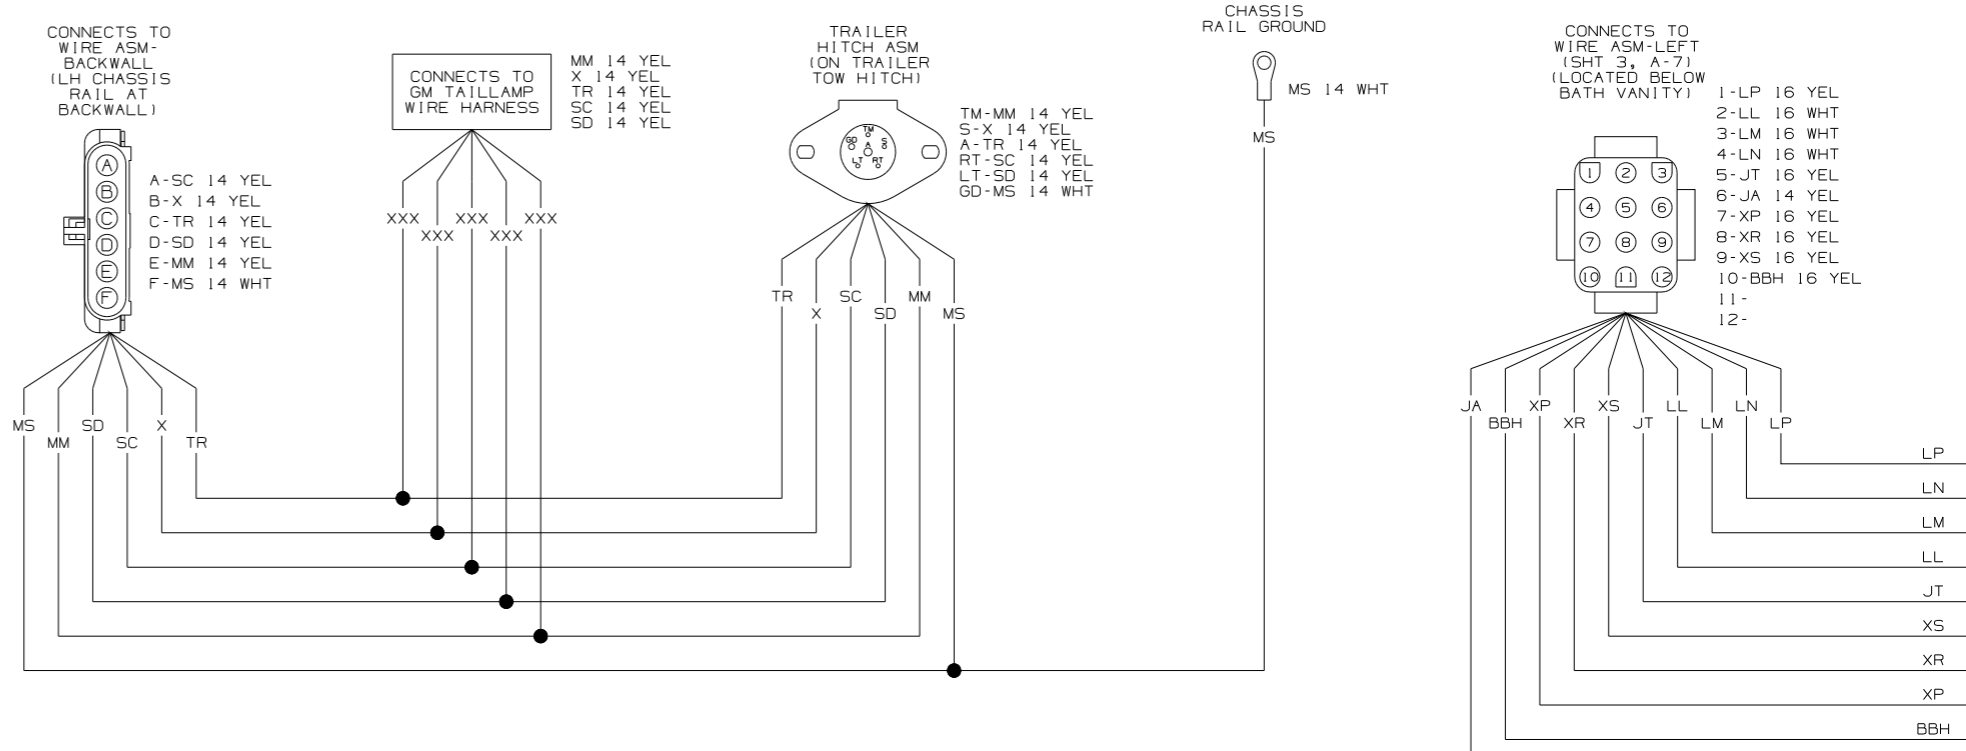


- 6 SEE SHT 3, D-6 FOR ADDITIONAL INFORMATION.
 - 5 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
 - 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
 - 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
 - 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

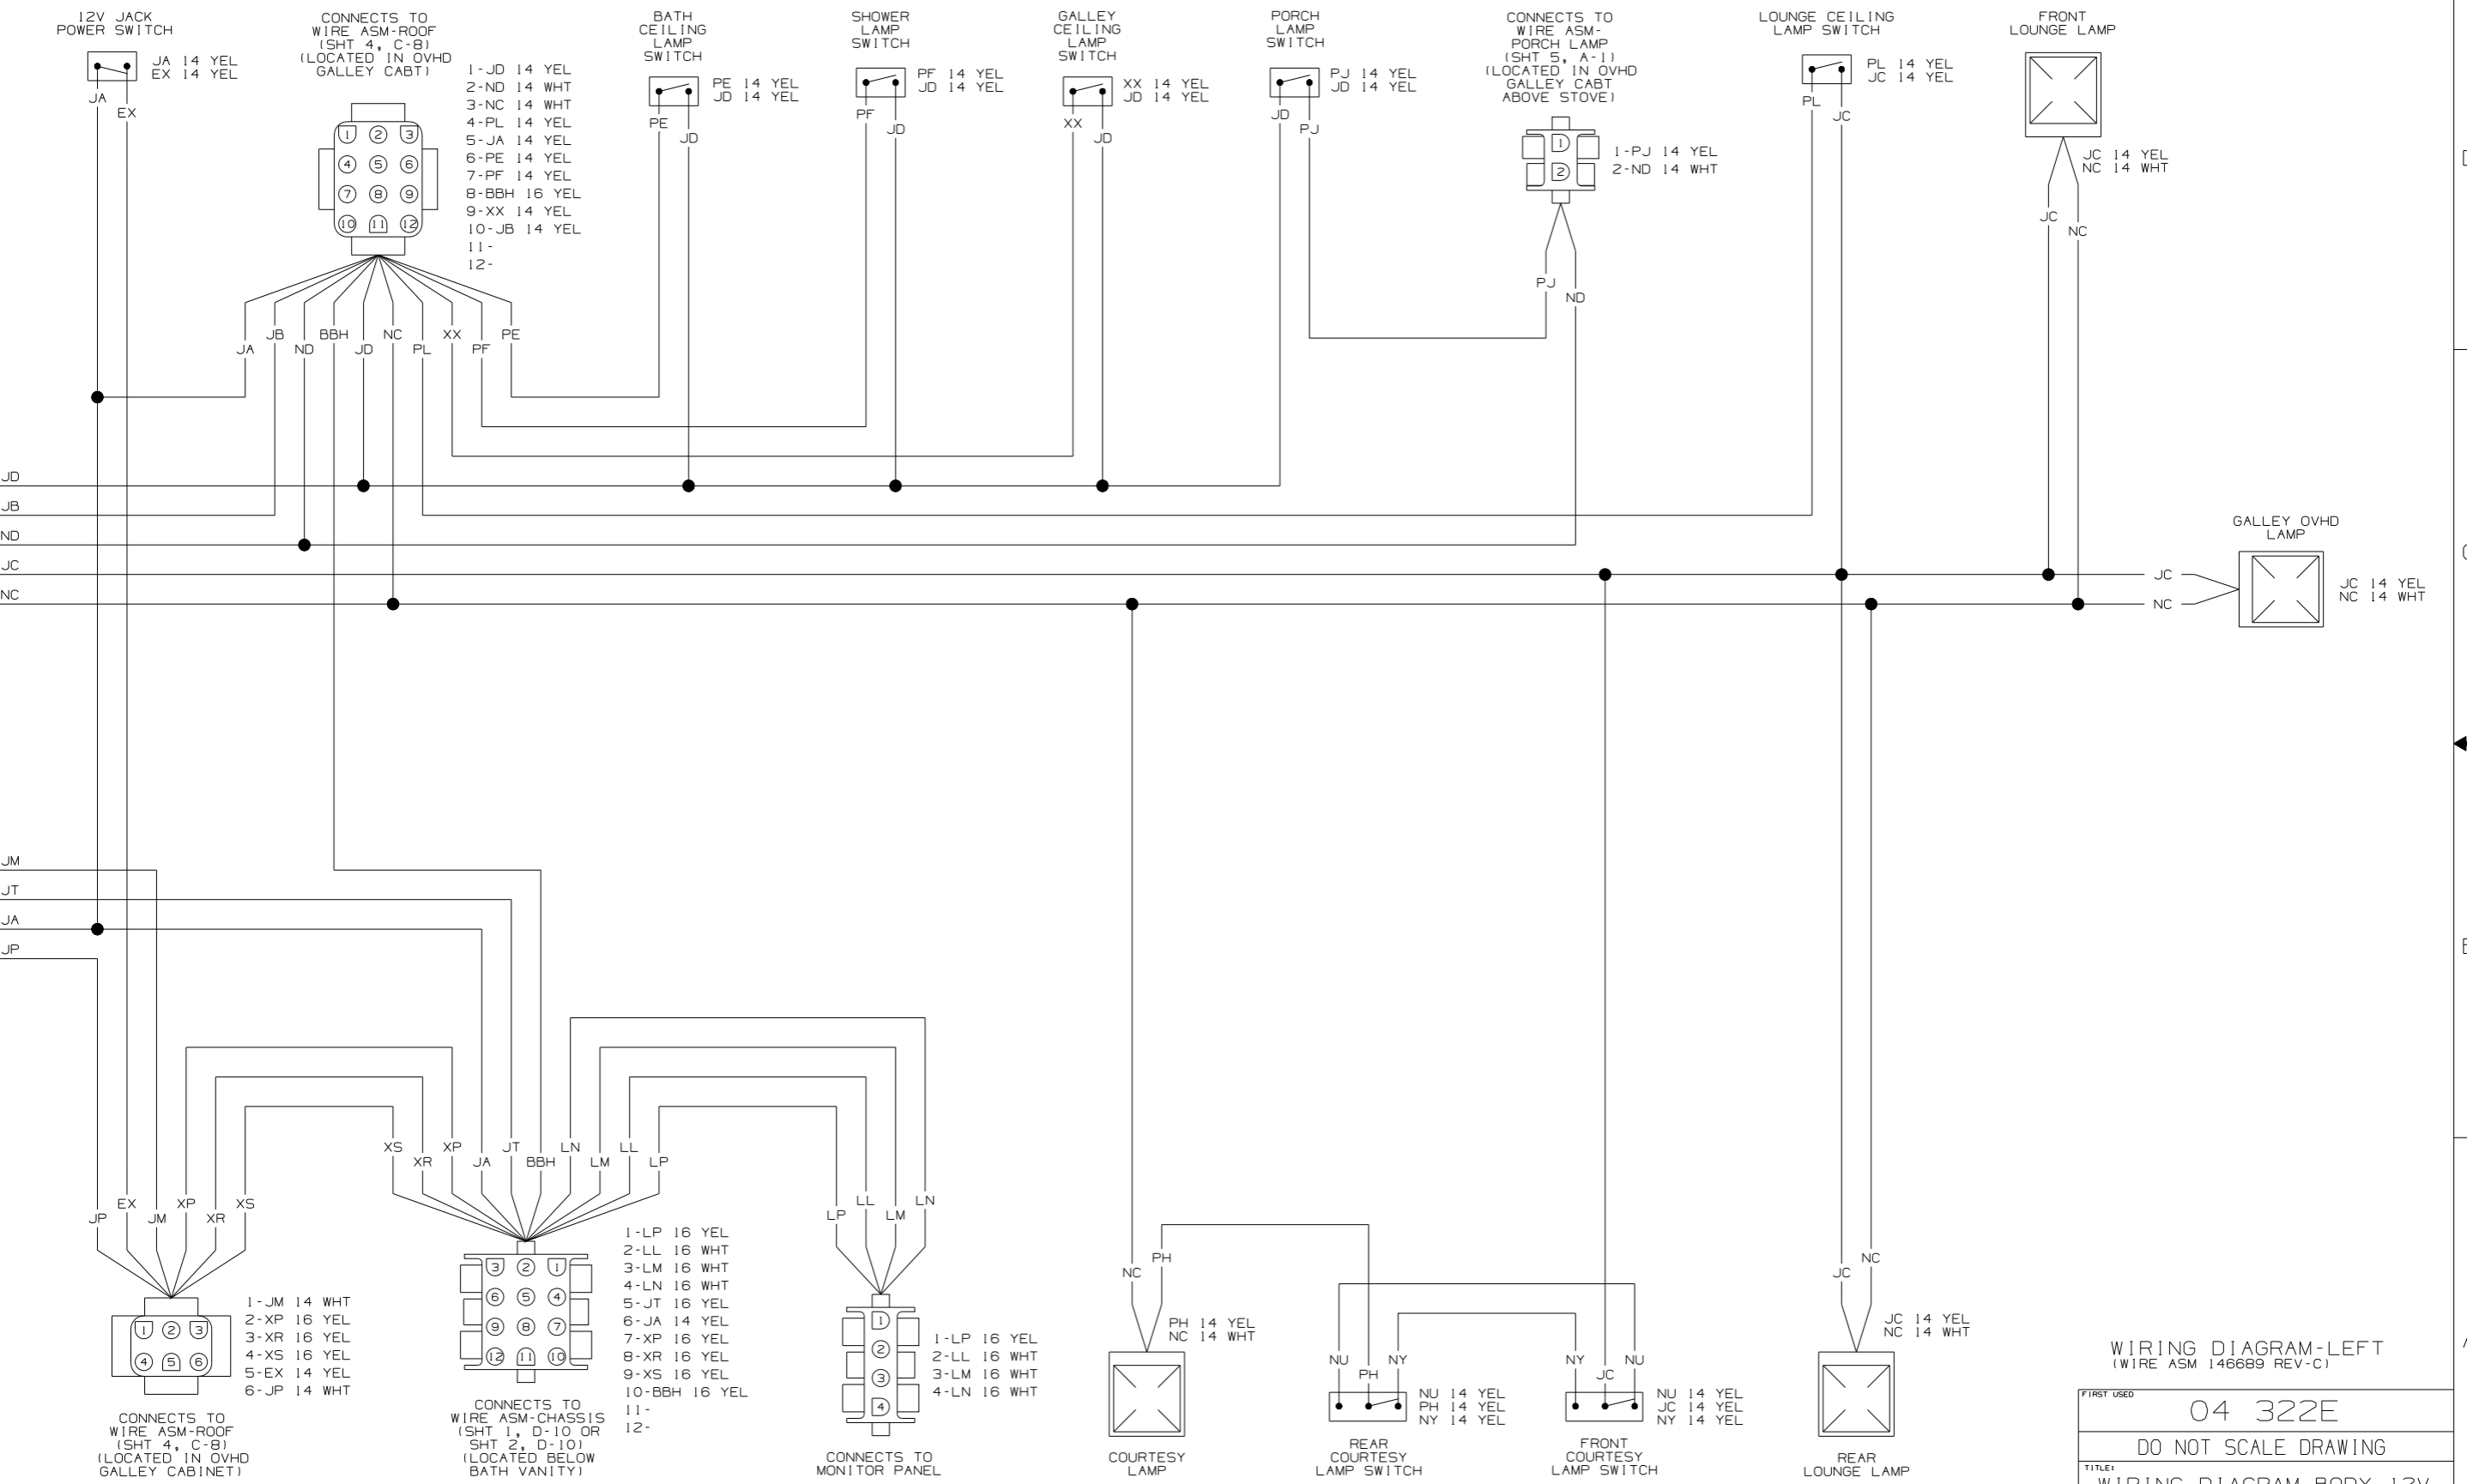

WIRING DIAGRAM-LEFT (WIRE ASM 146689 REV-C)


FIRST USED	04 322E	
DO NOT SCALE DRAWING		
TITLE	WIRING DIAGRAM-BODY, 12V	
SHEET 3	PART NO	146691

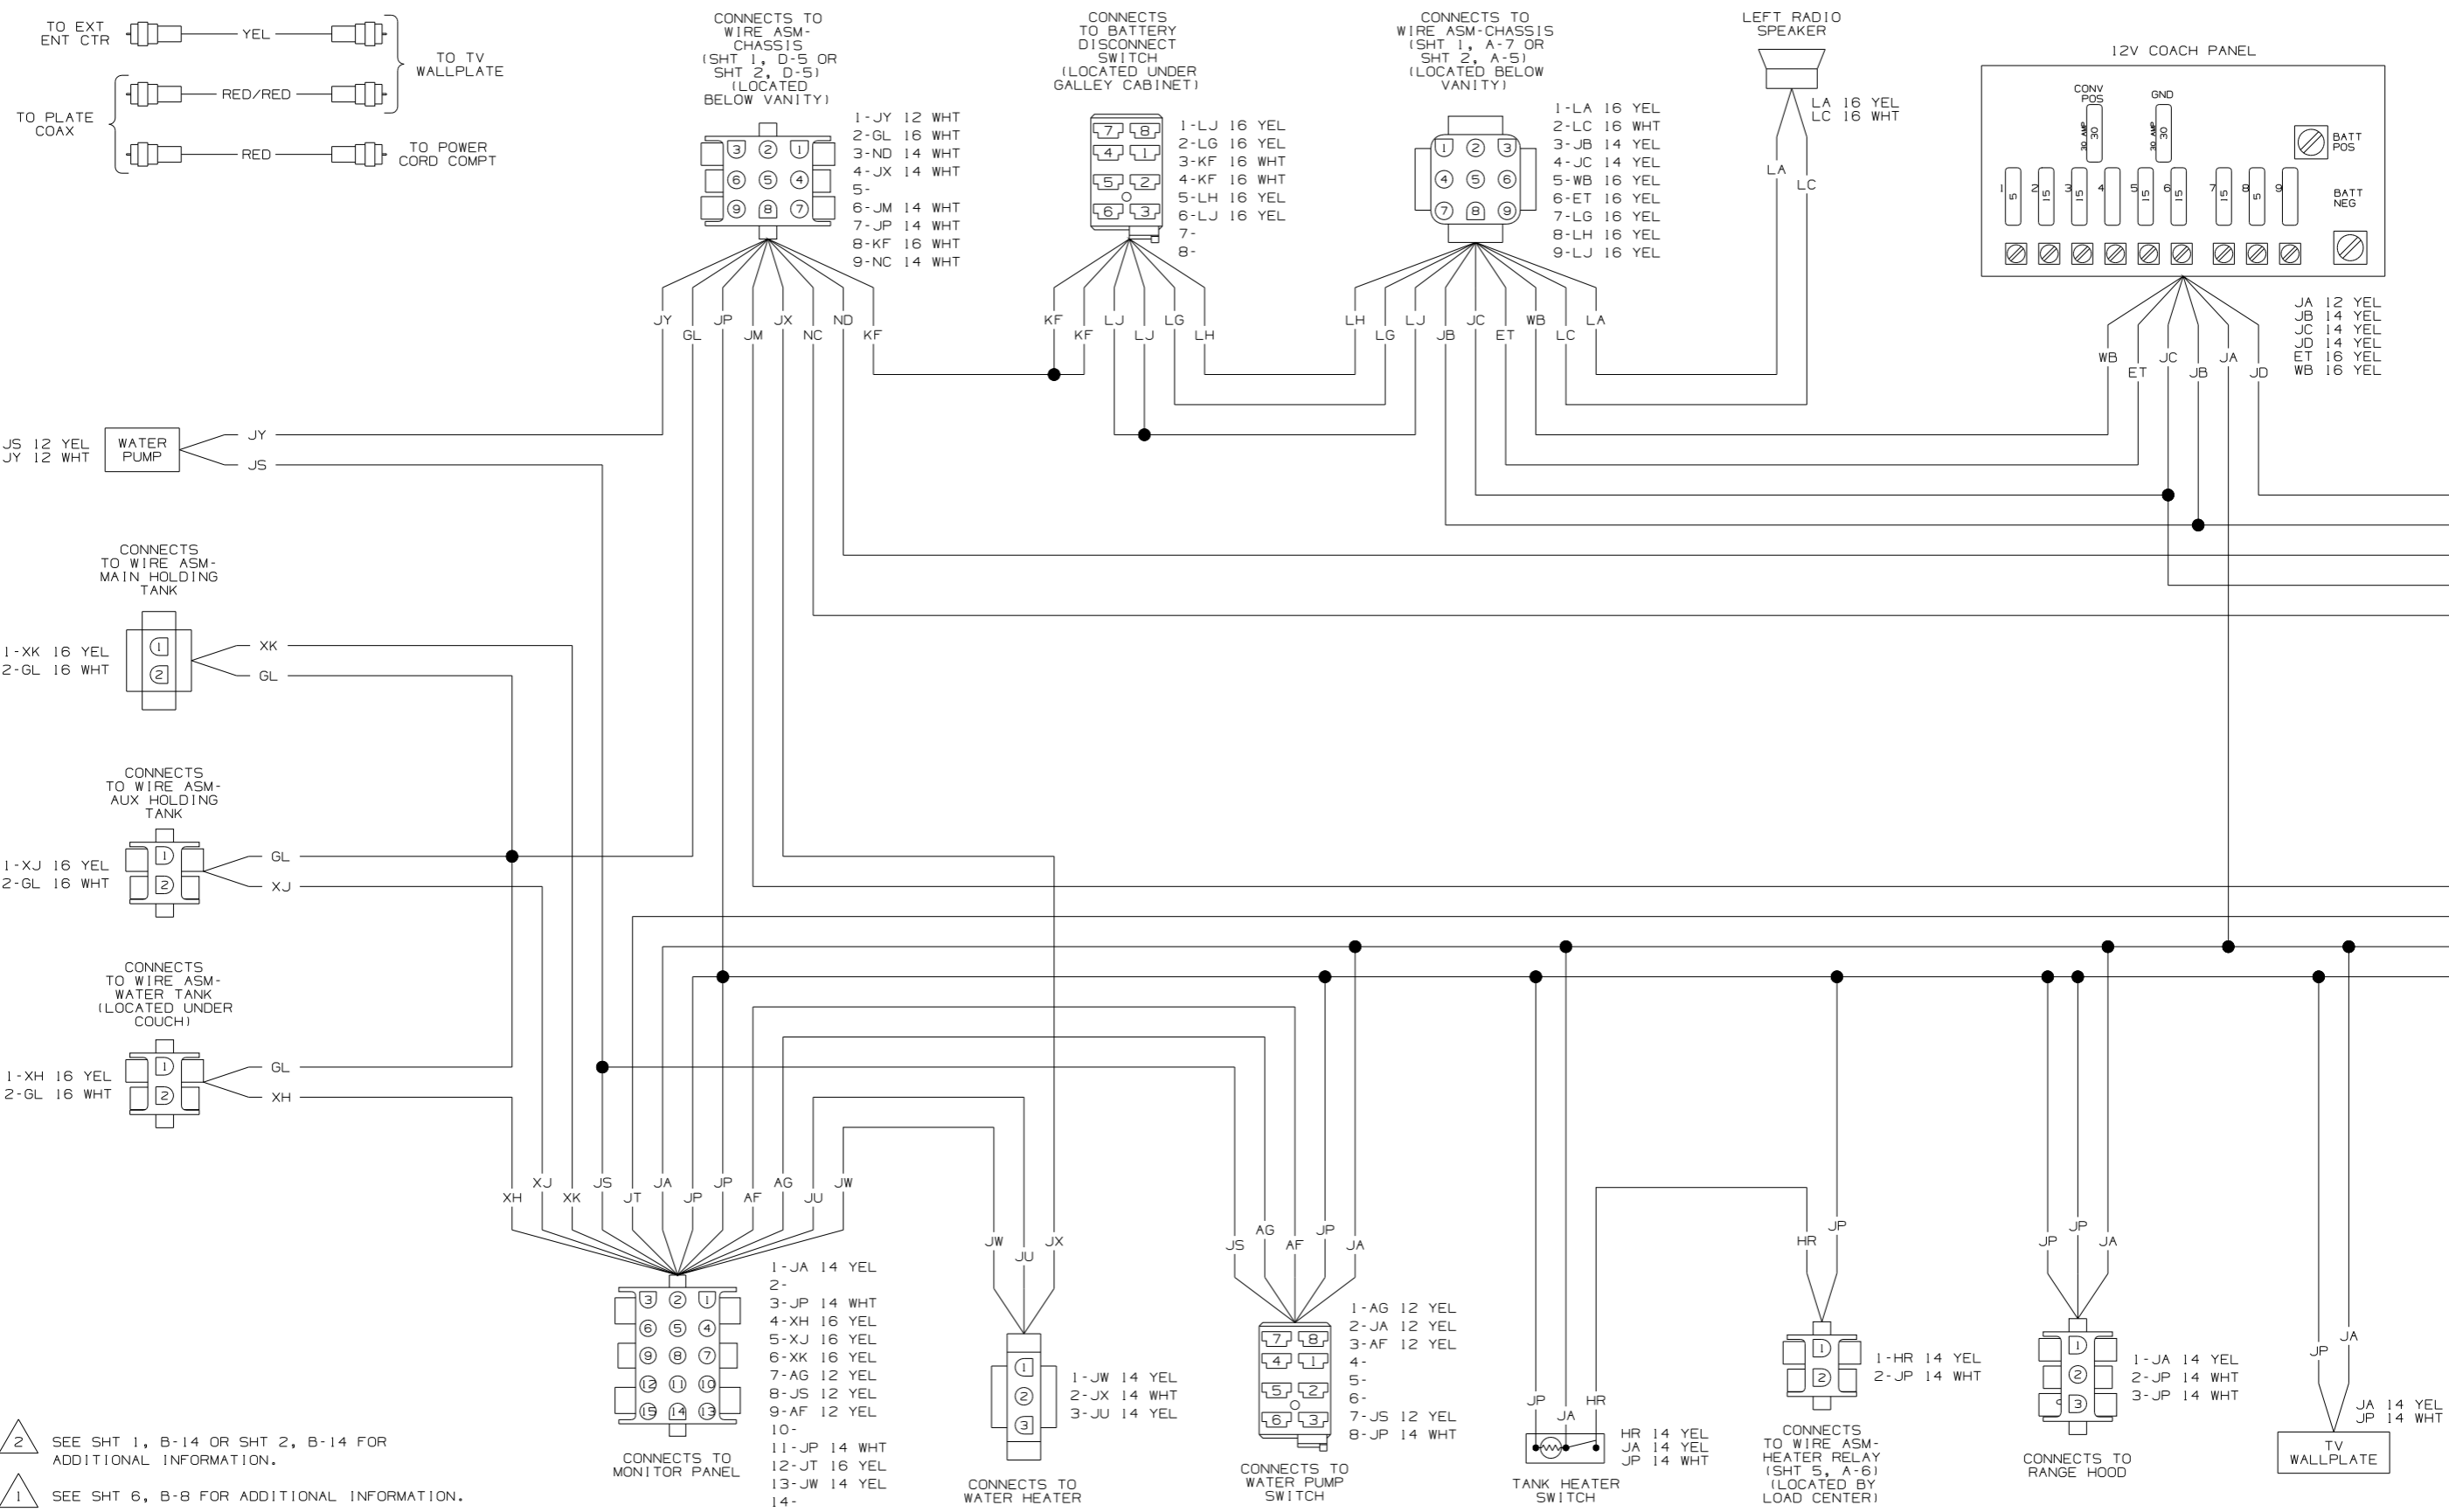


NOTES:

2 SEE SHT 1, B-14 OR SHT 2, B-14 FOR ADDITIONAL INFORMATION.


1 SEE SHT 6, B-8 FOR ADDITIONAL INFORMATION.

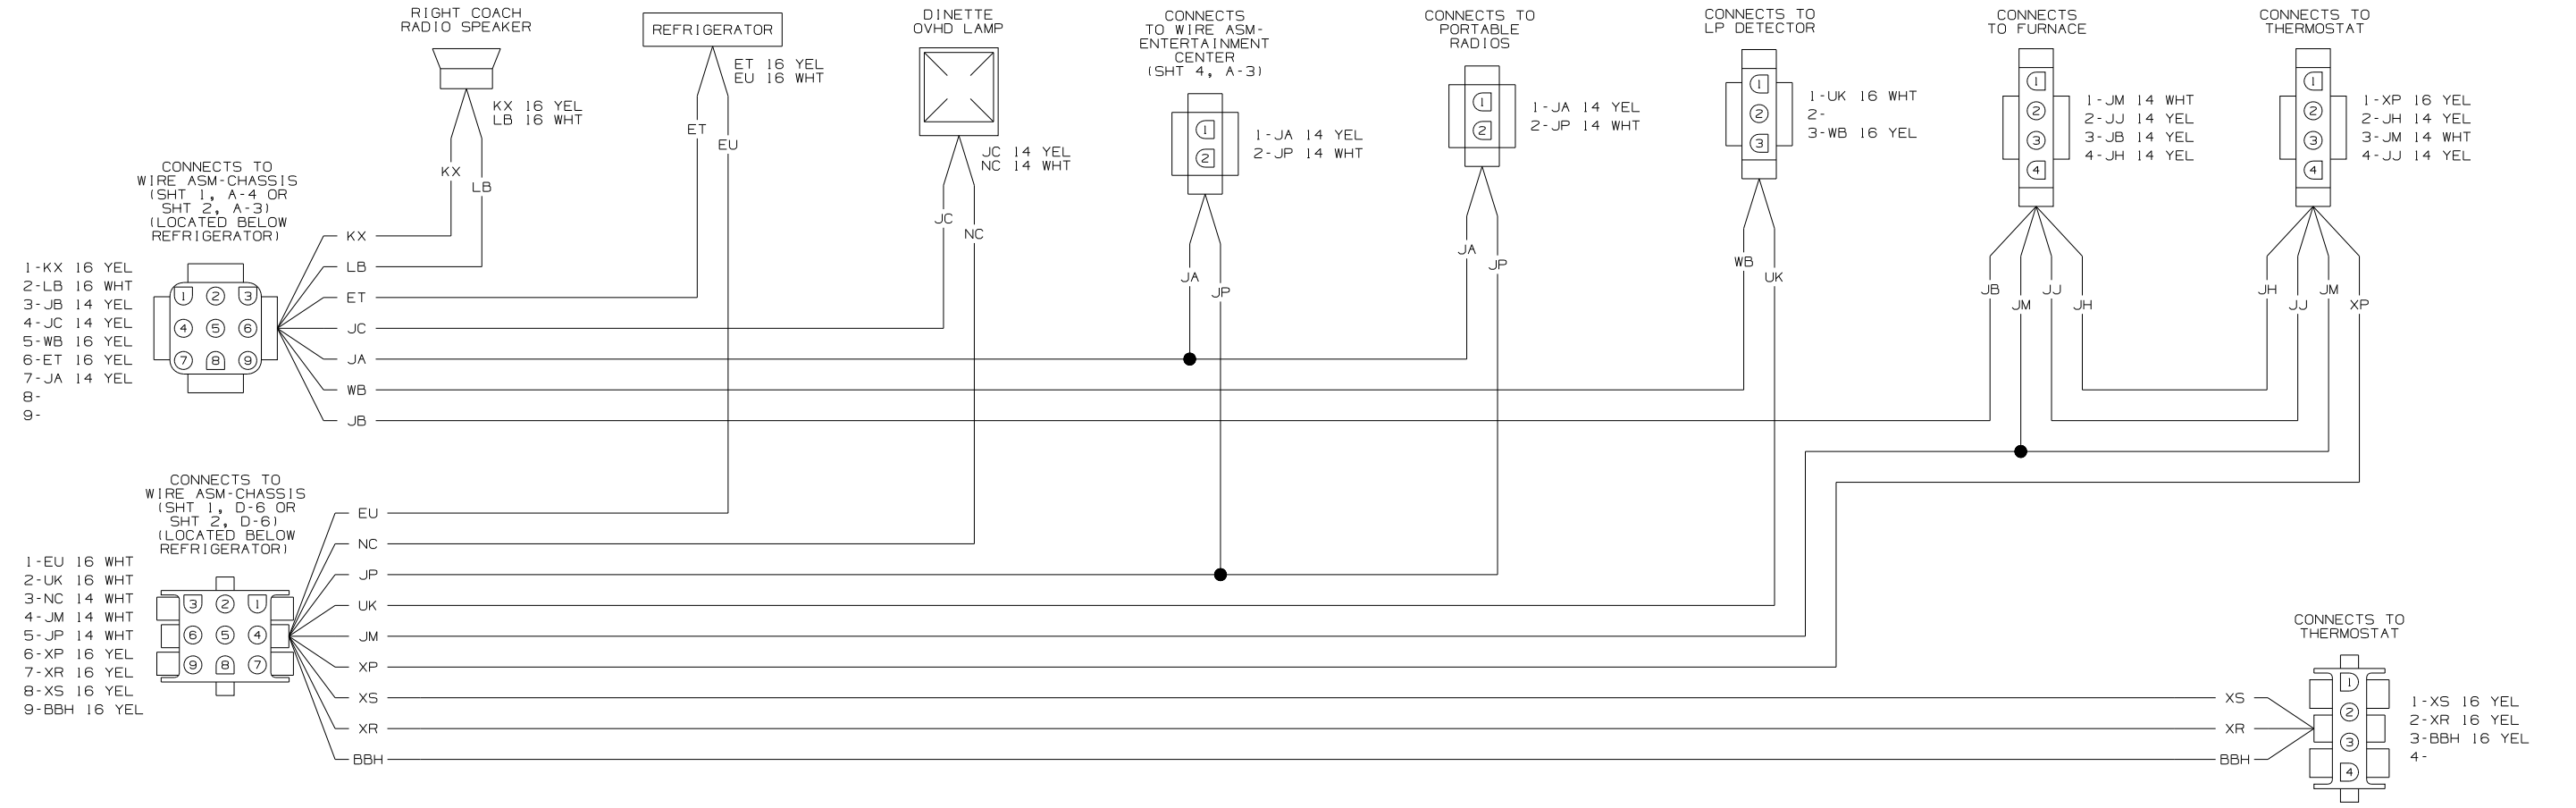


WIRING DIAGRAM-RIGHT (WIRE ASM 146688 REV-B)

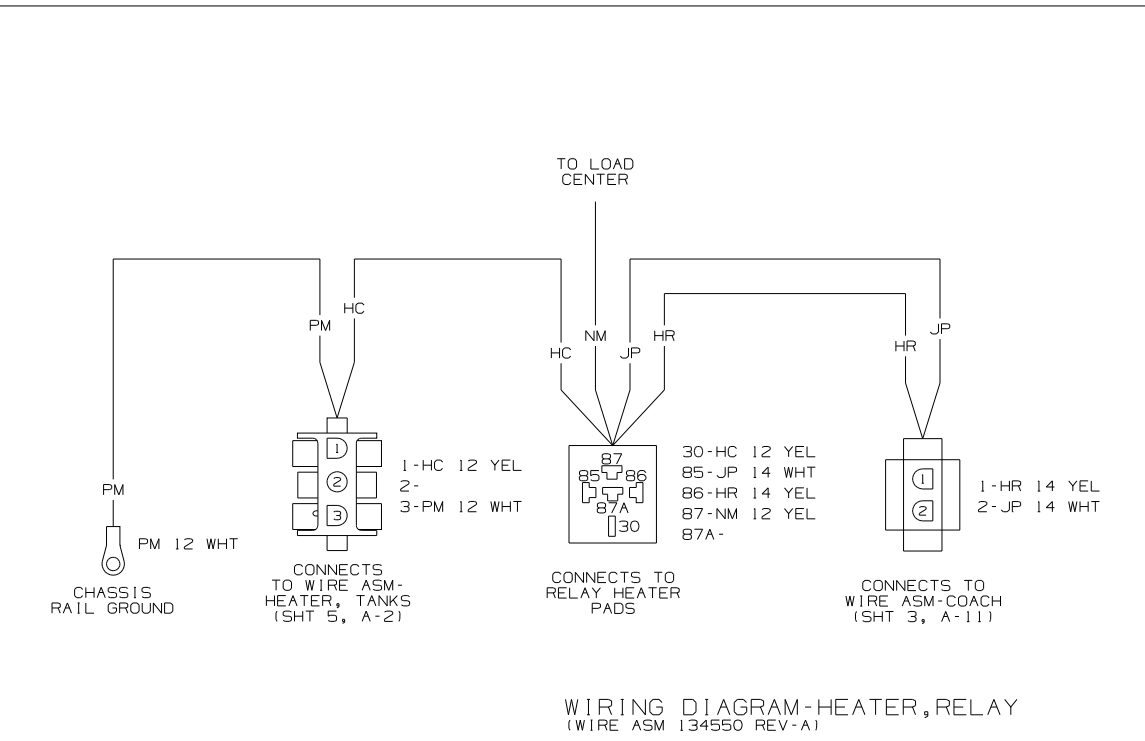


WIRING DIAGRAM-HEATER, RELAY (WIRE ASM 134550 REV-A)

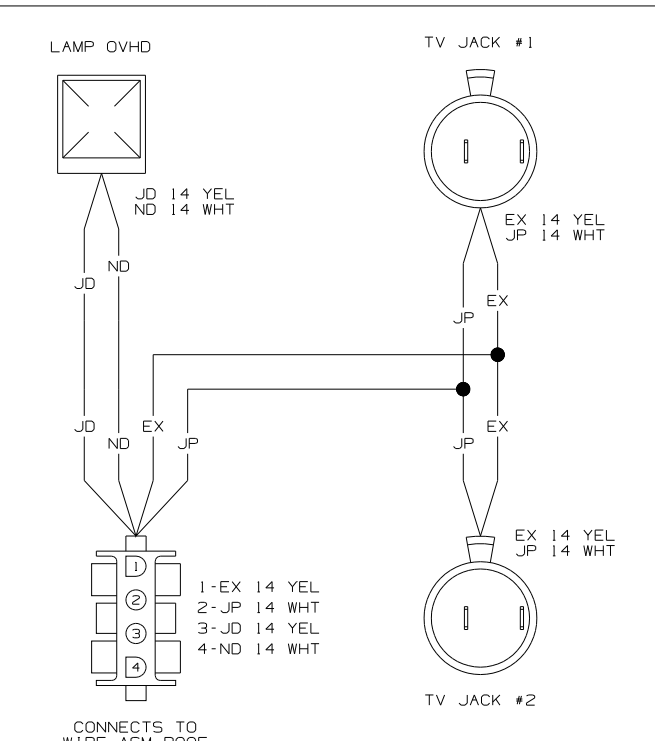

WIRING DIAGRAM-OVHD, TV (WIRE ASM 128775 REV-B)

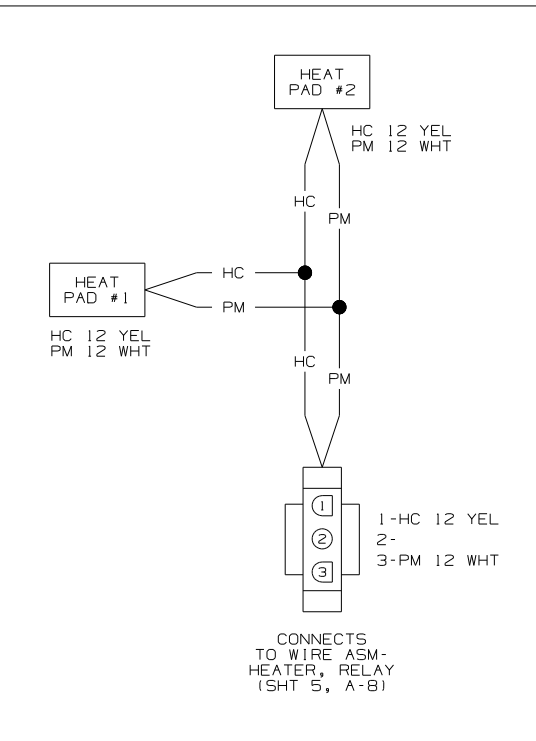

WIRING DIAGRAM-HEATER, TANKS (WIRE ASM 134551-08 REV-D)

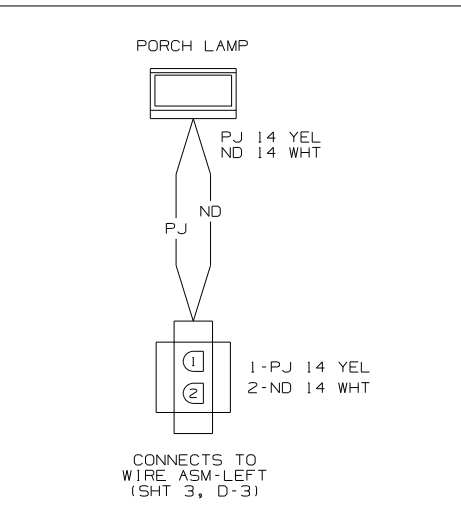

WIRING DIAGRAM-PORCH LAMP (WIRE ASM 96729-01 REV-G)

FIRST USED	04 322E
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 5	PART NO 146691