





DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

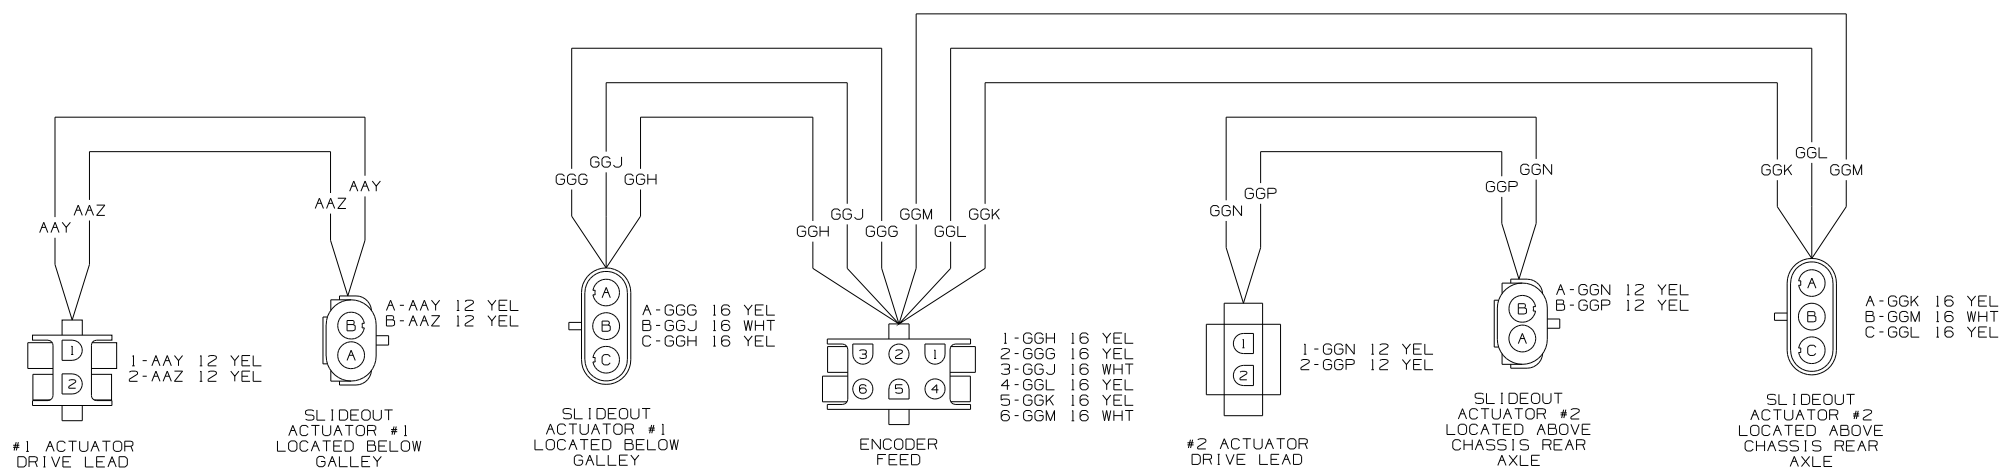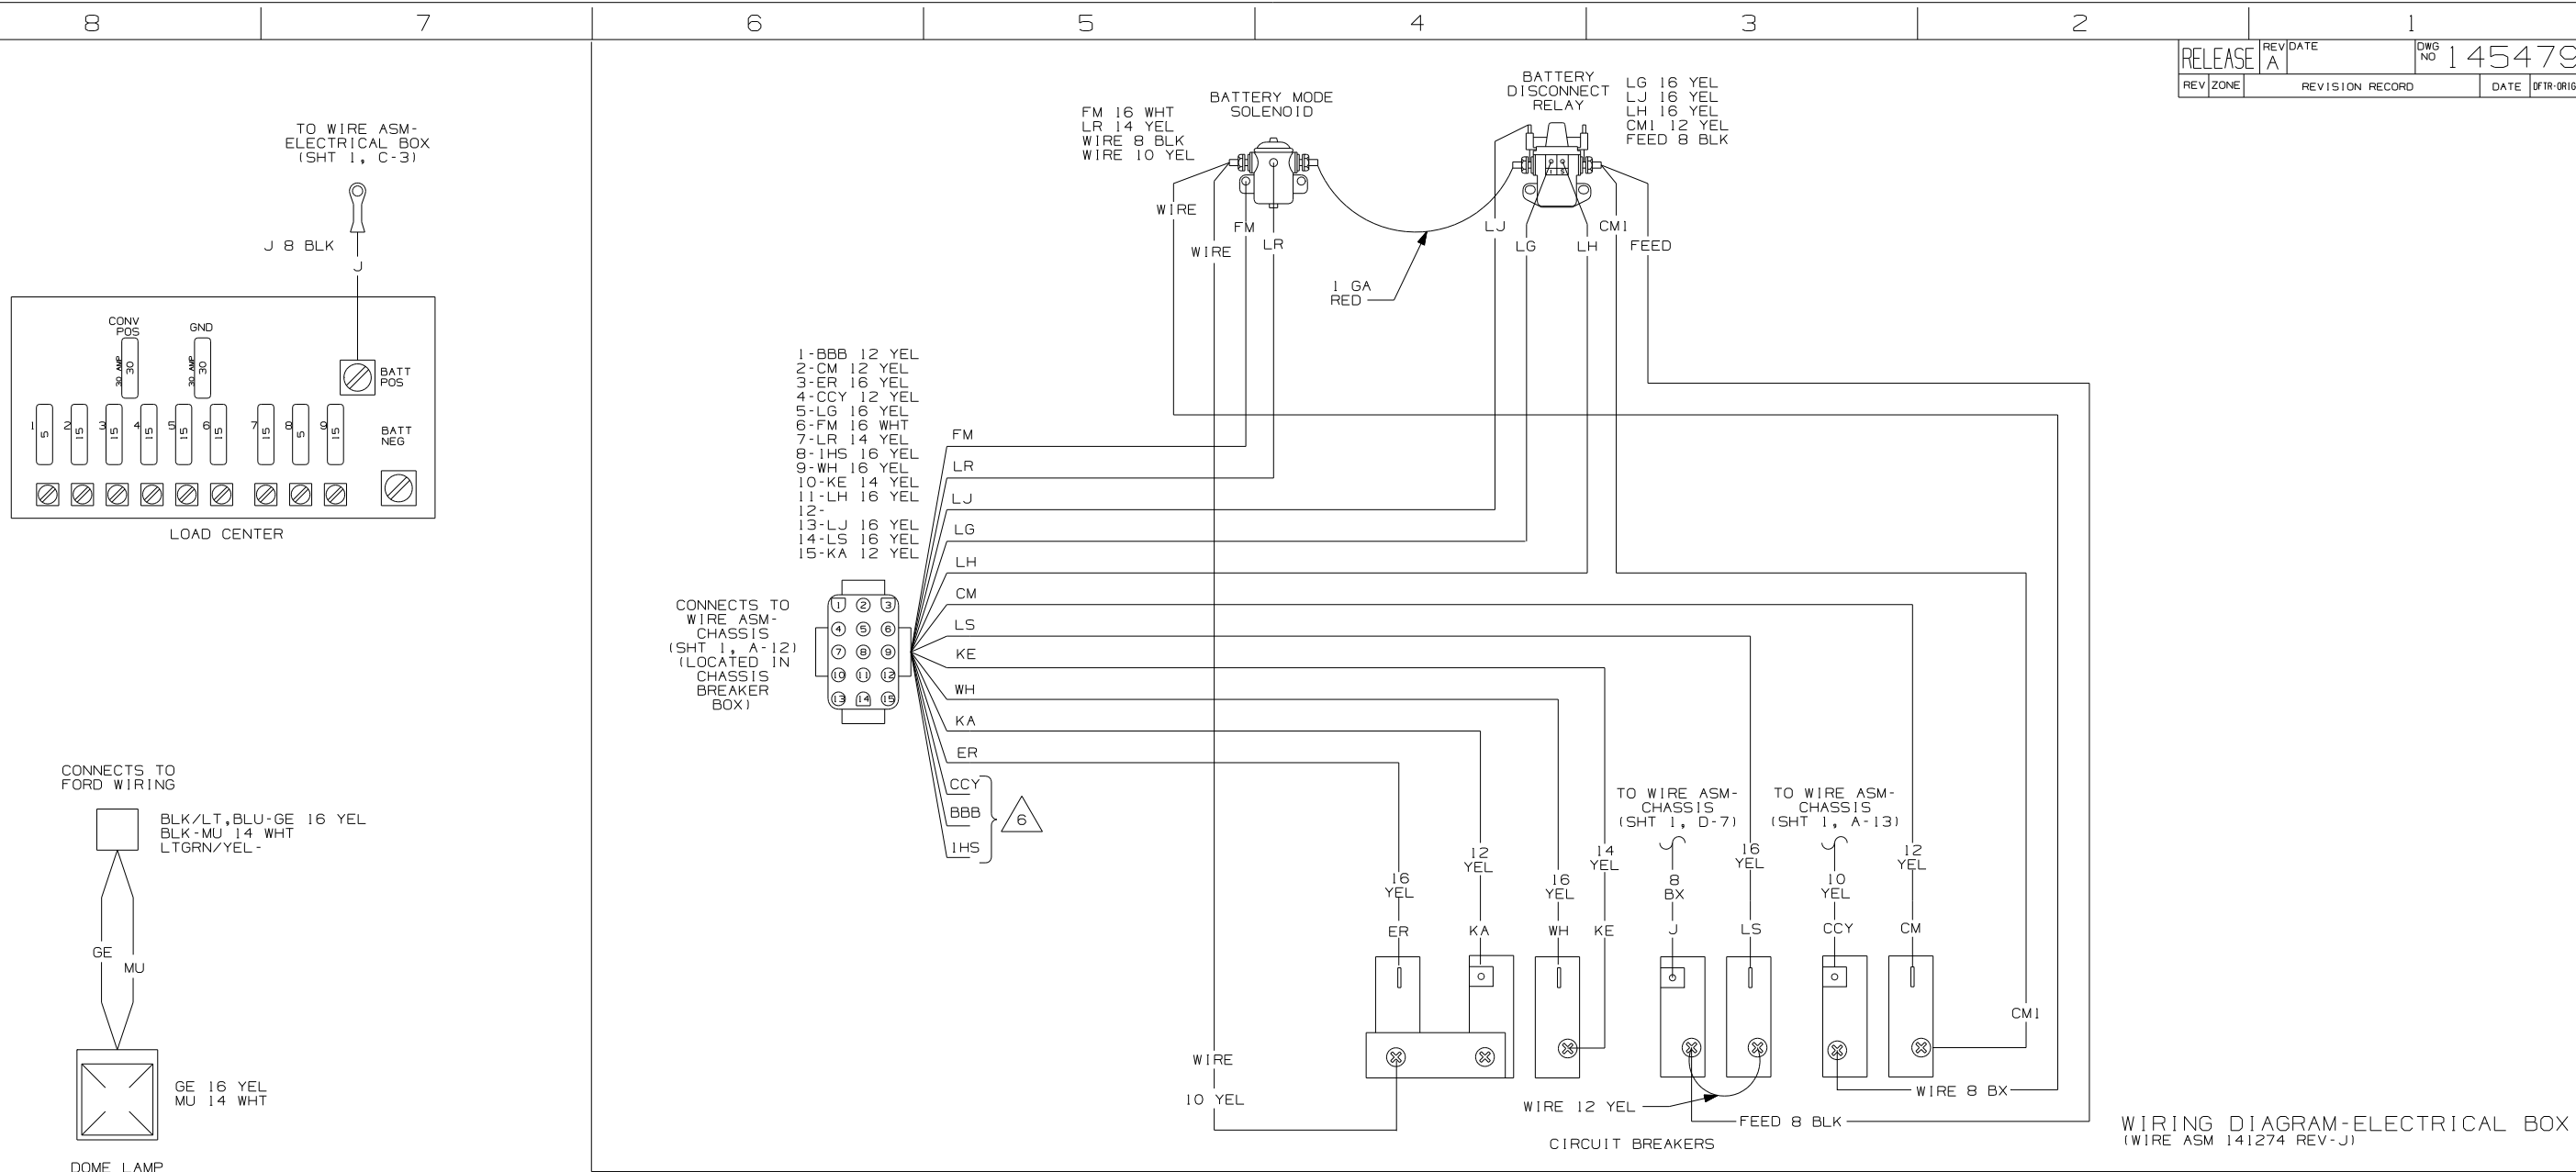




WIRING DIAGRAM-CHASSIS, FORD
(WIRE ASM 145474 REV-C)

Winnebago		COPYRIGHT 2002 WINNEBAGO INDUSTRIES, INC.	
DFTR	ORIG. DATE		
CHNR	ALL DIMENSIONS ARE IN MILLIMETERS		
P.E.			
M.E.	FIRST USED	04 324F	
DSNR			
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
HOLE DIM (X)			
ONE-PLACE (X, X)			
TWO-PLACE (X, XX)			
ANGLE			
THIRD ANGLE PROJECTION			


DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-BODY, 12V	
F1	PART NO 145479
SHEET 1 of 6	

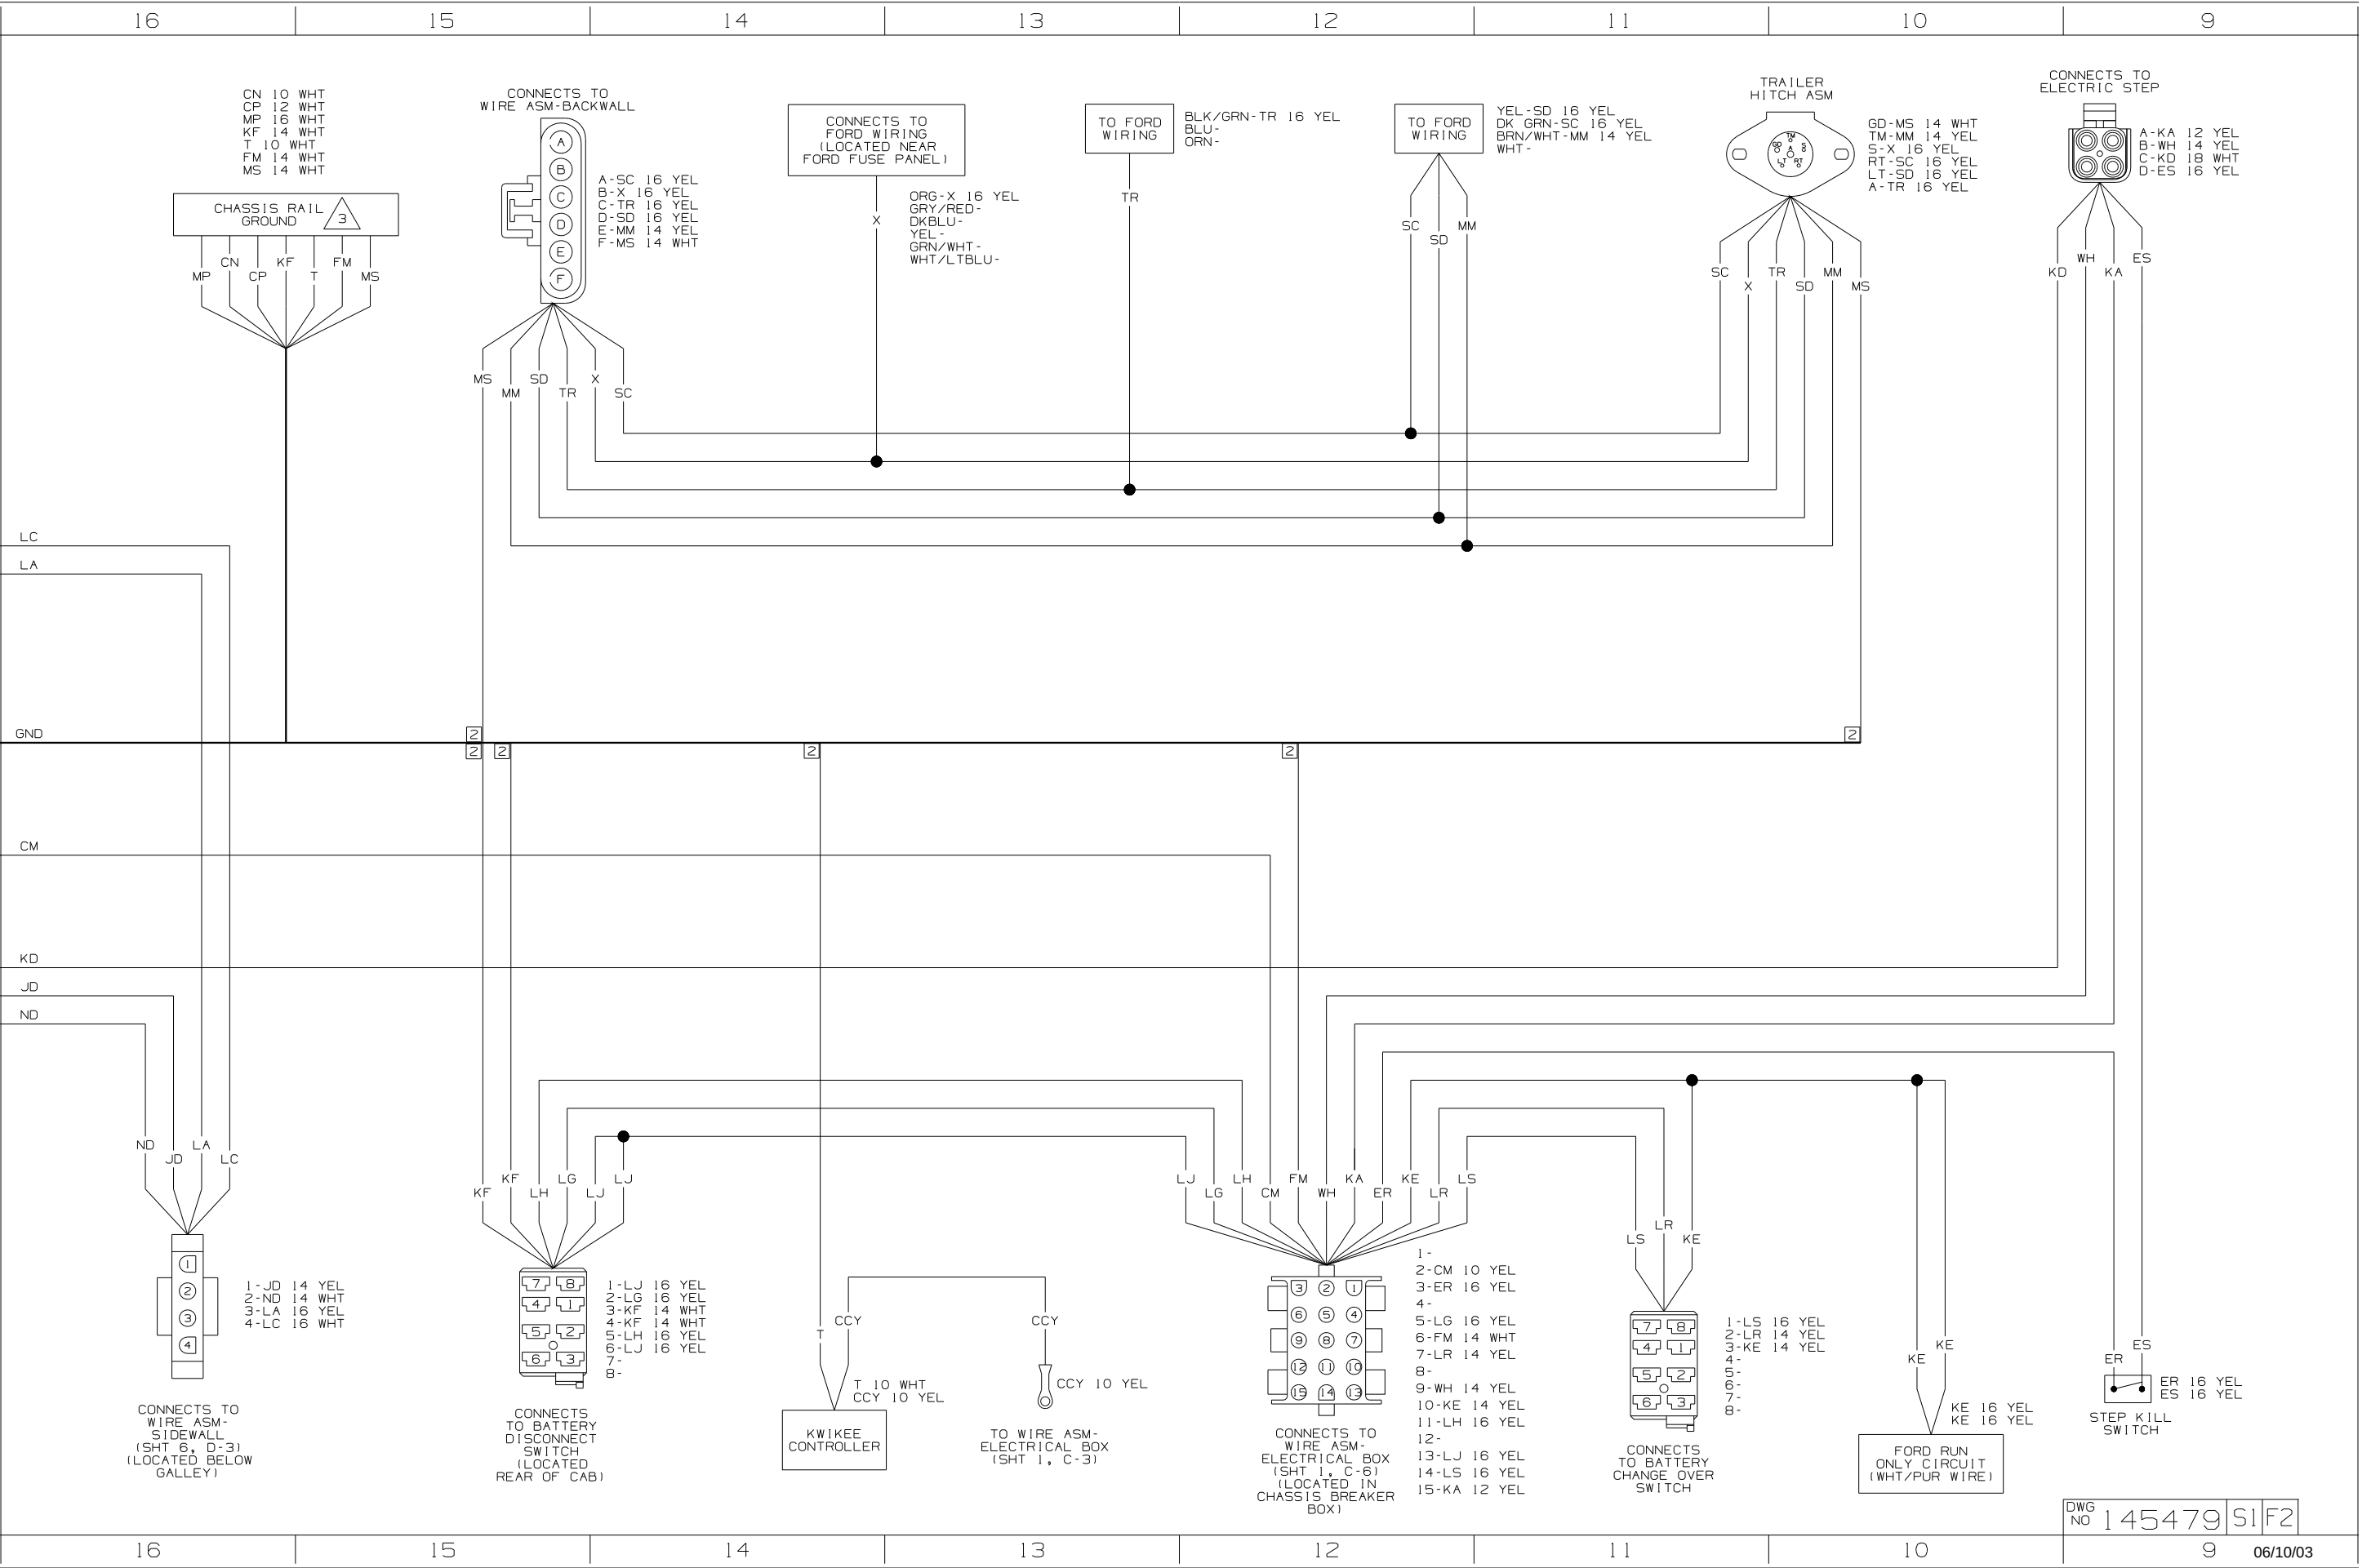

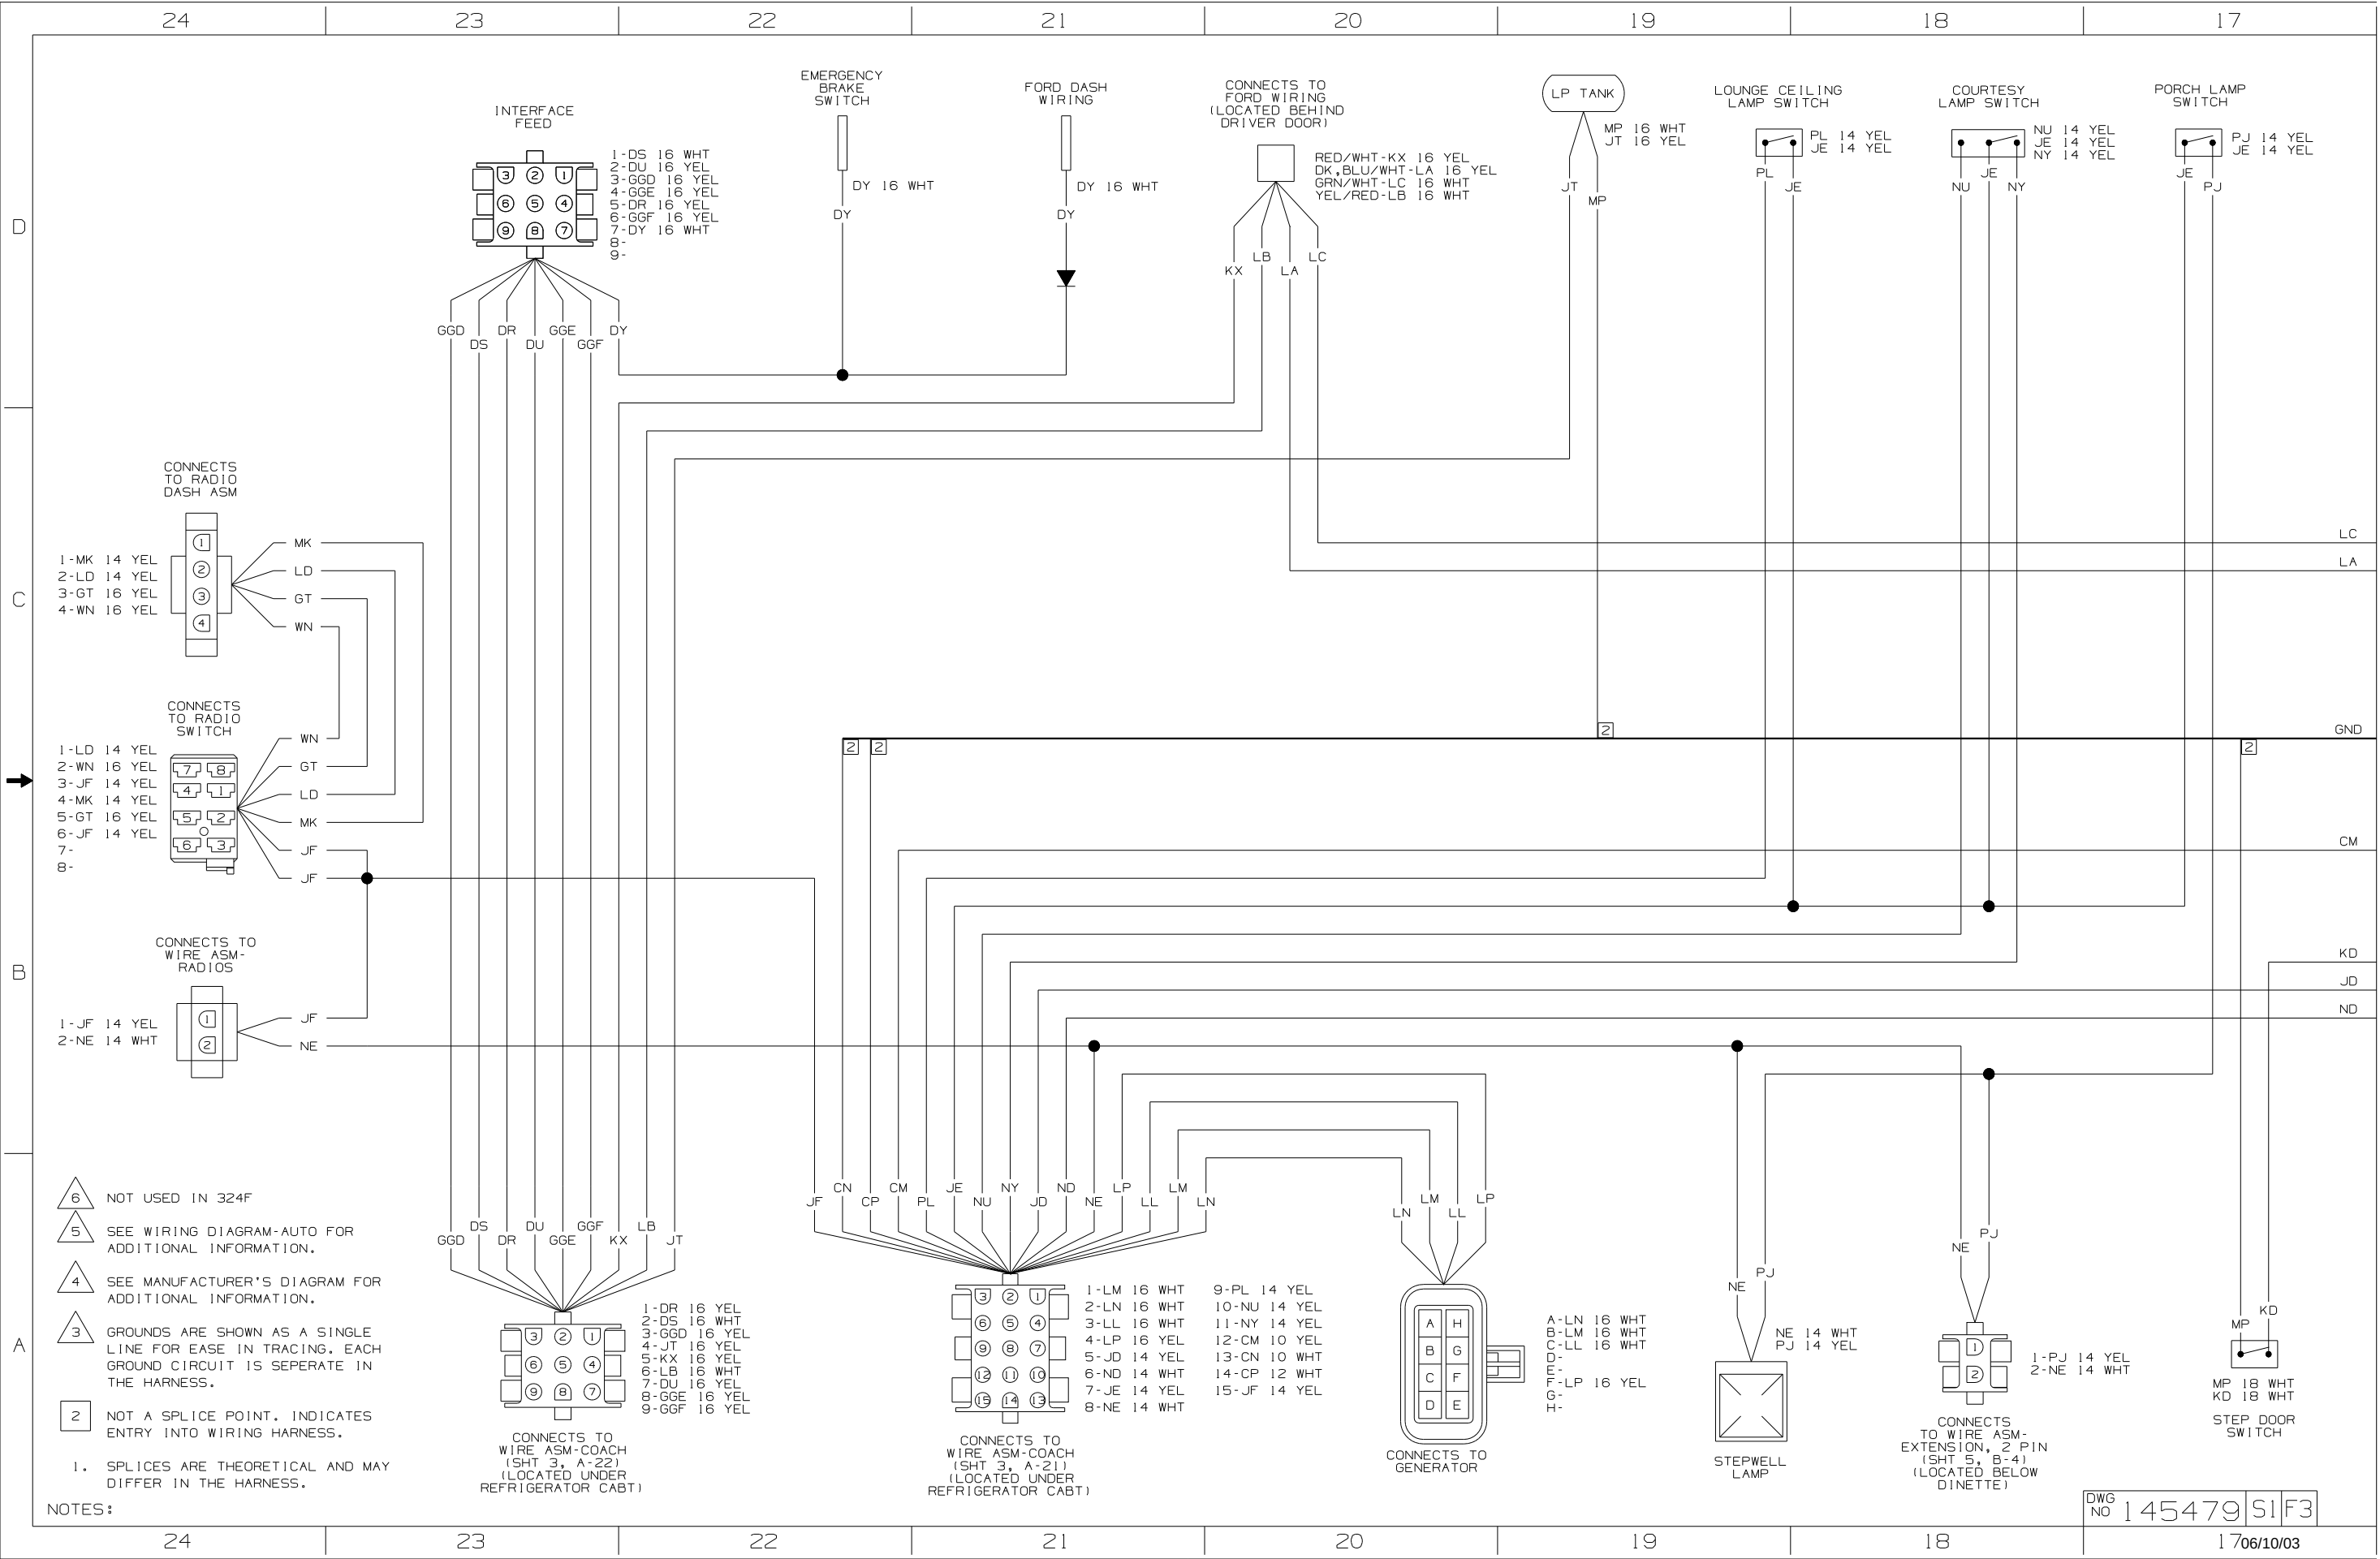


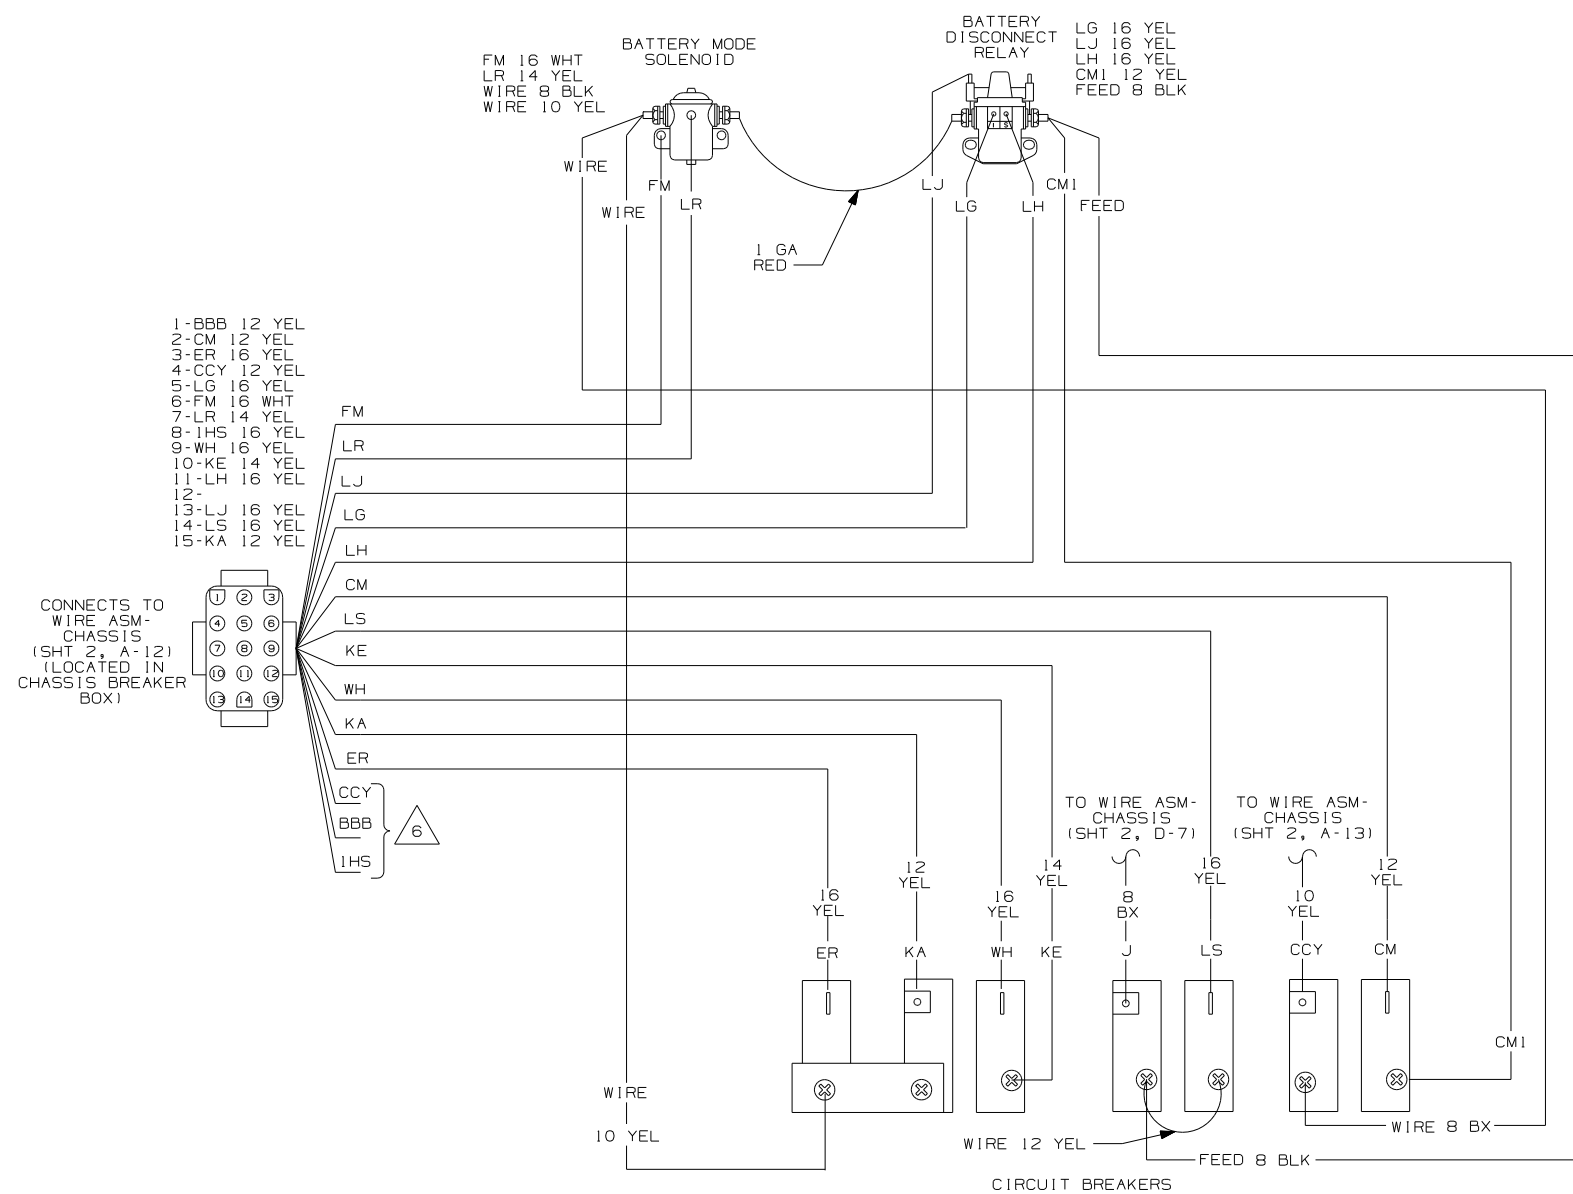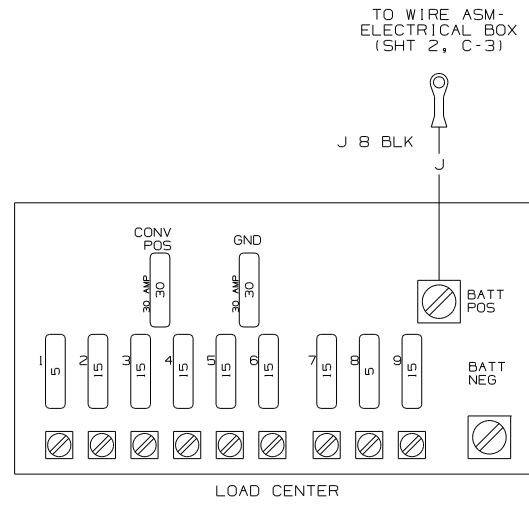



WIRING DIAGRAM-ELECTRICAL BOX
(WIRE ASM 141274 REV-J)

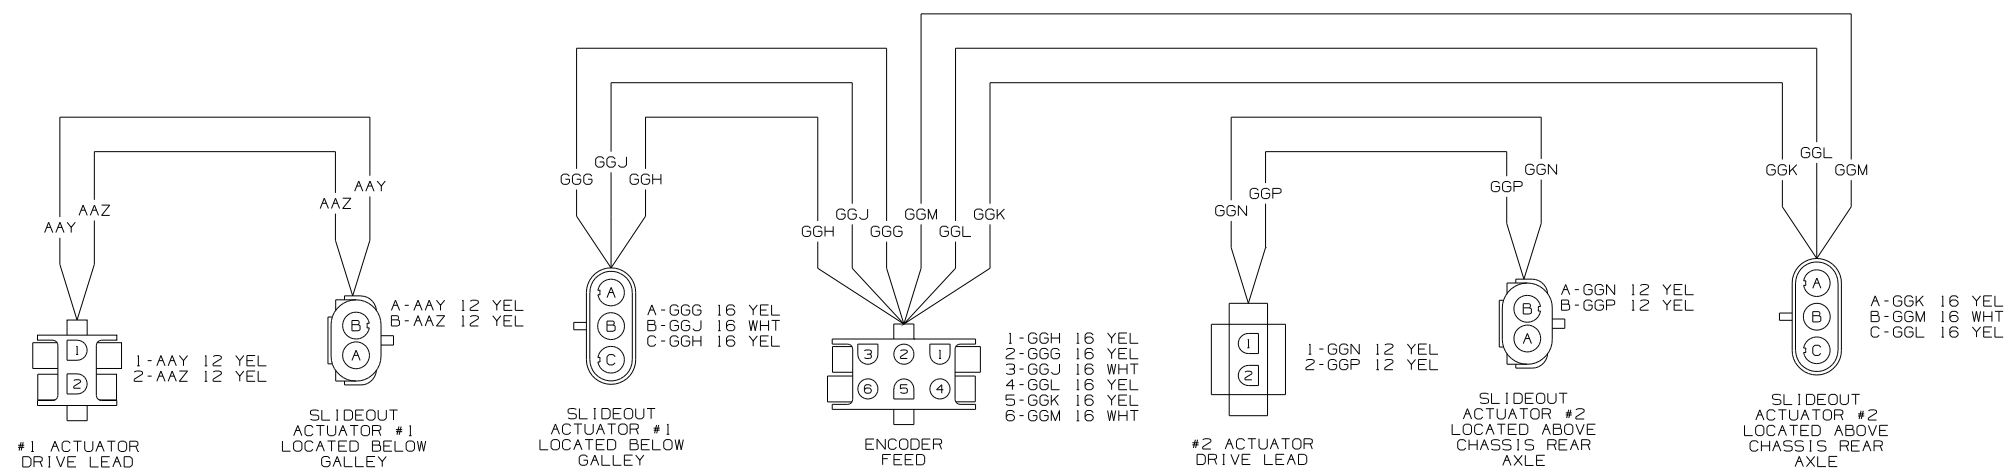
WIRING DIAGRAM-CHASSIS, GM
(WIRE ASM 145475 REV-D)


FIRST USED		04 324F	
DO NOT SCALE DRAWING			
TITLE:			
WIRING DIAGRAM-BODY, 12V			
F1	SHEET 2	PART NO	145479

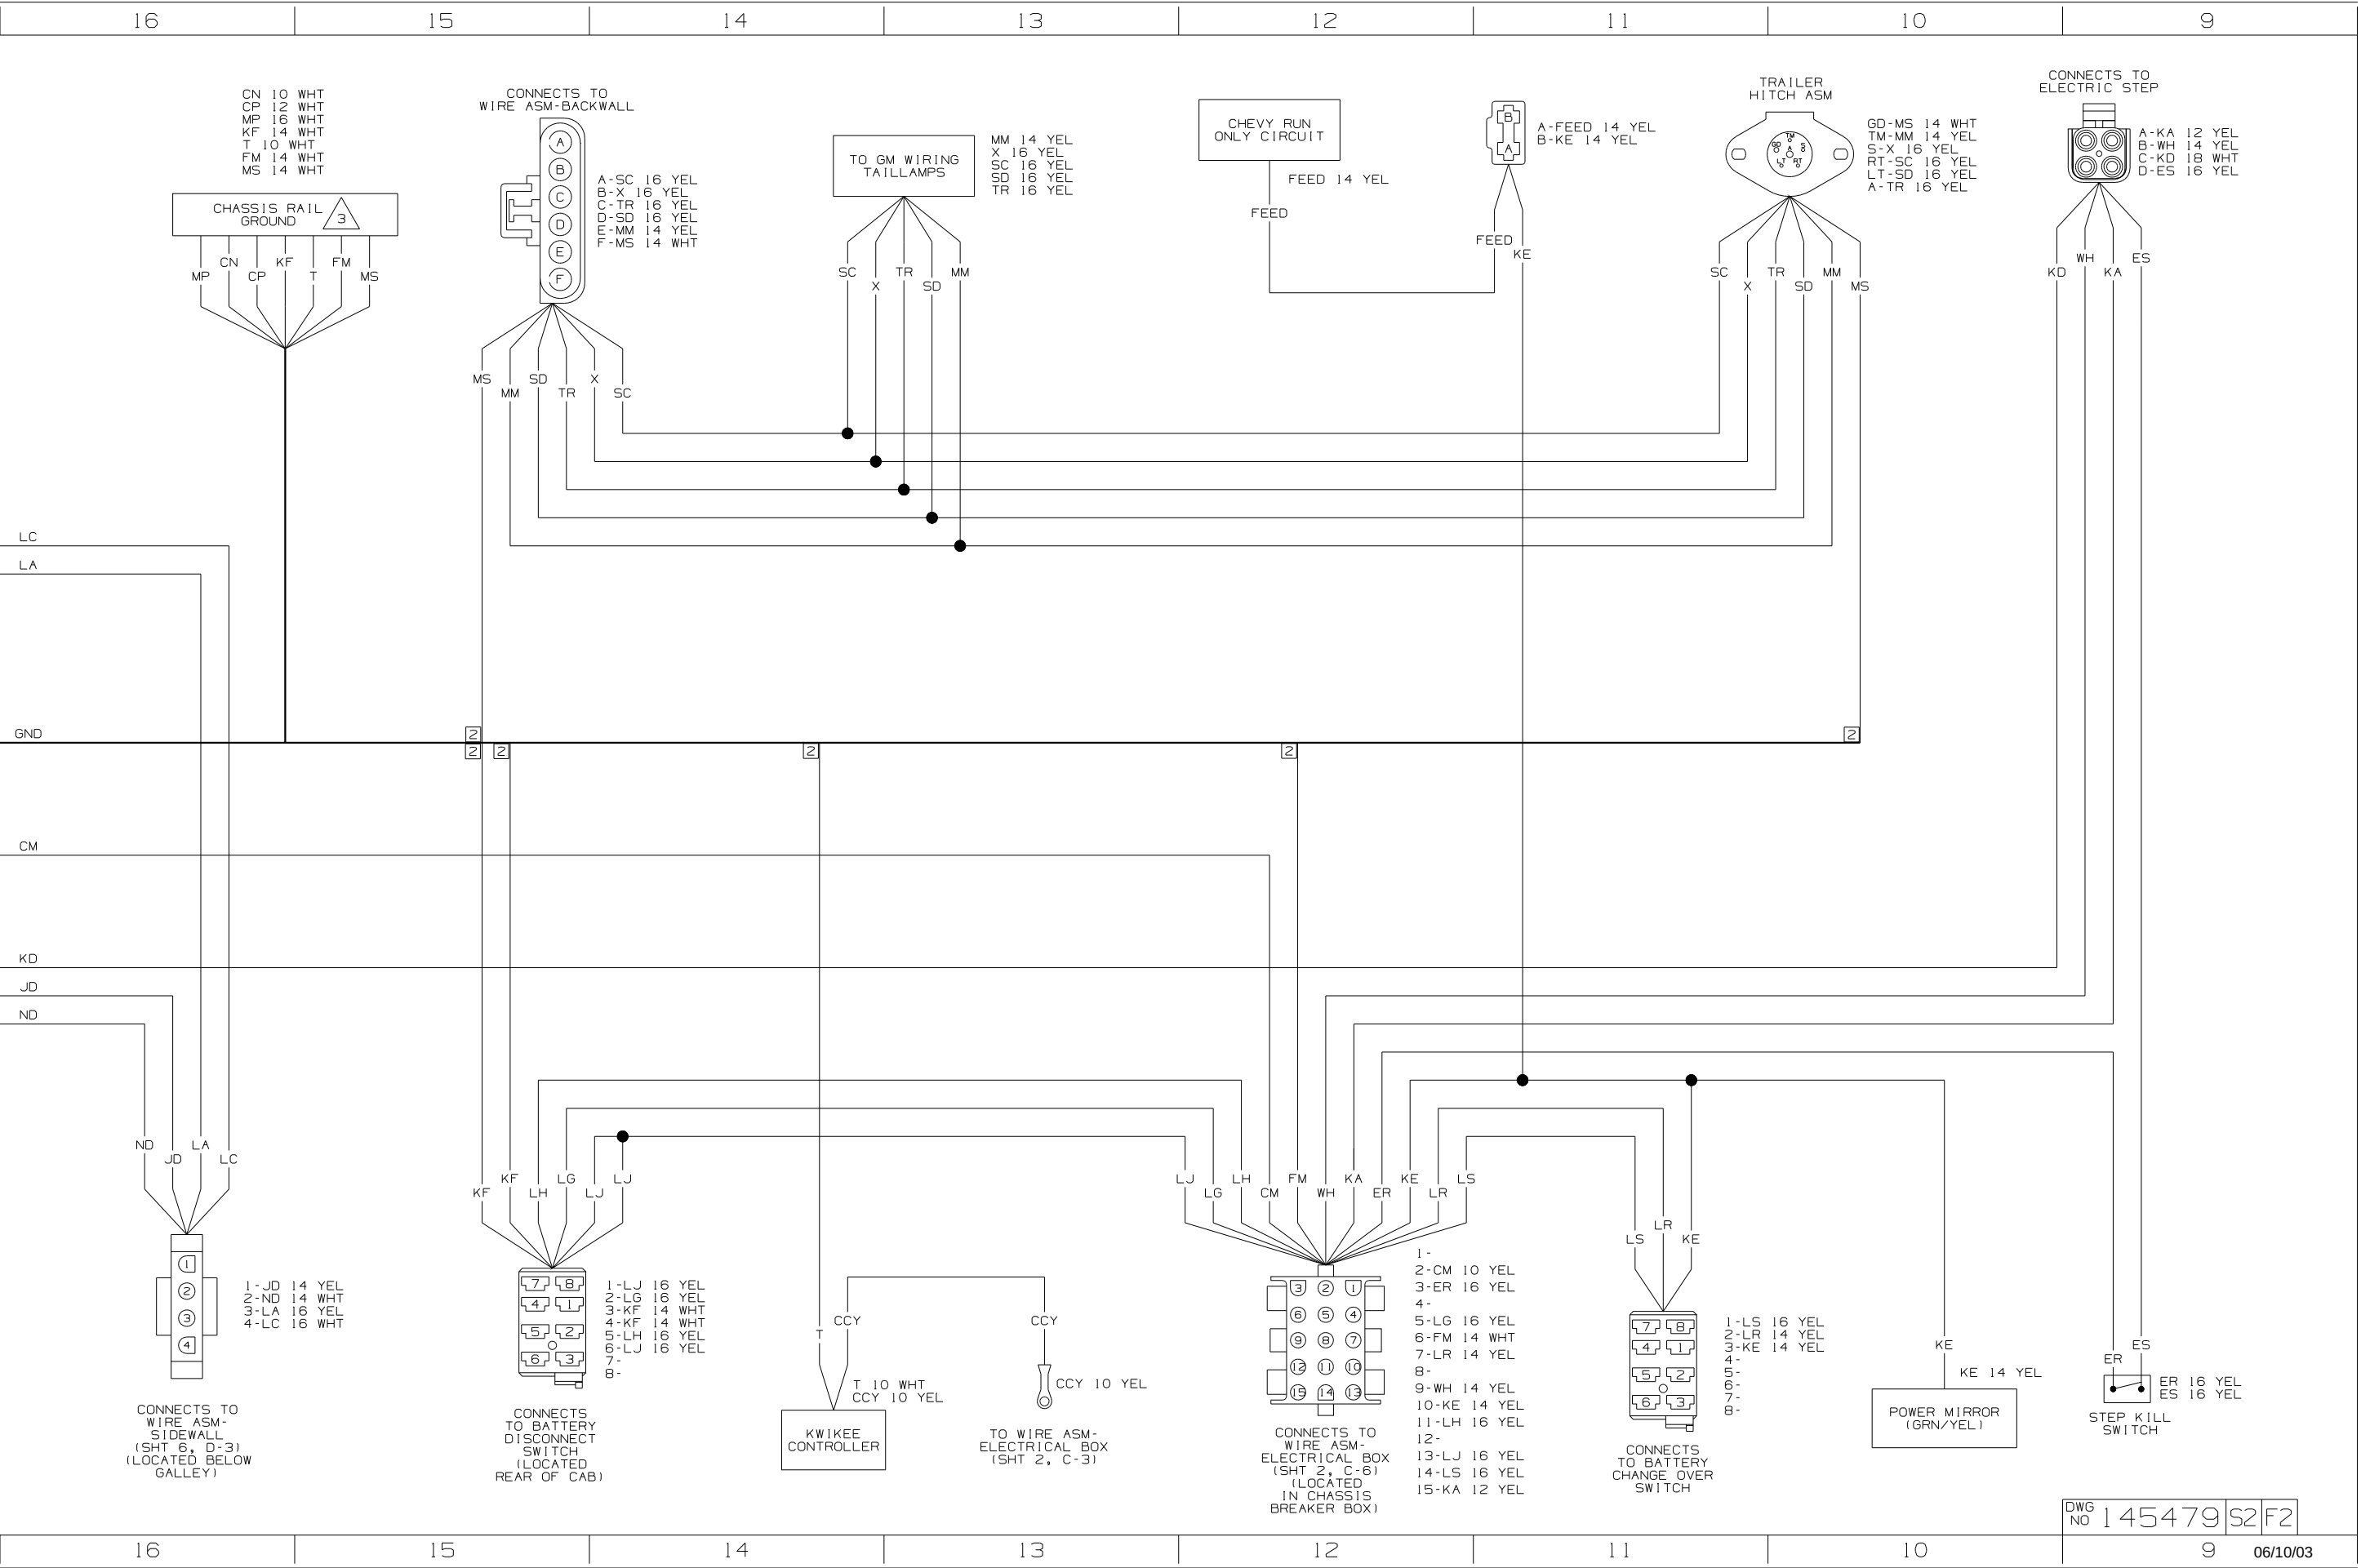



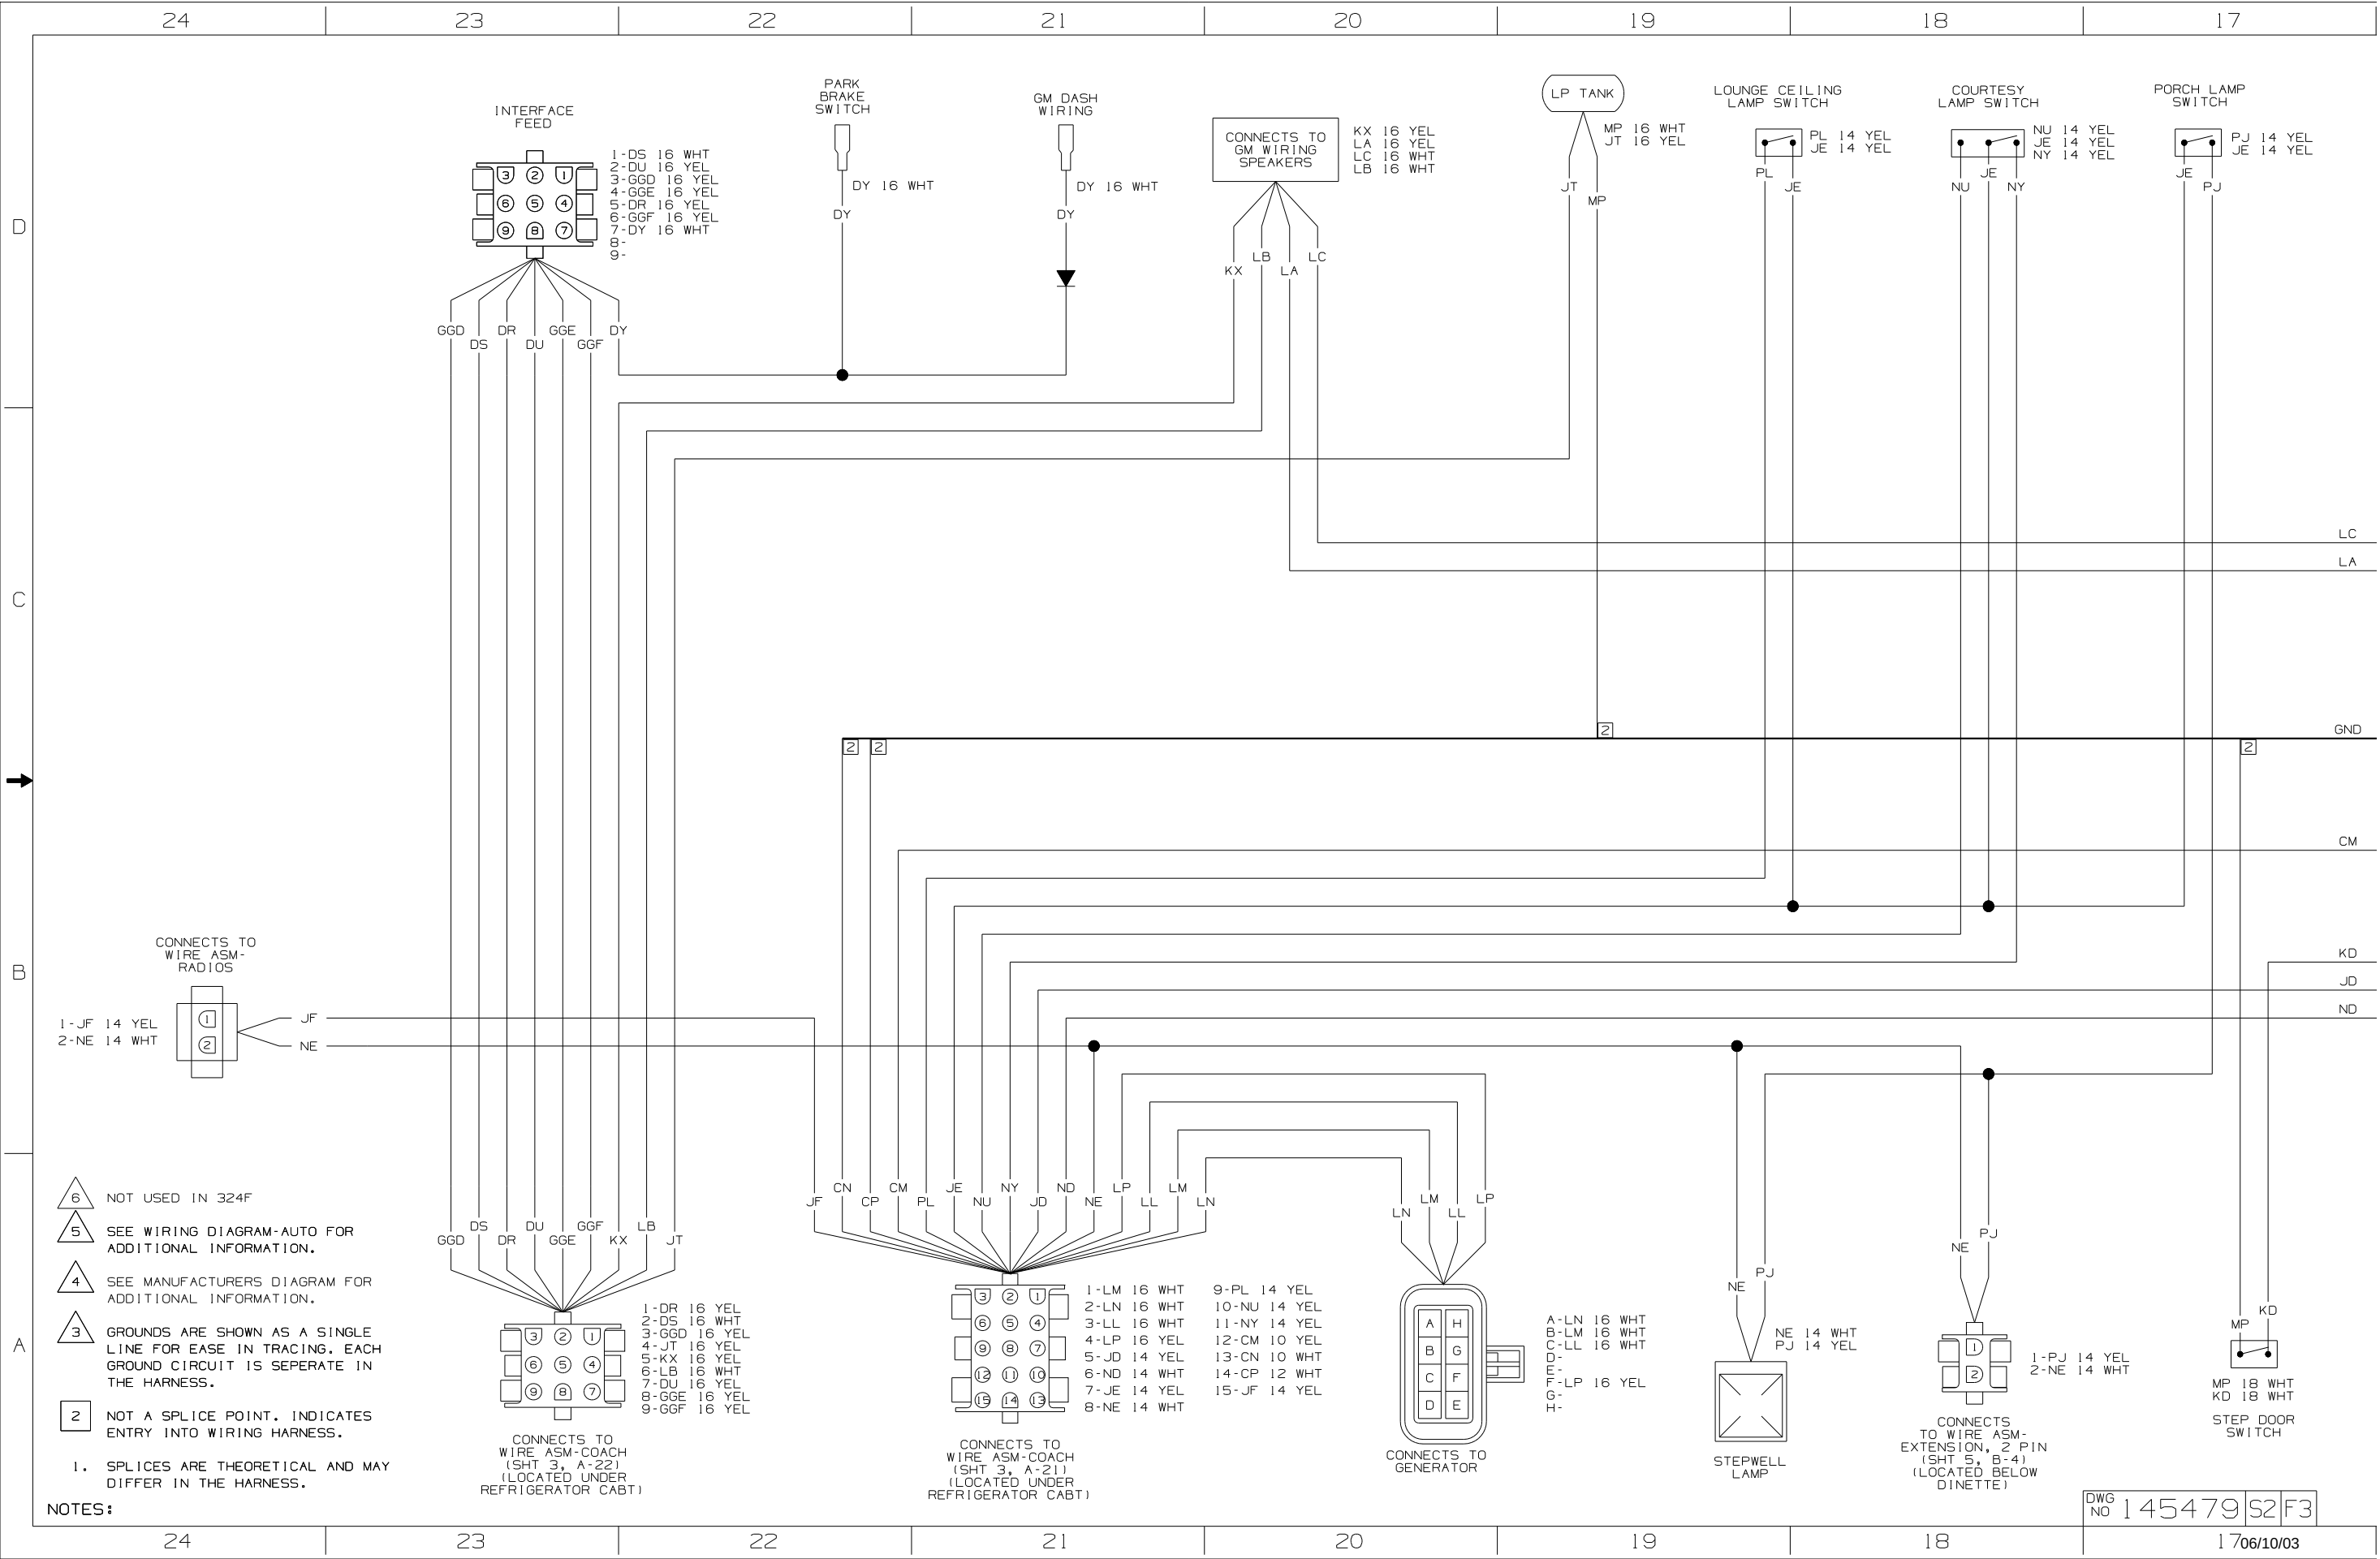


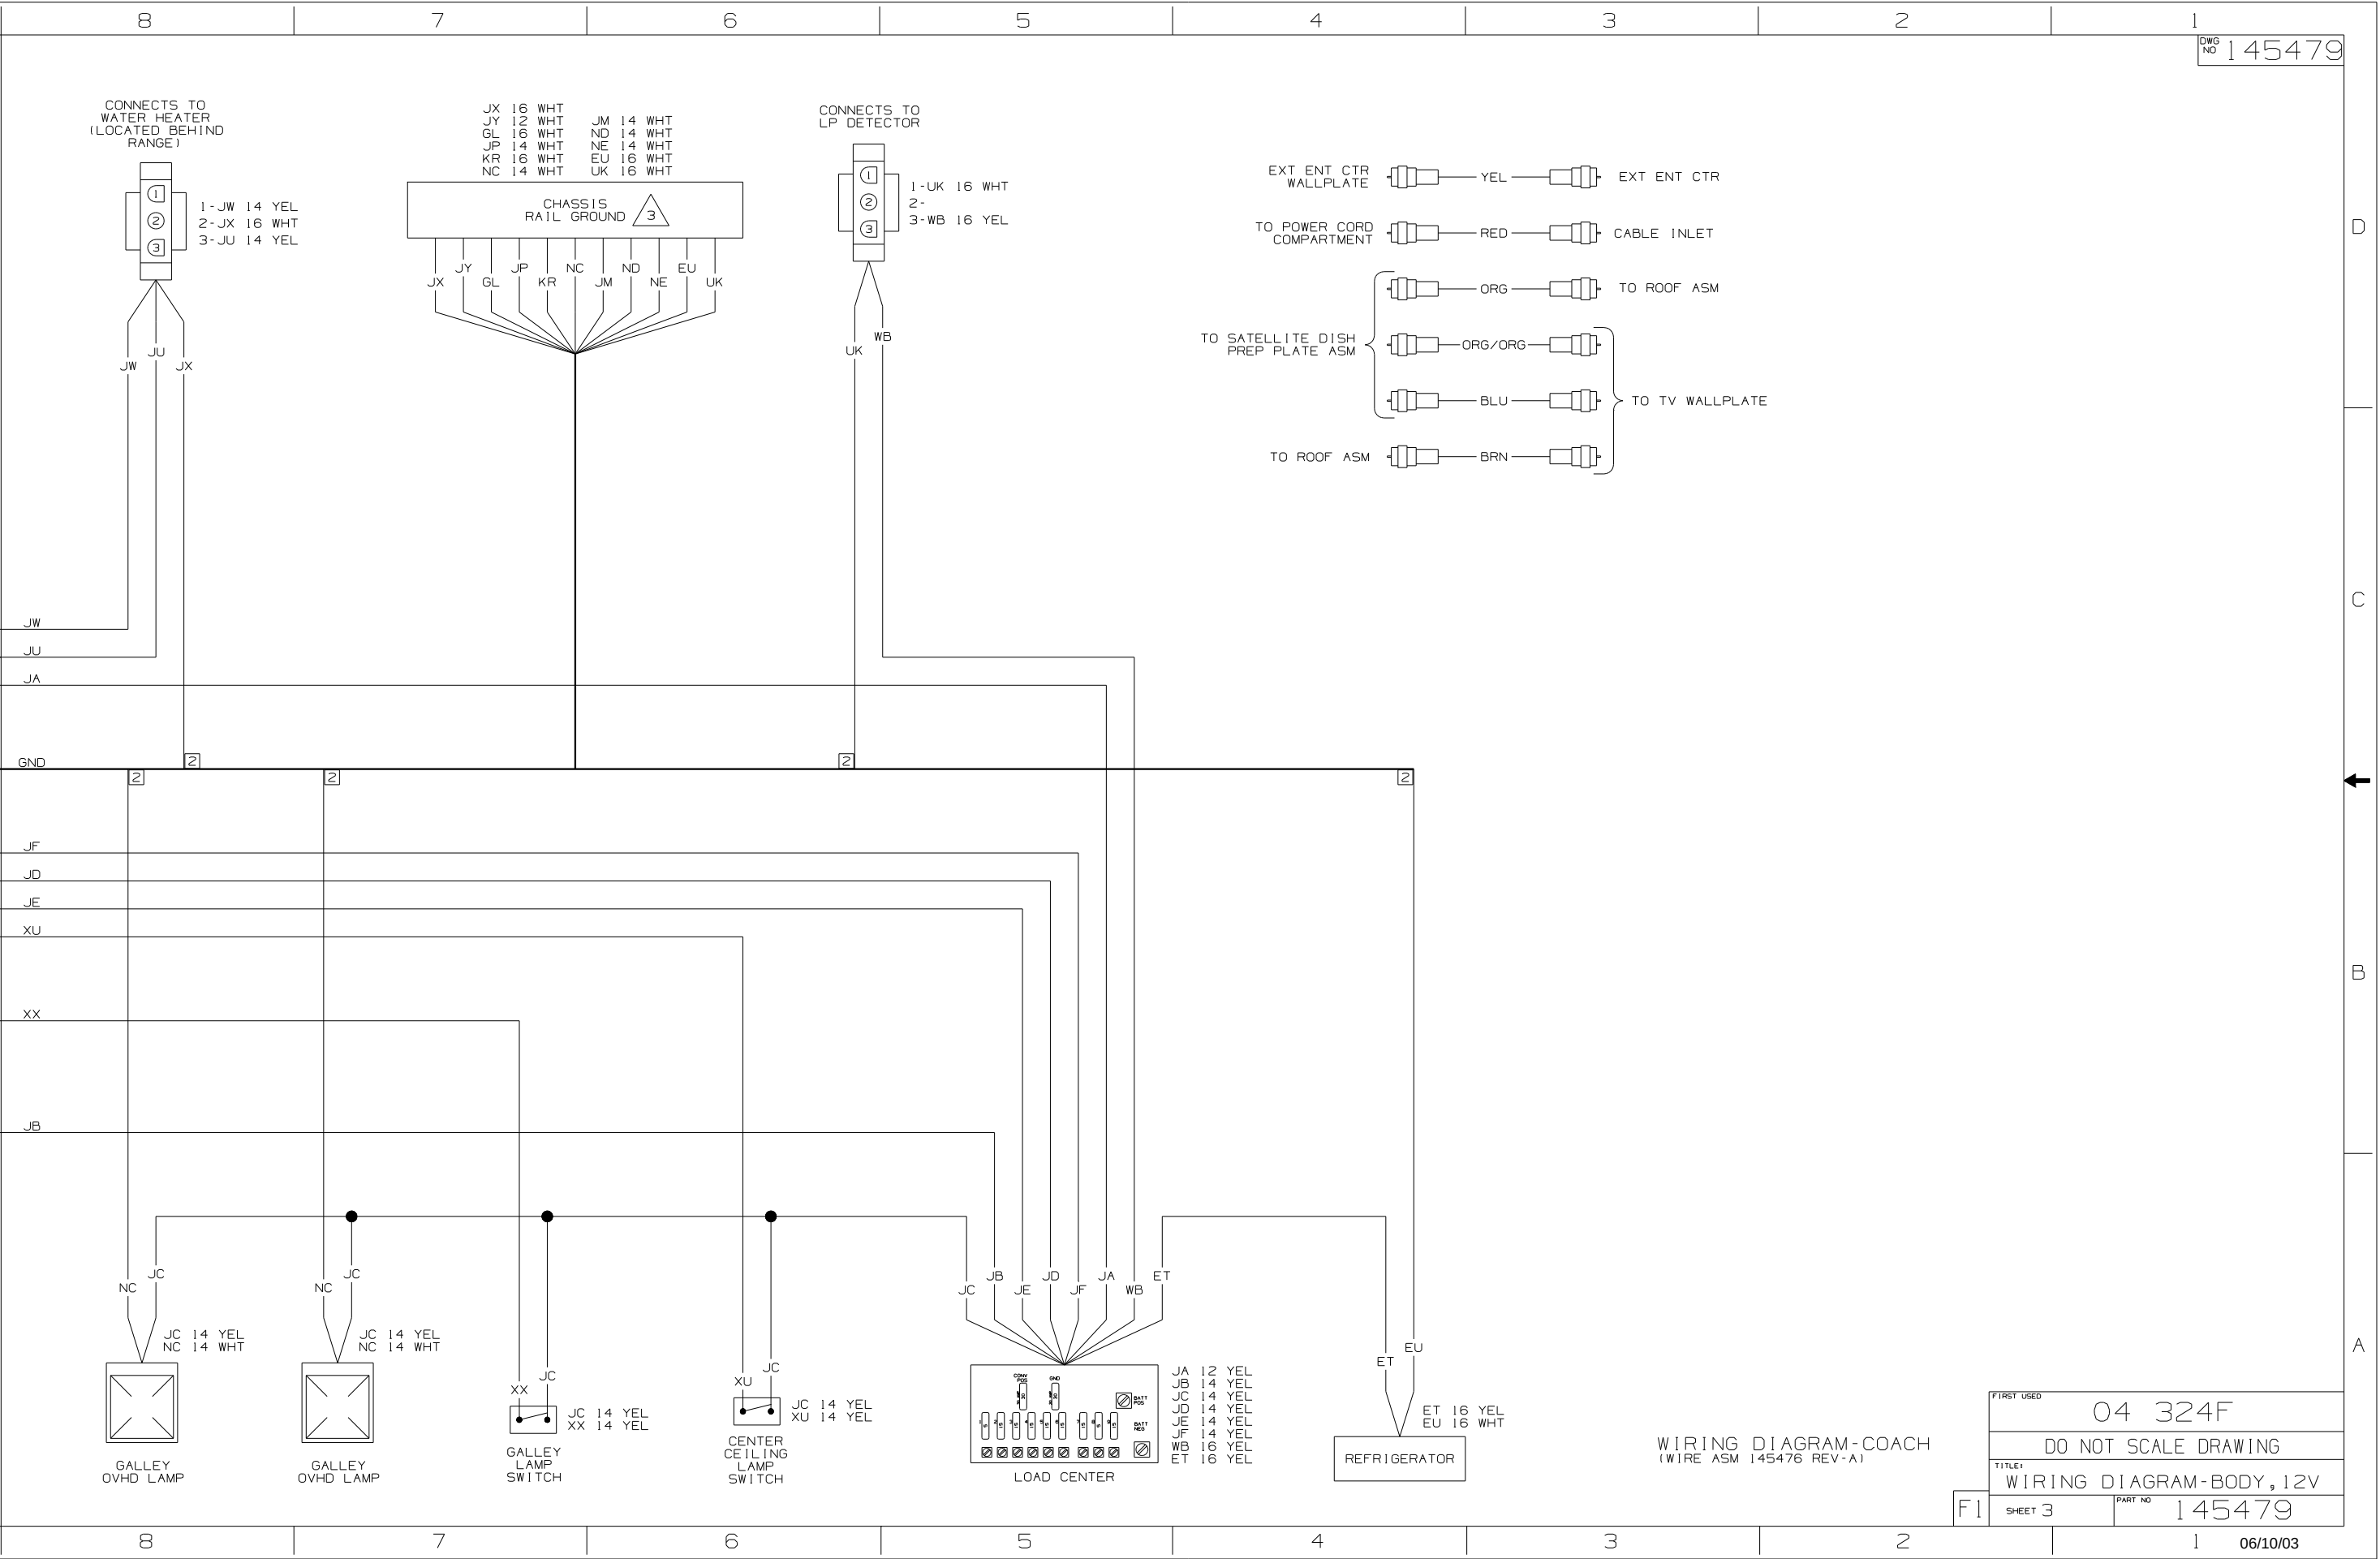

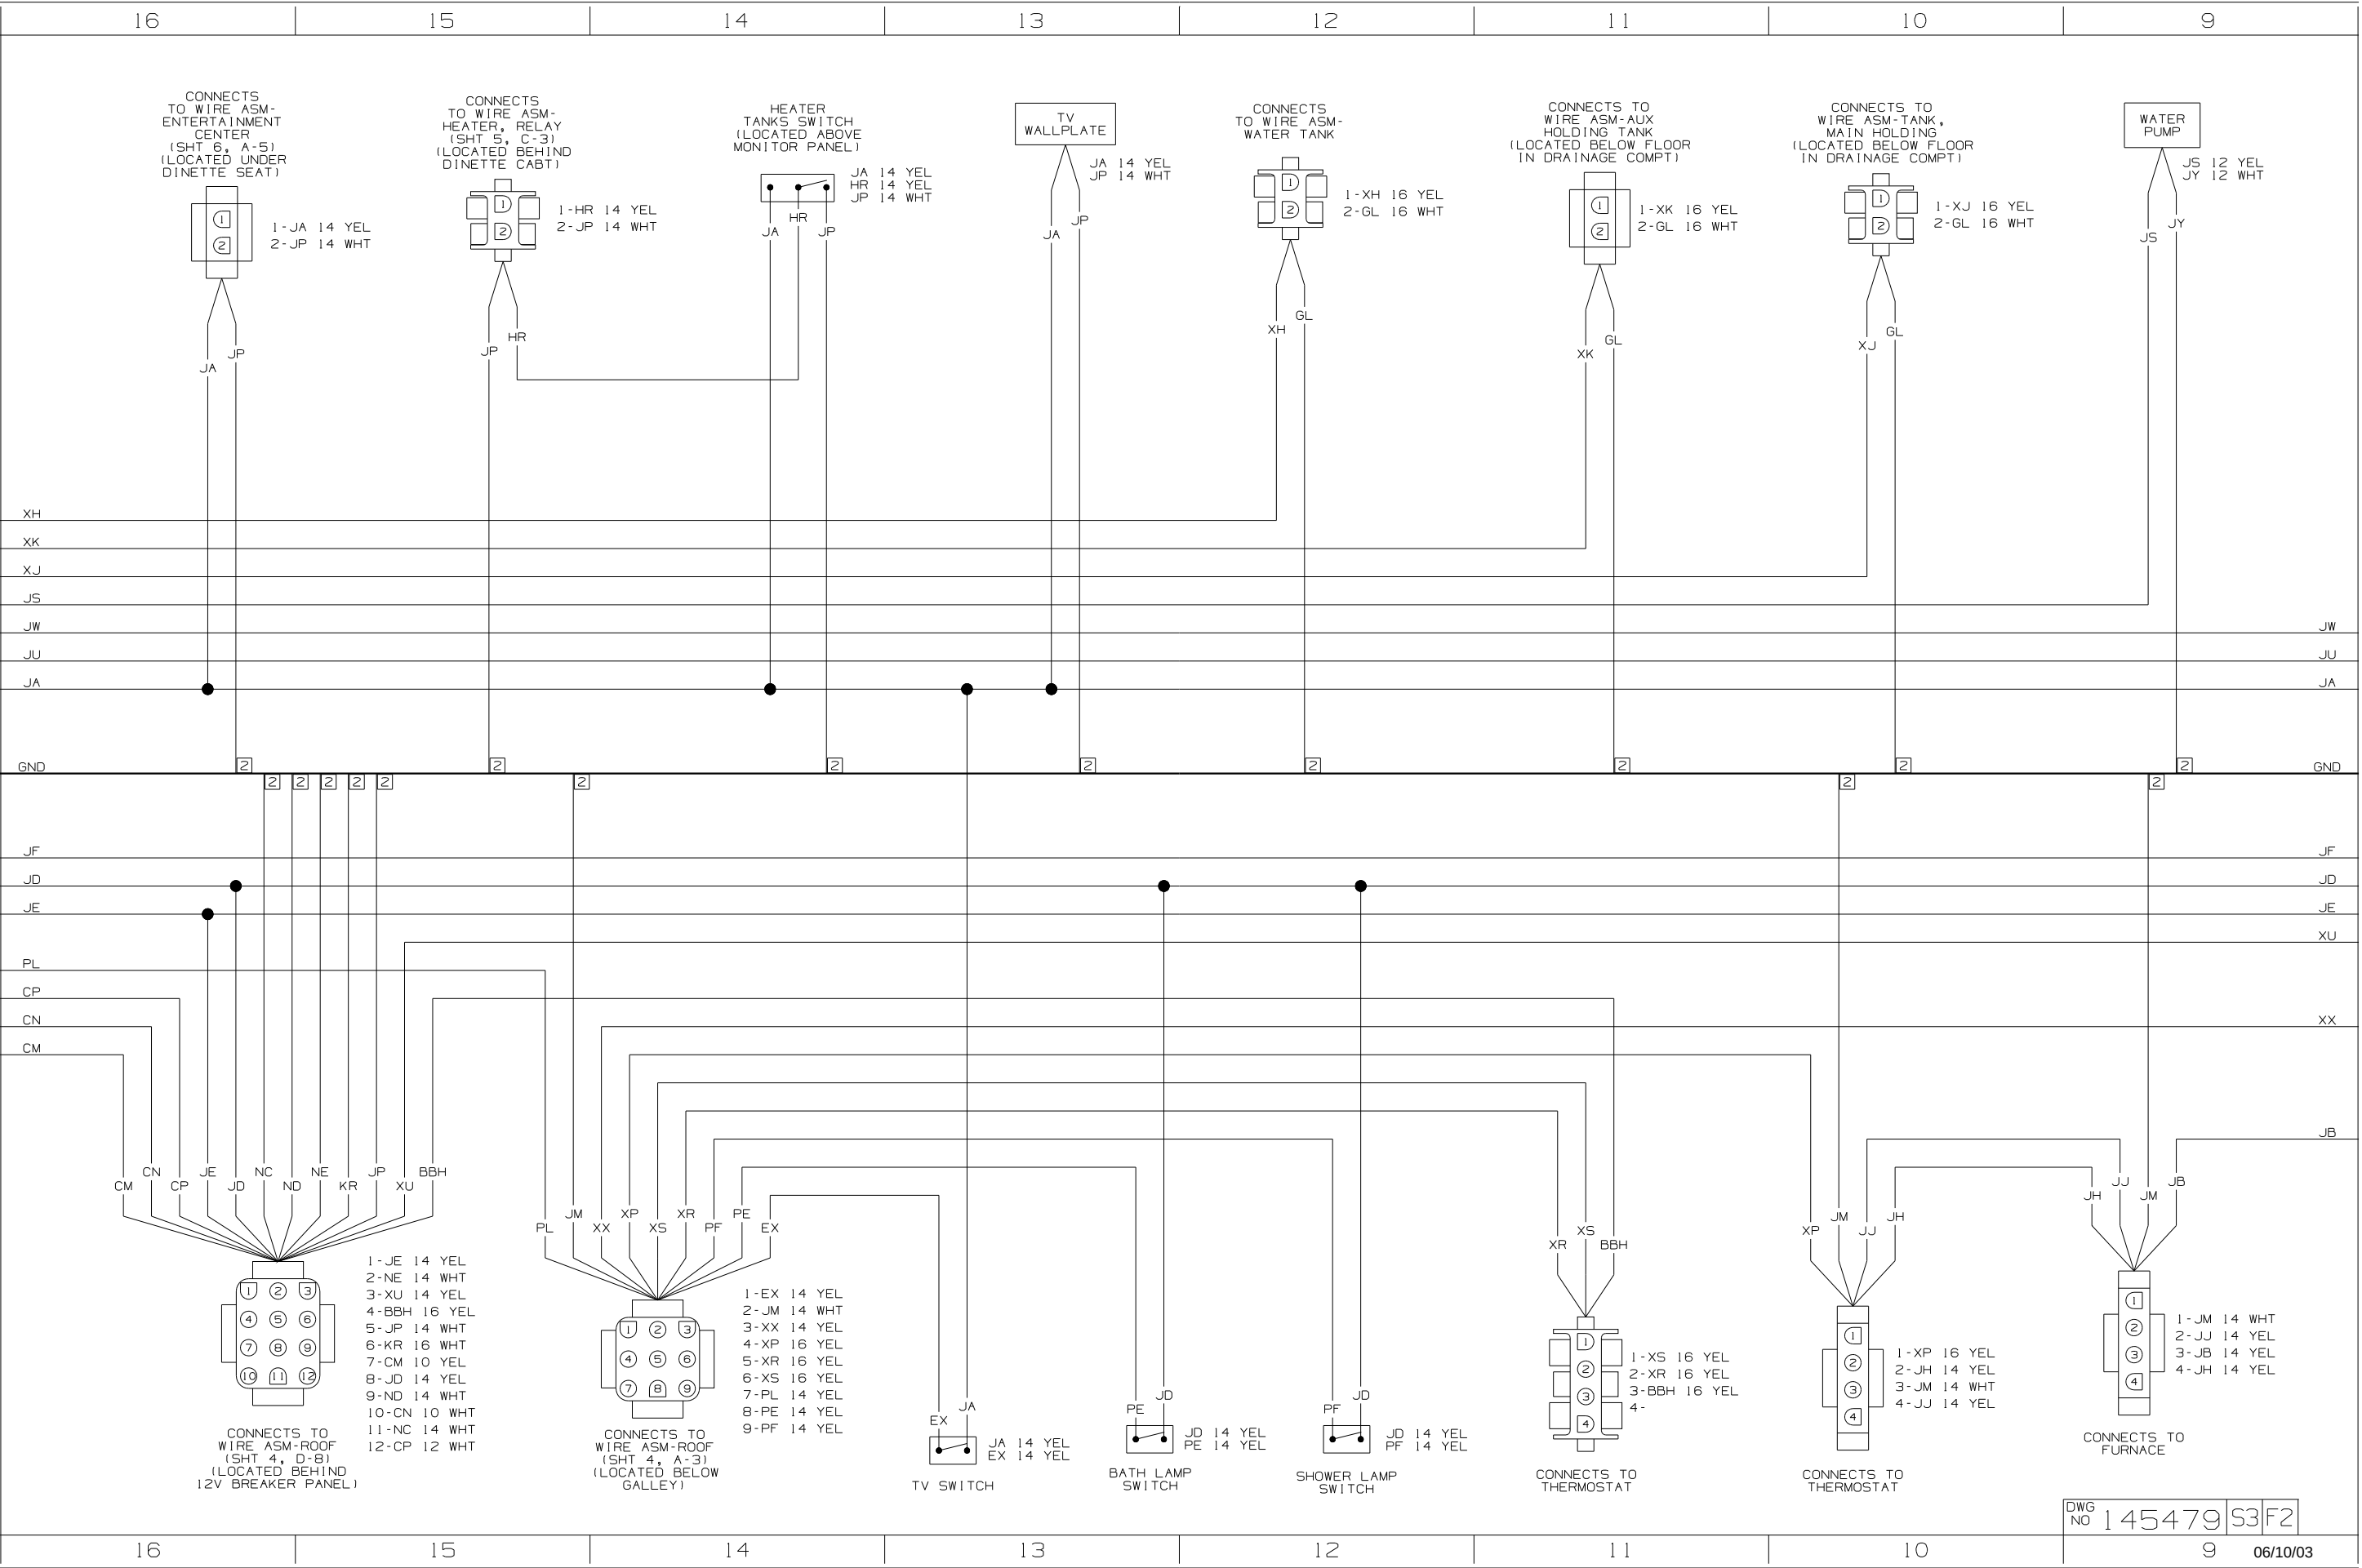


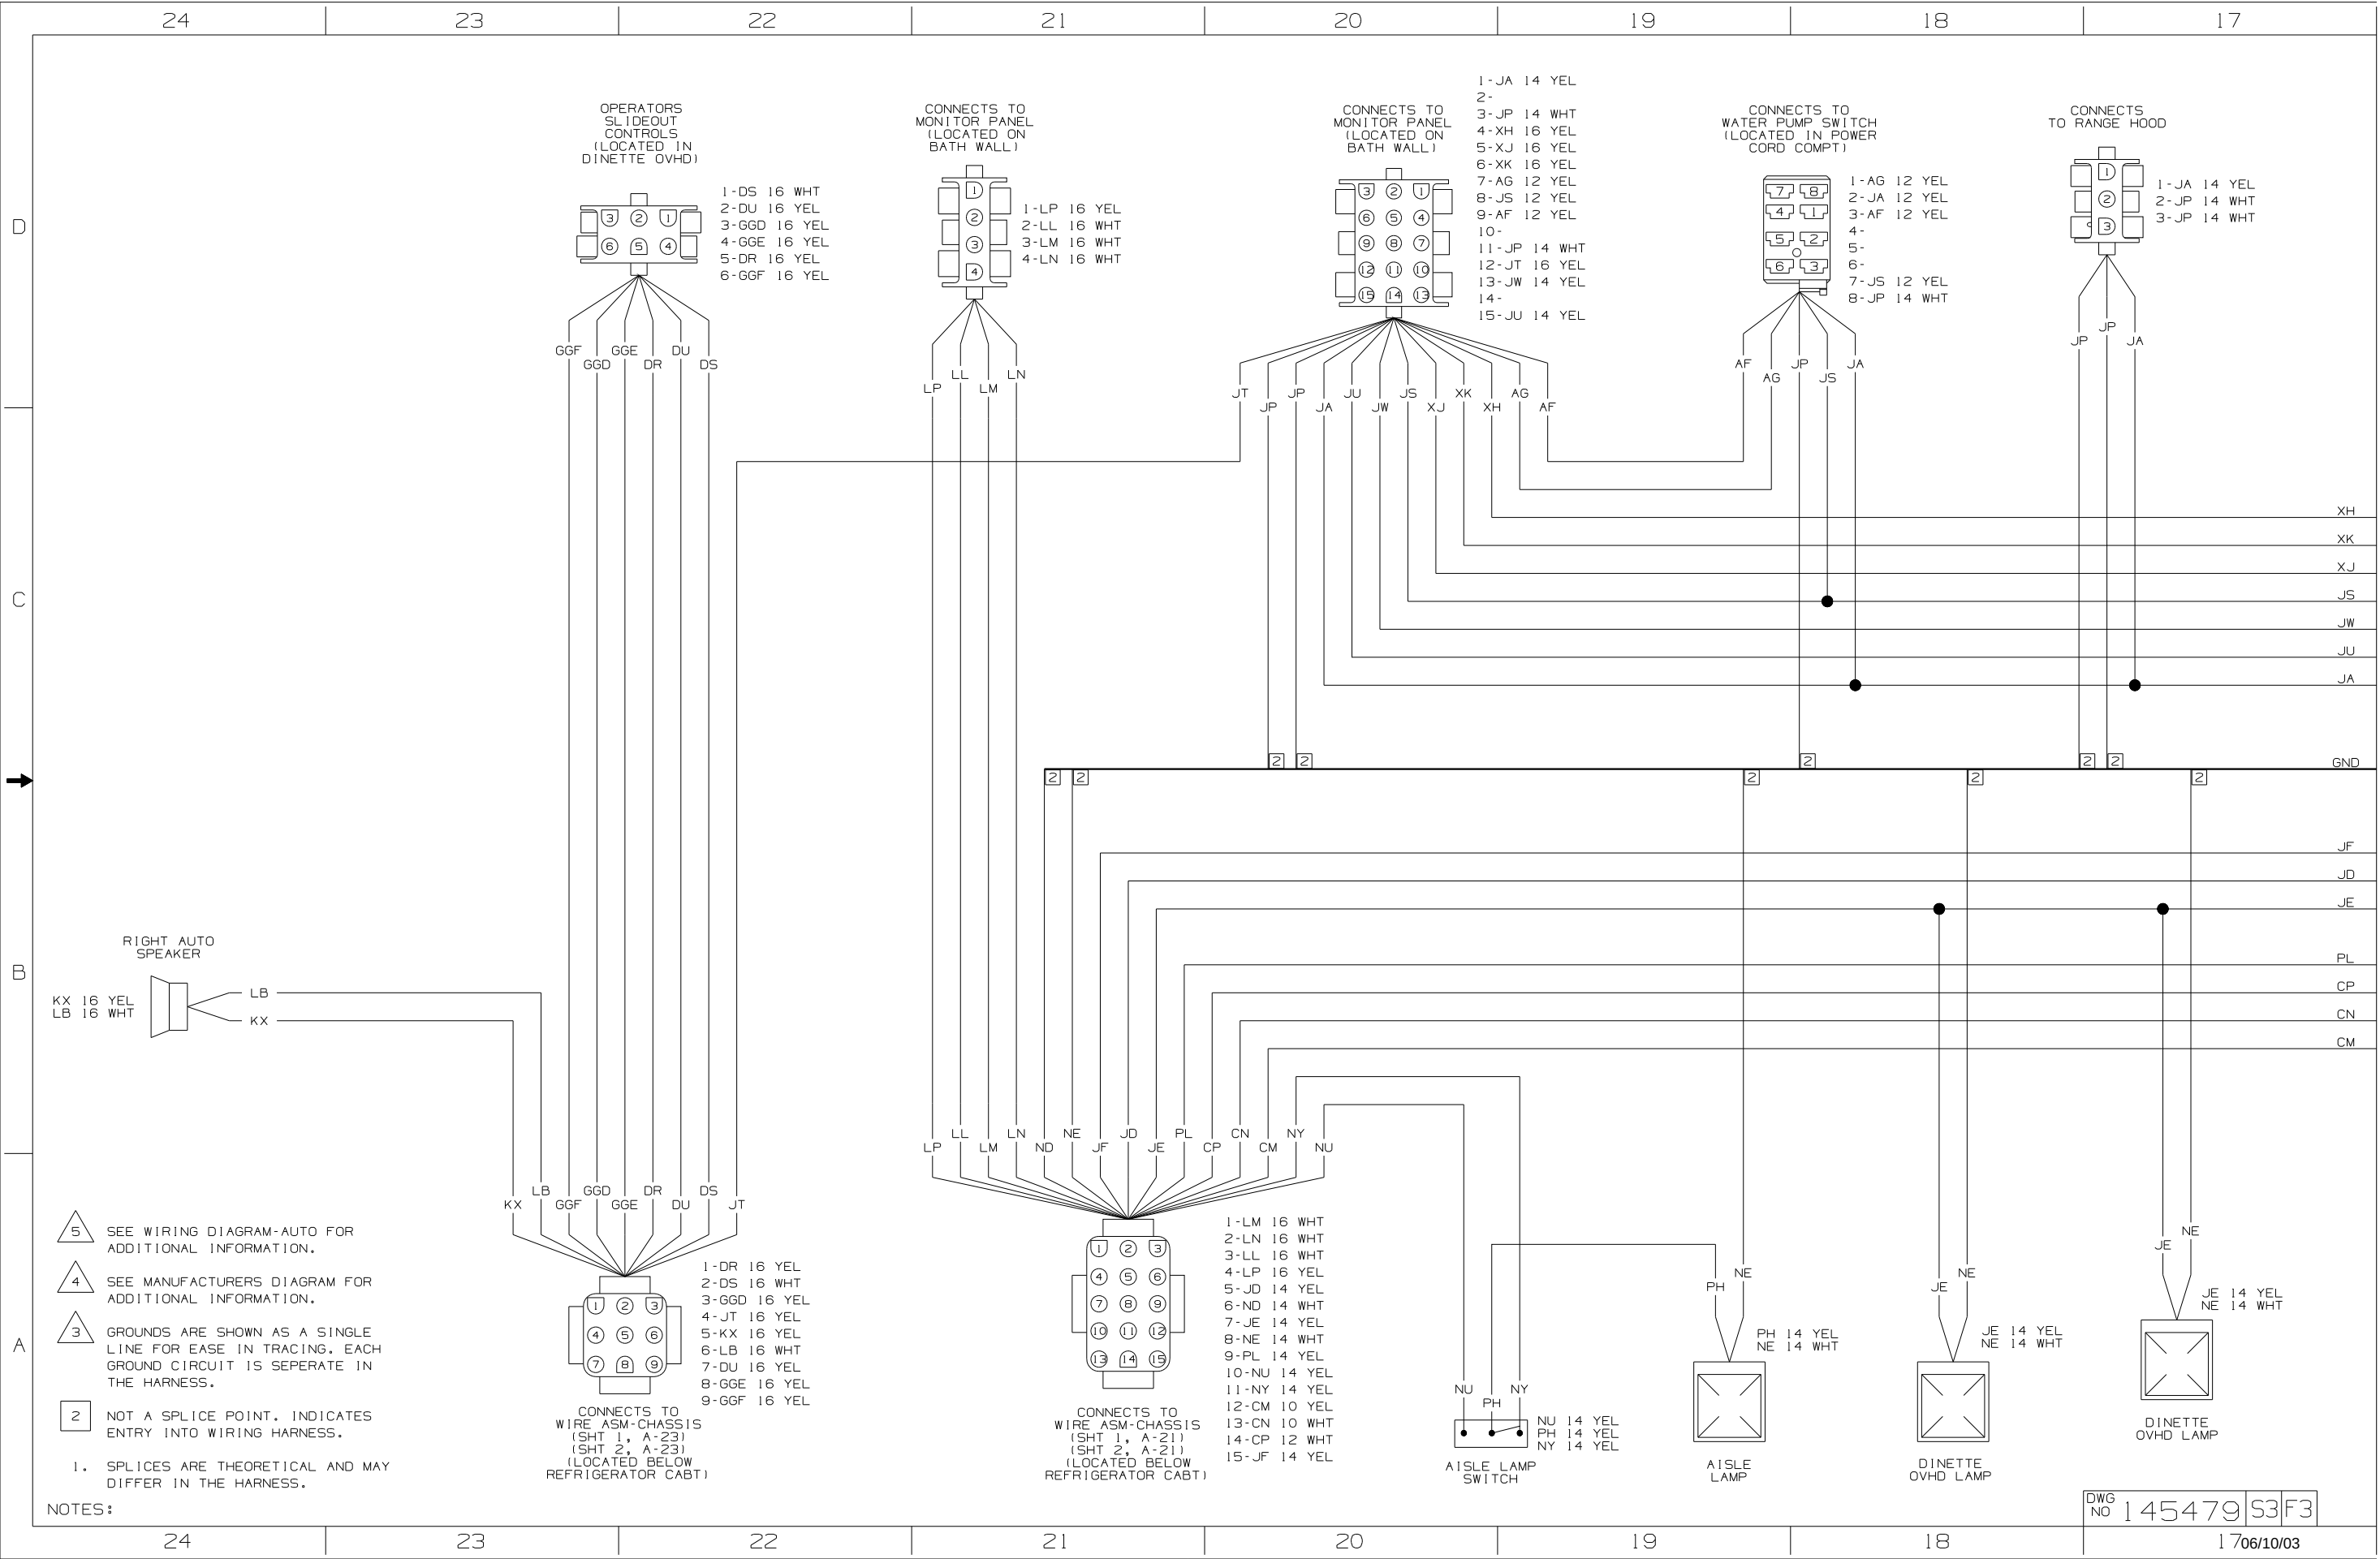

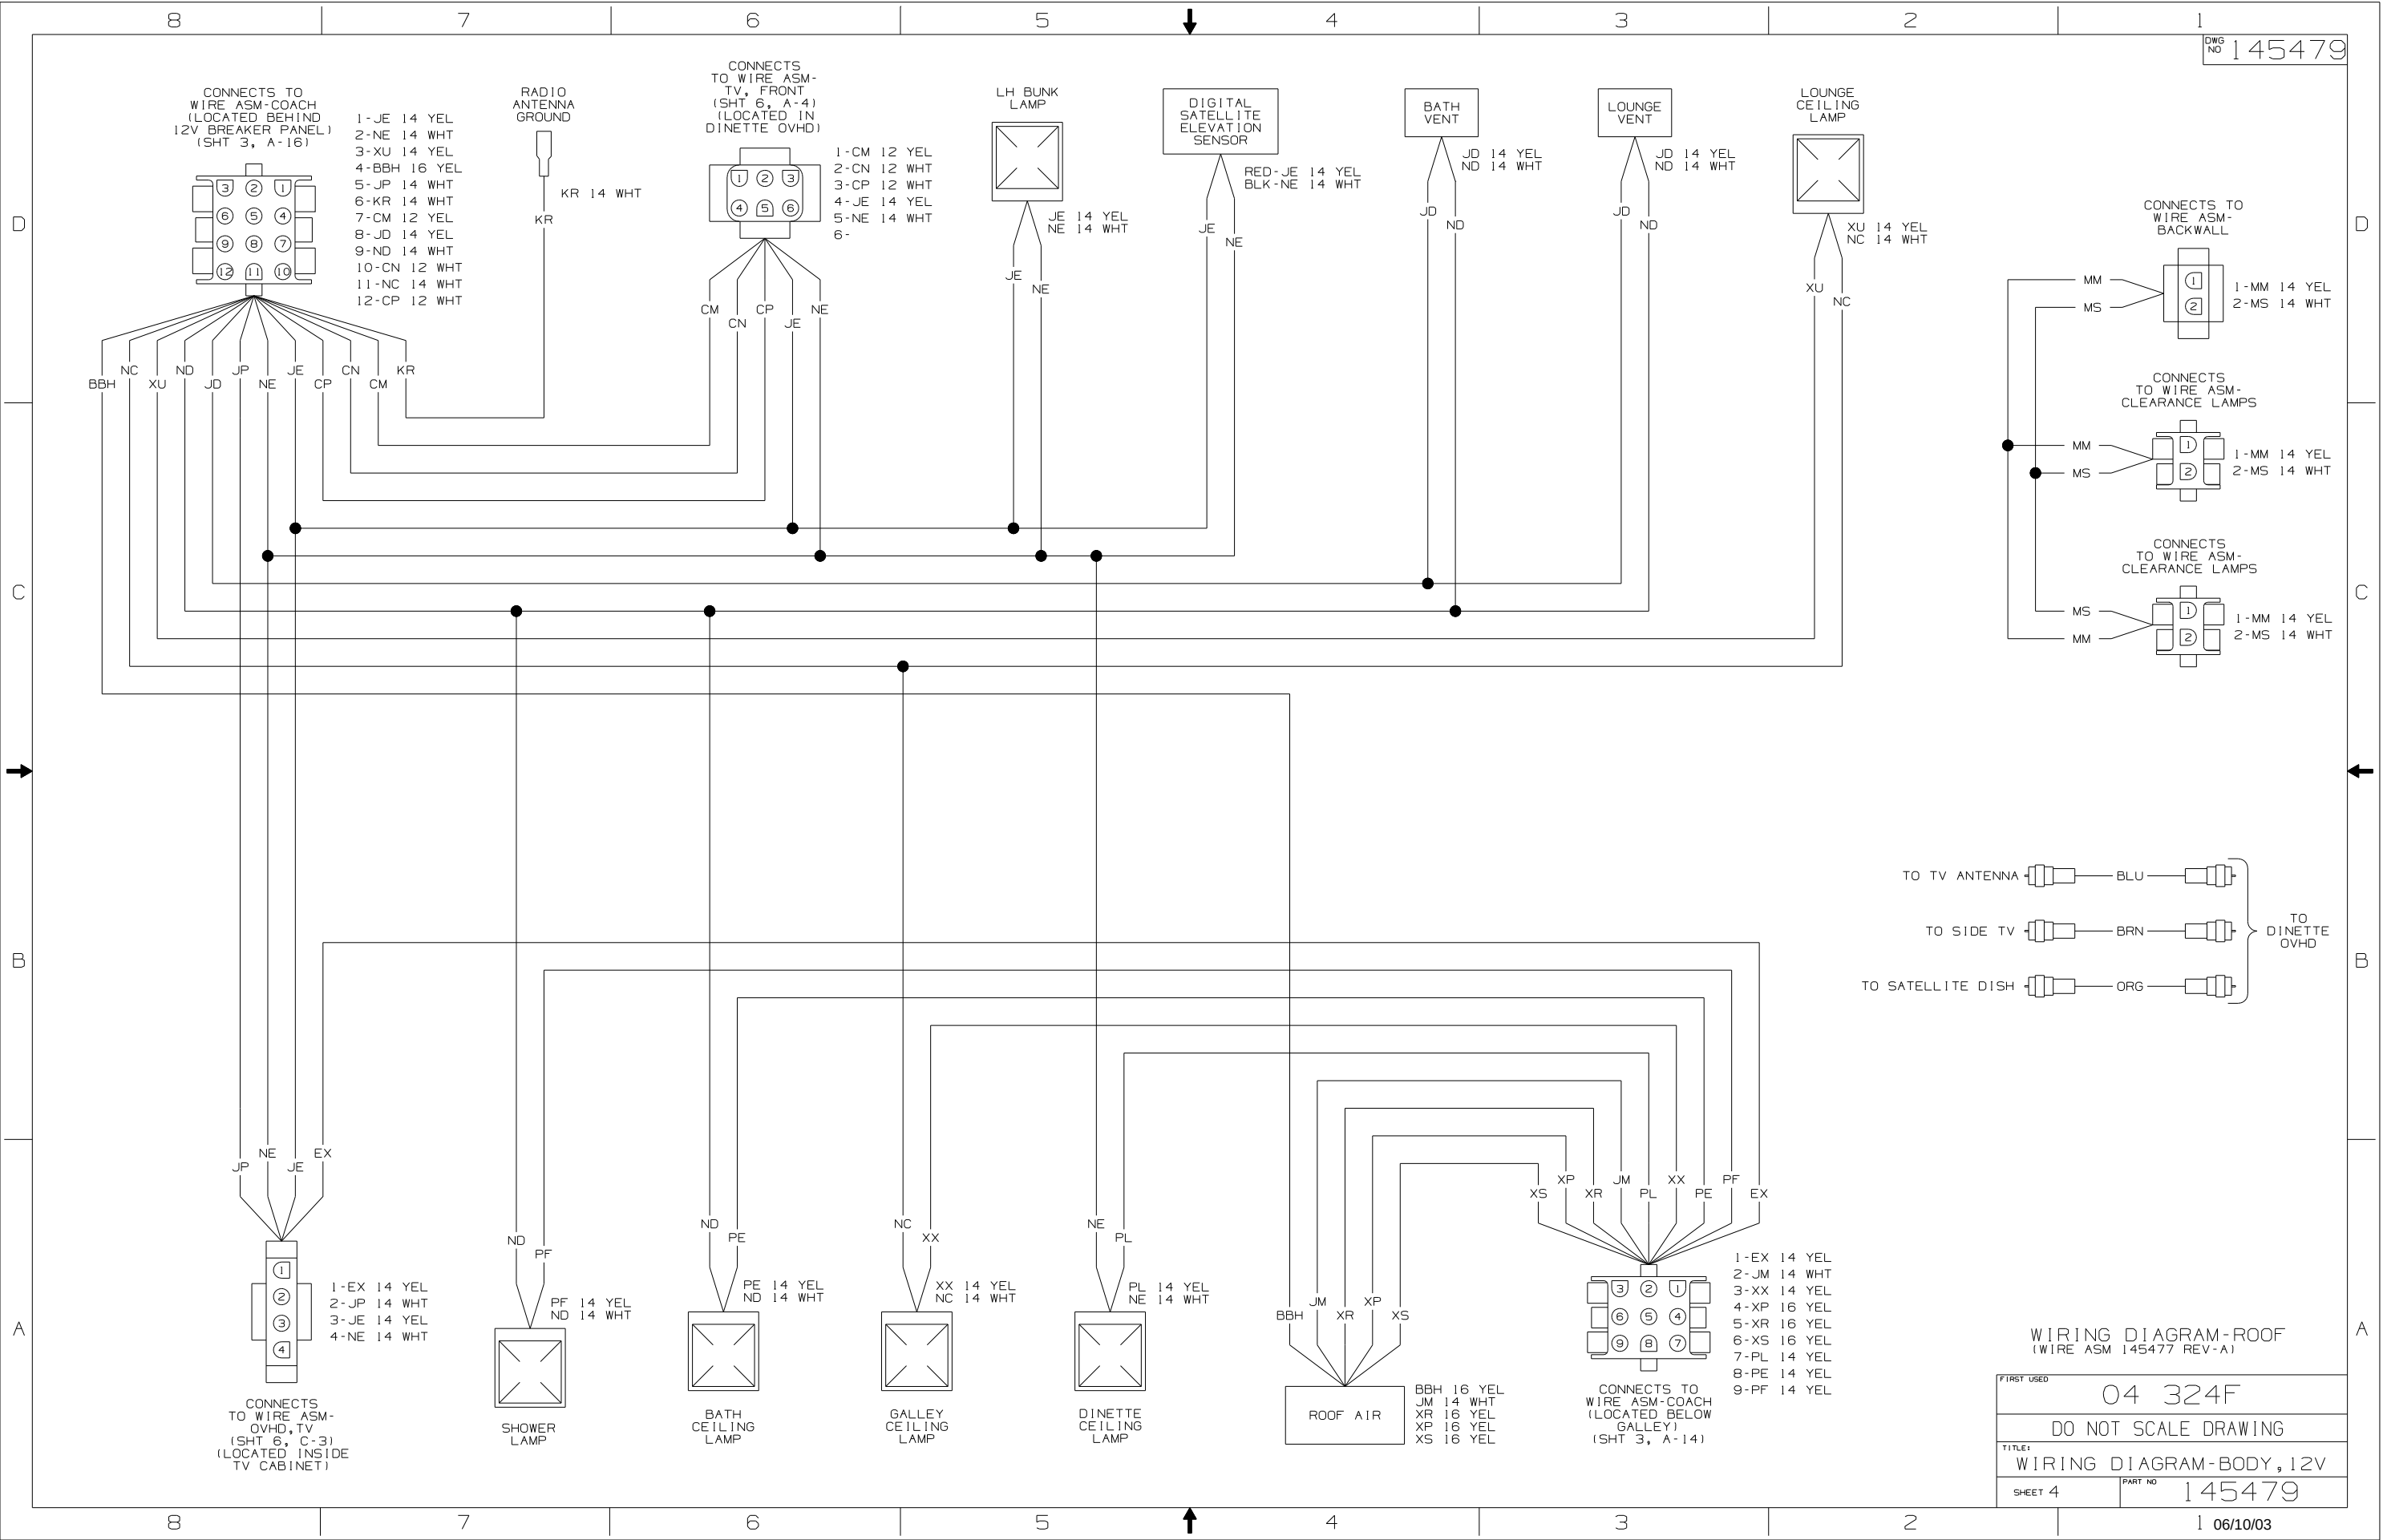


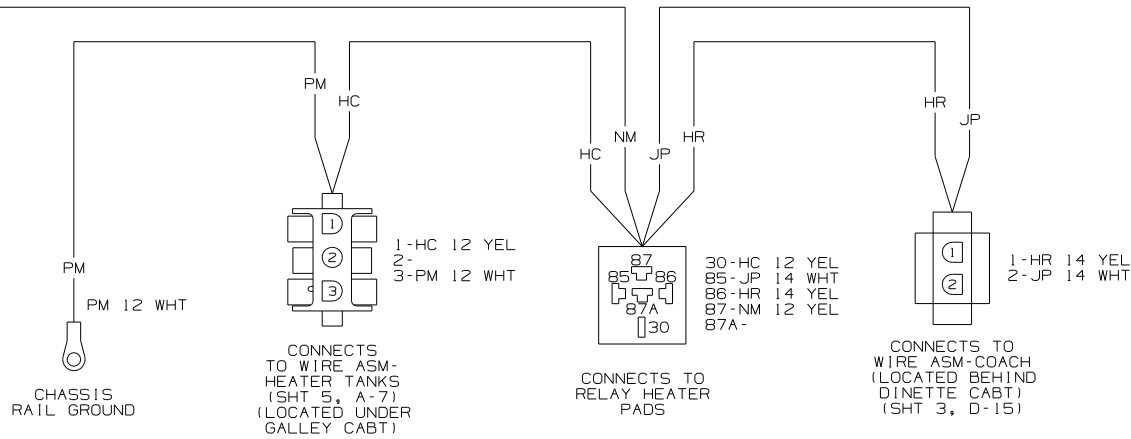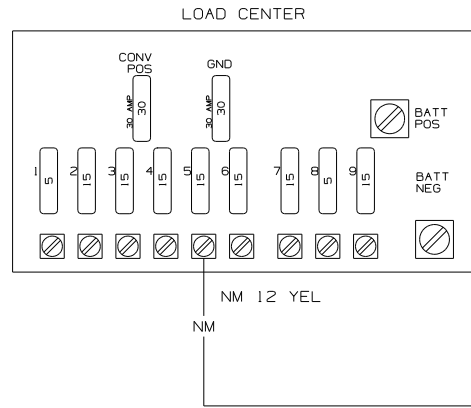



WIRING DIAGRAM-HEATER,RELAY
(WIRE ASM 134550 REV-A)

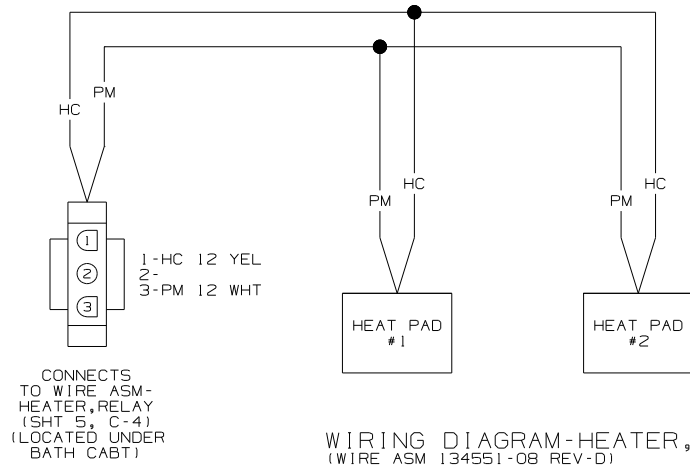


WIRING DIAGRAM-HEATER,TANKS
(WIRE ASM 134551-08 REV-D)

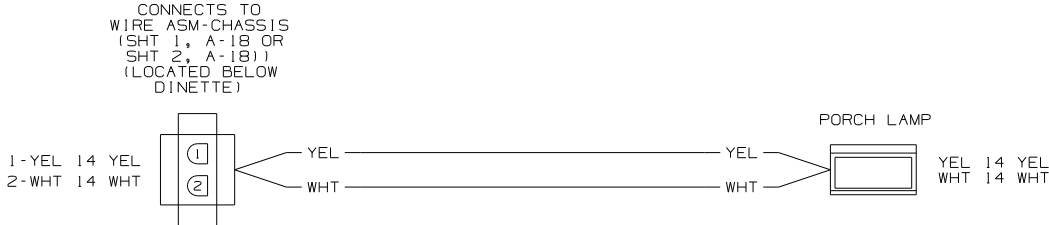


WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 133572-01 REV-E)

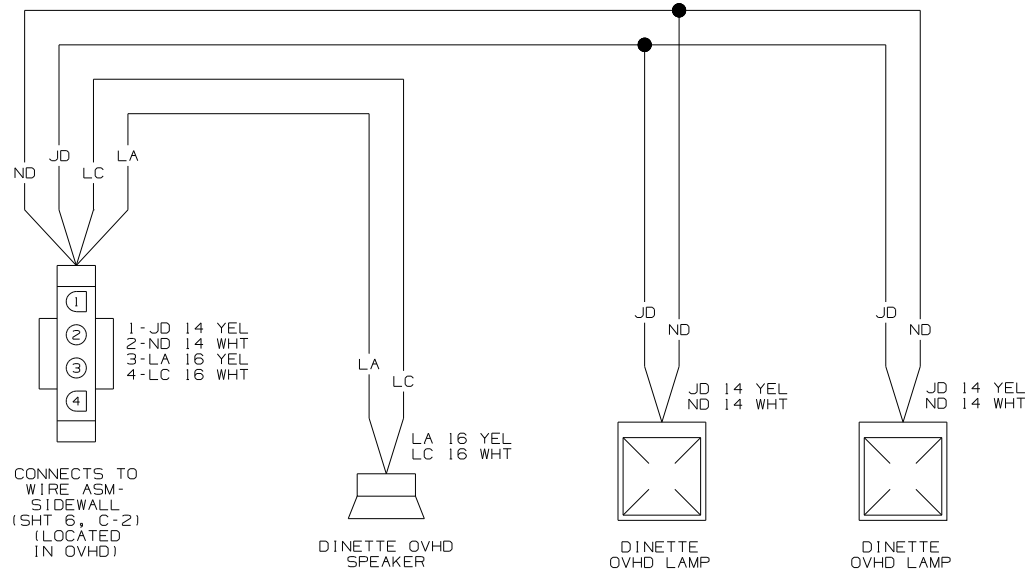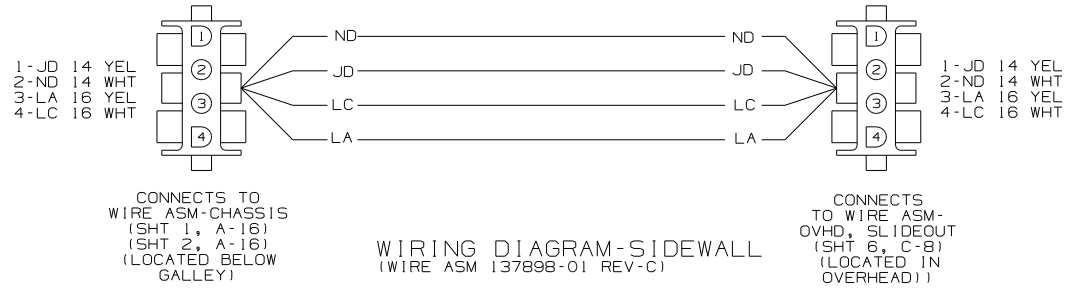


WIRING DIAGRAM-OVHD,SLIDEOUT (WIRE ASM 136702-01 REV-E)

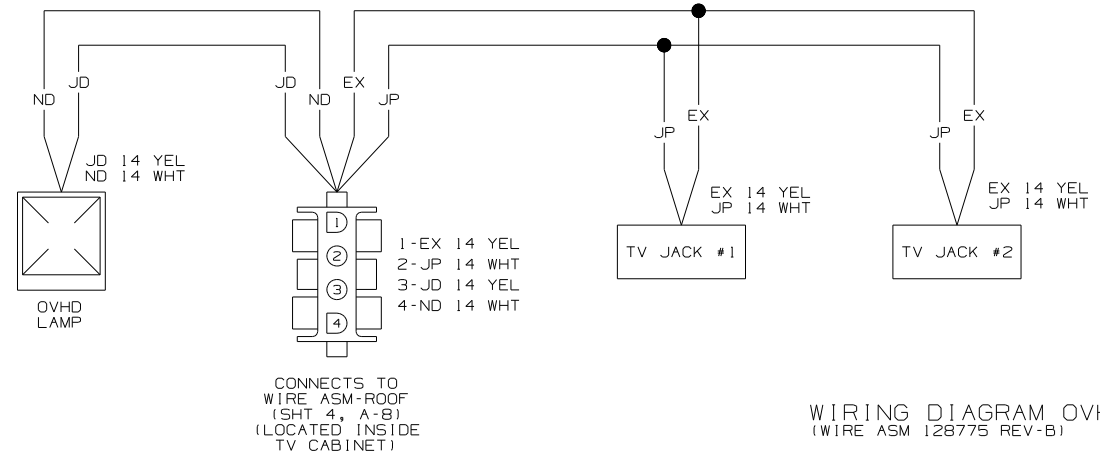

WIRING DIAGRAM OVHD,TV (WIRE ASM 128775 REV-B)

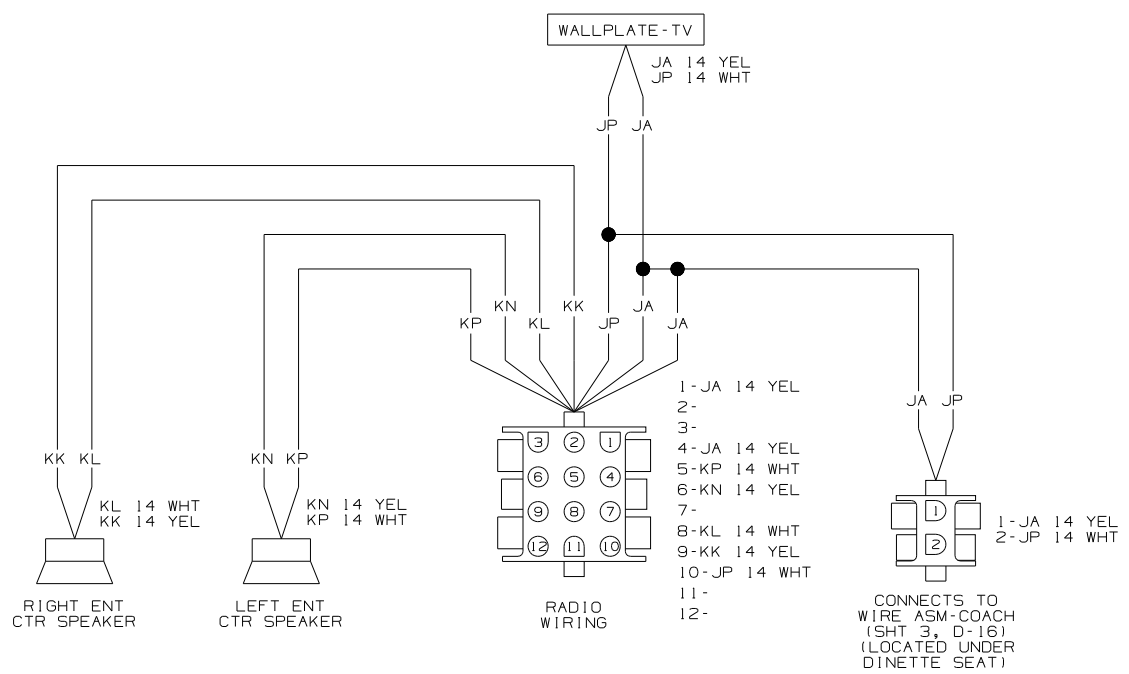

WIRING DIAGRAM-ENTERTAINMENT CENTER (WIRE ASM 125853-04 REV-L)

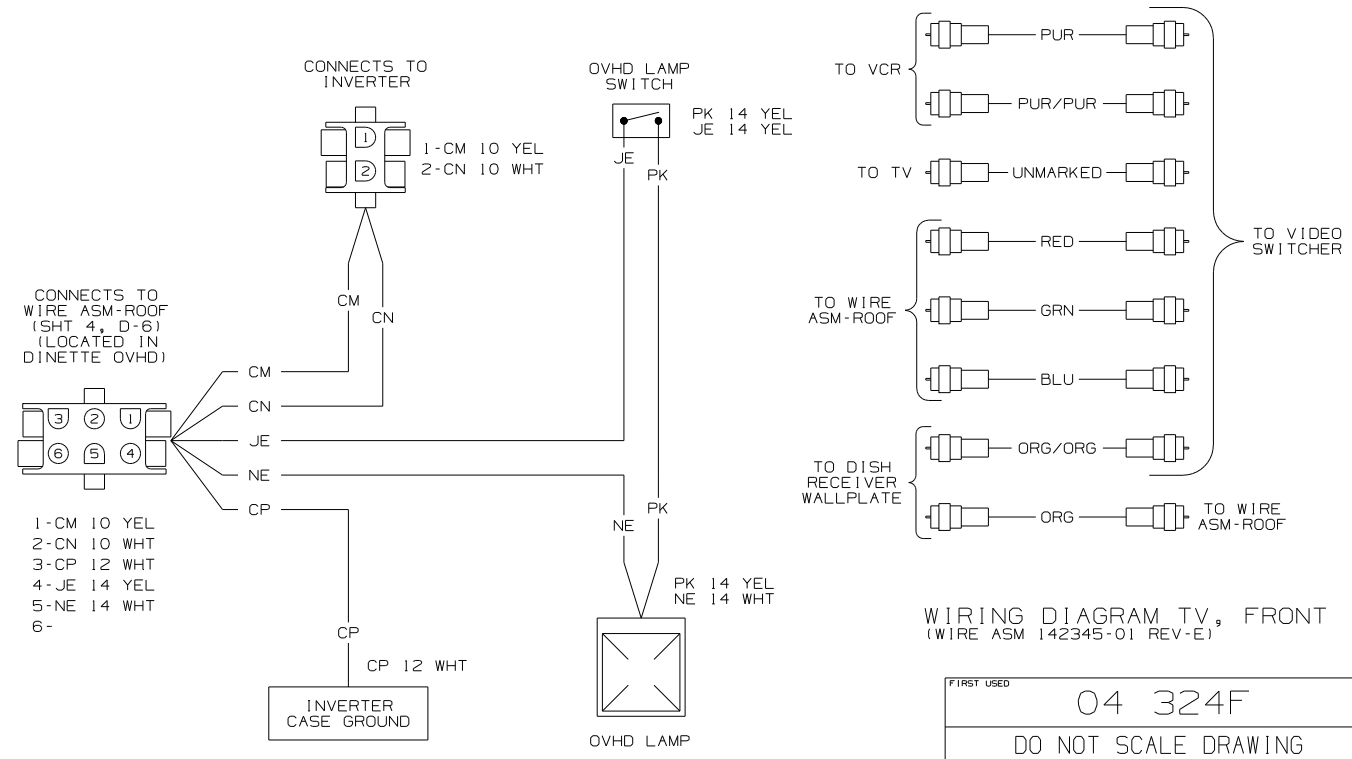

WIRING DIAGRAM TV, FRONT (WIRE ASM 142345-01 REV-E)

FIRST USED	04 324F
DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-BODY,12V	
SHEET 6	PART NO 145479