






DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

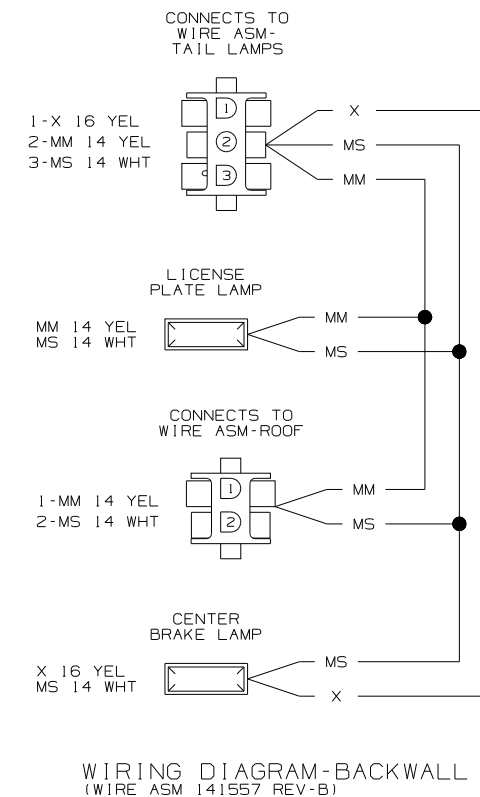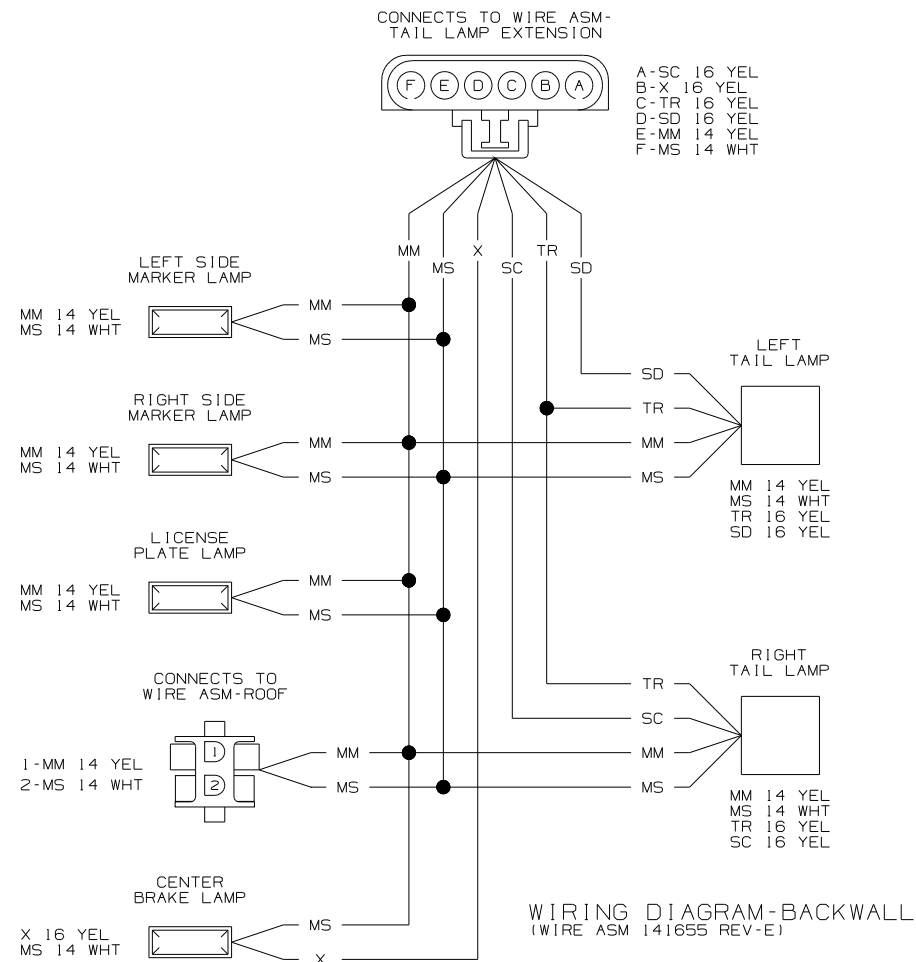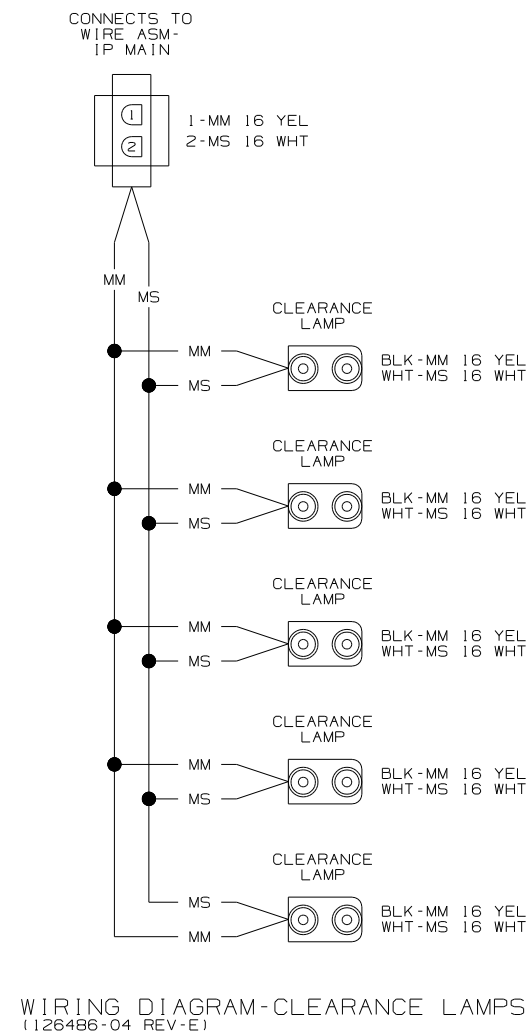

		COPYRIGHT 2002 WINNEBAGO INDUSTRIES, INC.	
DFT R		ORIG. DATE	
CHK R		ALL DIMENSIONS ARE IN MILLIMETERS	
P.E.		FIRST USED	
M.E.		04 300/400	
DSNR		04 300/400	
UNSPECIFIED TOLERANCES ARE: HOLE DIA (X) 1/2 ONE-PLACE (X, X1) 1/2 TWO-PLACE (X, X1) 1/2 ANGLE 1/2		MATERIAL:	
THIRD ANGLE PROJECTION			
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-AUTO LAMPS			
SHEET 1 of 2		PART NO 145092	
REF: 144468 1 05/23/03			

