




DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.





CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

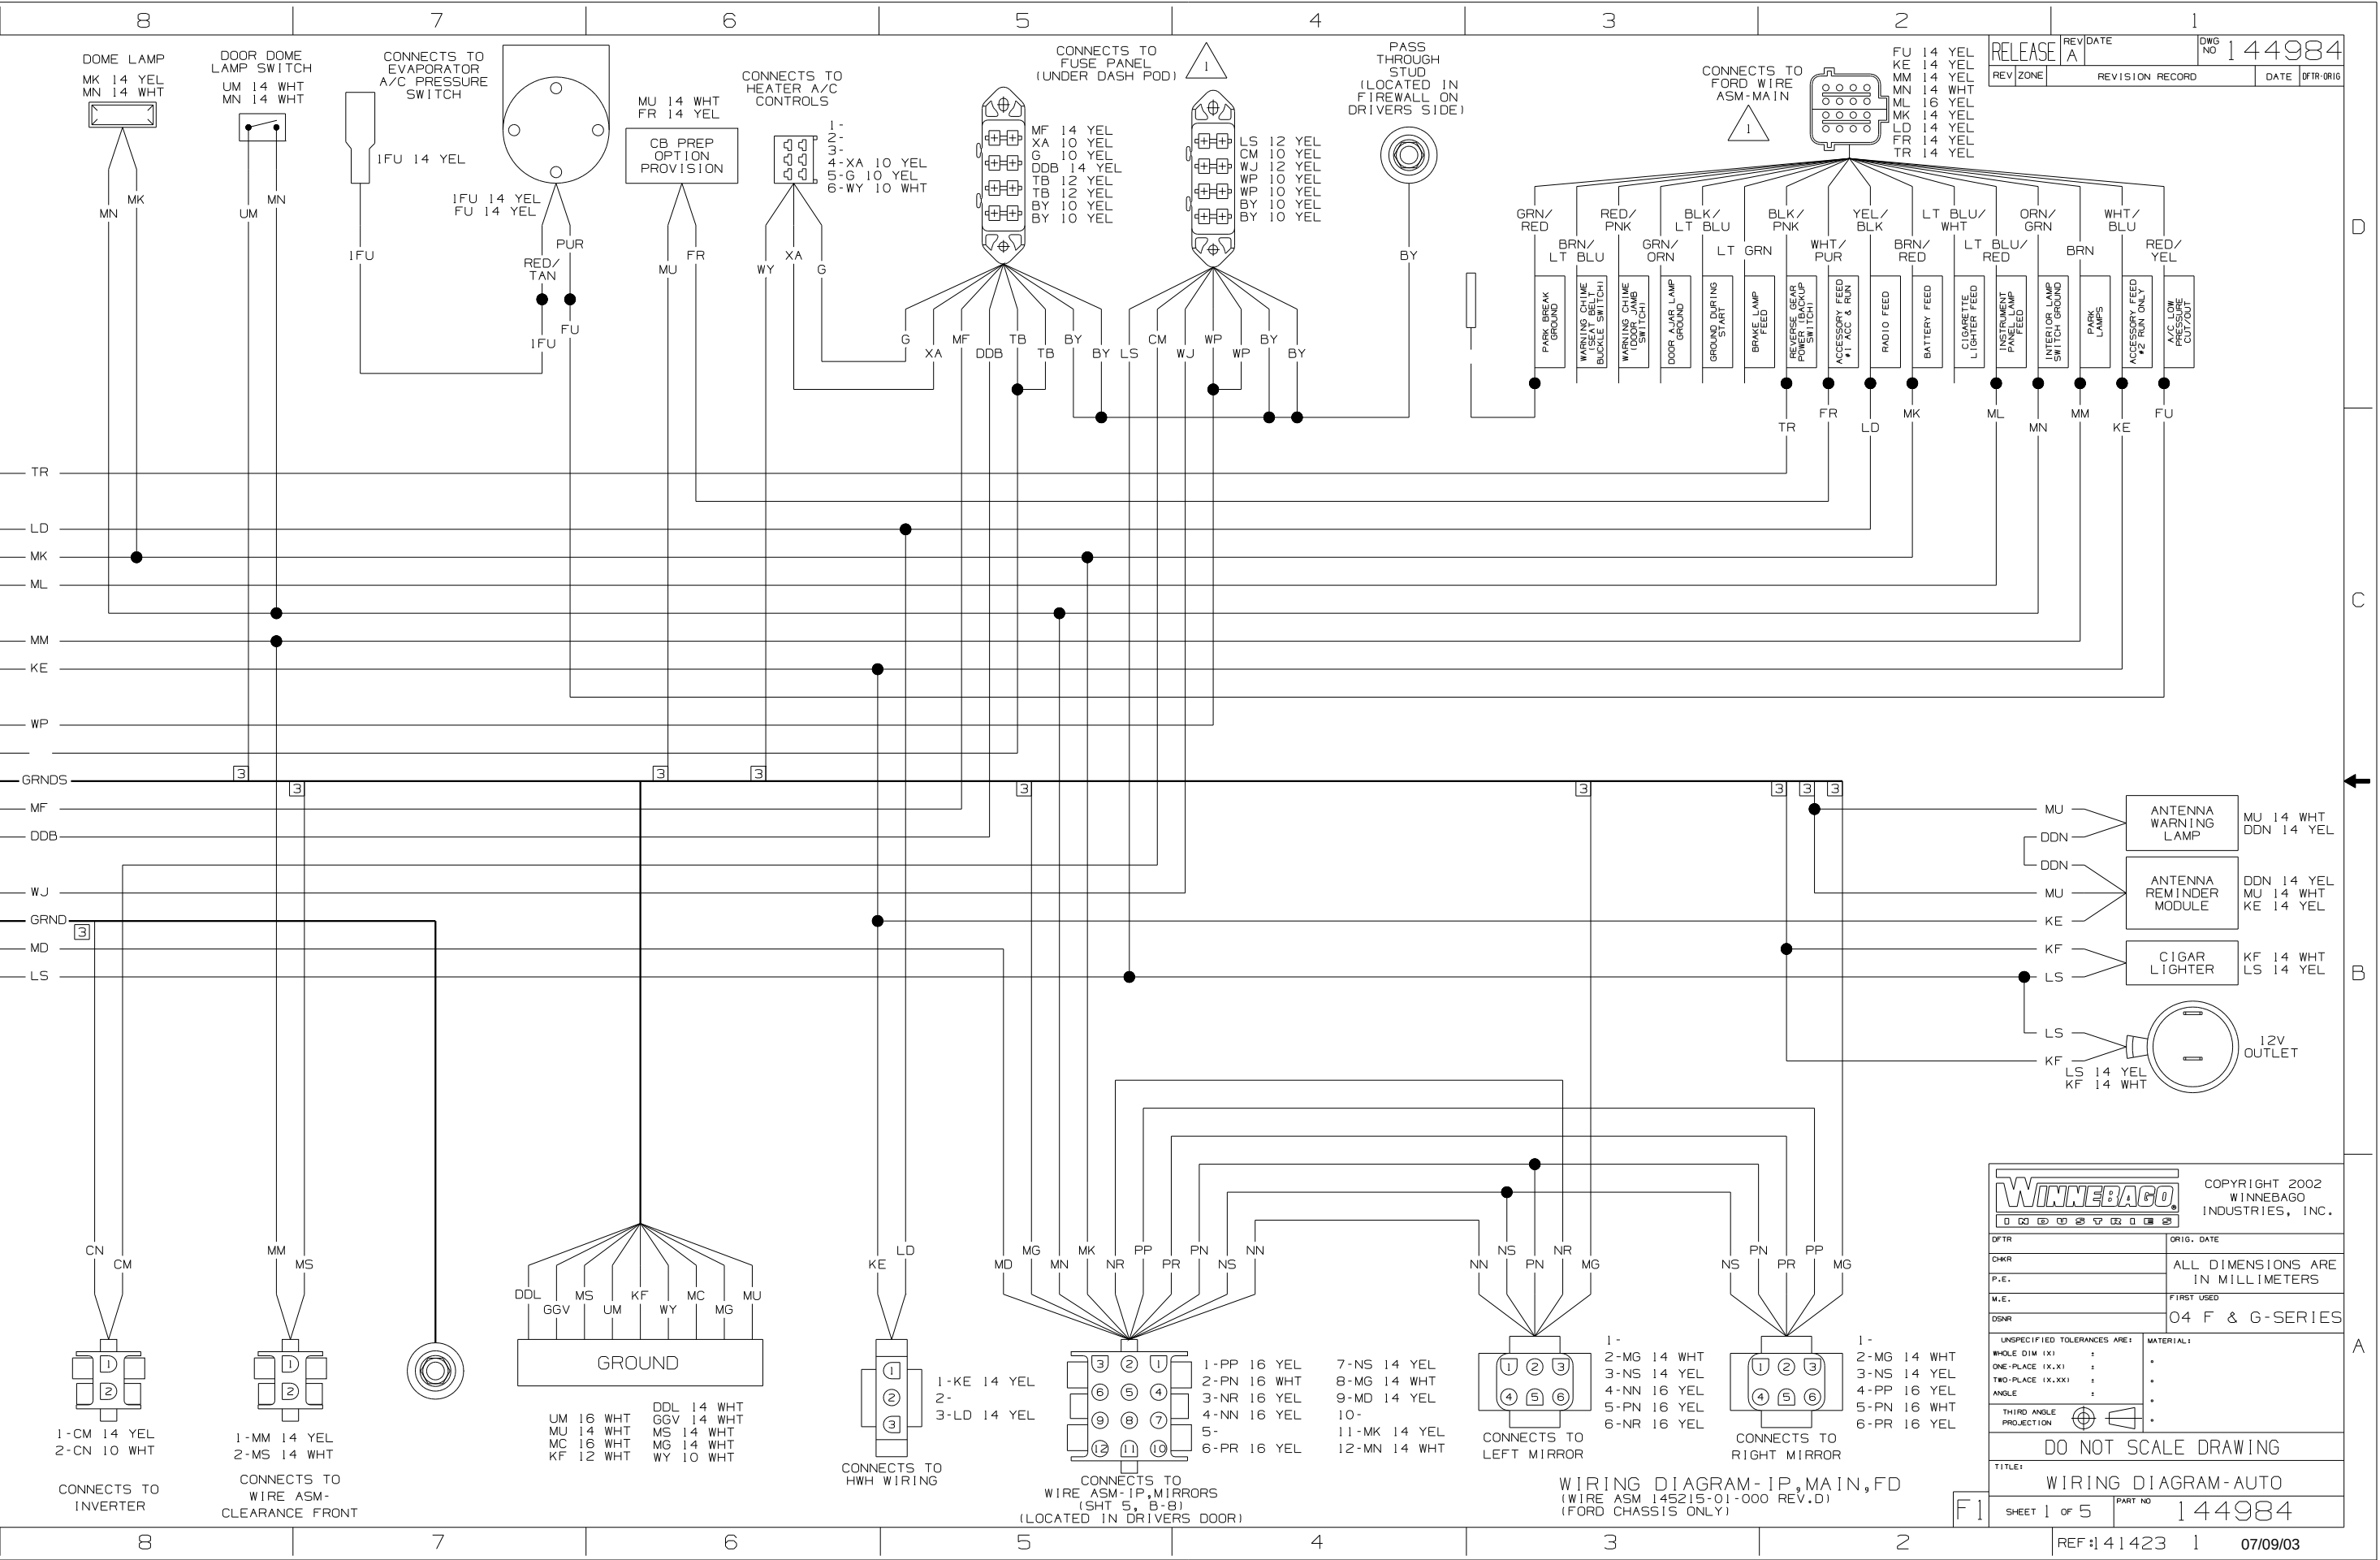

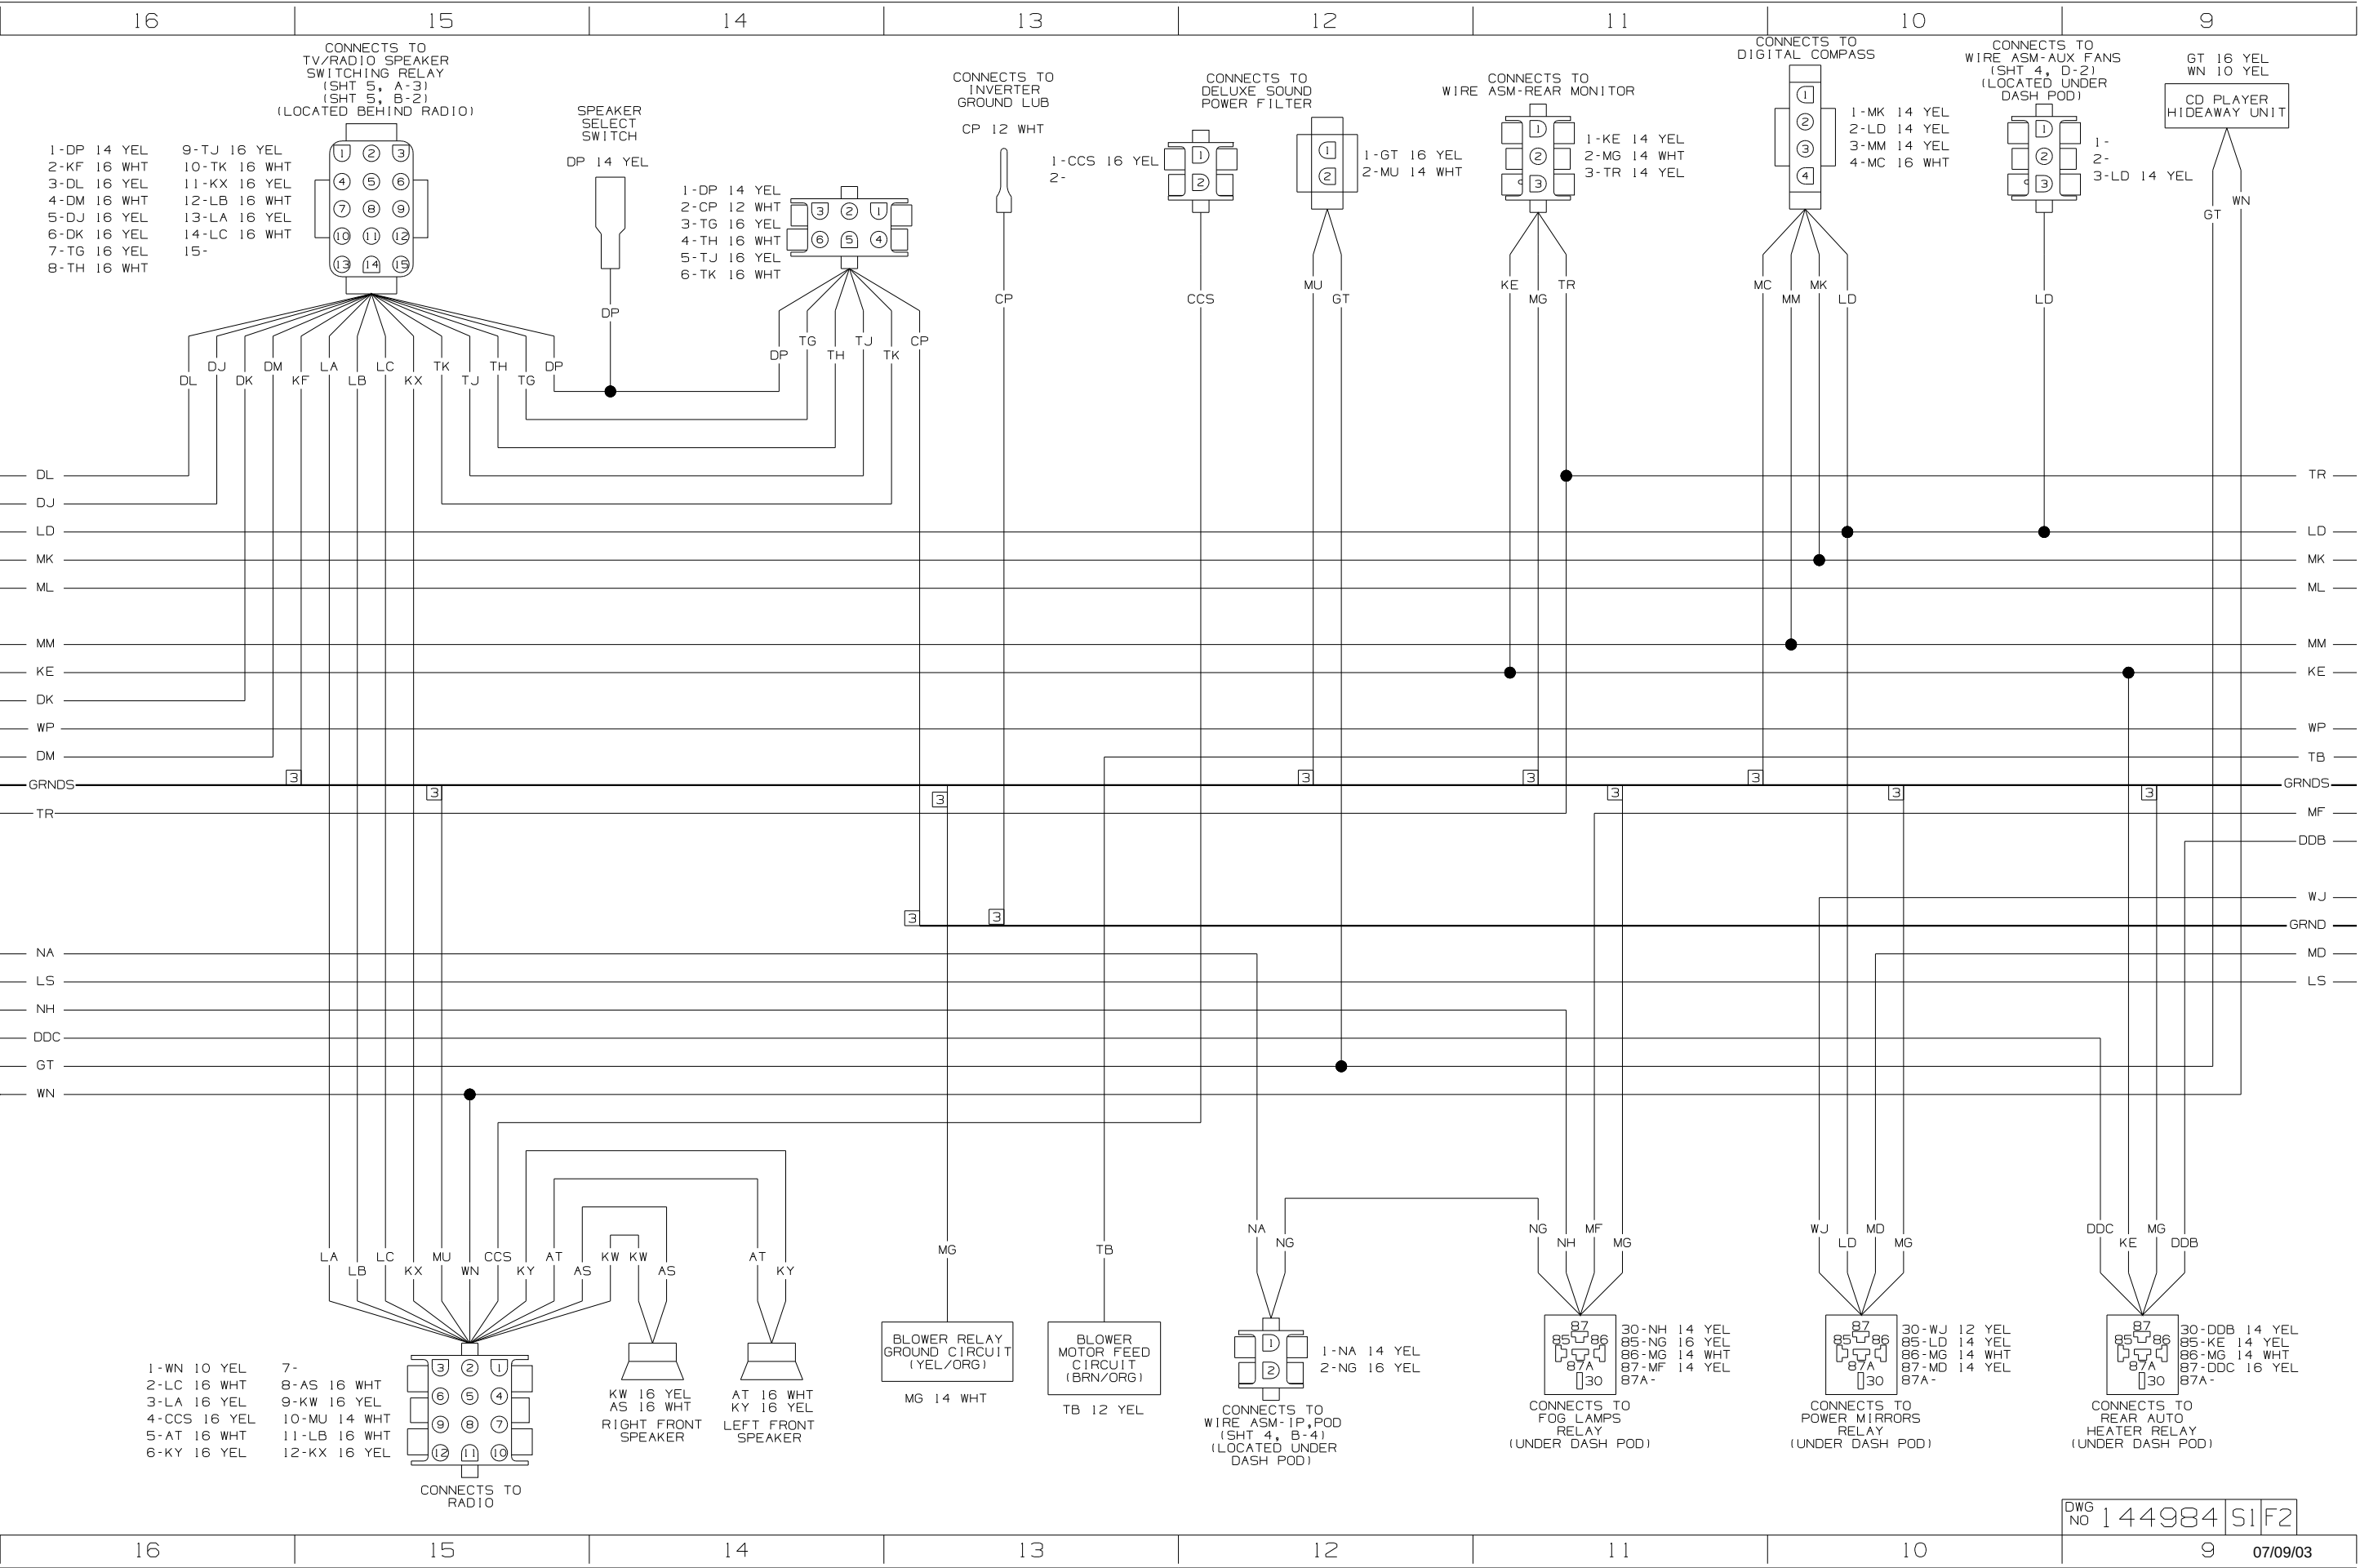

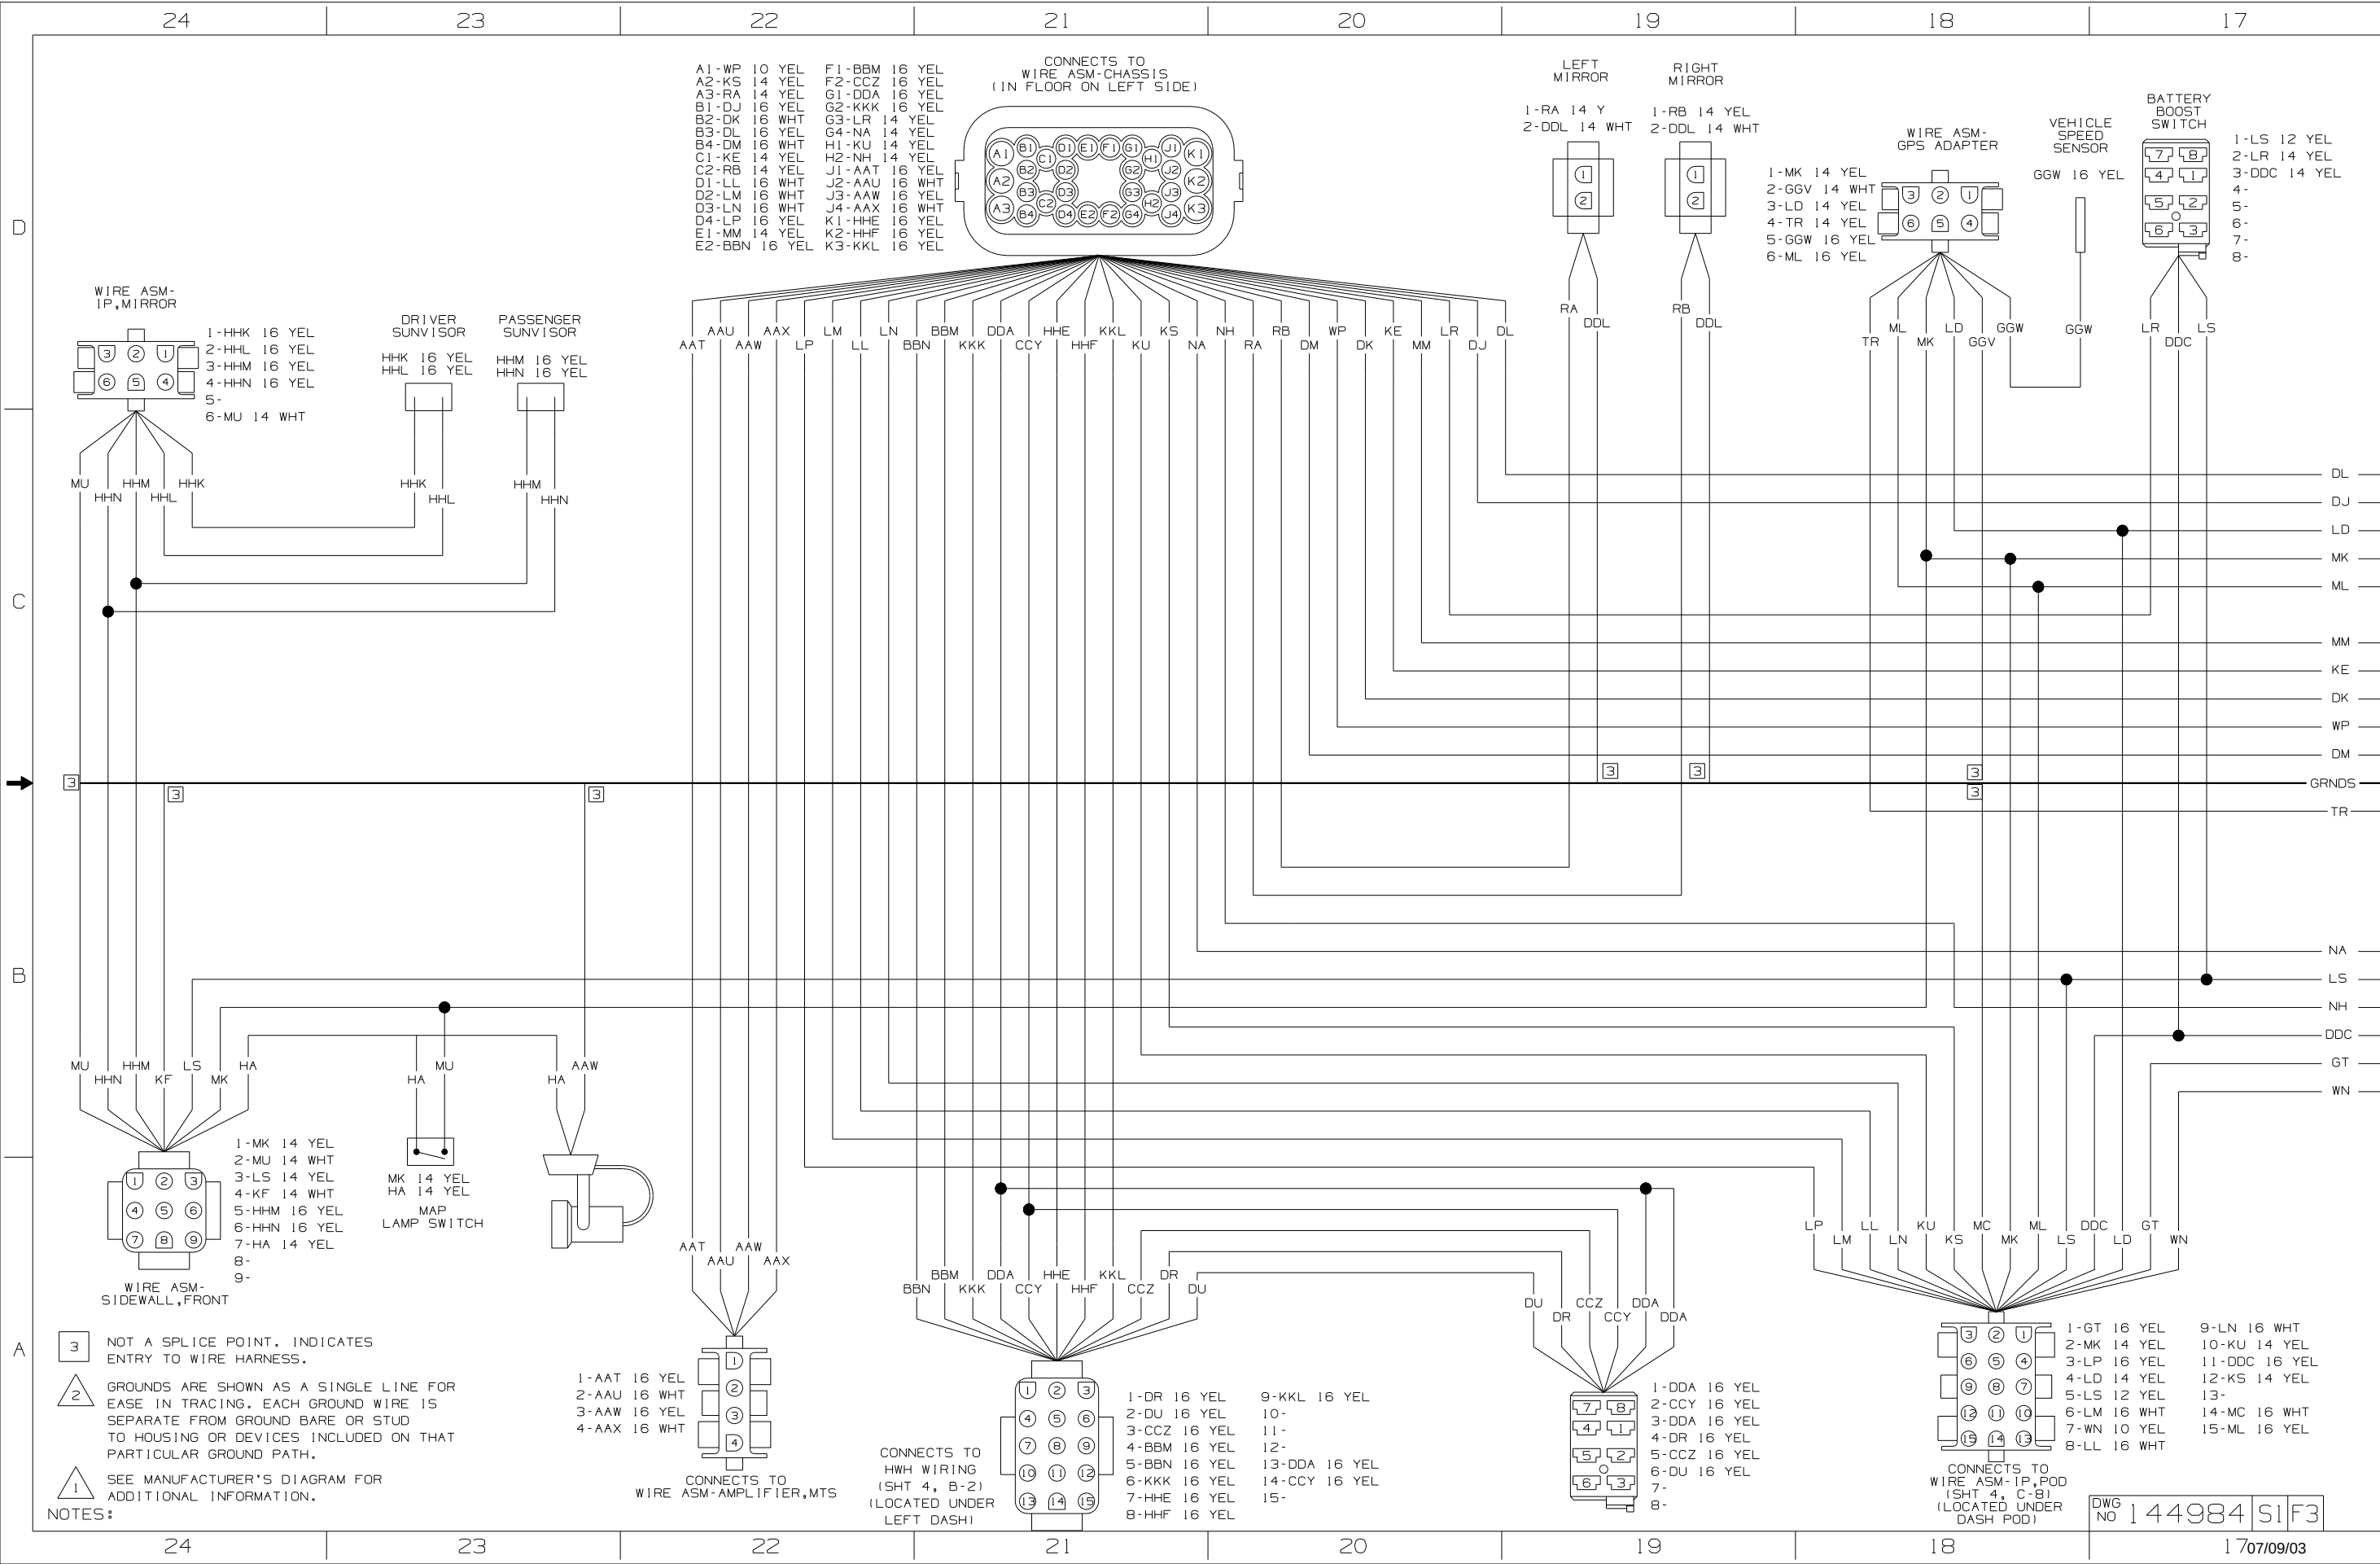


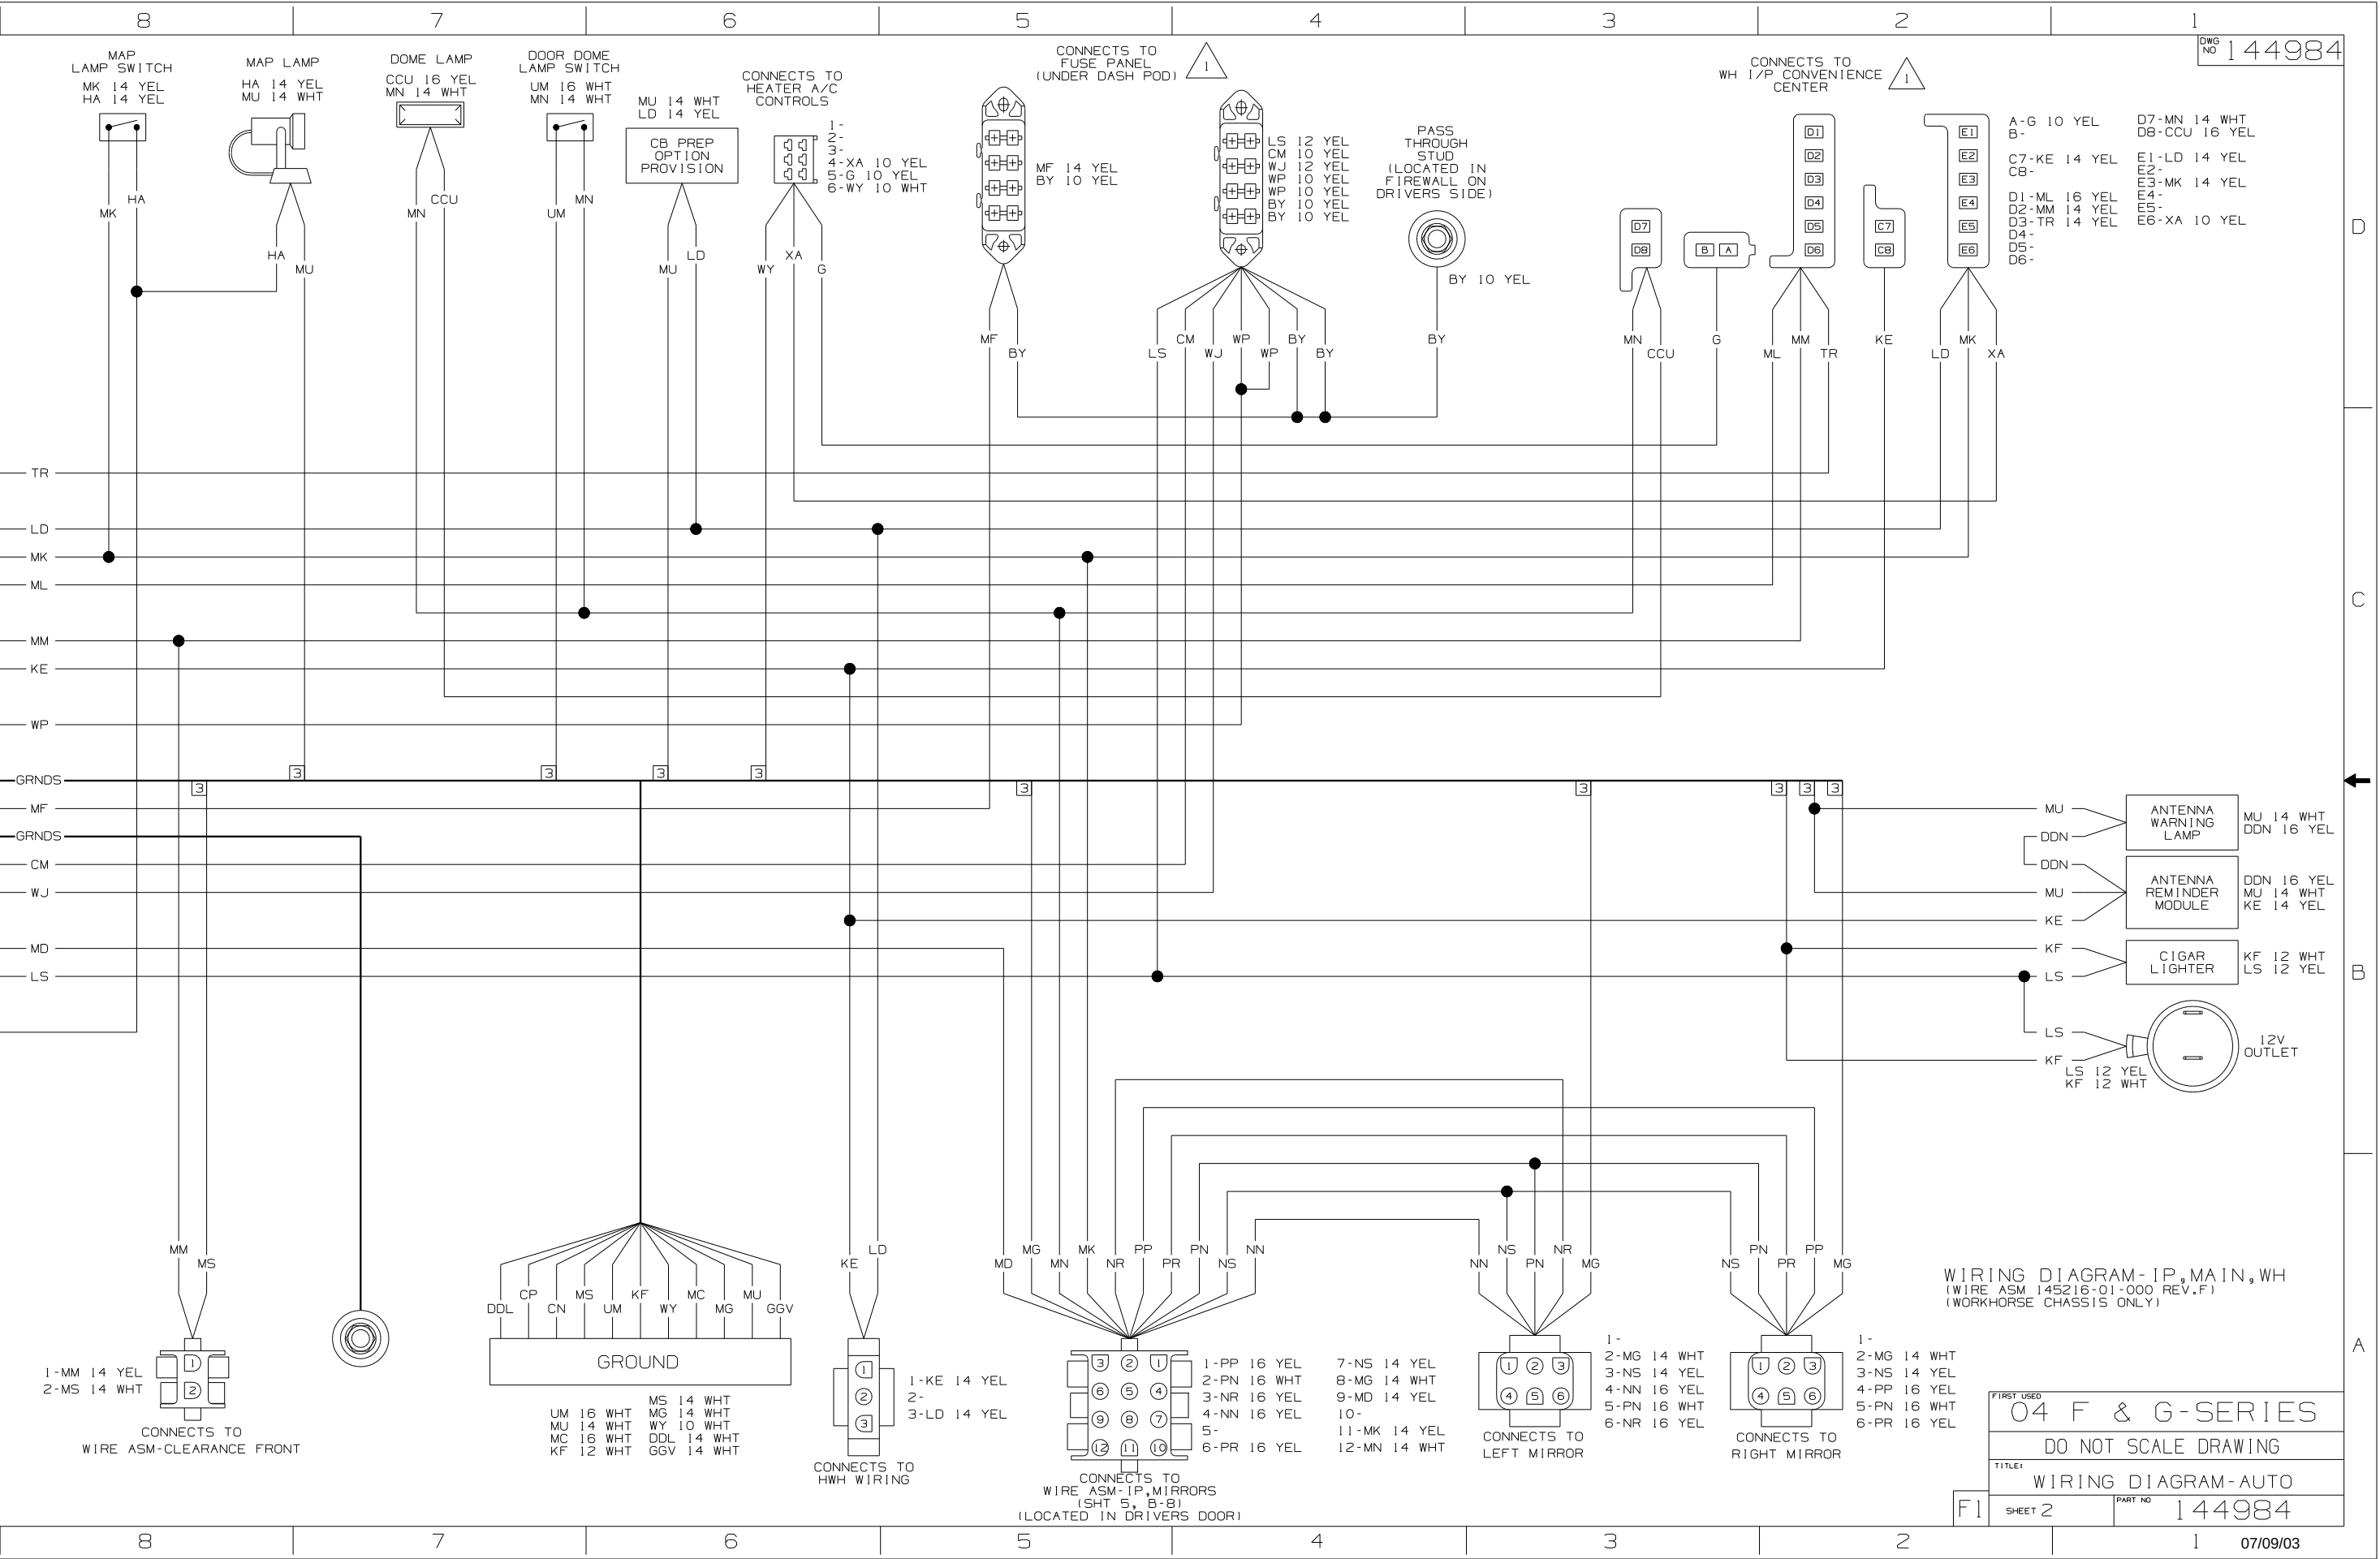



DWG NO 144984


WIRING DIAGRAM-IP,MAIN,WH
(WIRE ASM 145216-01-000 REV.F)
(WORKHORSE CHASSIS ONLY)


FIRST USED	
04 F & G-SERIES	
DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-AUTO	
SHEET 2	PART NO 144984

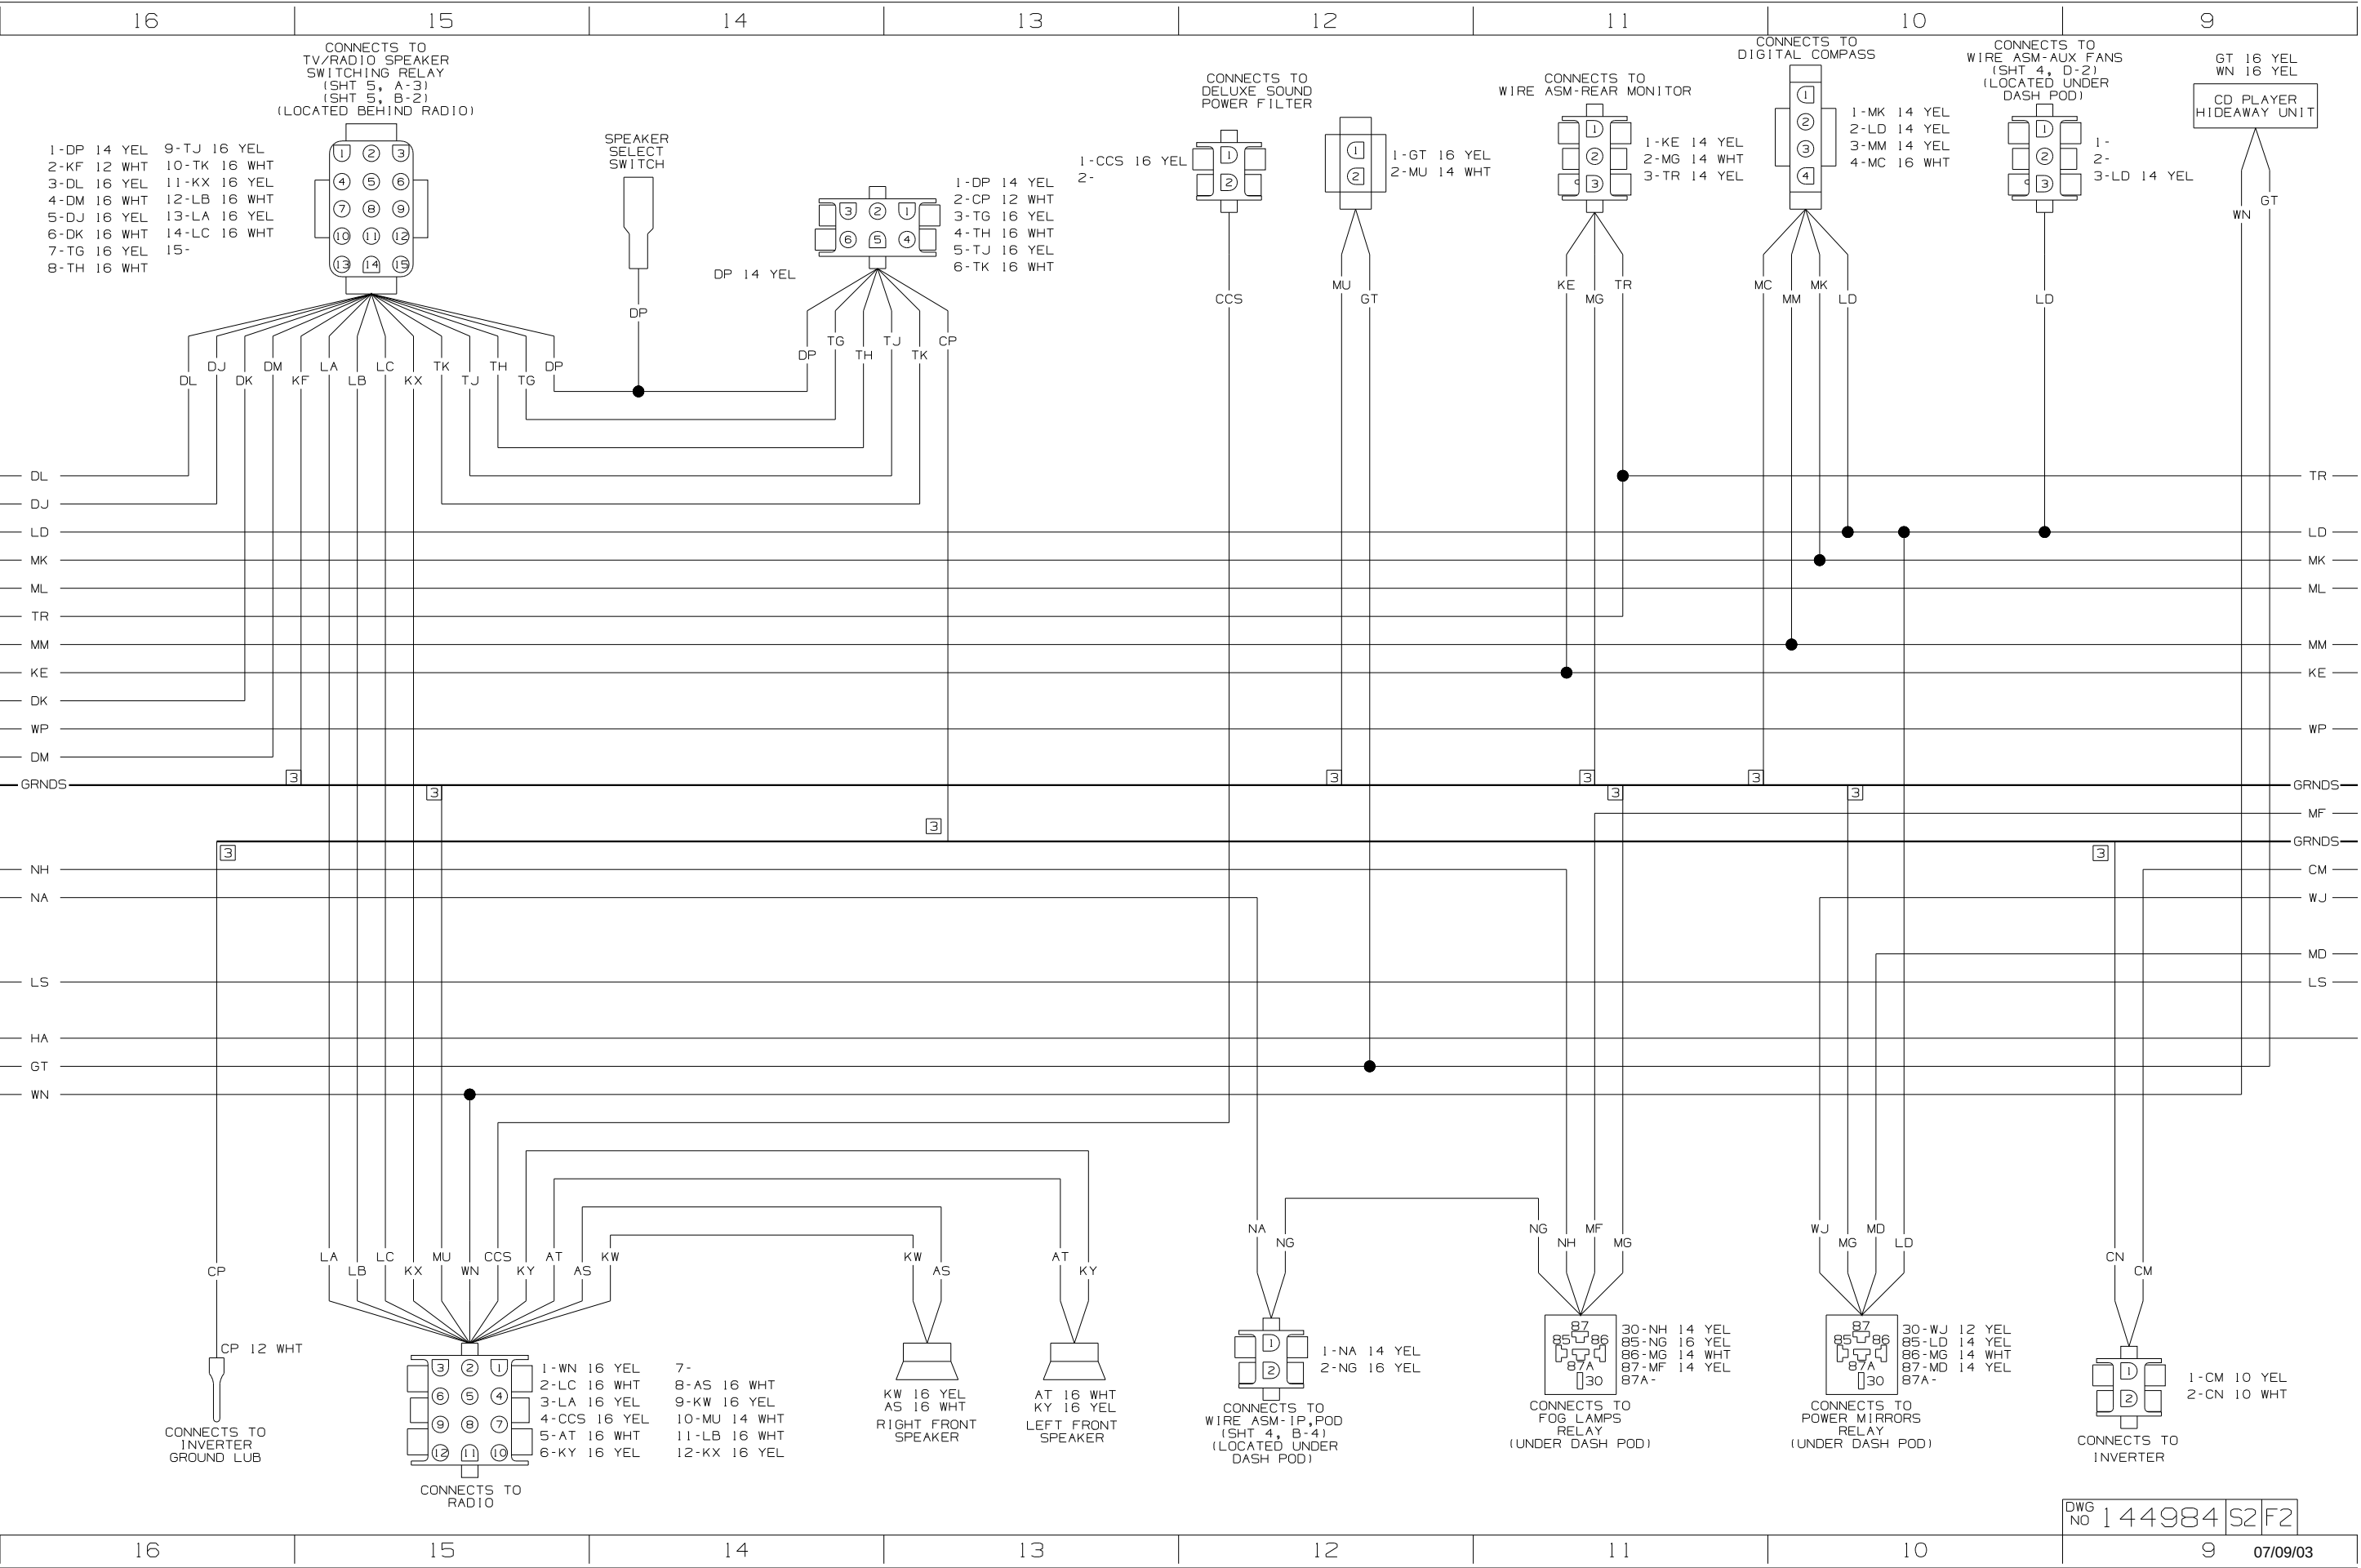


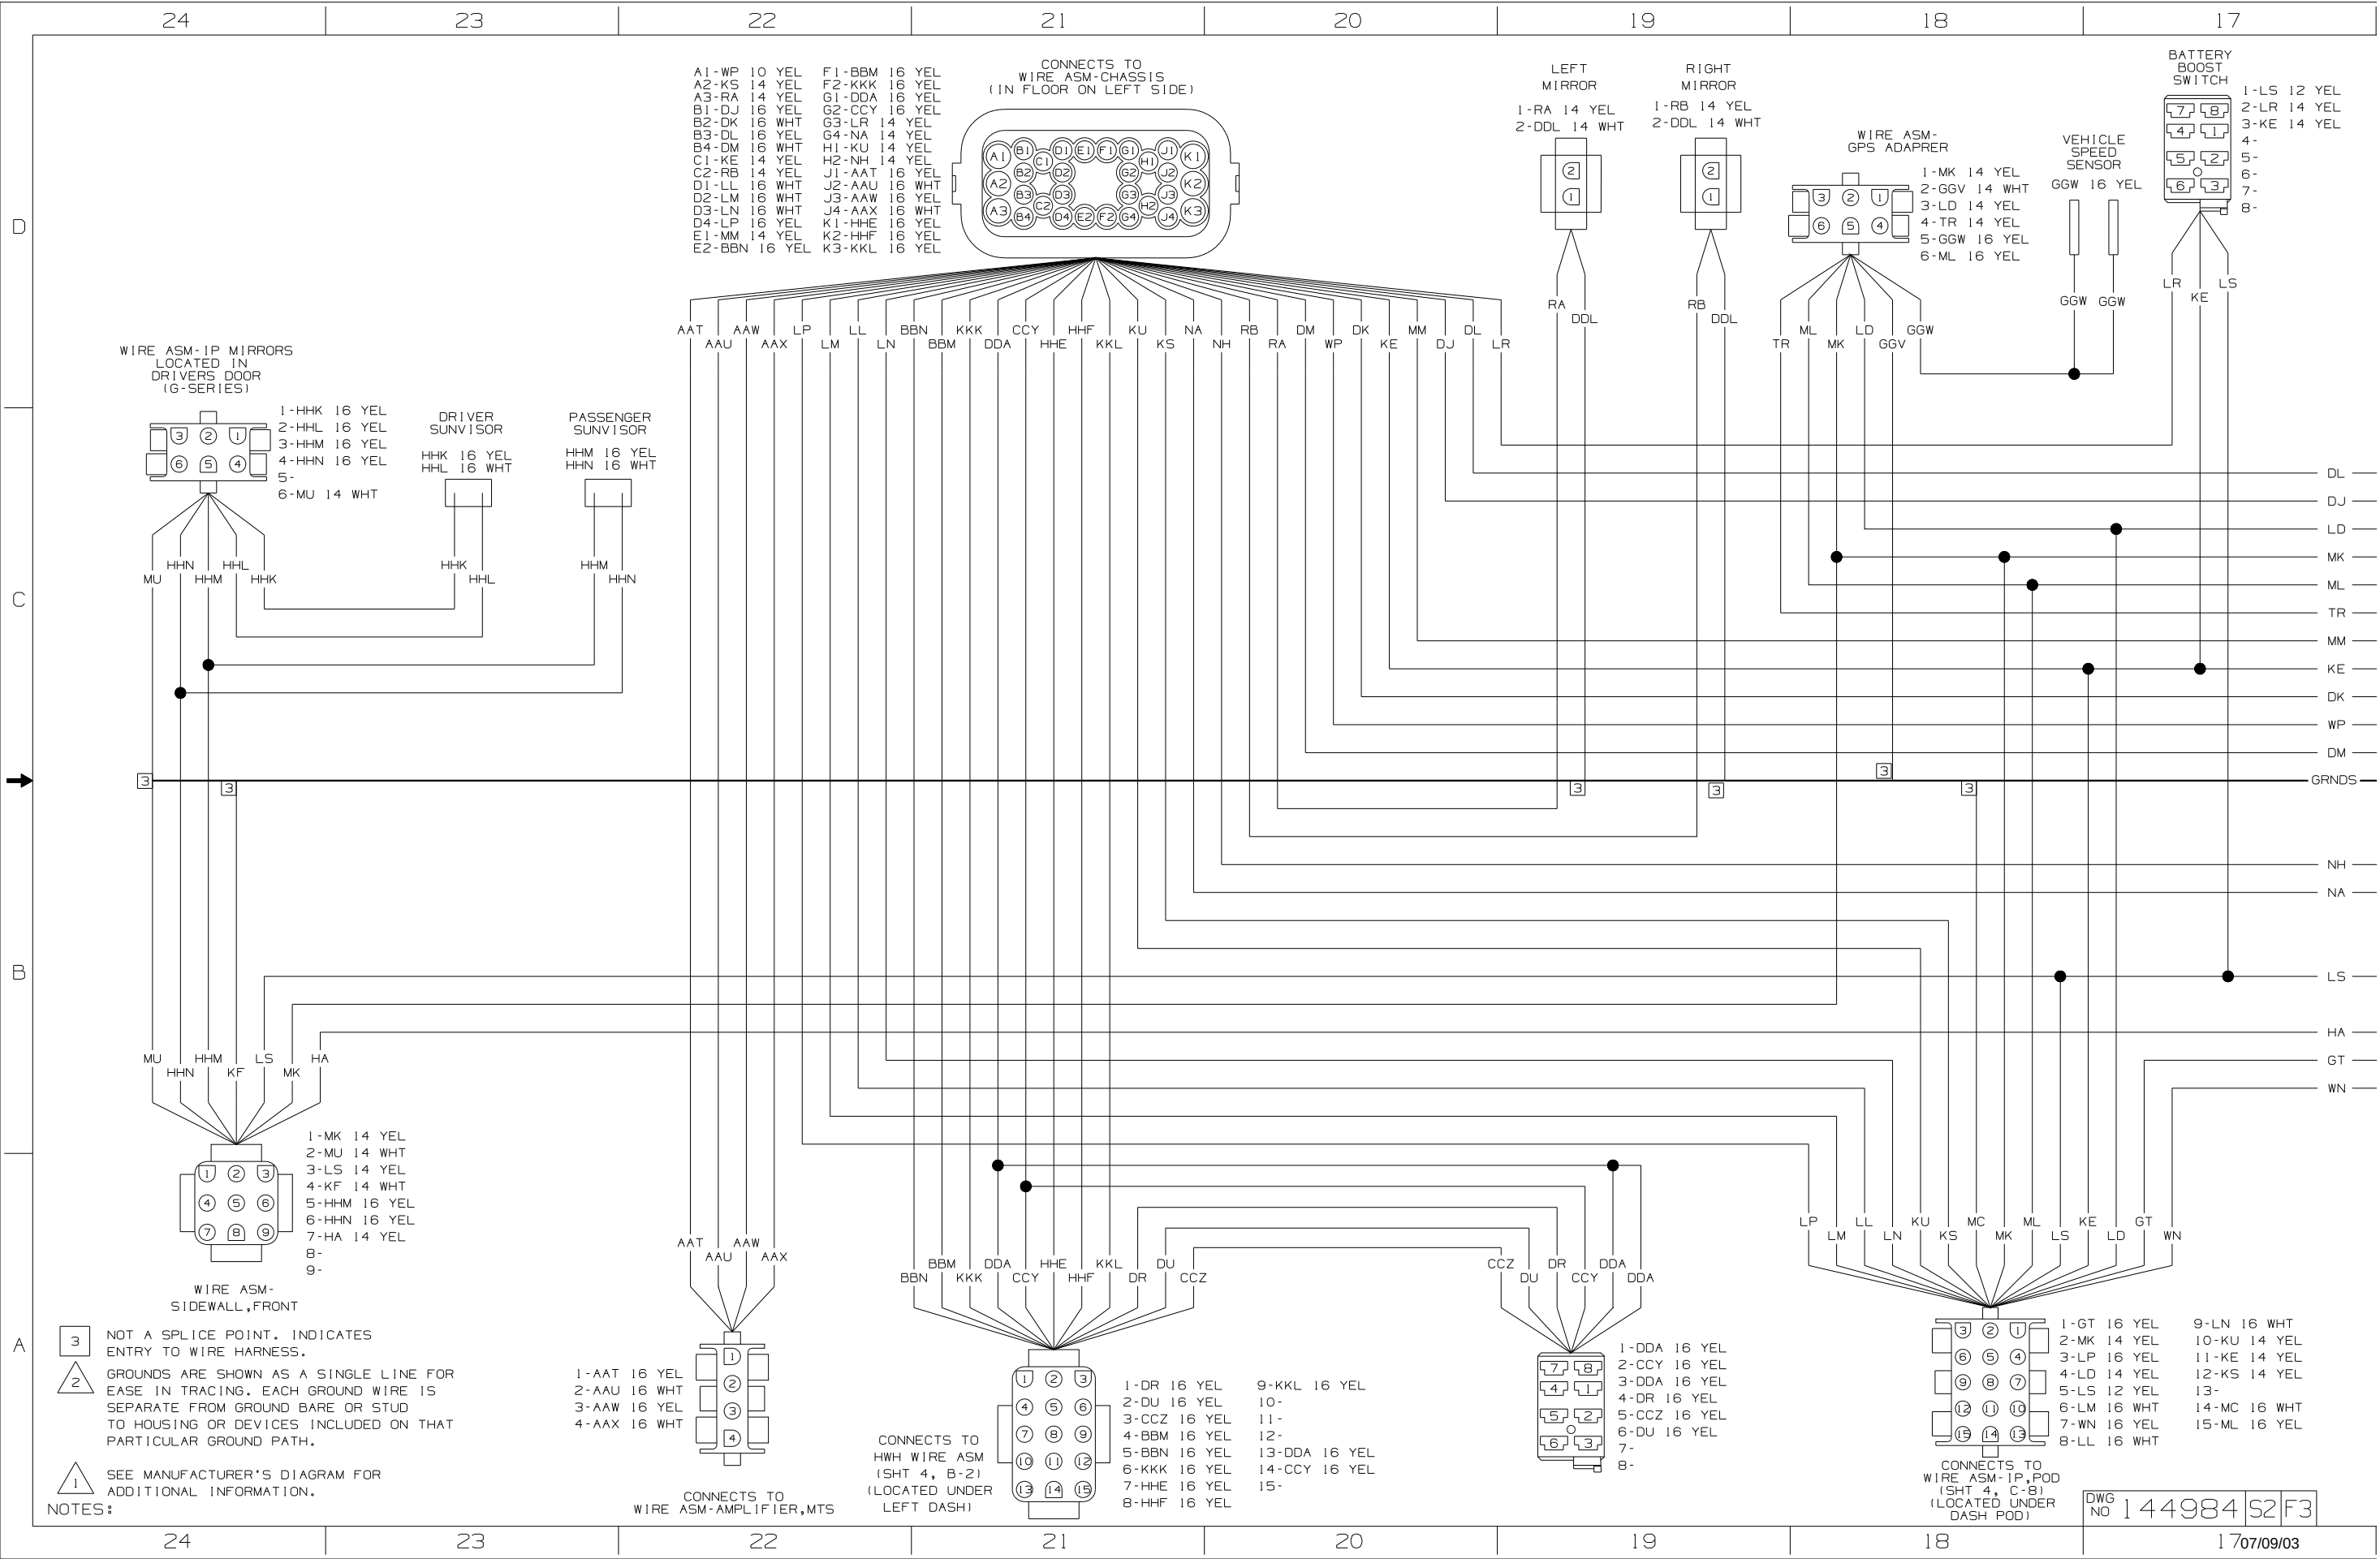

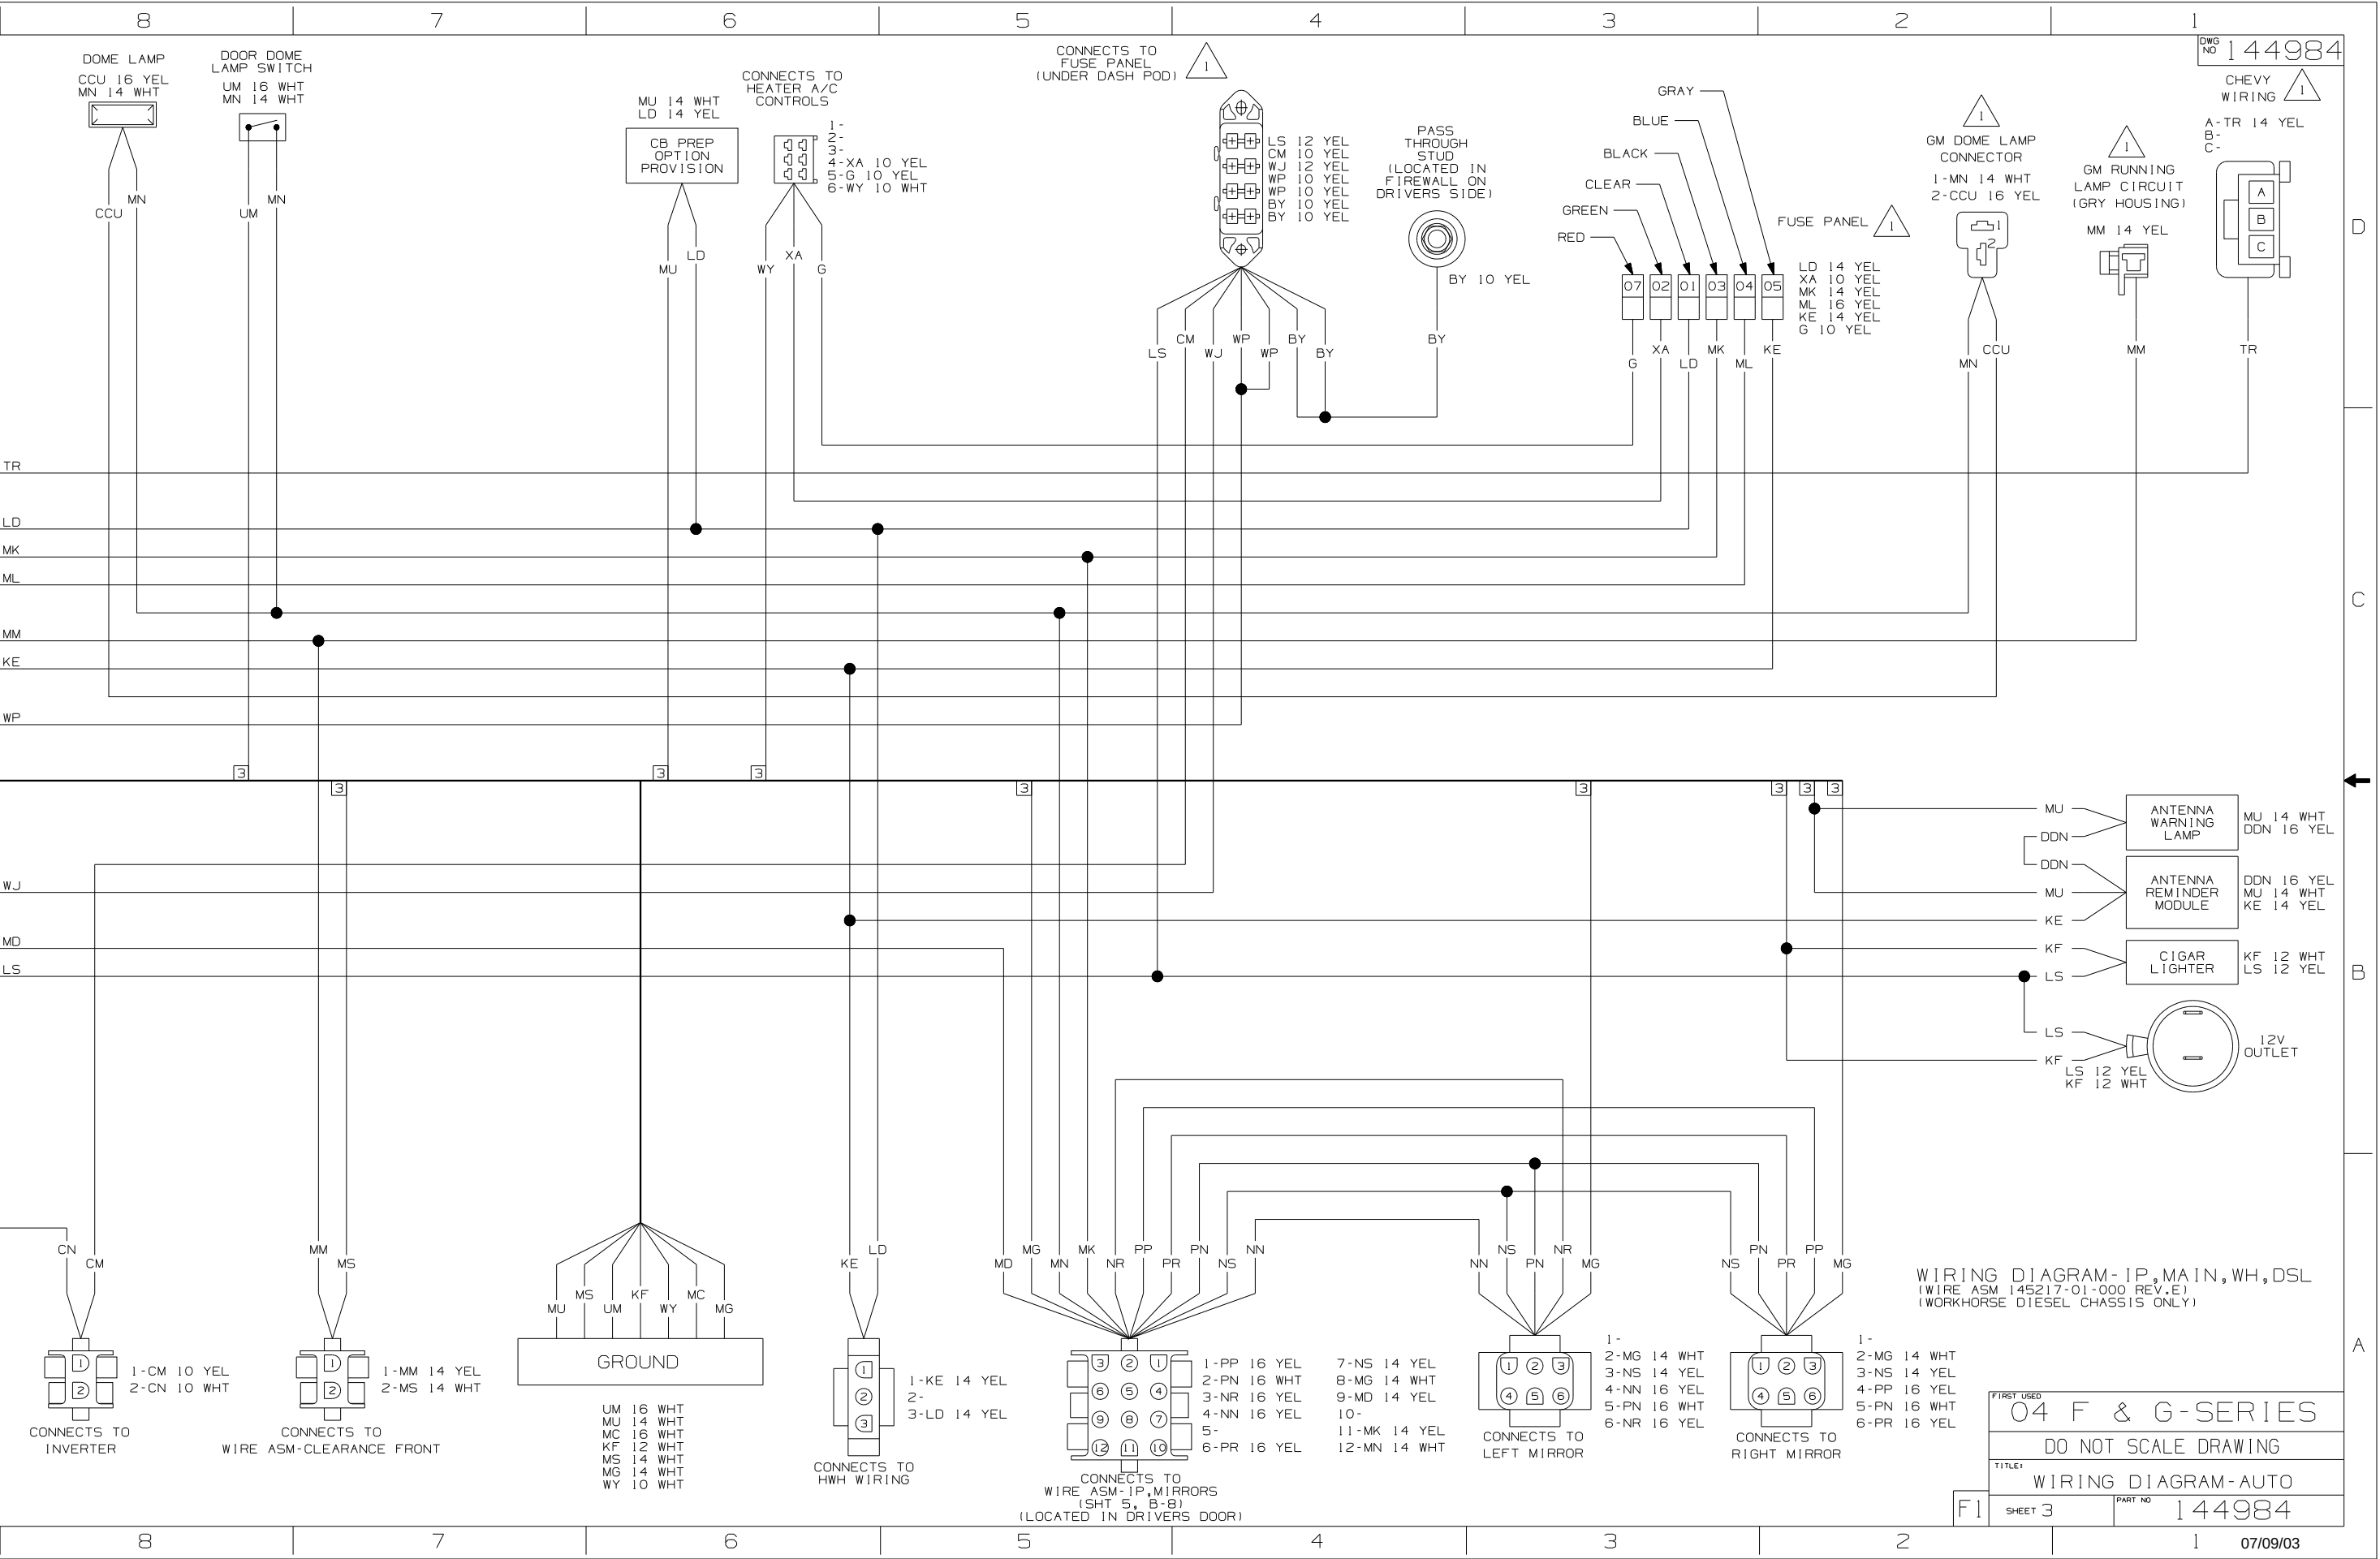


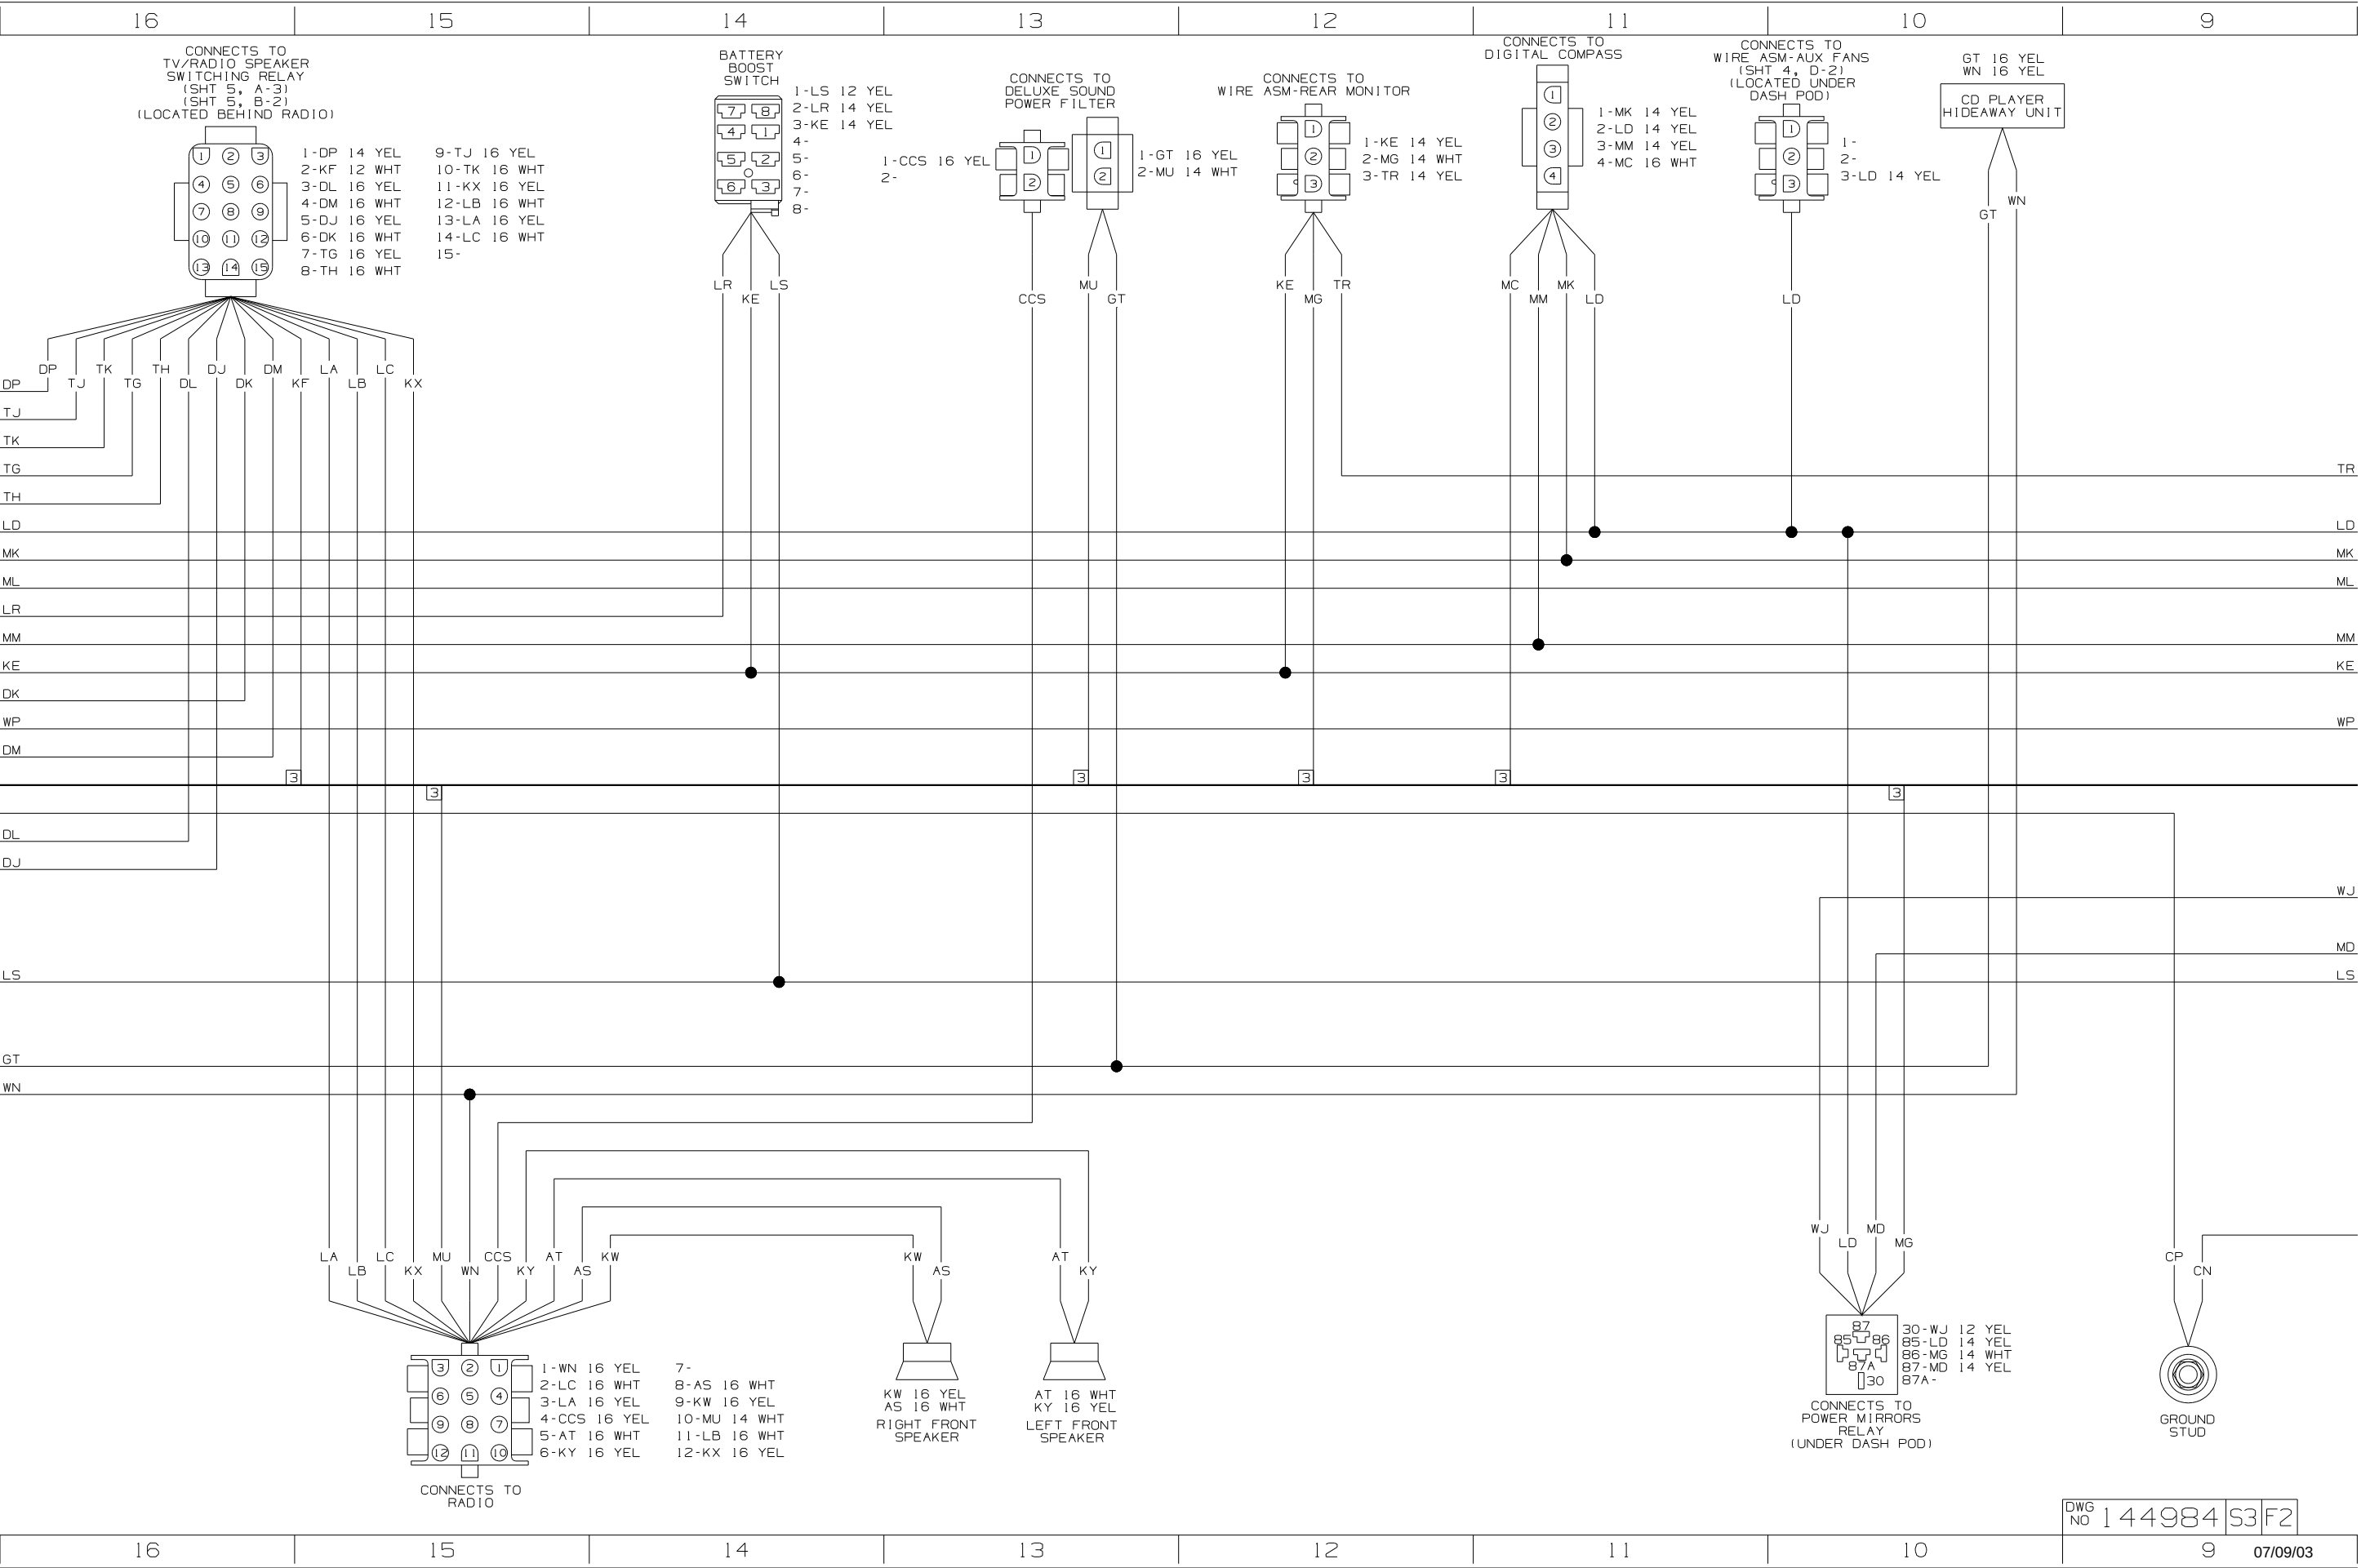

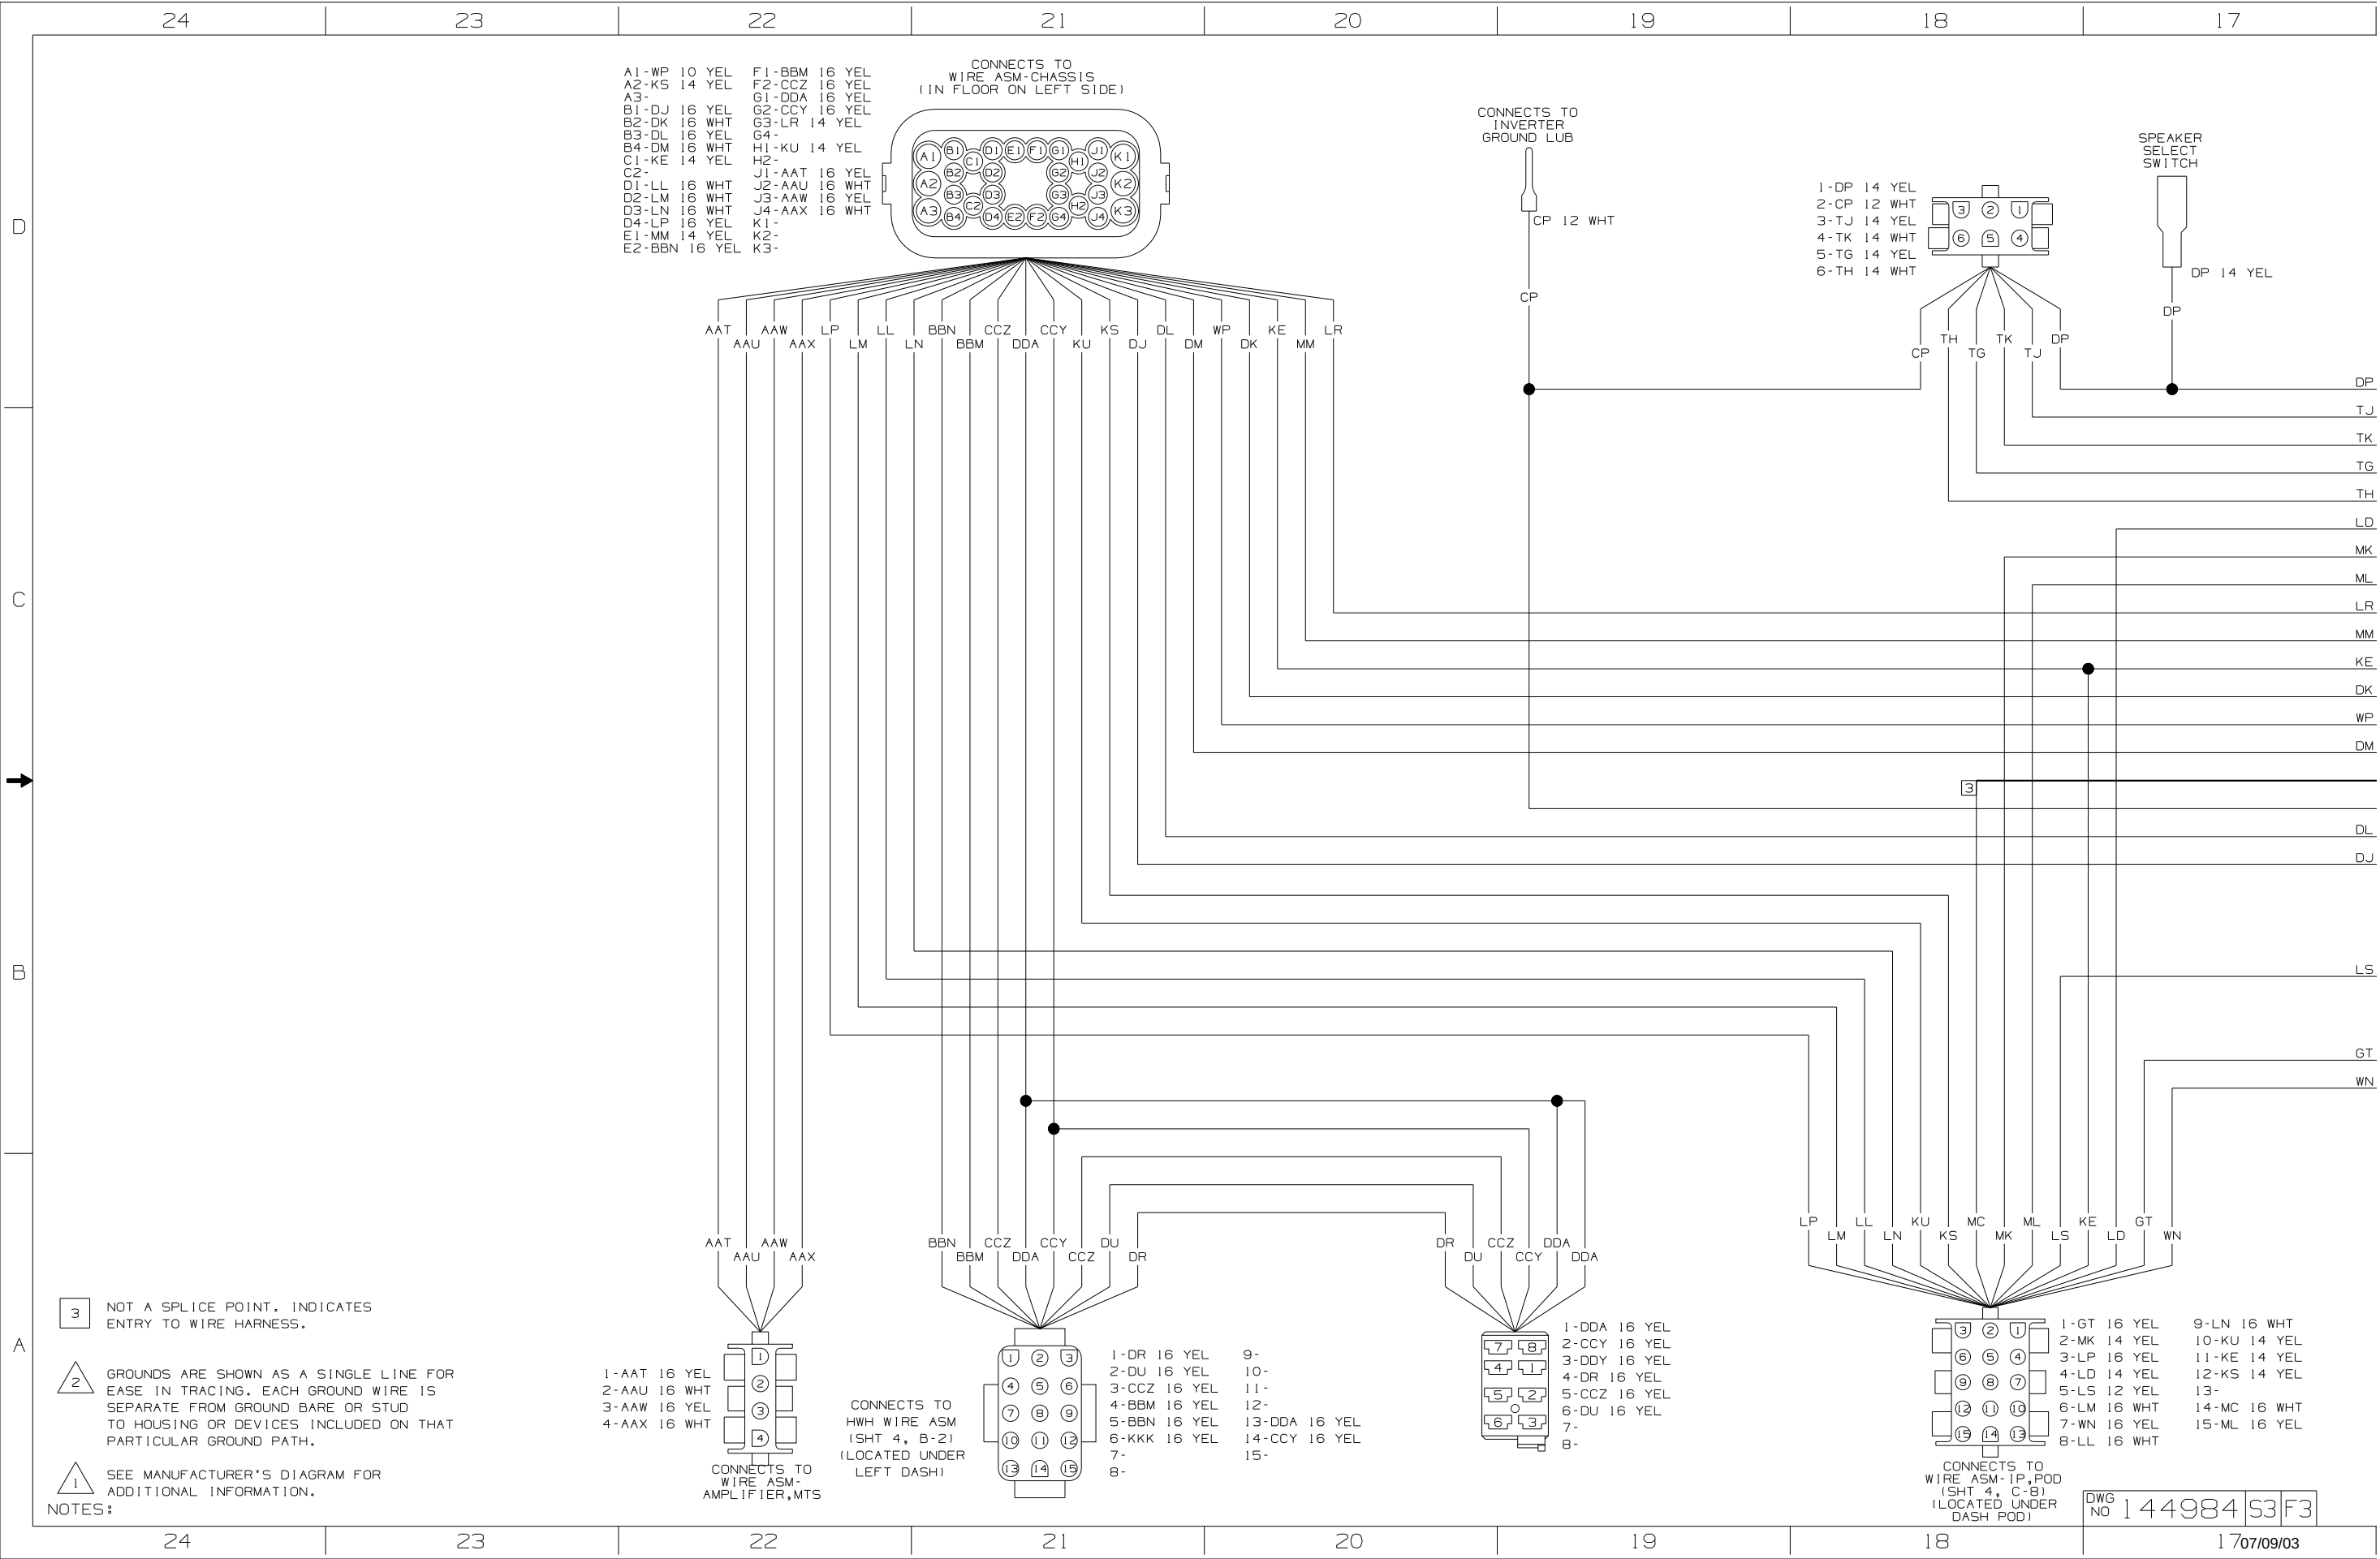


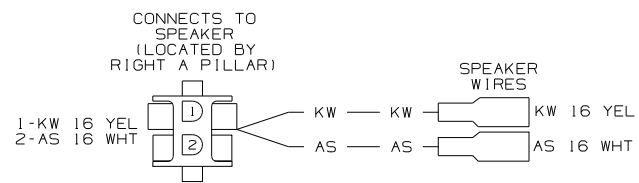


WIRING DIAGRAM-SPEAKER, ADAPTER
(WIRE ASM 124843-02-000 REV.H)

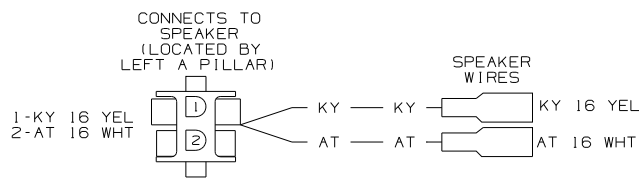

WIRING DIAGRAM-SPEAKER, ADAPTER
(WIRE ASM 124843-03-000 REV.H)

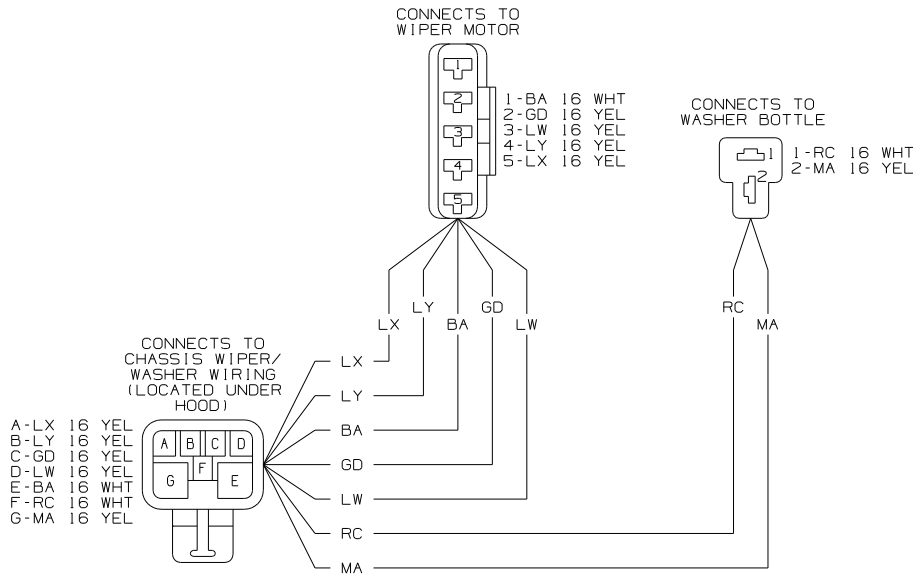


WIRING DIAGRAM-WIPER/WASHER
(WIRE ASM 126030-01-000 REV.D)
(WORKHORSE 22,000#)
(WORKHORSE 20,700#)

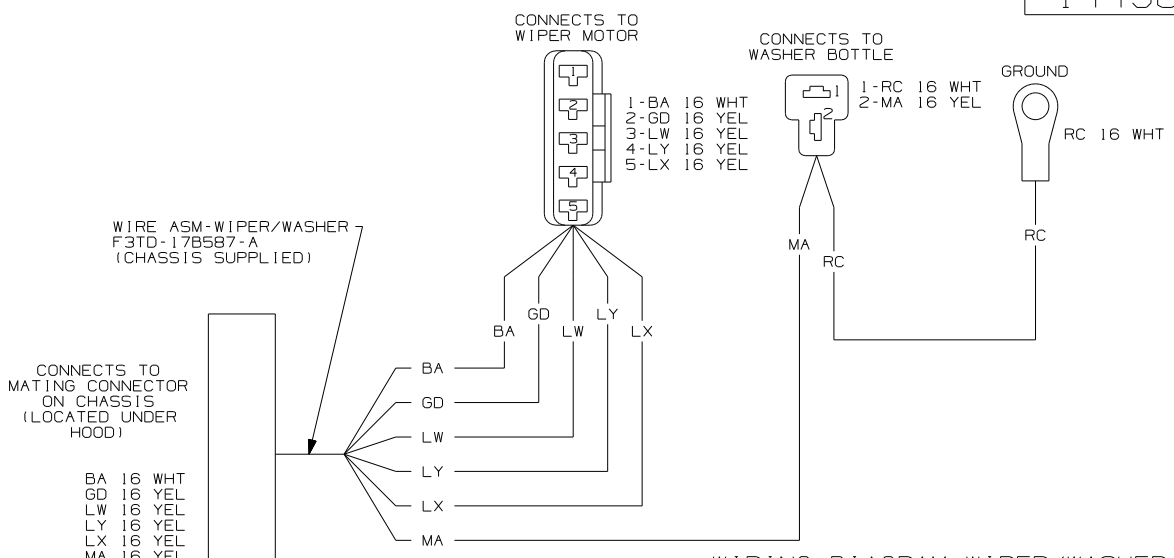


WIRING DIAGRAM-WIPER/WASHER
(WIRE ASM 111096-03-000 REV.F)
(FORD CHASSIS 18,000#/V10 ENG)
(FORD CHASSIS 20,500#/V10 ENG)




WIRING DIAGRAM-OVERDRIVE SWITCH
(WIRE ASM 137626-01-000 REV.E)
(WORKHORSE 20,700#-19.5 TIRE)

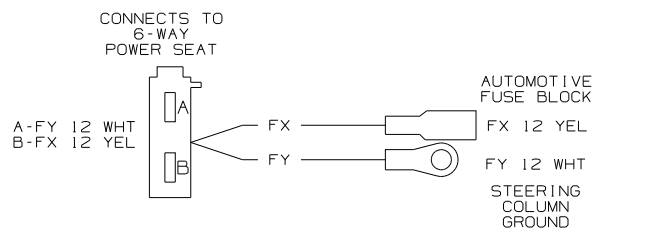


WIRING DIAGRAM-POWER DRIVER SEAT
(WIRE ASM 131279-02-000 REV.G)
(SEAT PED-6 WAY POWER DRIVER)

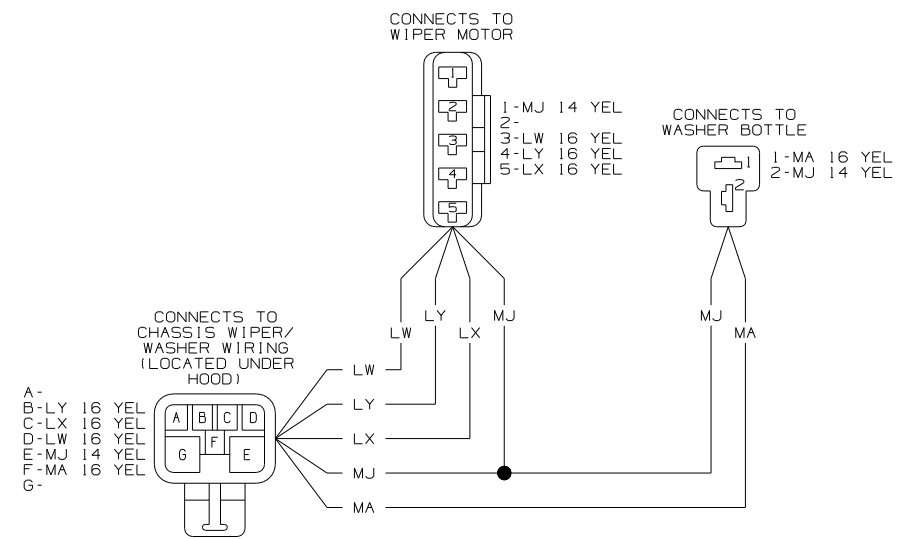


WIRING DIAGRAM-WIPER/WASHER
(WIRE ASM 113134-03-000 REV.H)
(WORKHORSE CHASSIS 18,000#)

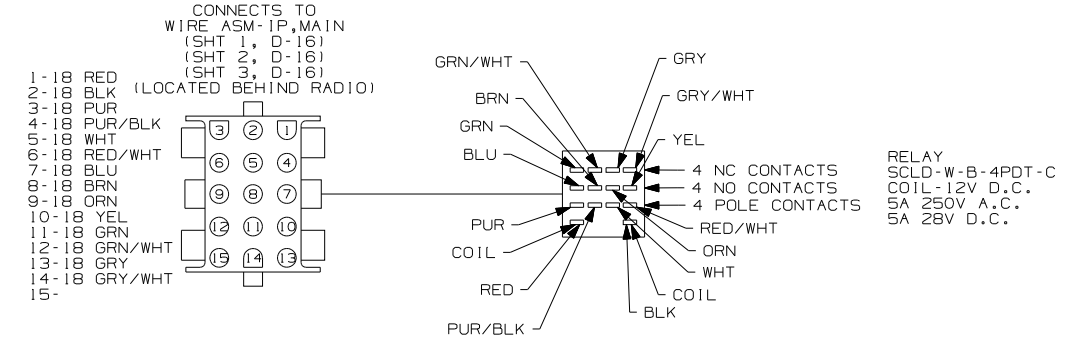


WIRING DIAGRAM-RADIO/TV SPEAKER SWITCH
(WIRE ASM 115539-01-000 REV.B)
(G-SERIES ONLY)

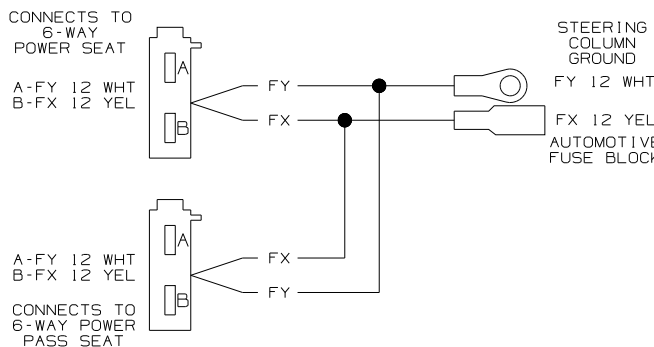

WIRING DIAGRAM-POWER DRIVER SEAT
(WIRE ASM 131279-03-000 REV.G)
(SEAT PED-6 WAY POWER DRIVER & PASS.)

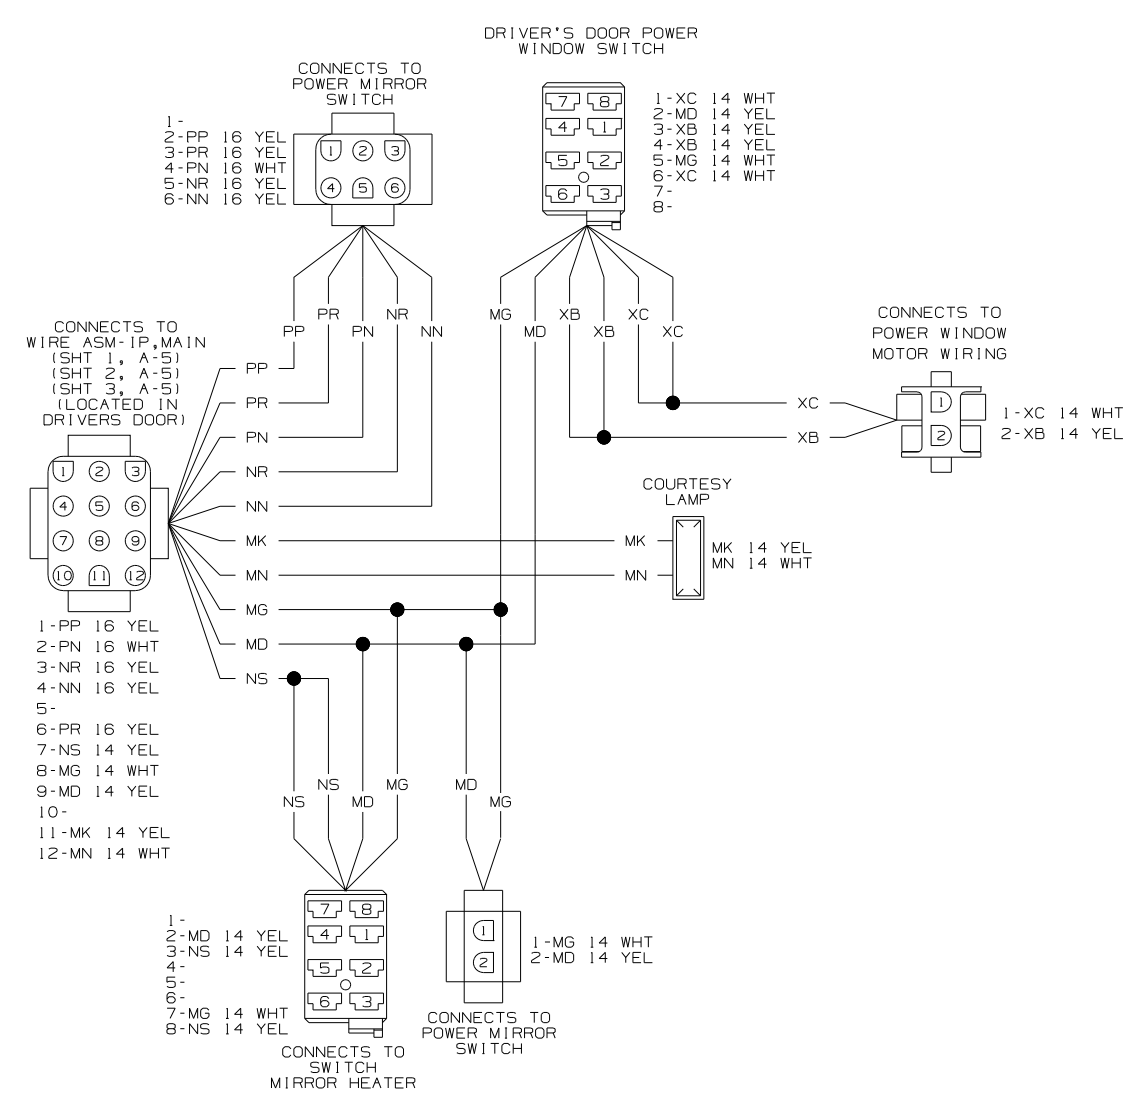

WIRING DIAGRAM-IP POWER,MIRROR
(WIRE ASM 129436-09-000 REV.X)
(F-SERIES)

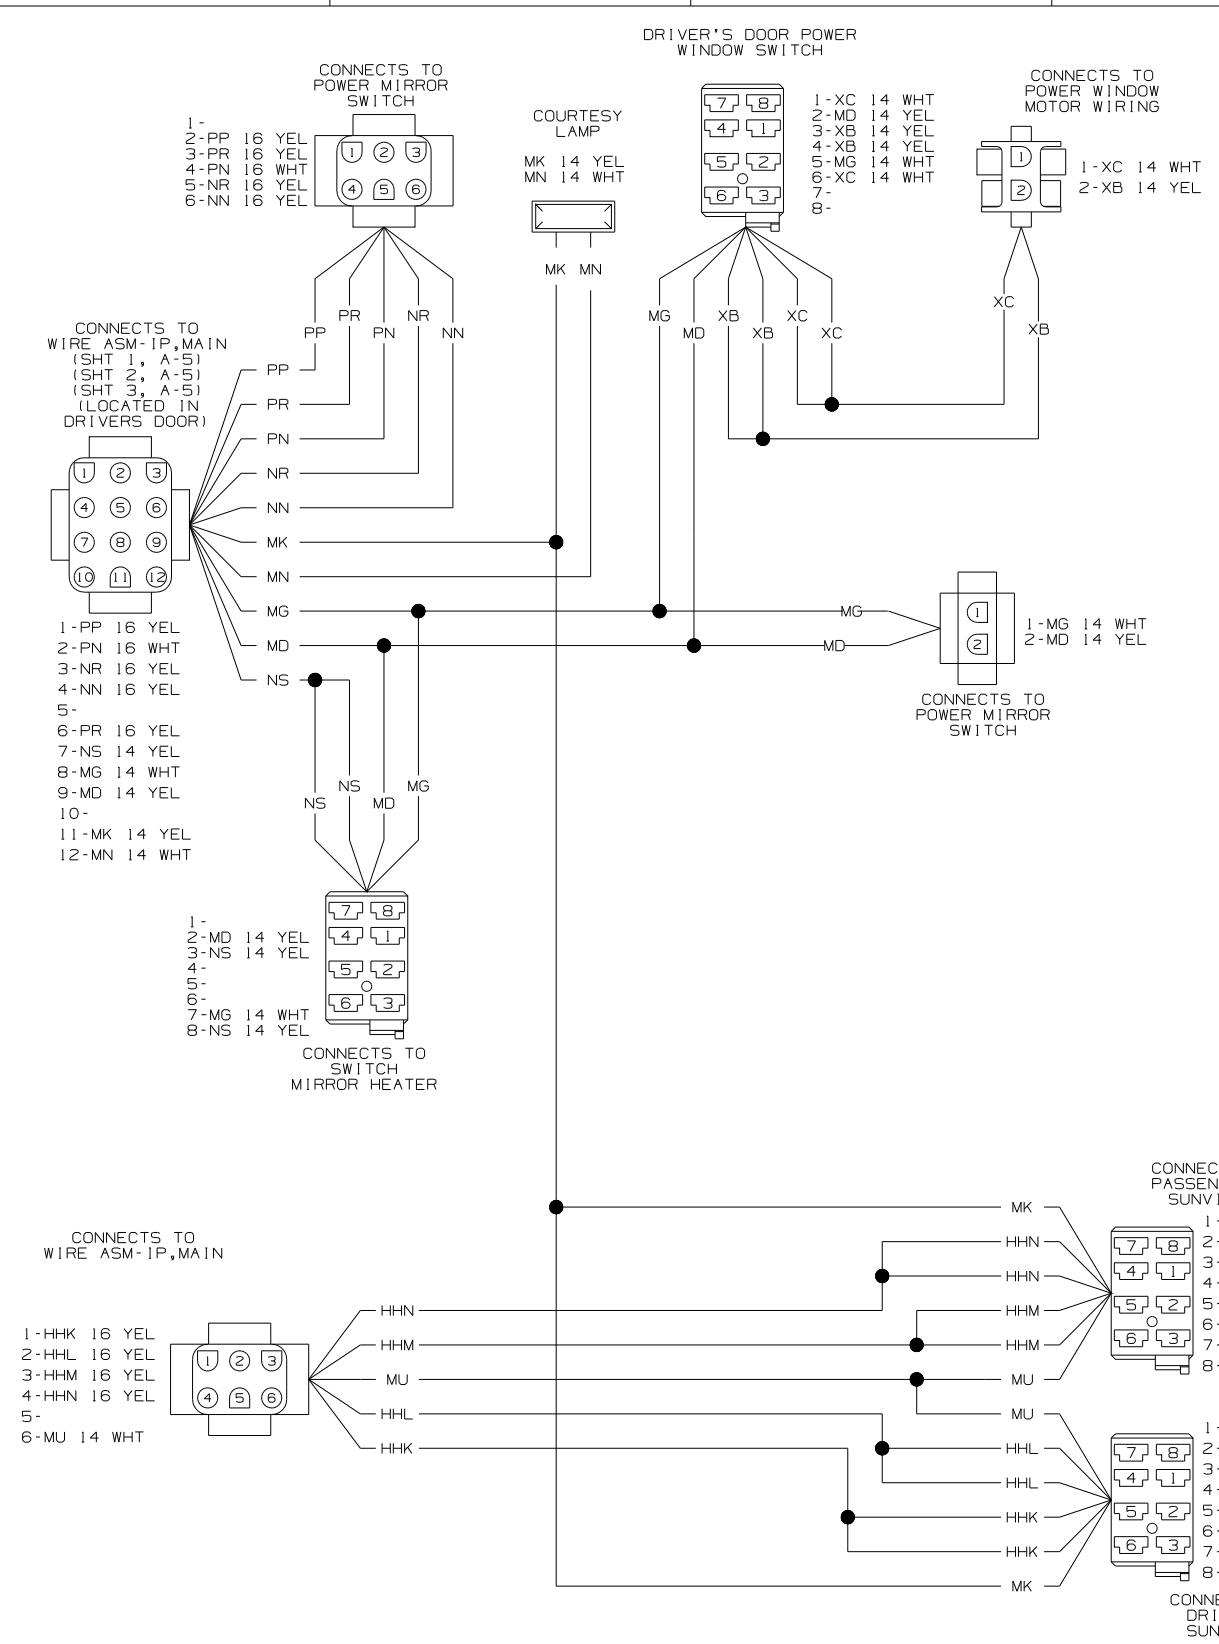

WIRING DIAGRAM-IP POWER,MIRROR
(WIRE ASM 129436-08-000 REV.X)
(G-SERIES)