



DANGER



Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


LOAD CENTER

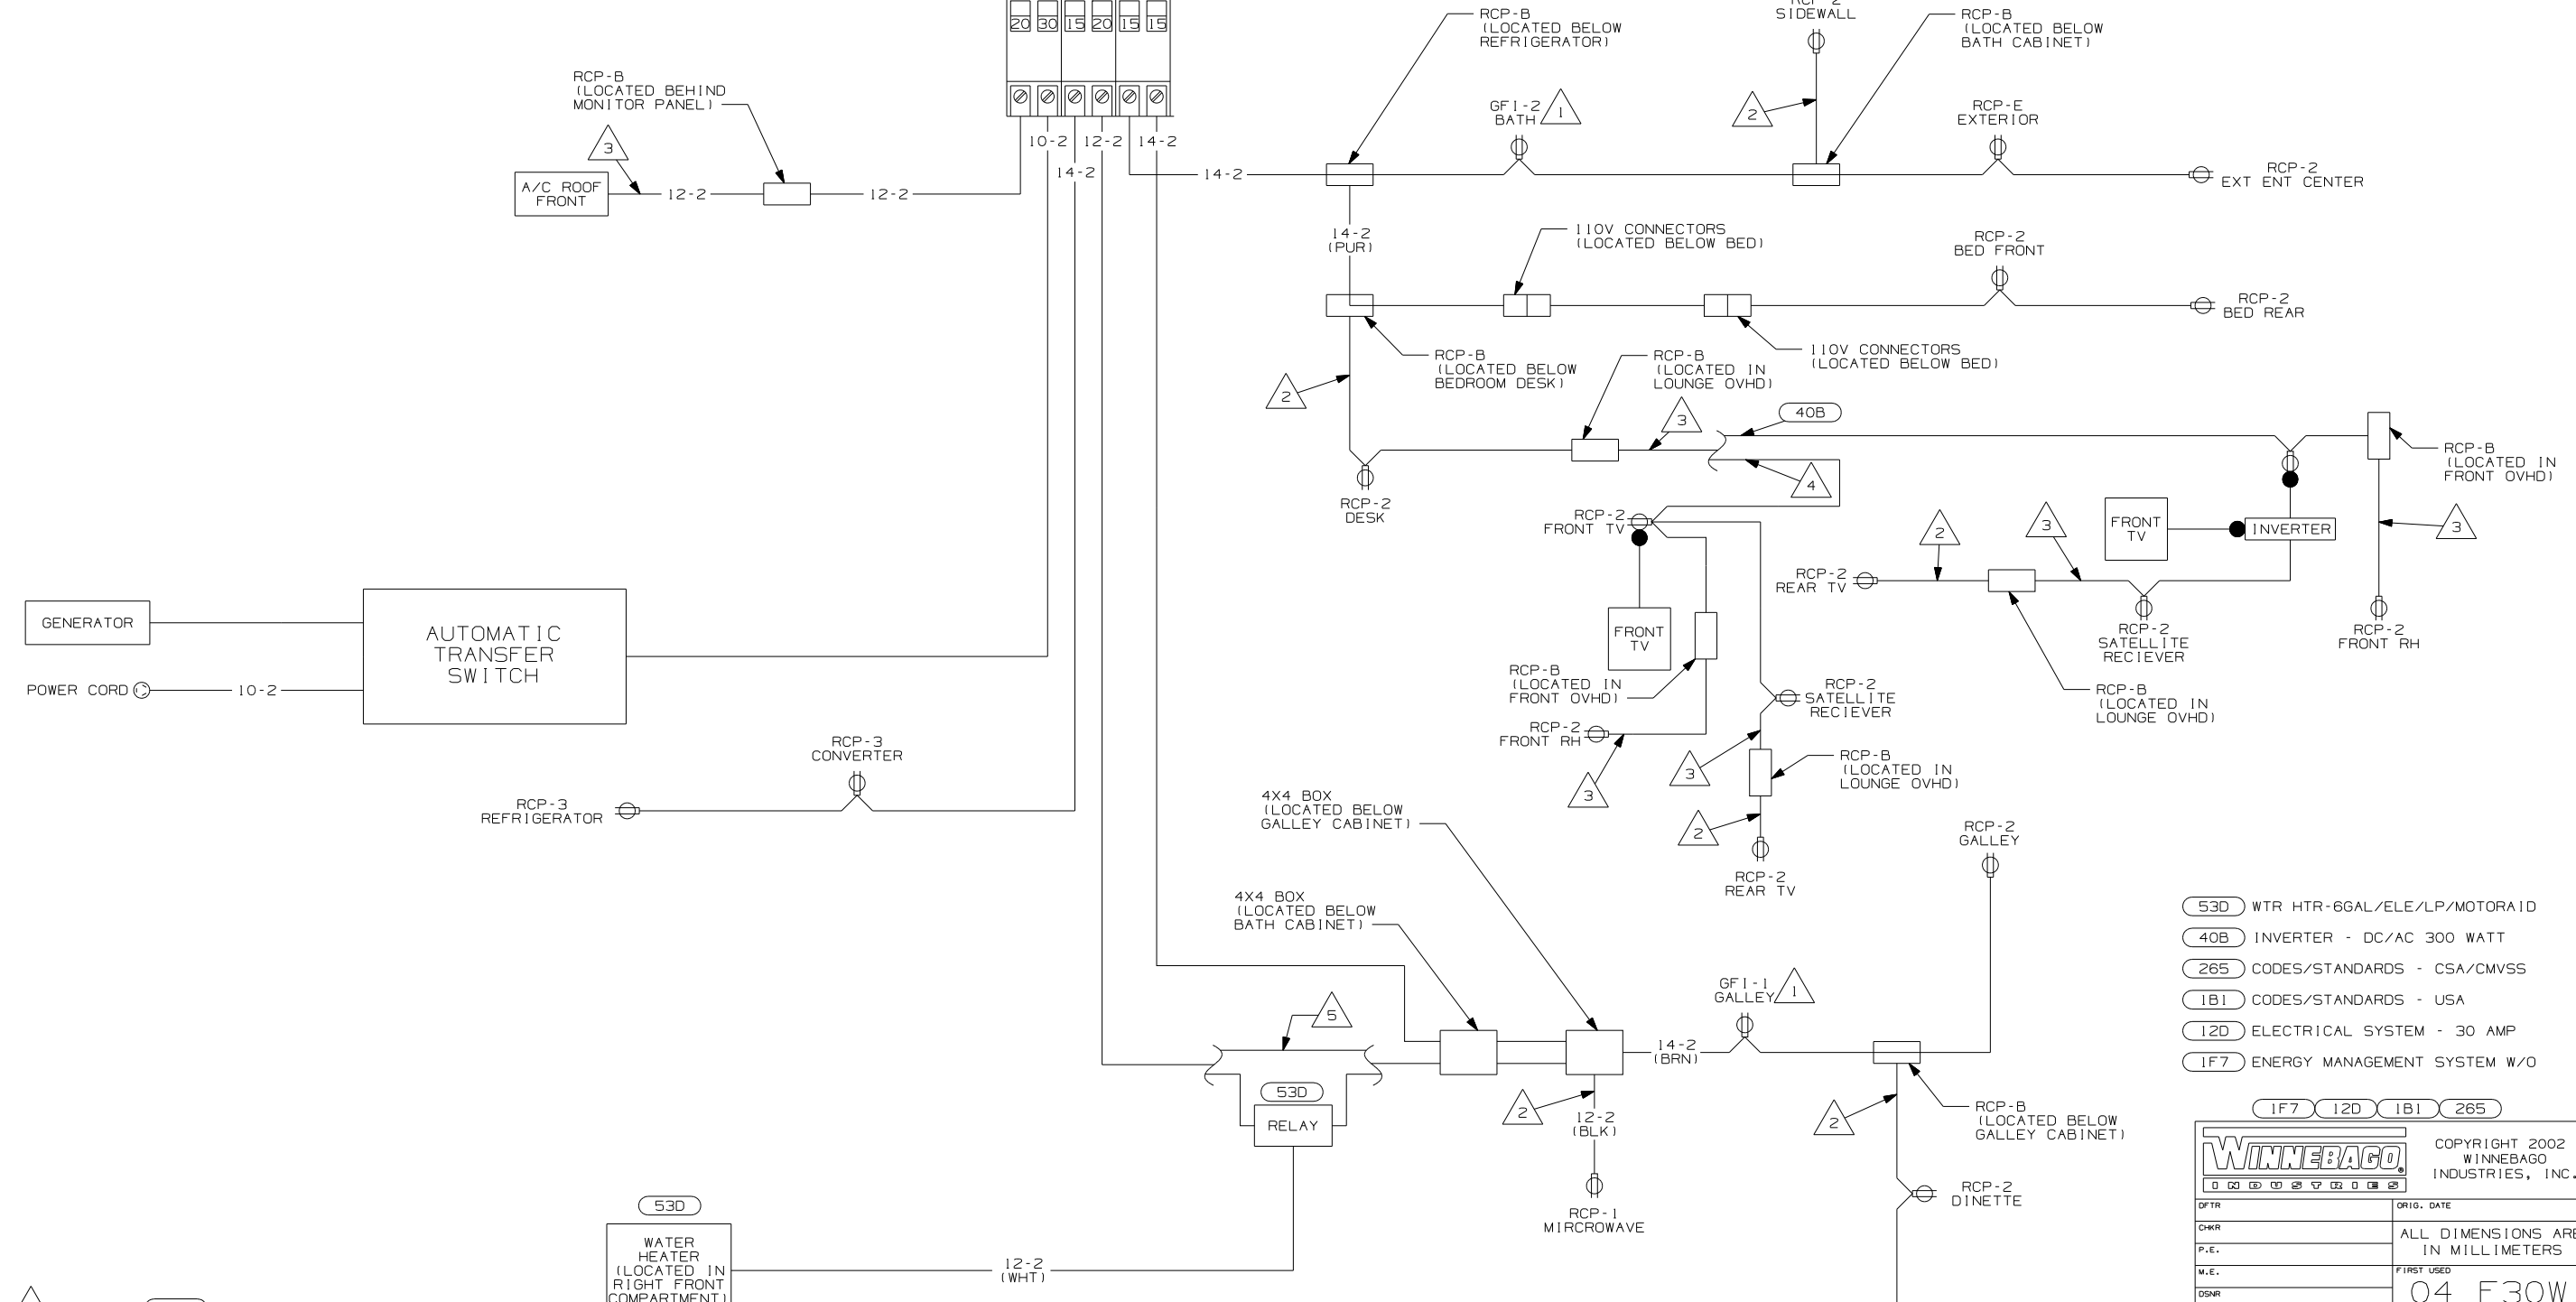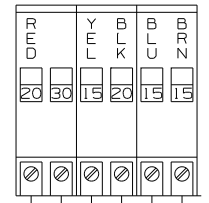

- (53D) WTR HTR-6GAL/ELE/LP/MOTORAID
- (40B) INVERTER - DC/AC 300 WATT
- (265) CODES/STANDARDS - CSA/CMVSS
- (1B1) CODES/STANDARDS - USA
- (12D) ELECTRICAL SYSTEM - 30 AMP
- (1F7) ENERGY MANAGEMENT SYSTEM W/O

(1F7) (12D) (1B1) (265)	
WINNEBAGO	
COPYRIGHT 2002 WINNEBAGO INDUSTRIES, INC.	
DFT	ORIG. DATE
CHKR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	FIRST USED
M.E.	04 F30W
DSNR	
UNSPECIFIED TOLERANCES ARE:	MATERIAL:
HOLE DIM (X)	: 1
ONE-PLACE (X.X)	: 1.5
TWO-PLACE (X.XX)	: 0.50
ANGLE	: 1°
THIRD ANGLE PROJECTION	
DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-BODY, 110V	
SHEET 1 OF 2	PART NO 147218

- NOTES:
- (5) WITHOUT (53D).
 - (4) WITHOUT (40B).
 - (3) WIRE IN ROOF.
 - (2) WIRE IN SIDEWALL.
 - (1) ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT INTERRUPT PROTECTED.

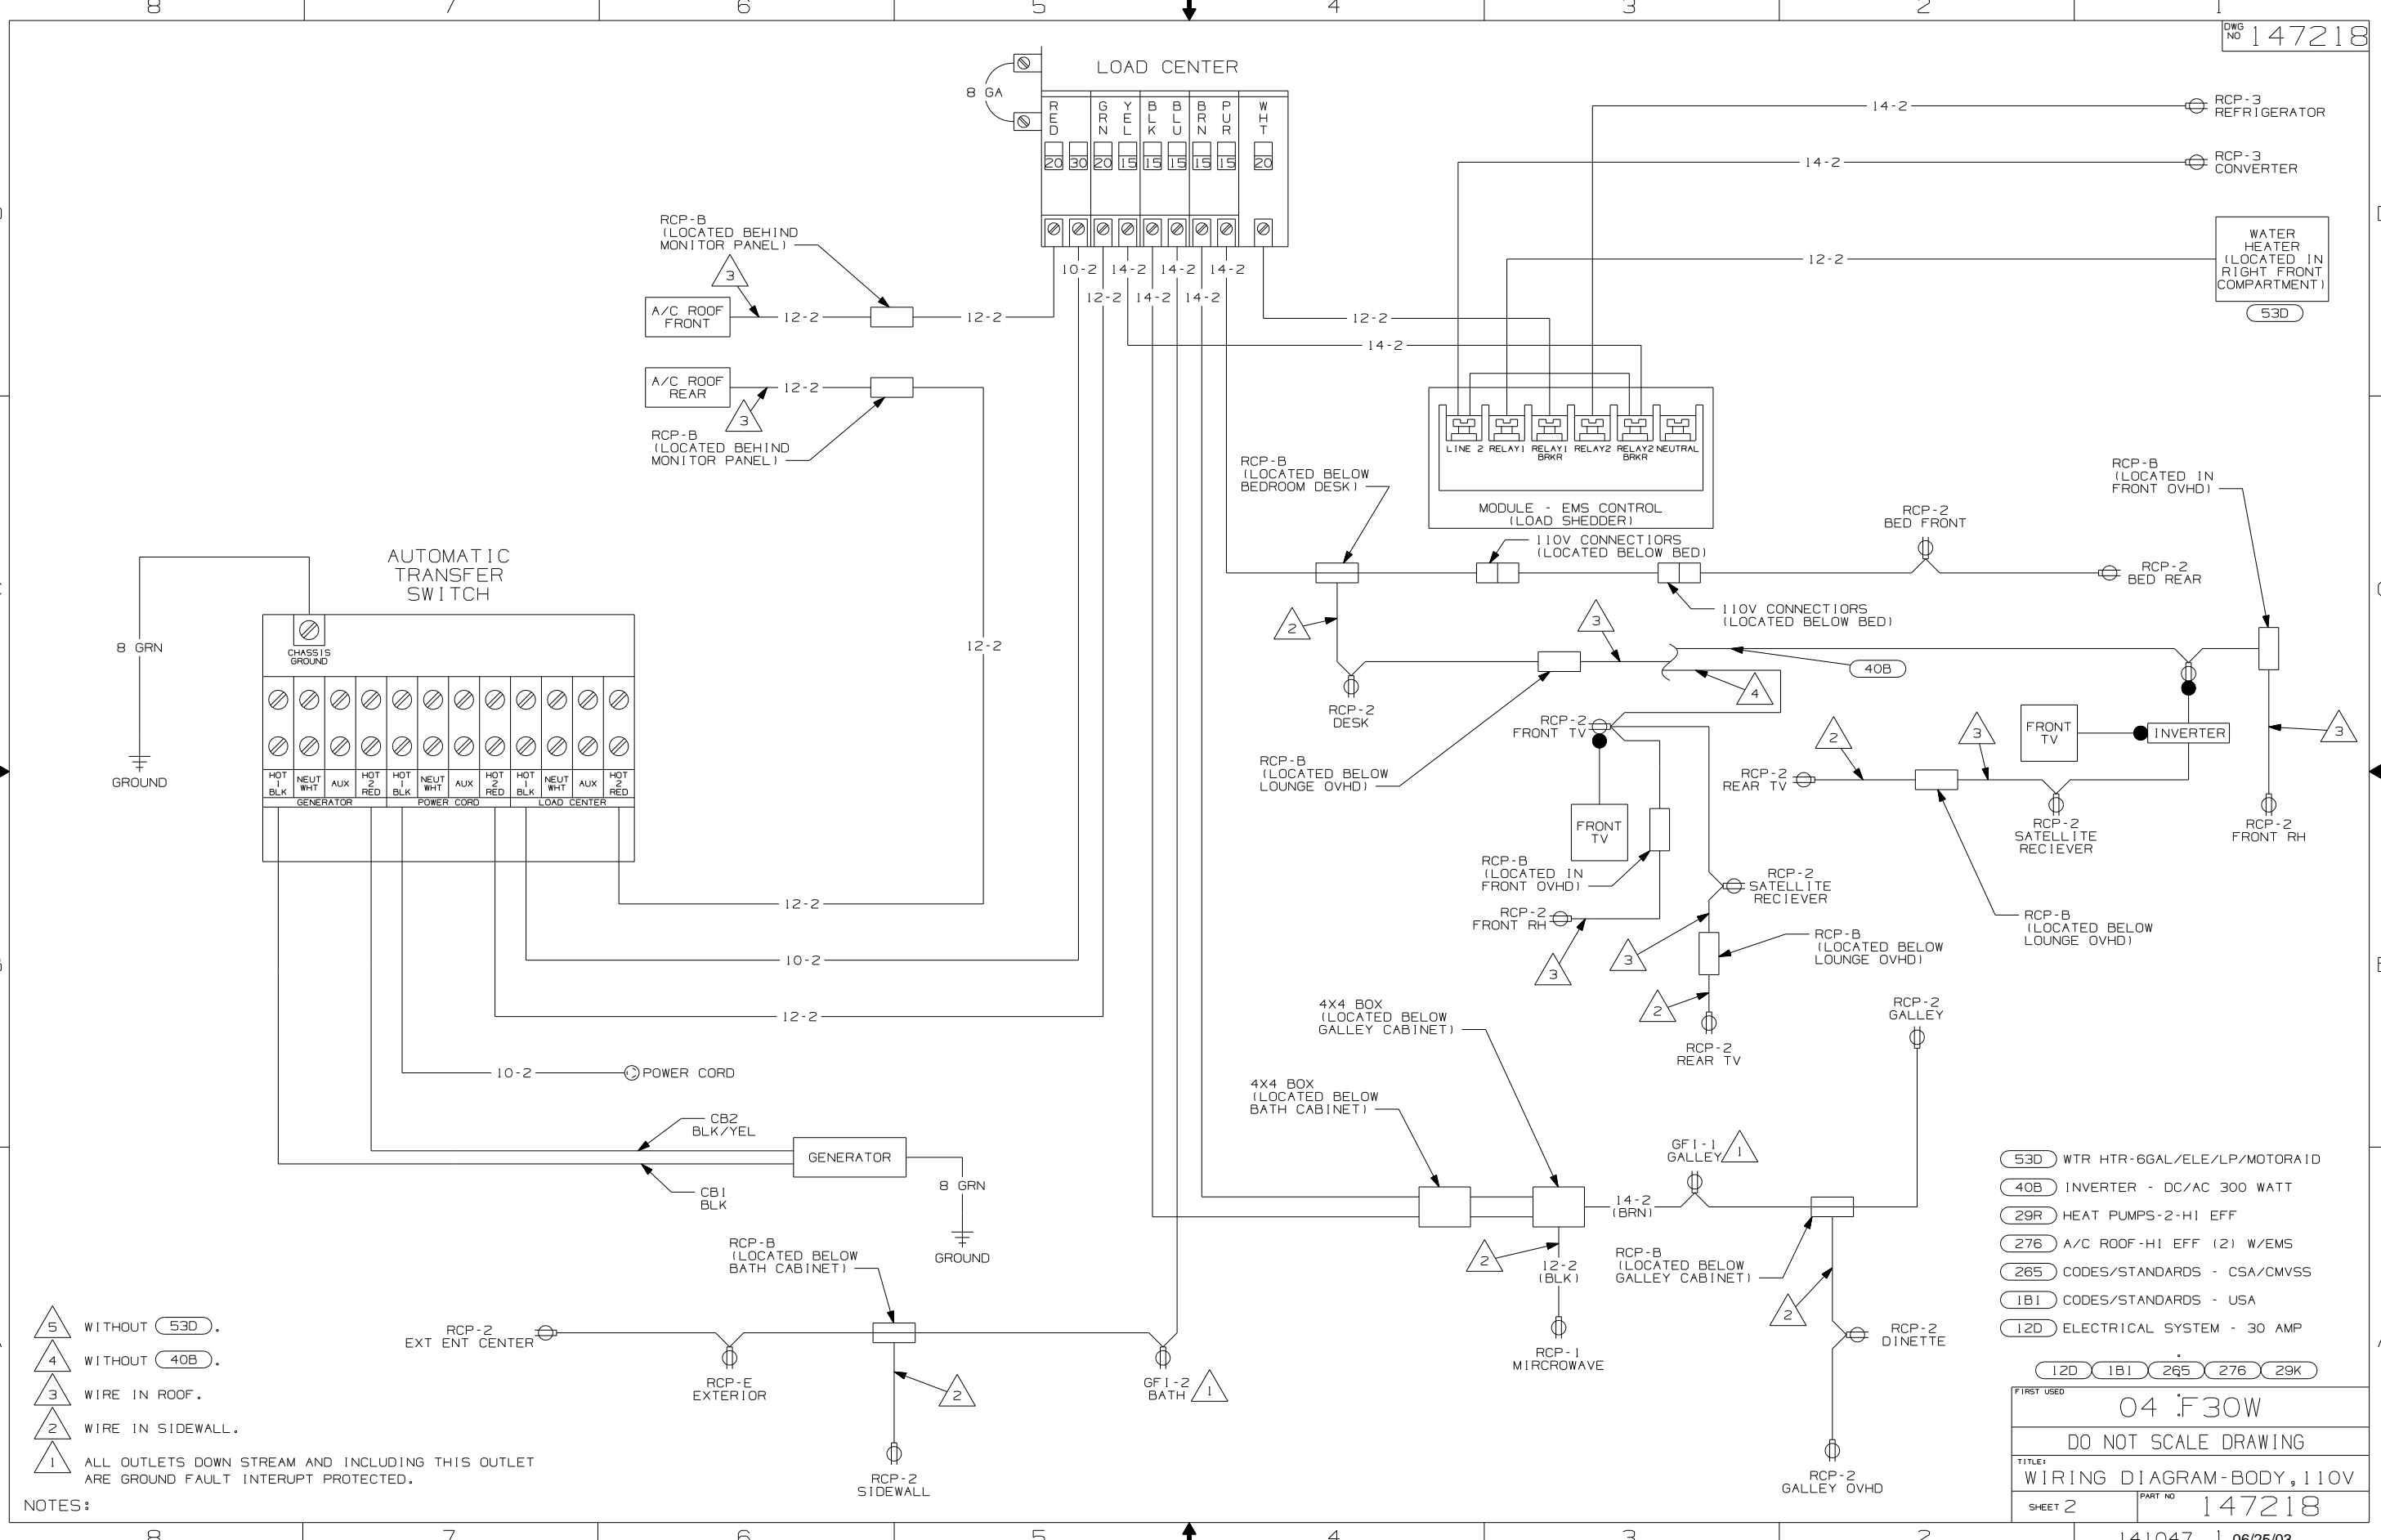

- NOTES:
- 5 WITHOUT (53D).
 - 4 WITHOUT (40B).
 - 3 WIRE IN ROOF.
 - 2 WIRE IN SIDEWALL.
 - 1 ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT INTERRUPT PROTECTED.

(53D)	WTR HTR-6GAL/ELE/LP/MOTORA10			
(40B)	INVERTER - DC/AC 300 WATT			
(29R)	HEAT PUMPS-2-HI EFF			
(276)	A/C ROOF -HI EFF (2) W/EMS			
(265)	CODES/STANDARDS - CSA/CMVSS			
(1B1)	CODES/STANDARDS - USA			
(12D)	ELECTRICAL SYSTEM - 30 AMP			
(12D)	(1B1)	(265)	(276)	(29K)
FIRST USED				
04.F30W				
DO NOT SCALE DRAWING				
TITLE:				
WIRING DIAGRAM-BODY, 110V				
SHEET 2		PART NO 147218		
141047 1 06/25/03				