




**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

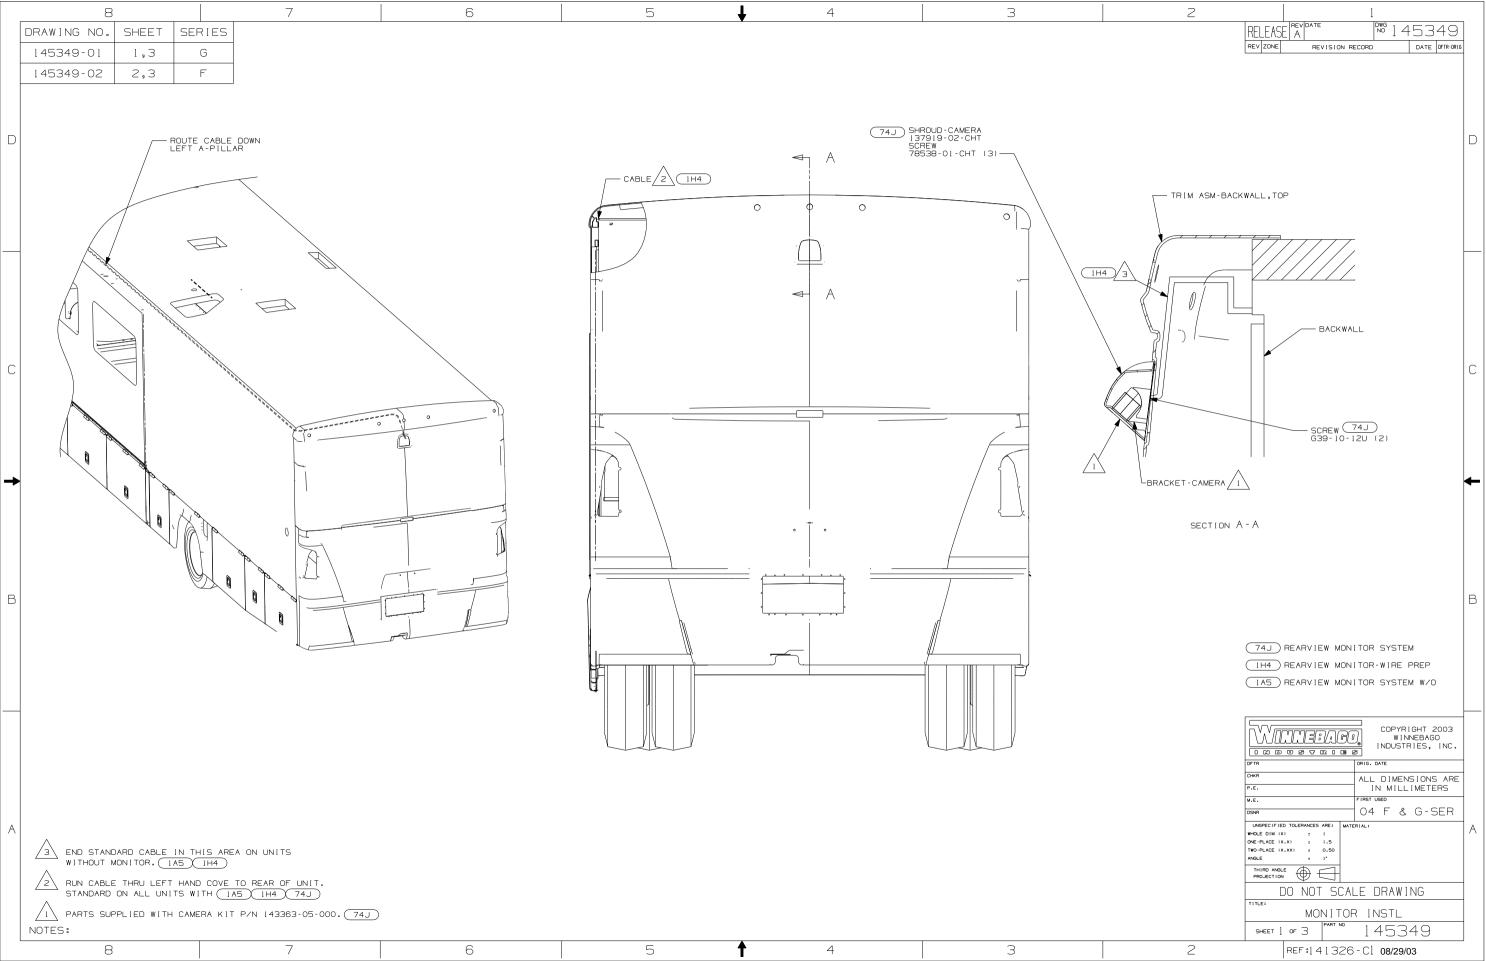

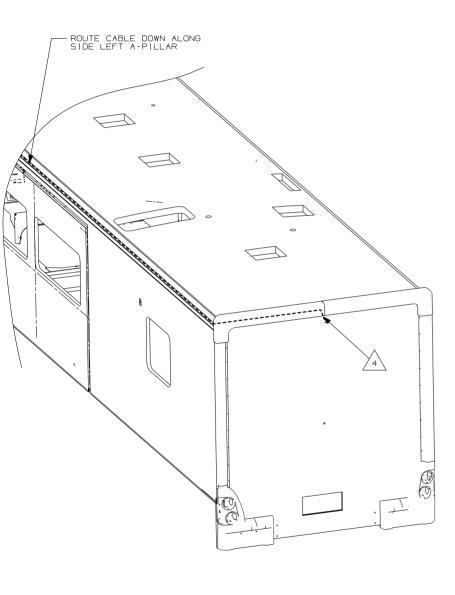

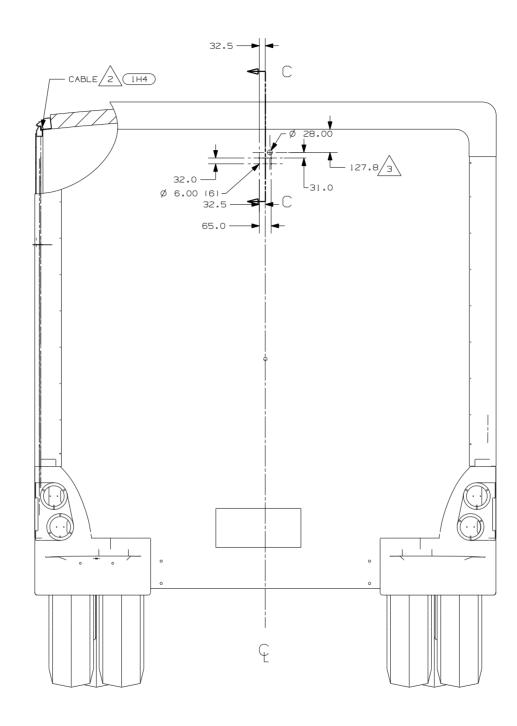

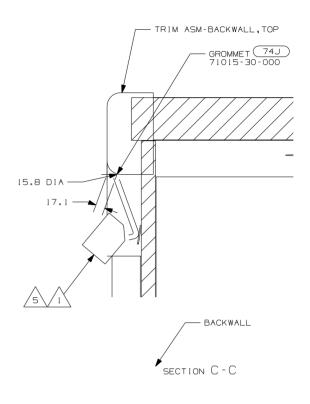

74J REARVIEW MONITOR SYSTEM

1H4 REARVIEW MONITOR-WIRE PREP

1A5 REARVIEW MONITOR SYSTEM W/O

04 F & G-SER

MONITOR INSTL 08/29/0345349


/5\ PARTS SUPPLIED WITH CAMERA KIT P/N 93040-09-000. 74J WINNEBAGO END CABLE IN THIS AREA ON UNITS W/O MONITOR.

MEASURED FROM BOTTOM BACKWALL TRIM.

RUN CABLE THRU LEFT HAND COVE TO REAR OF UNIT. STANDARD ON ALL UNITS WITH 1A5 1H4 74J

PARTS SUPPLIED WITH CAMERA KIT P/N 143363-05-000. 74J ITASCA

NOTES:

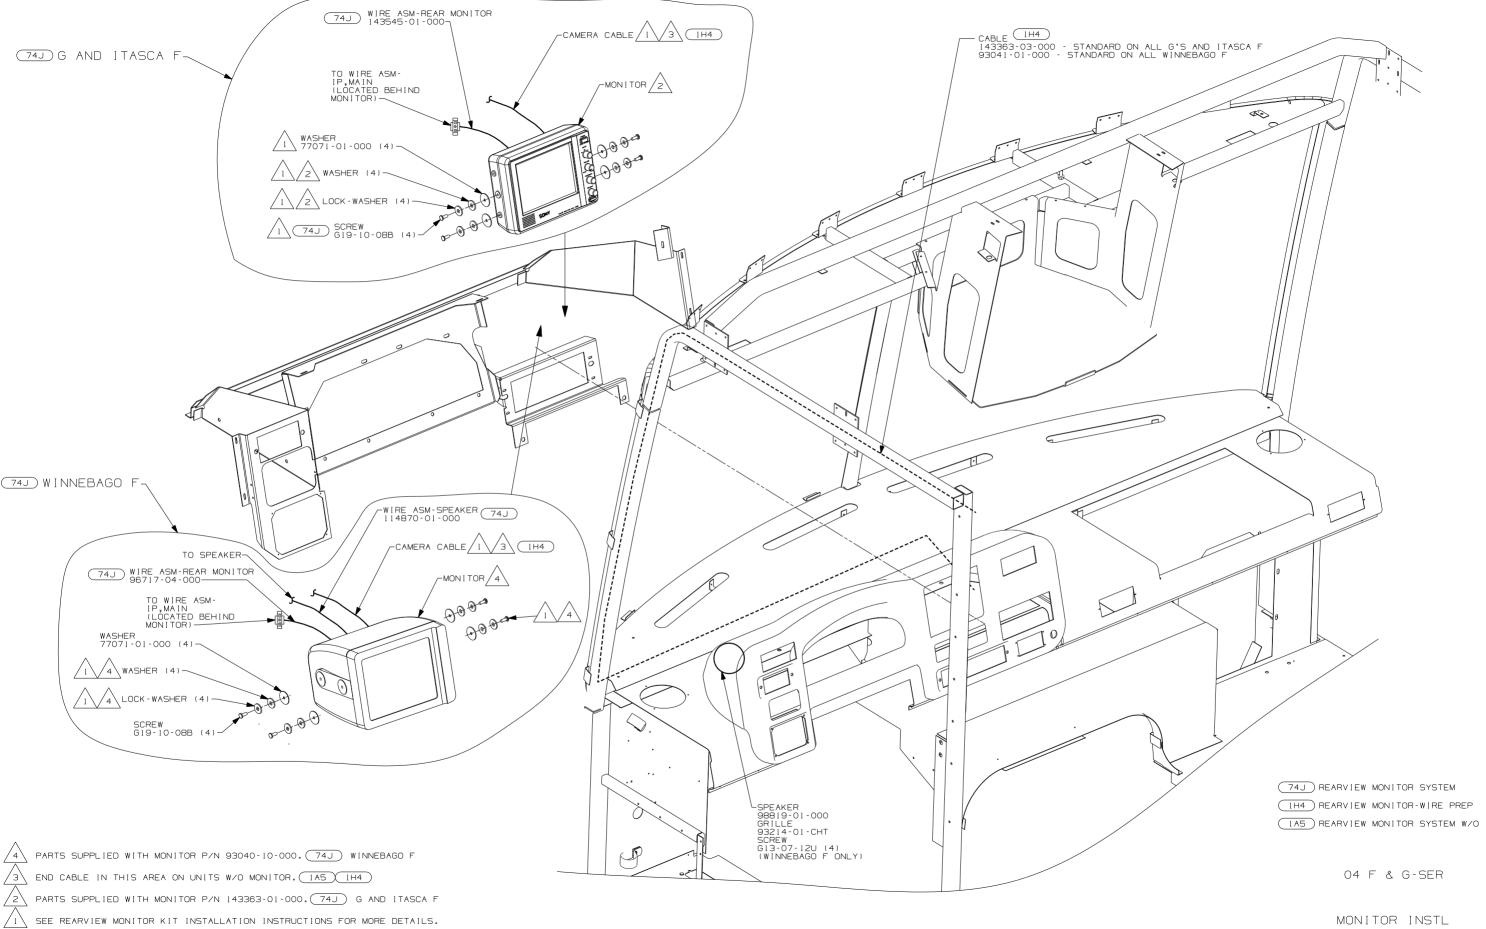

NOTES:

3 <sup>08/29/03</sup>45349