




DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.





CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

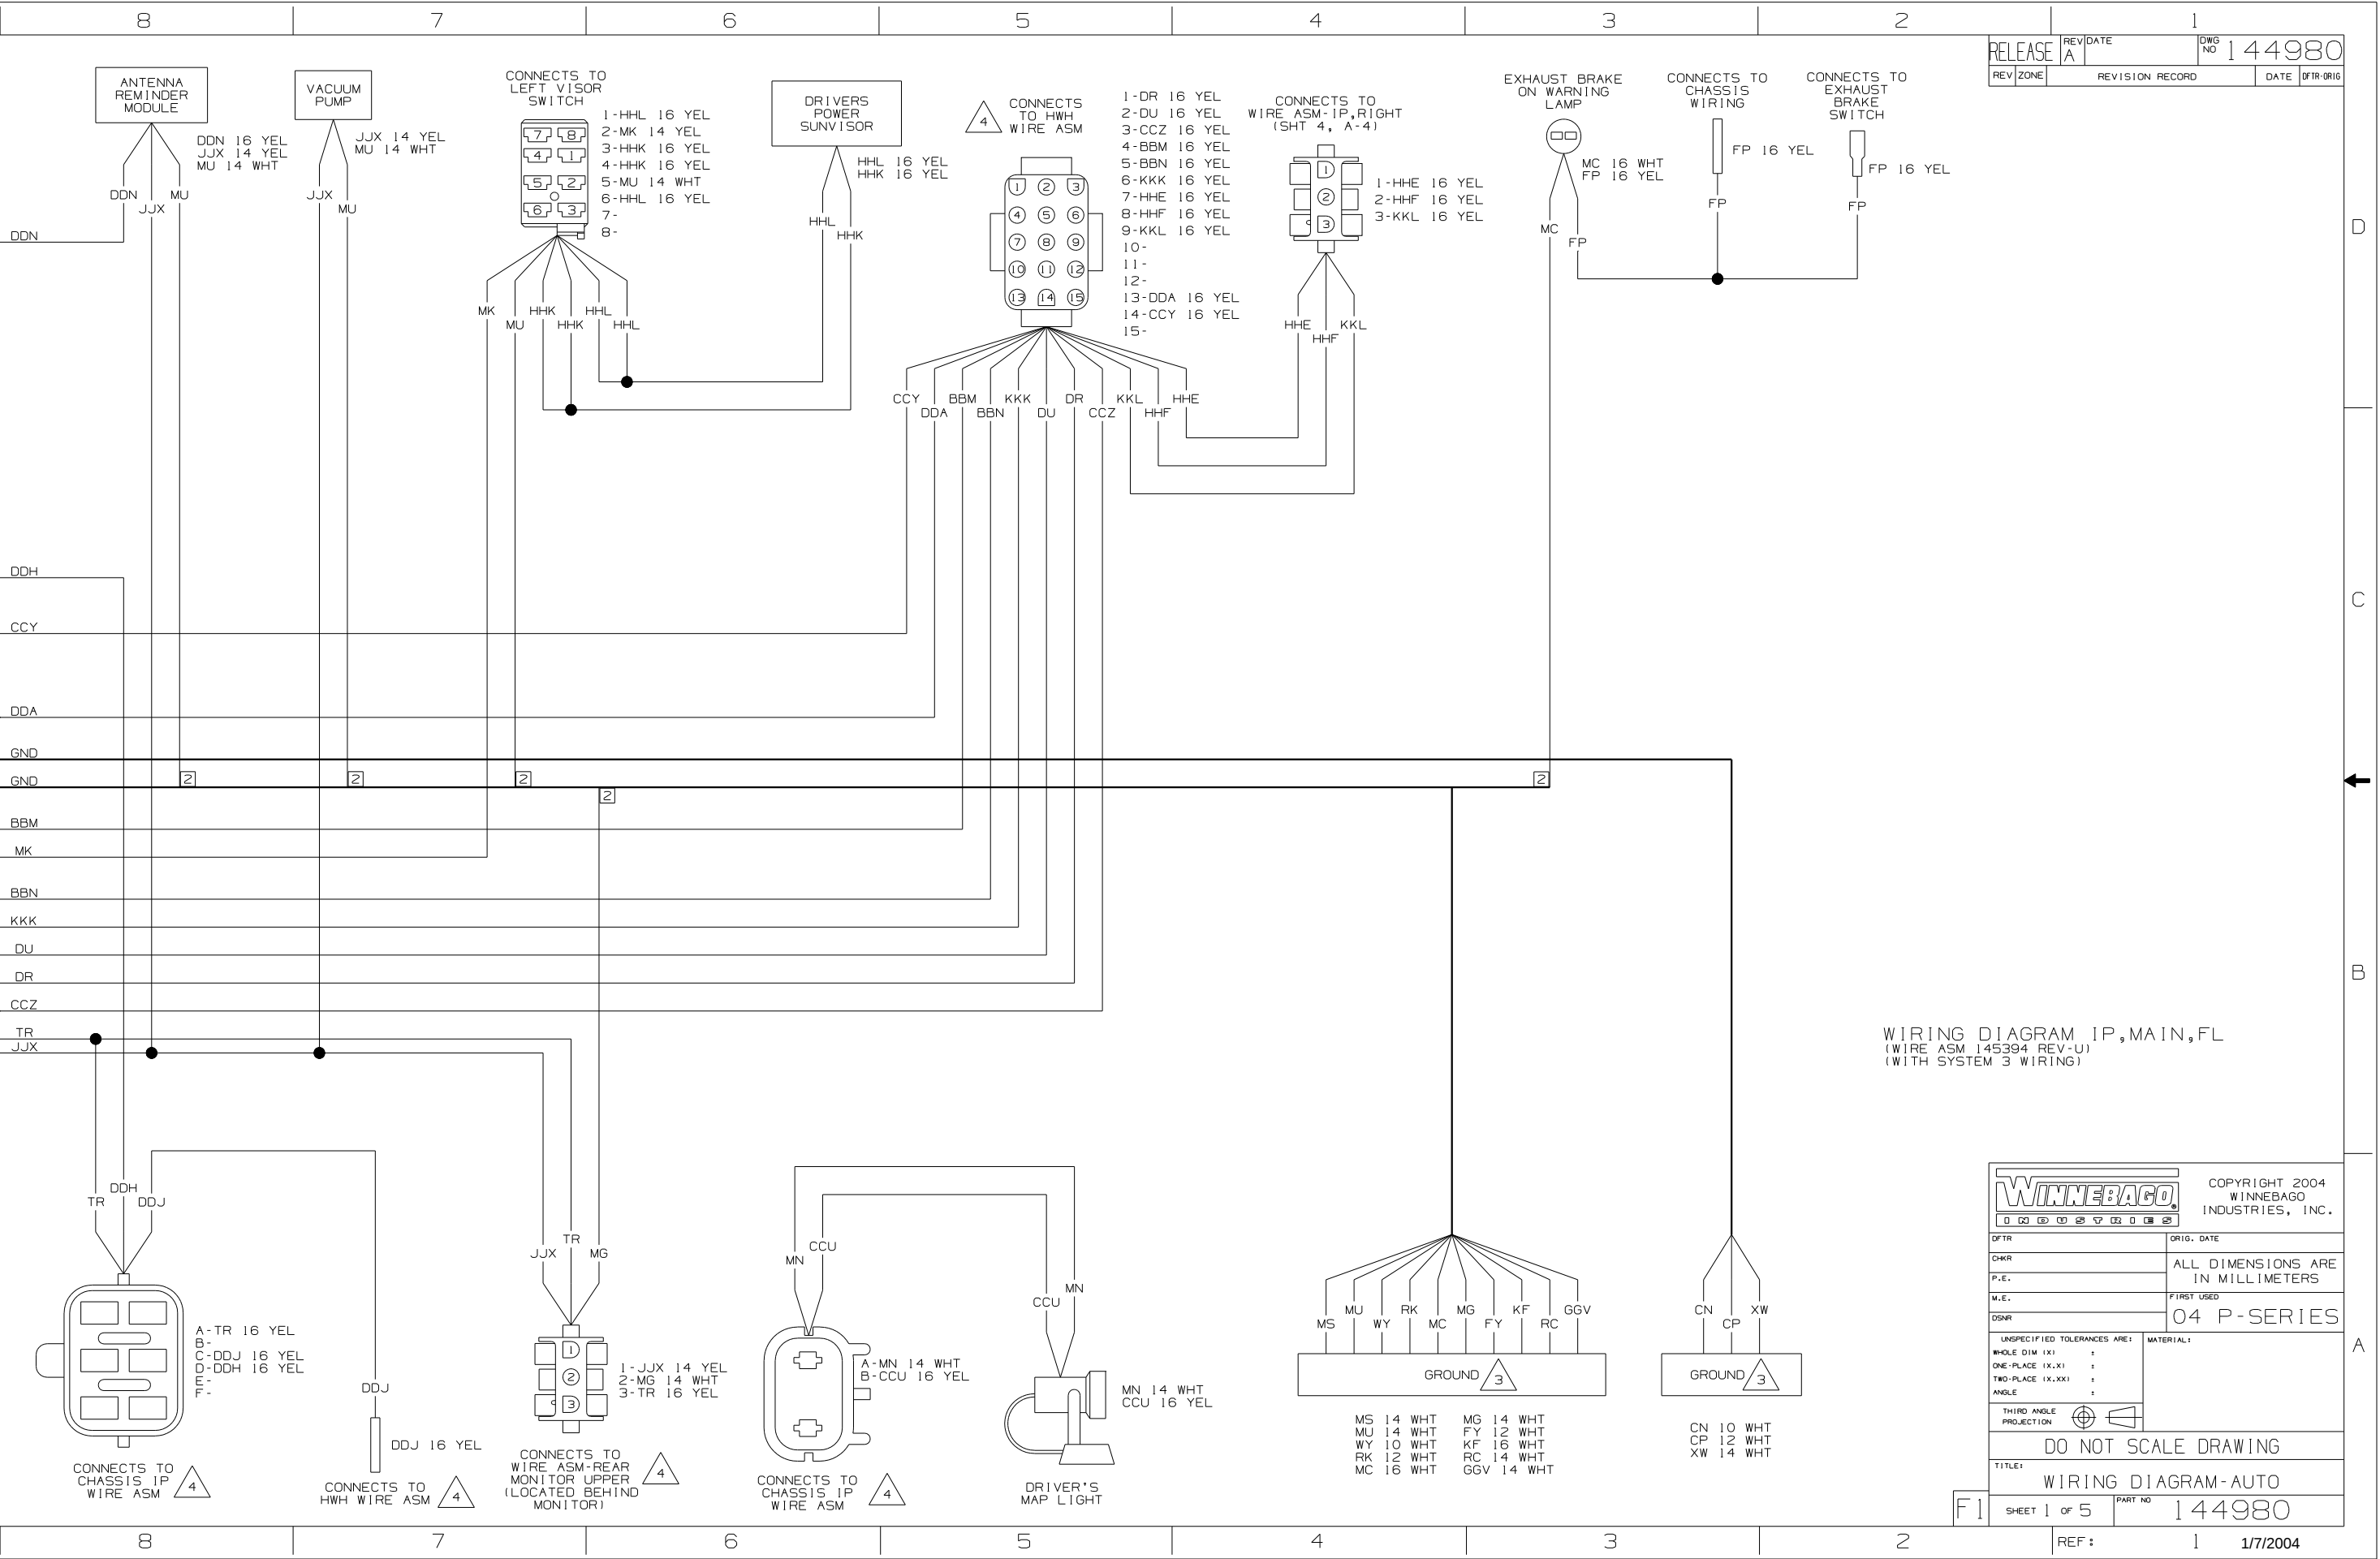


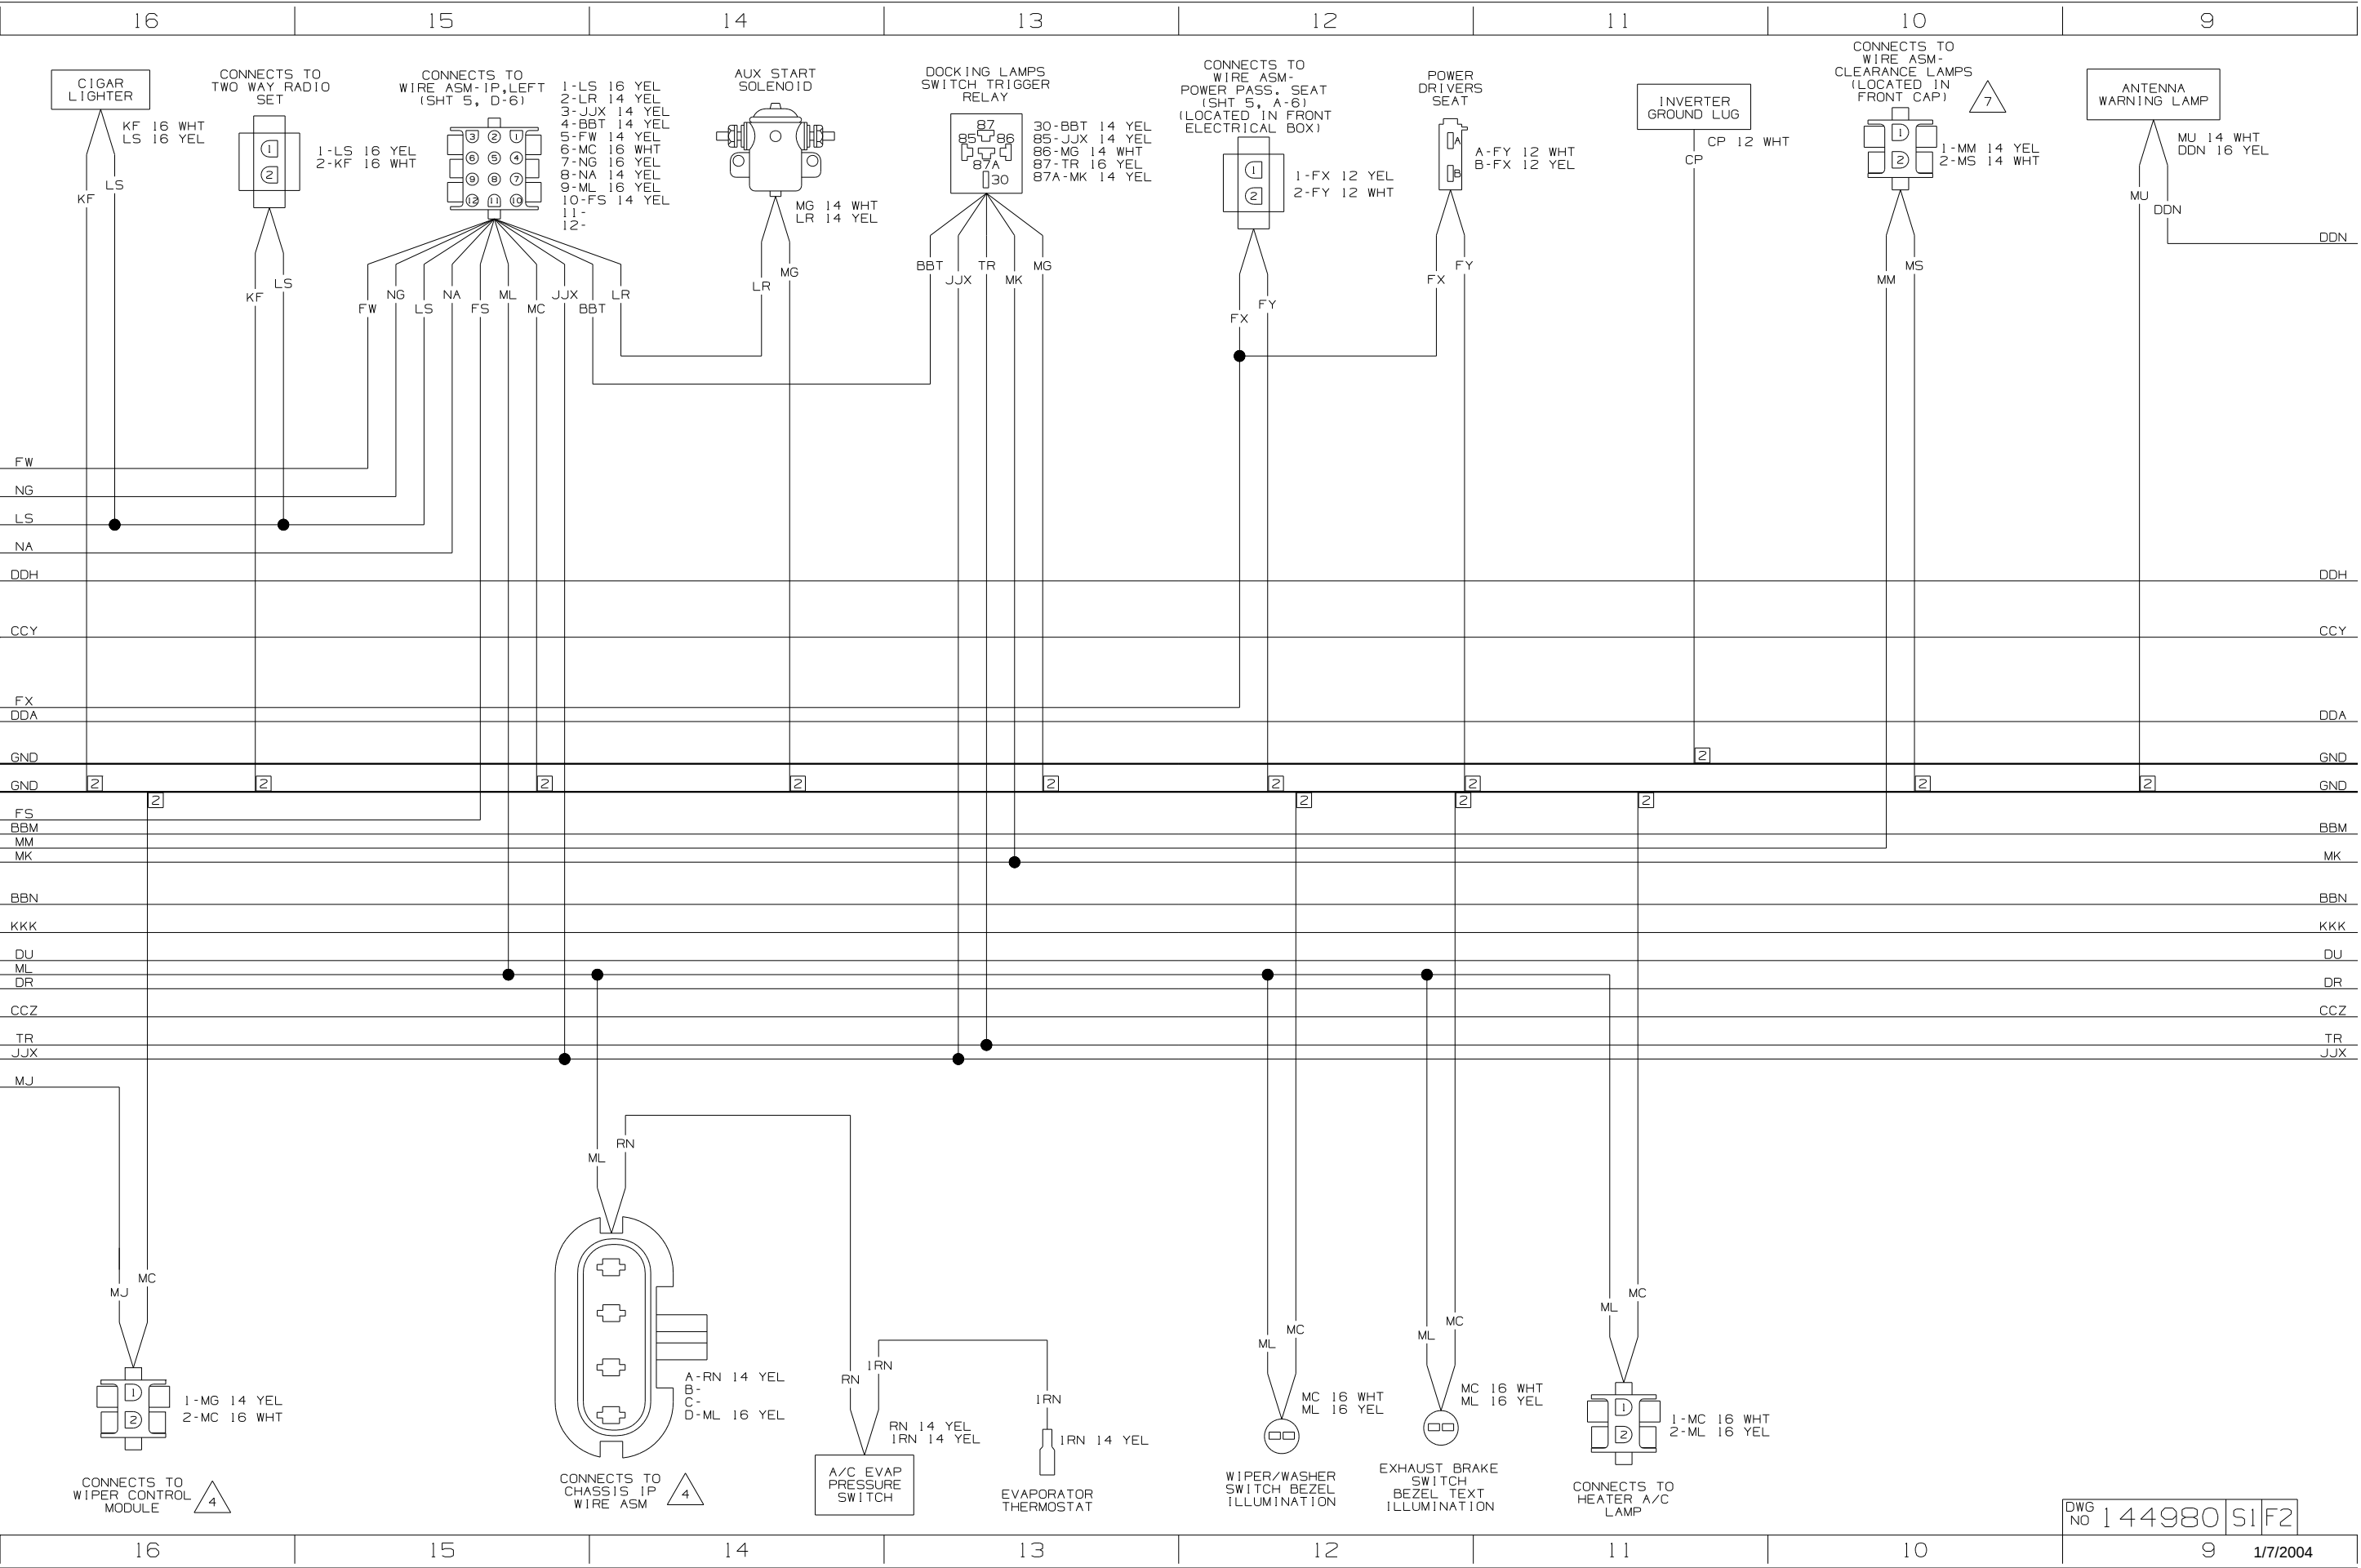


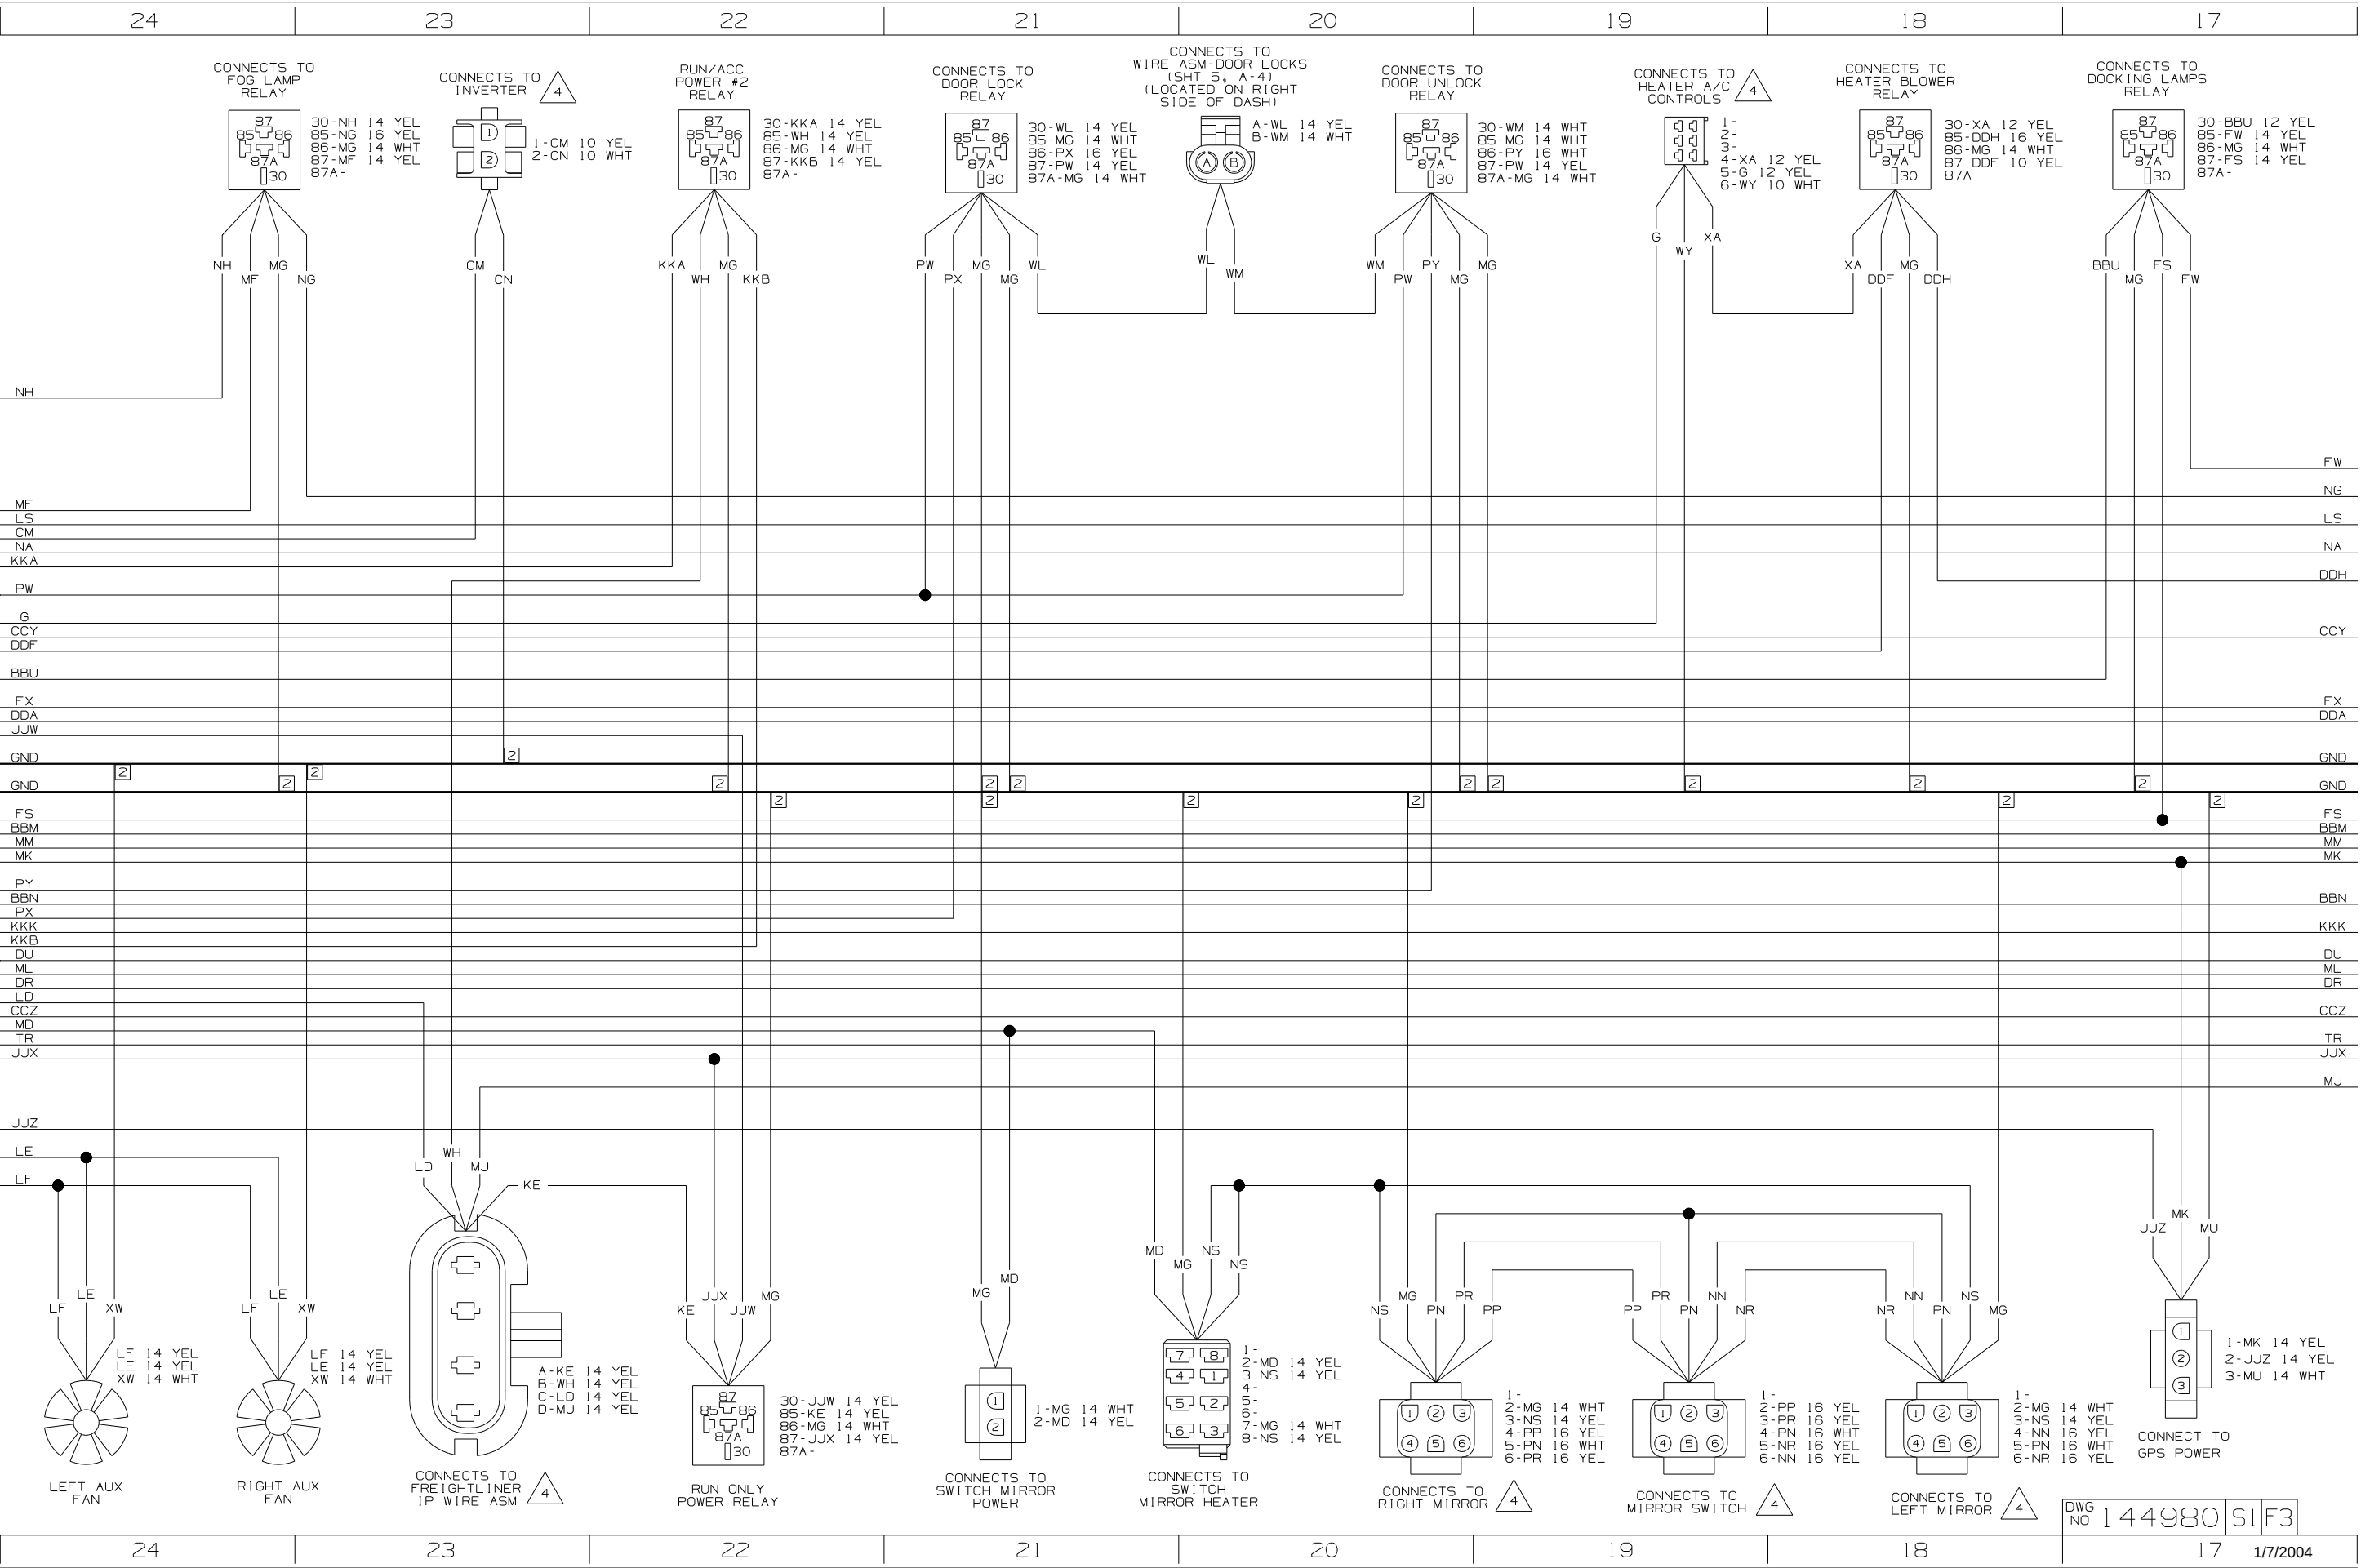


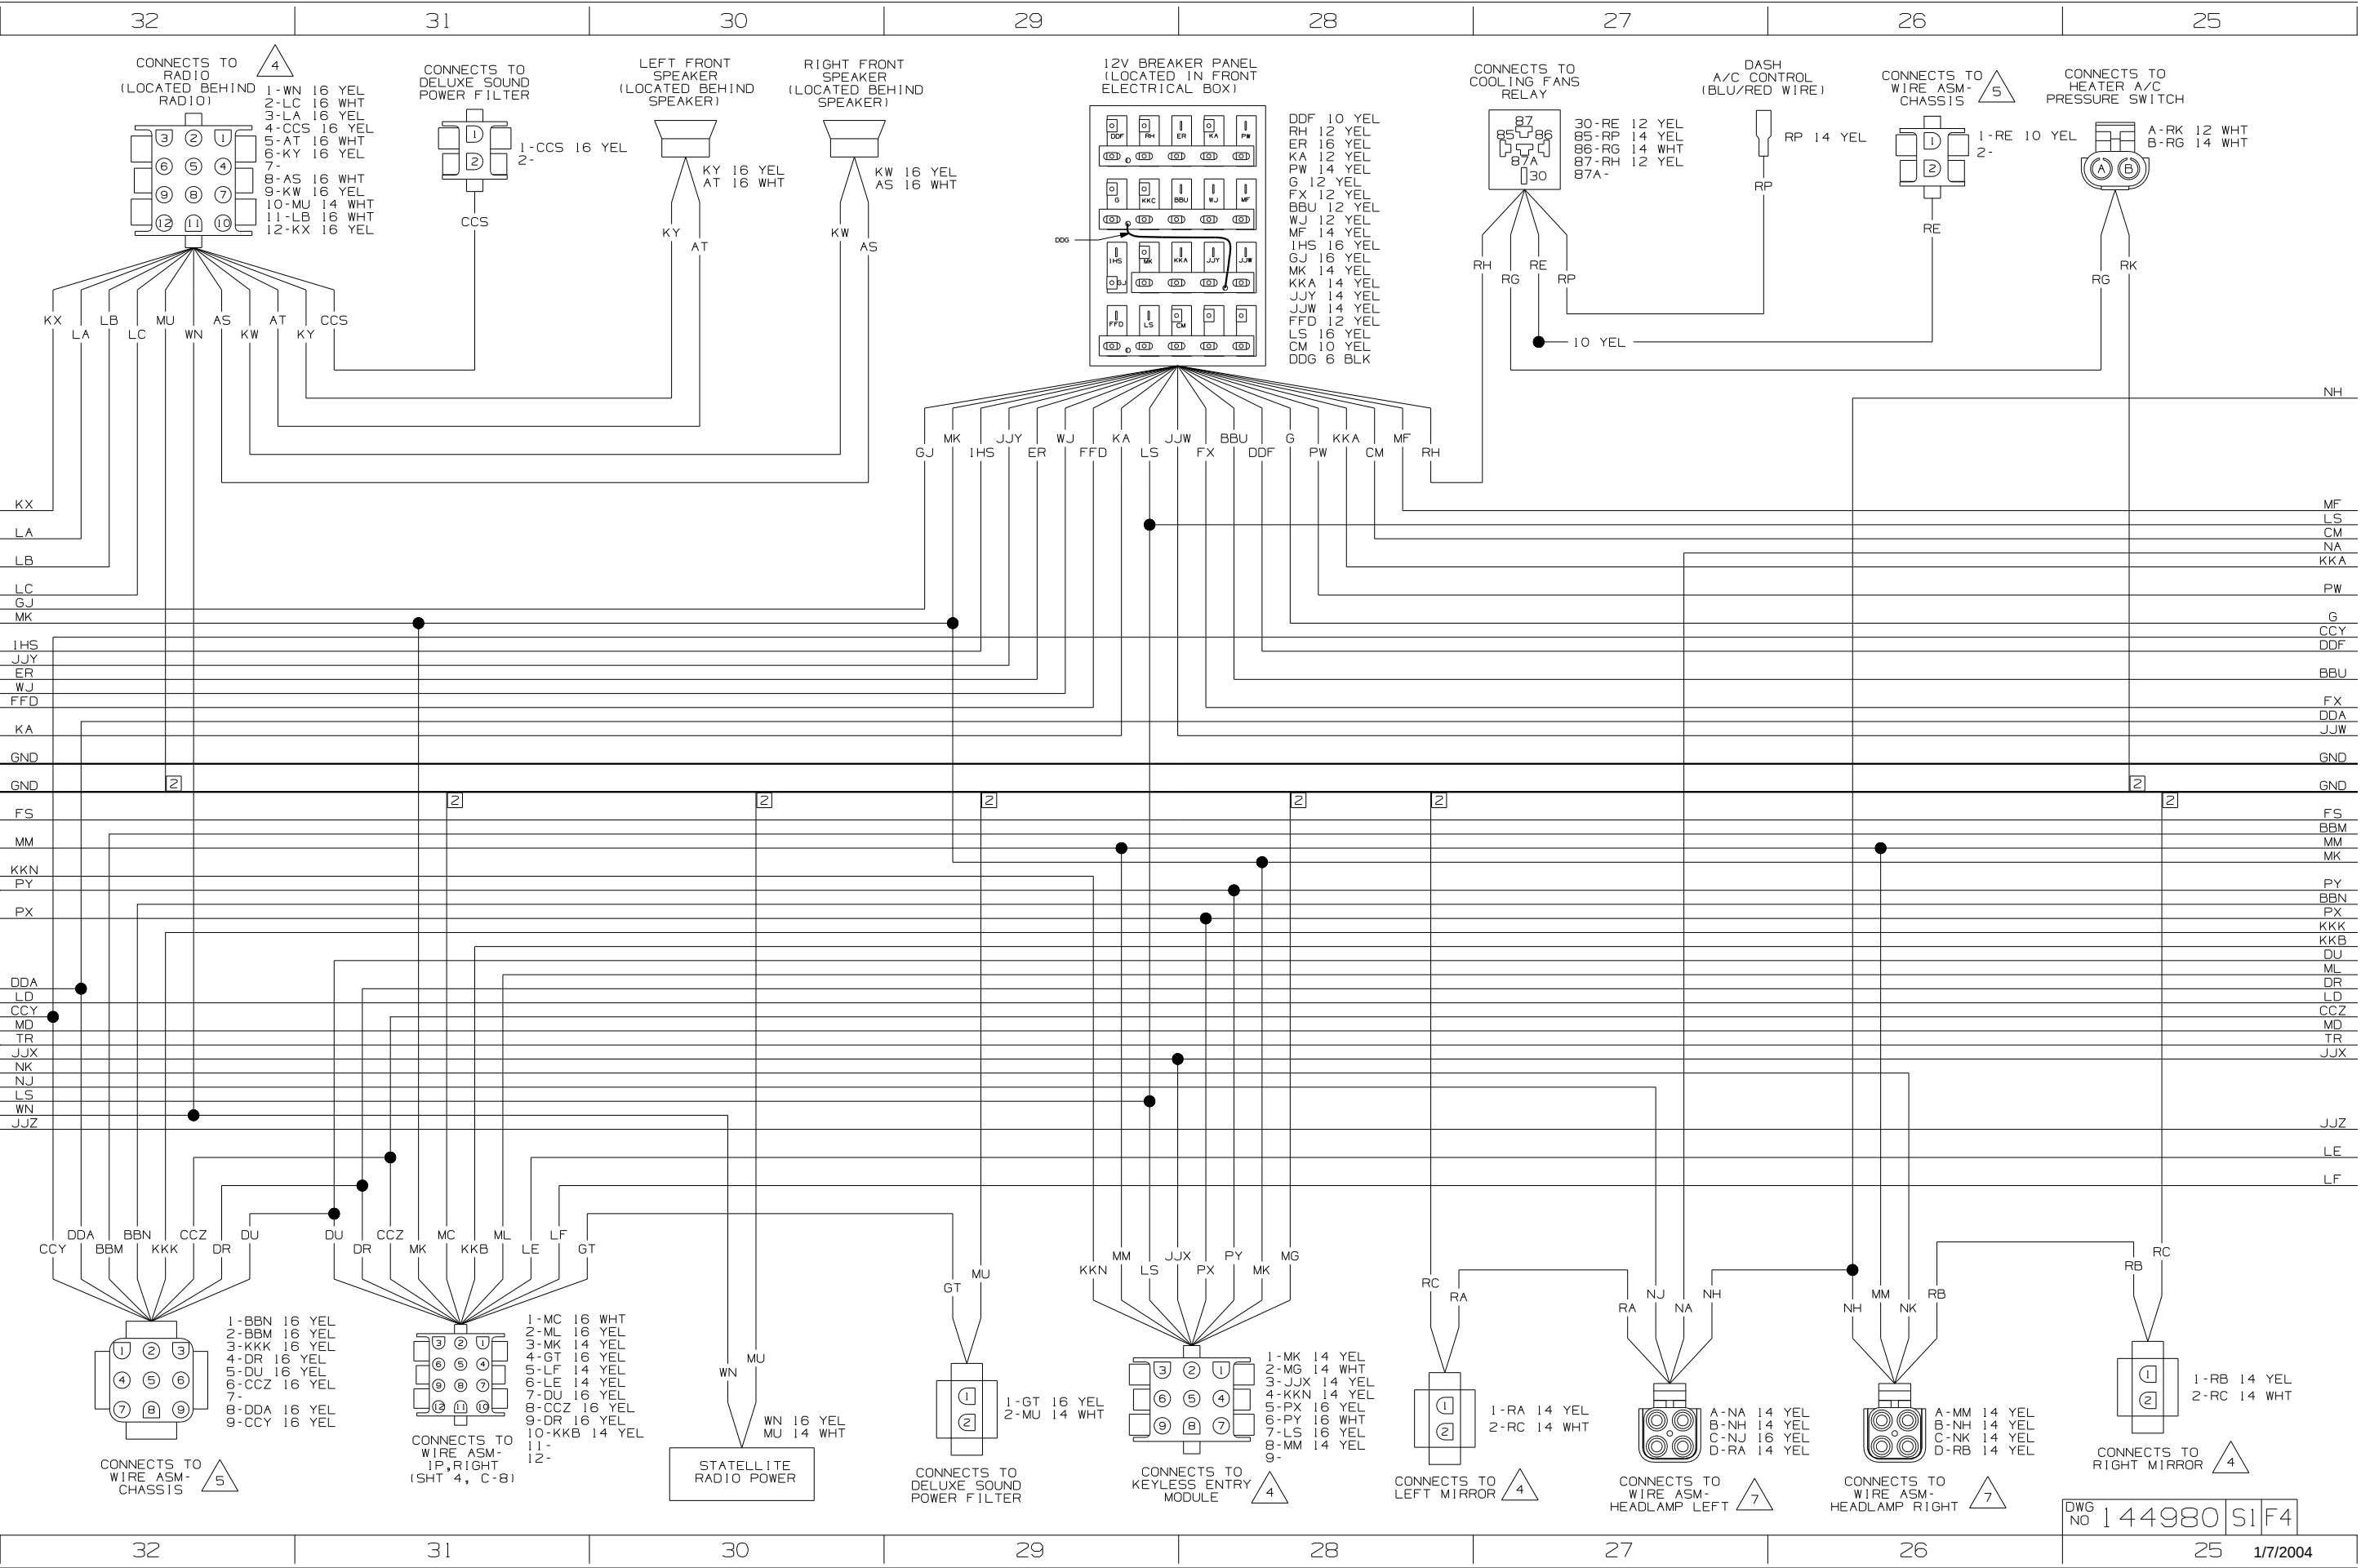


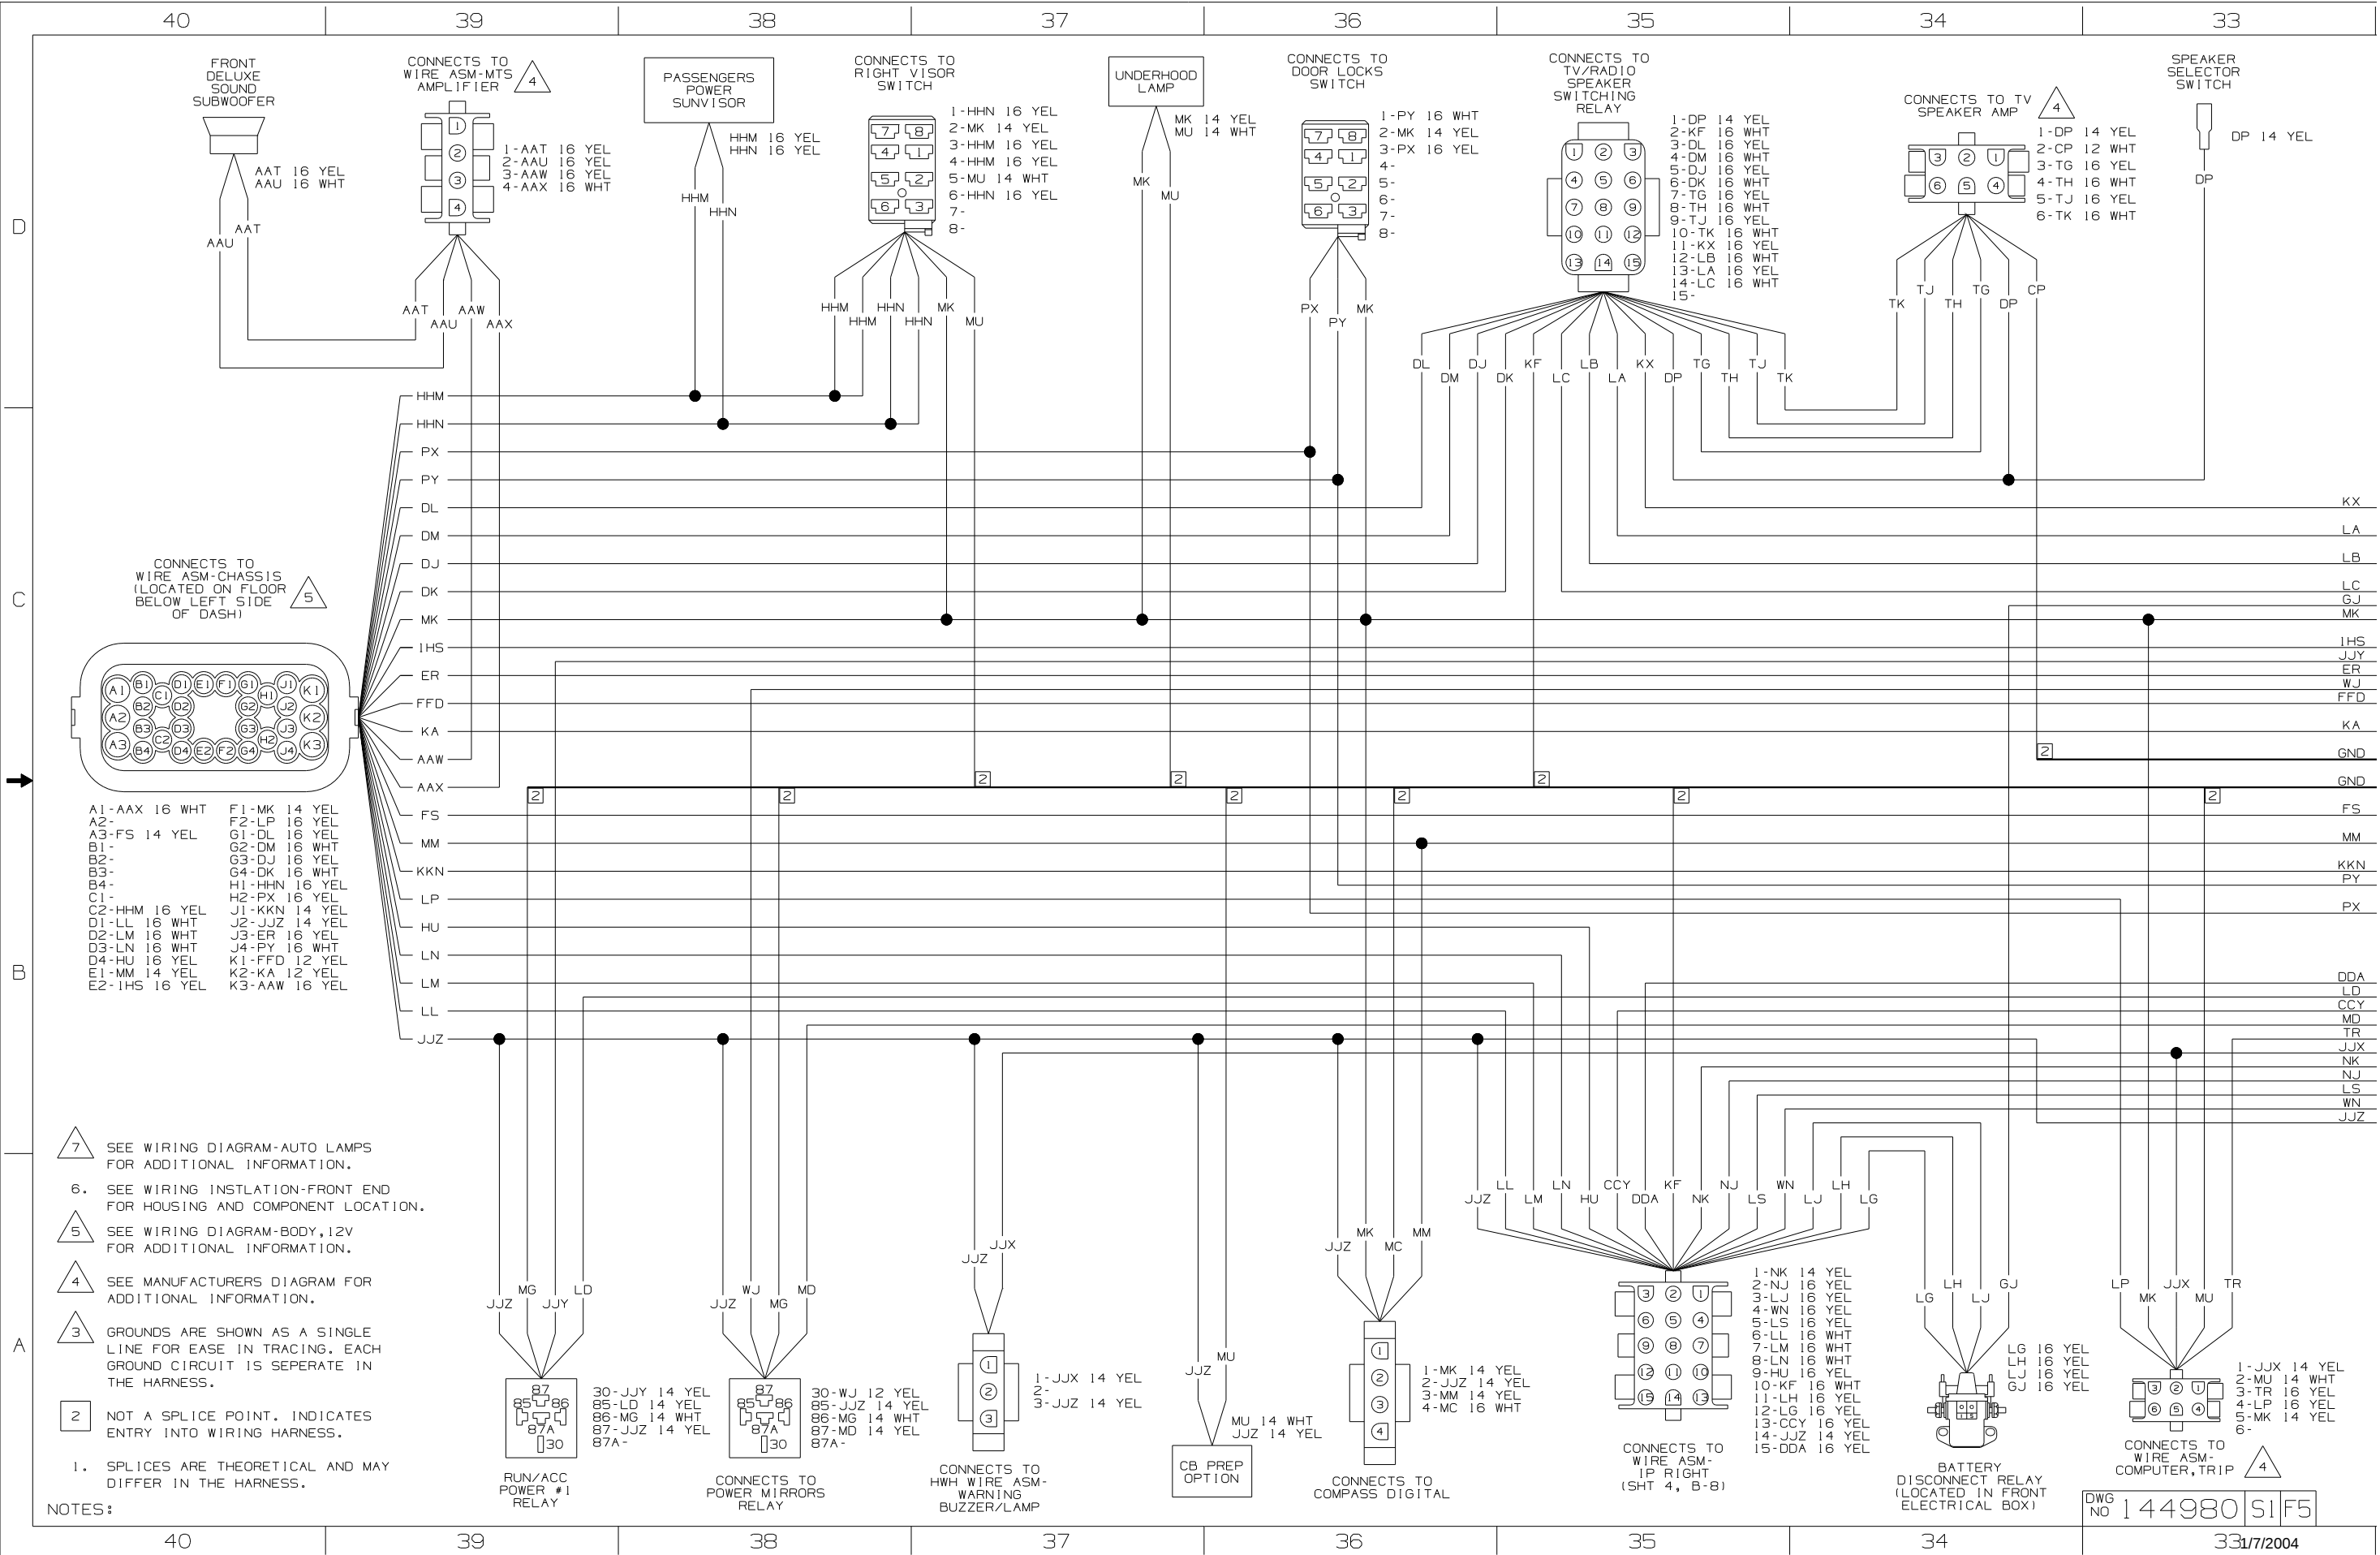


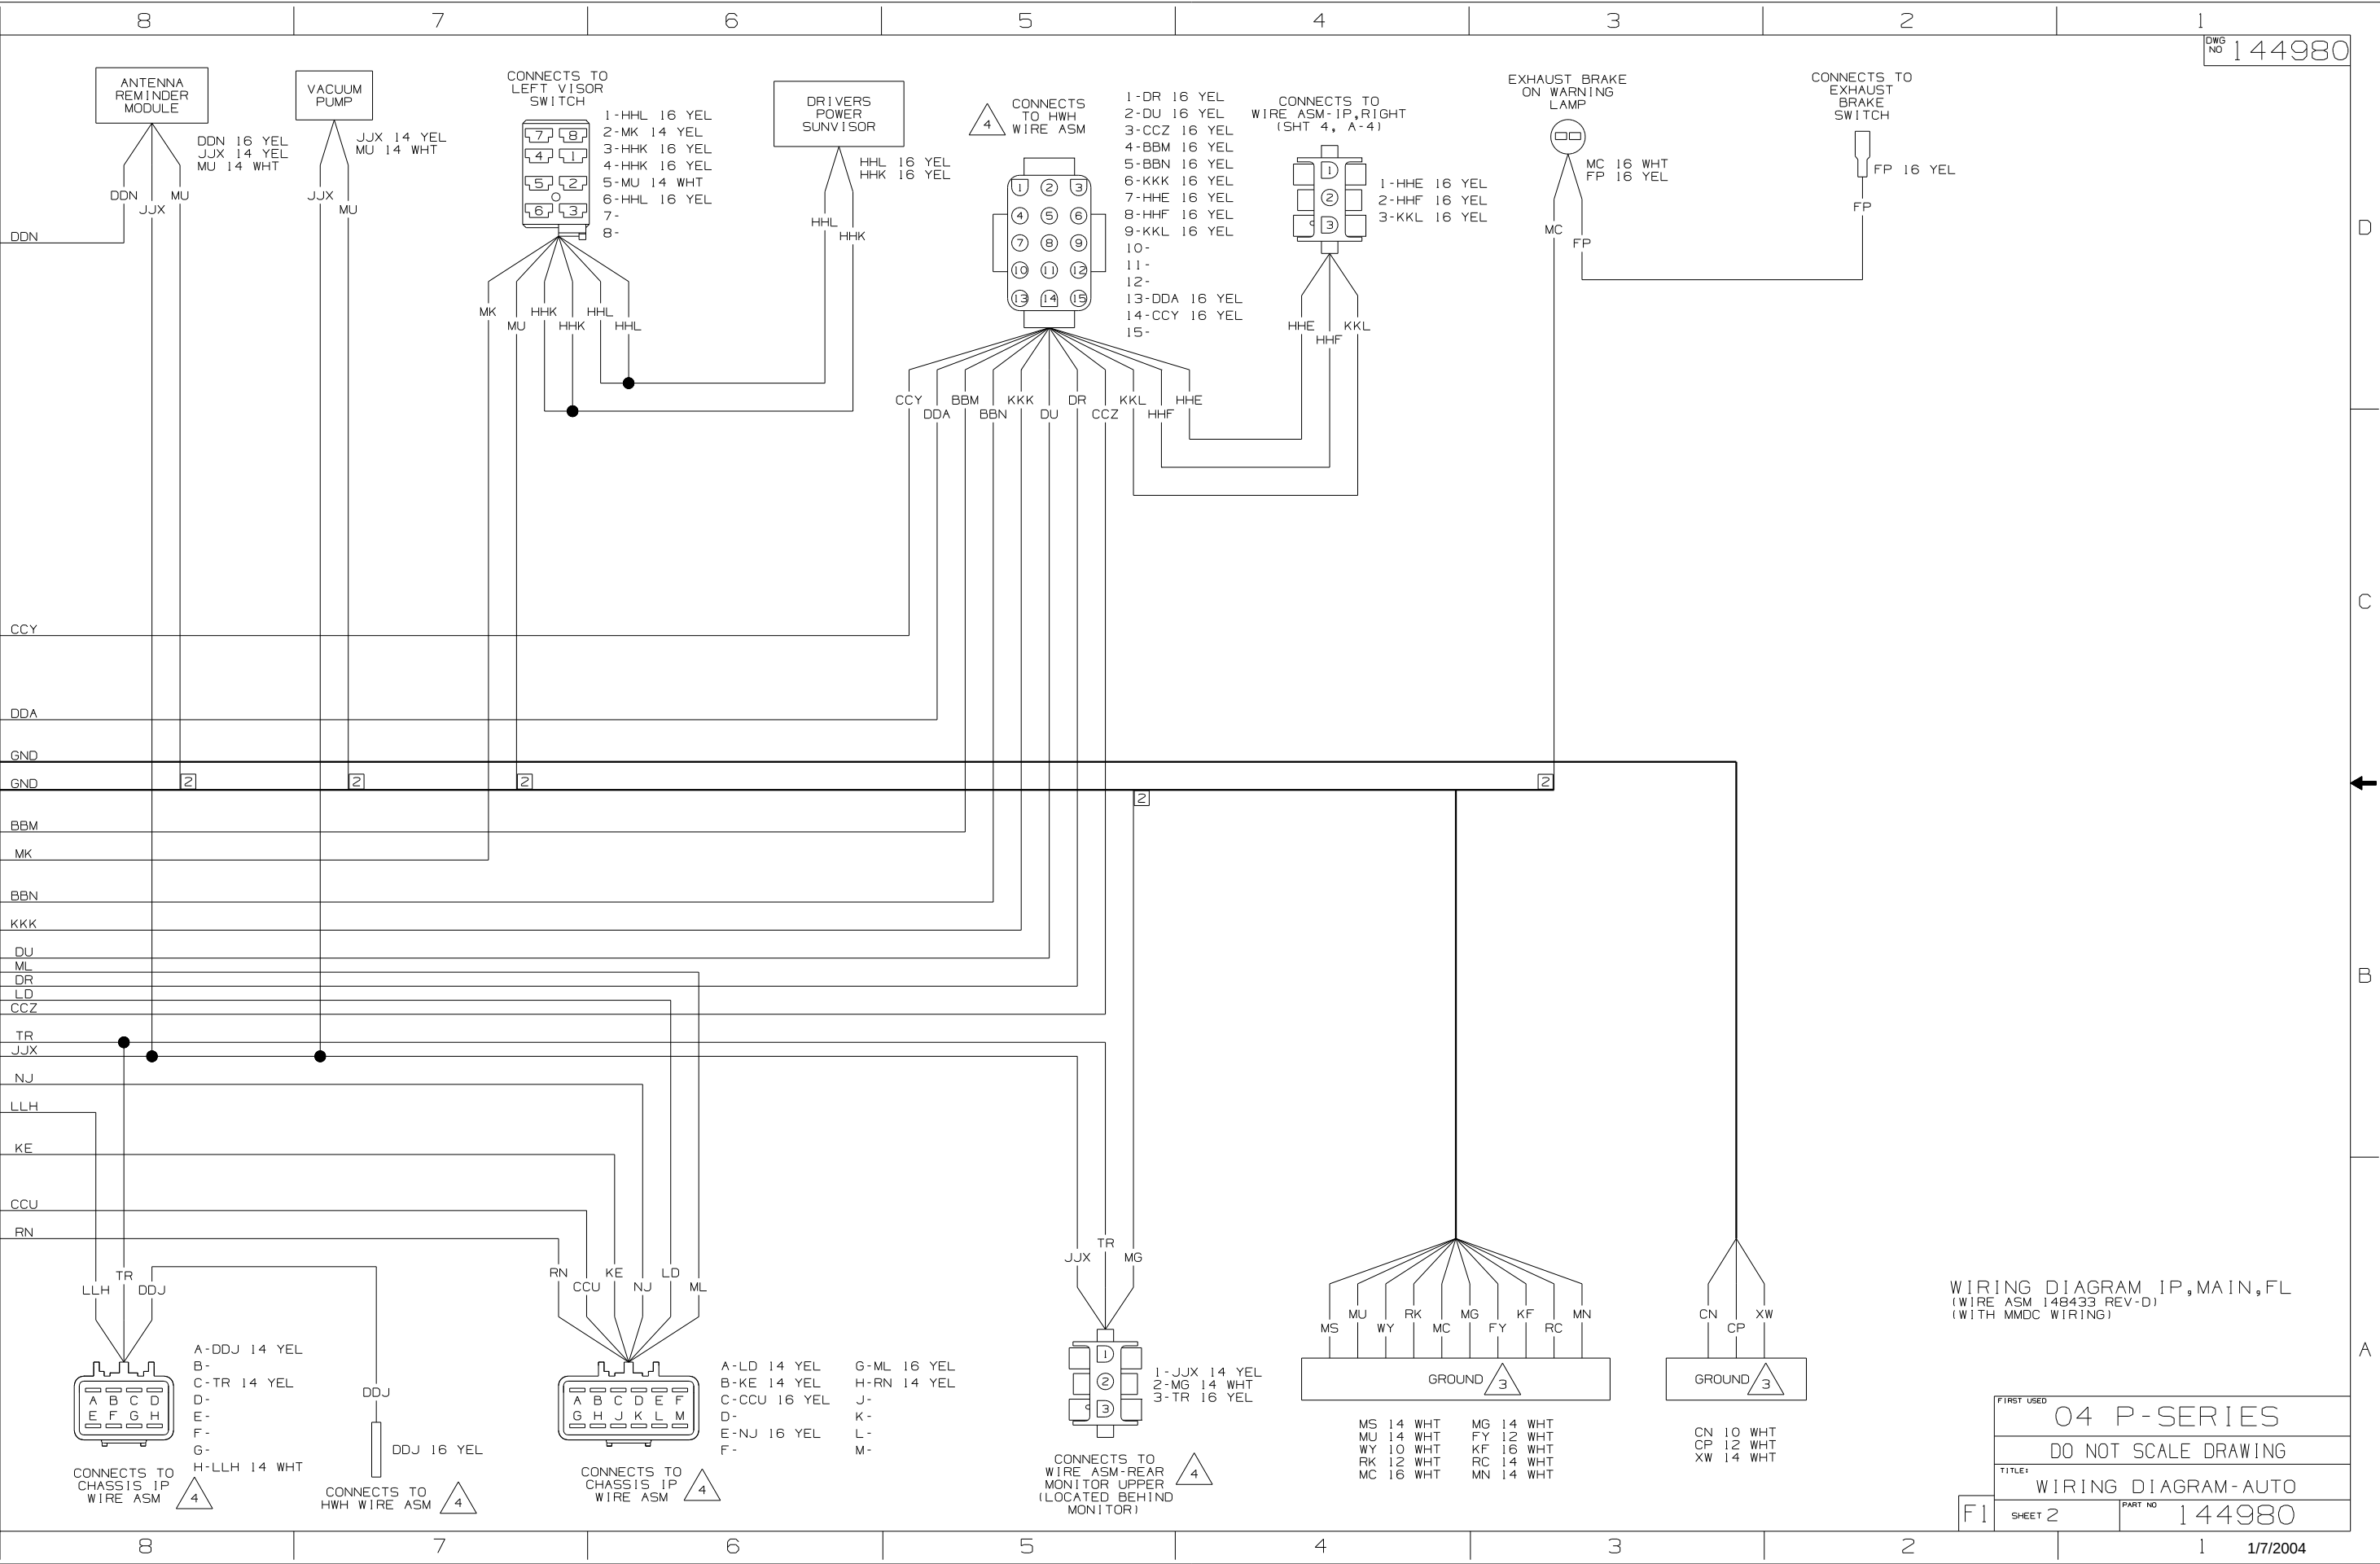


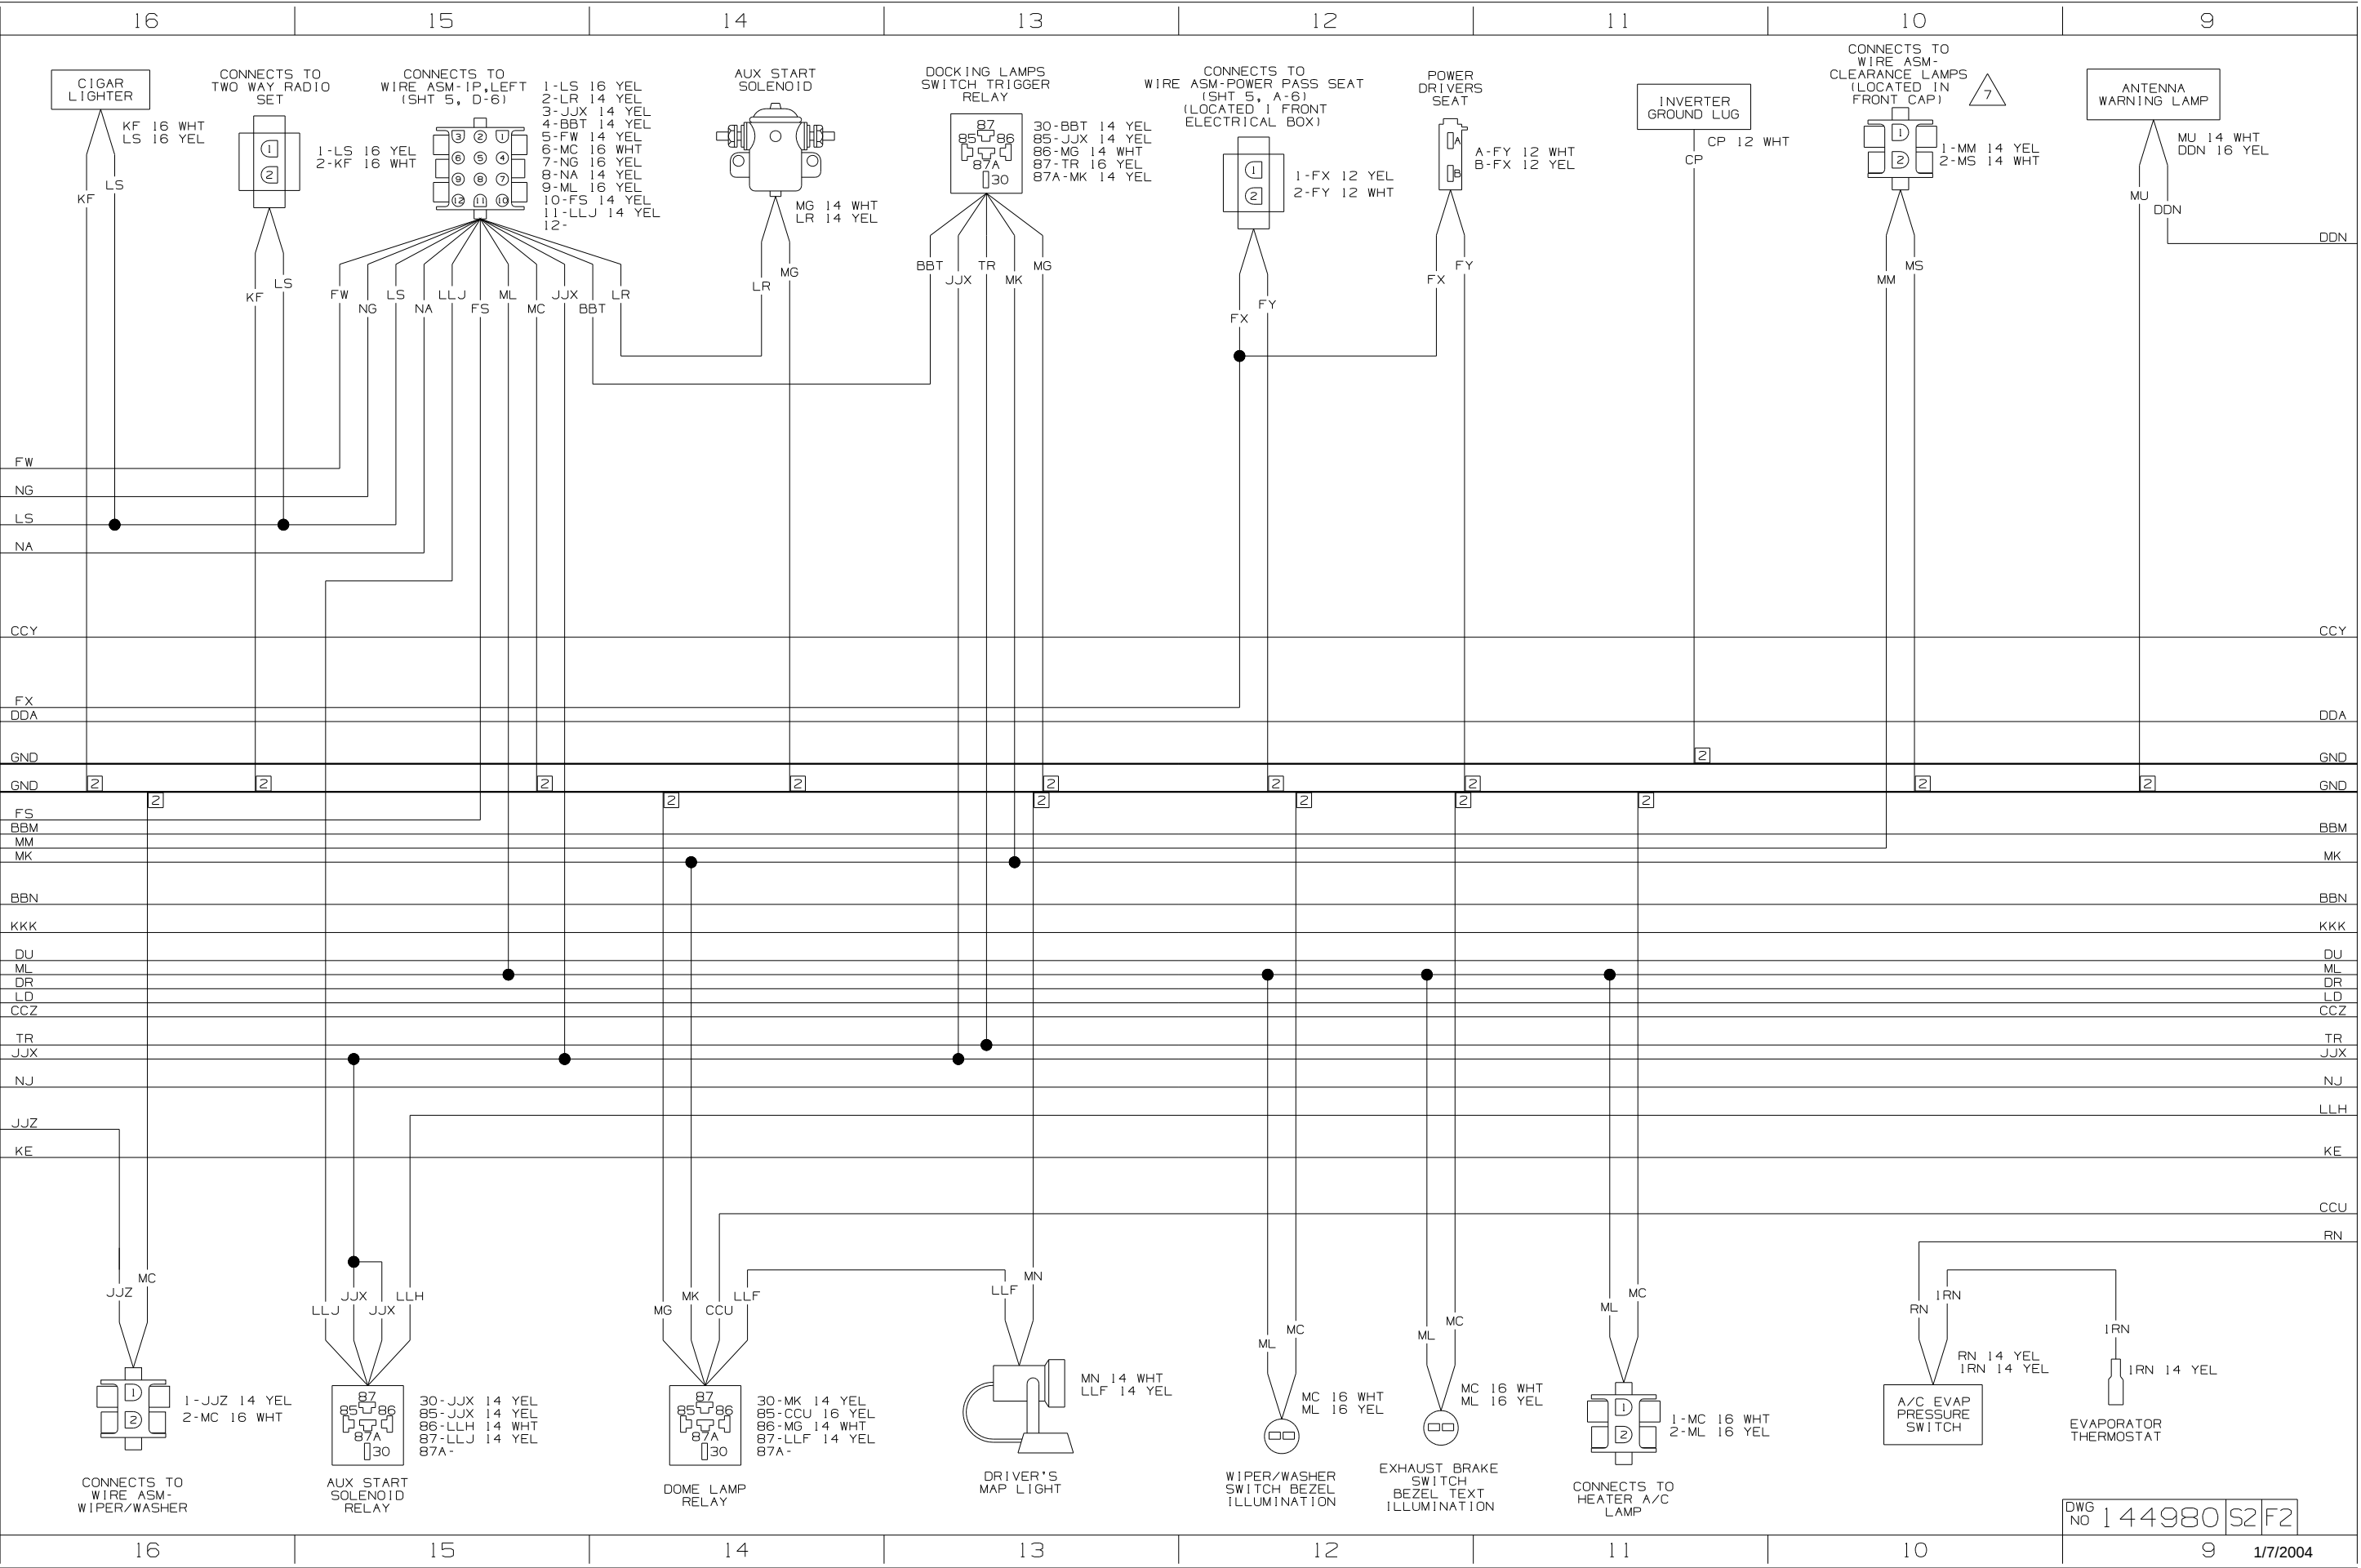


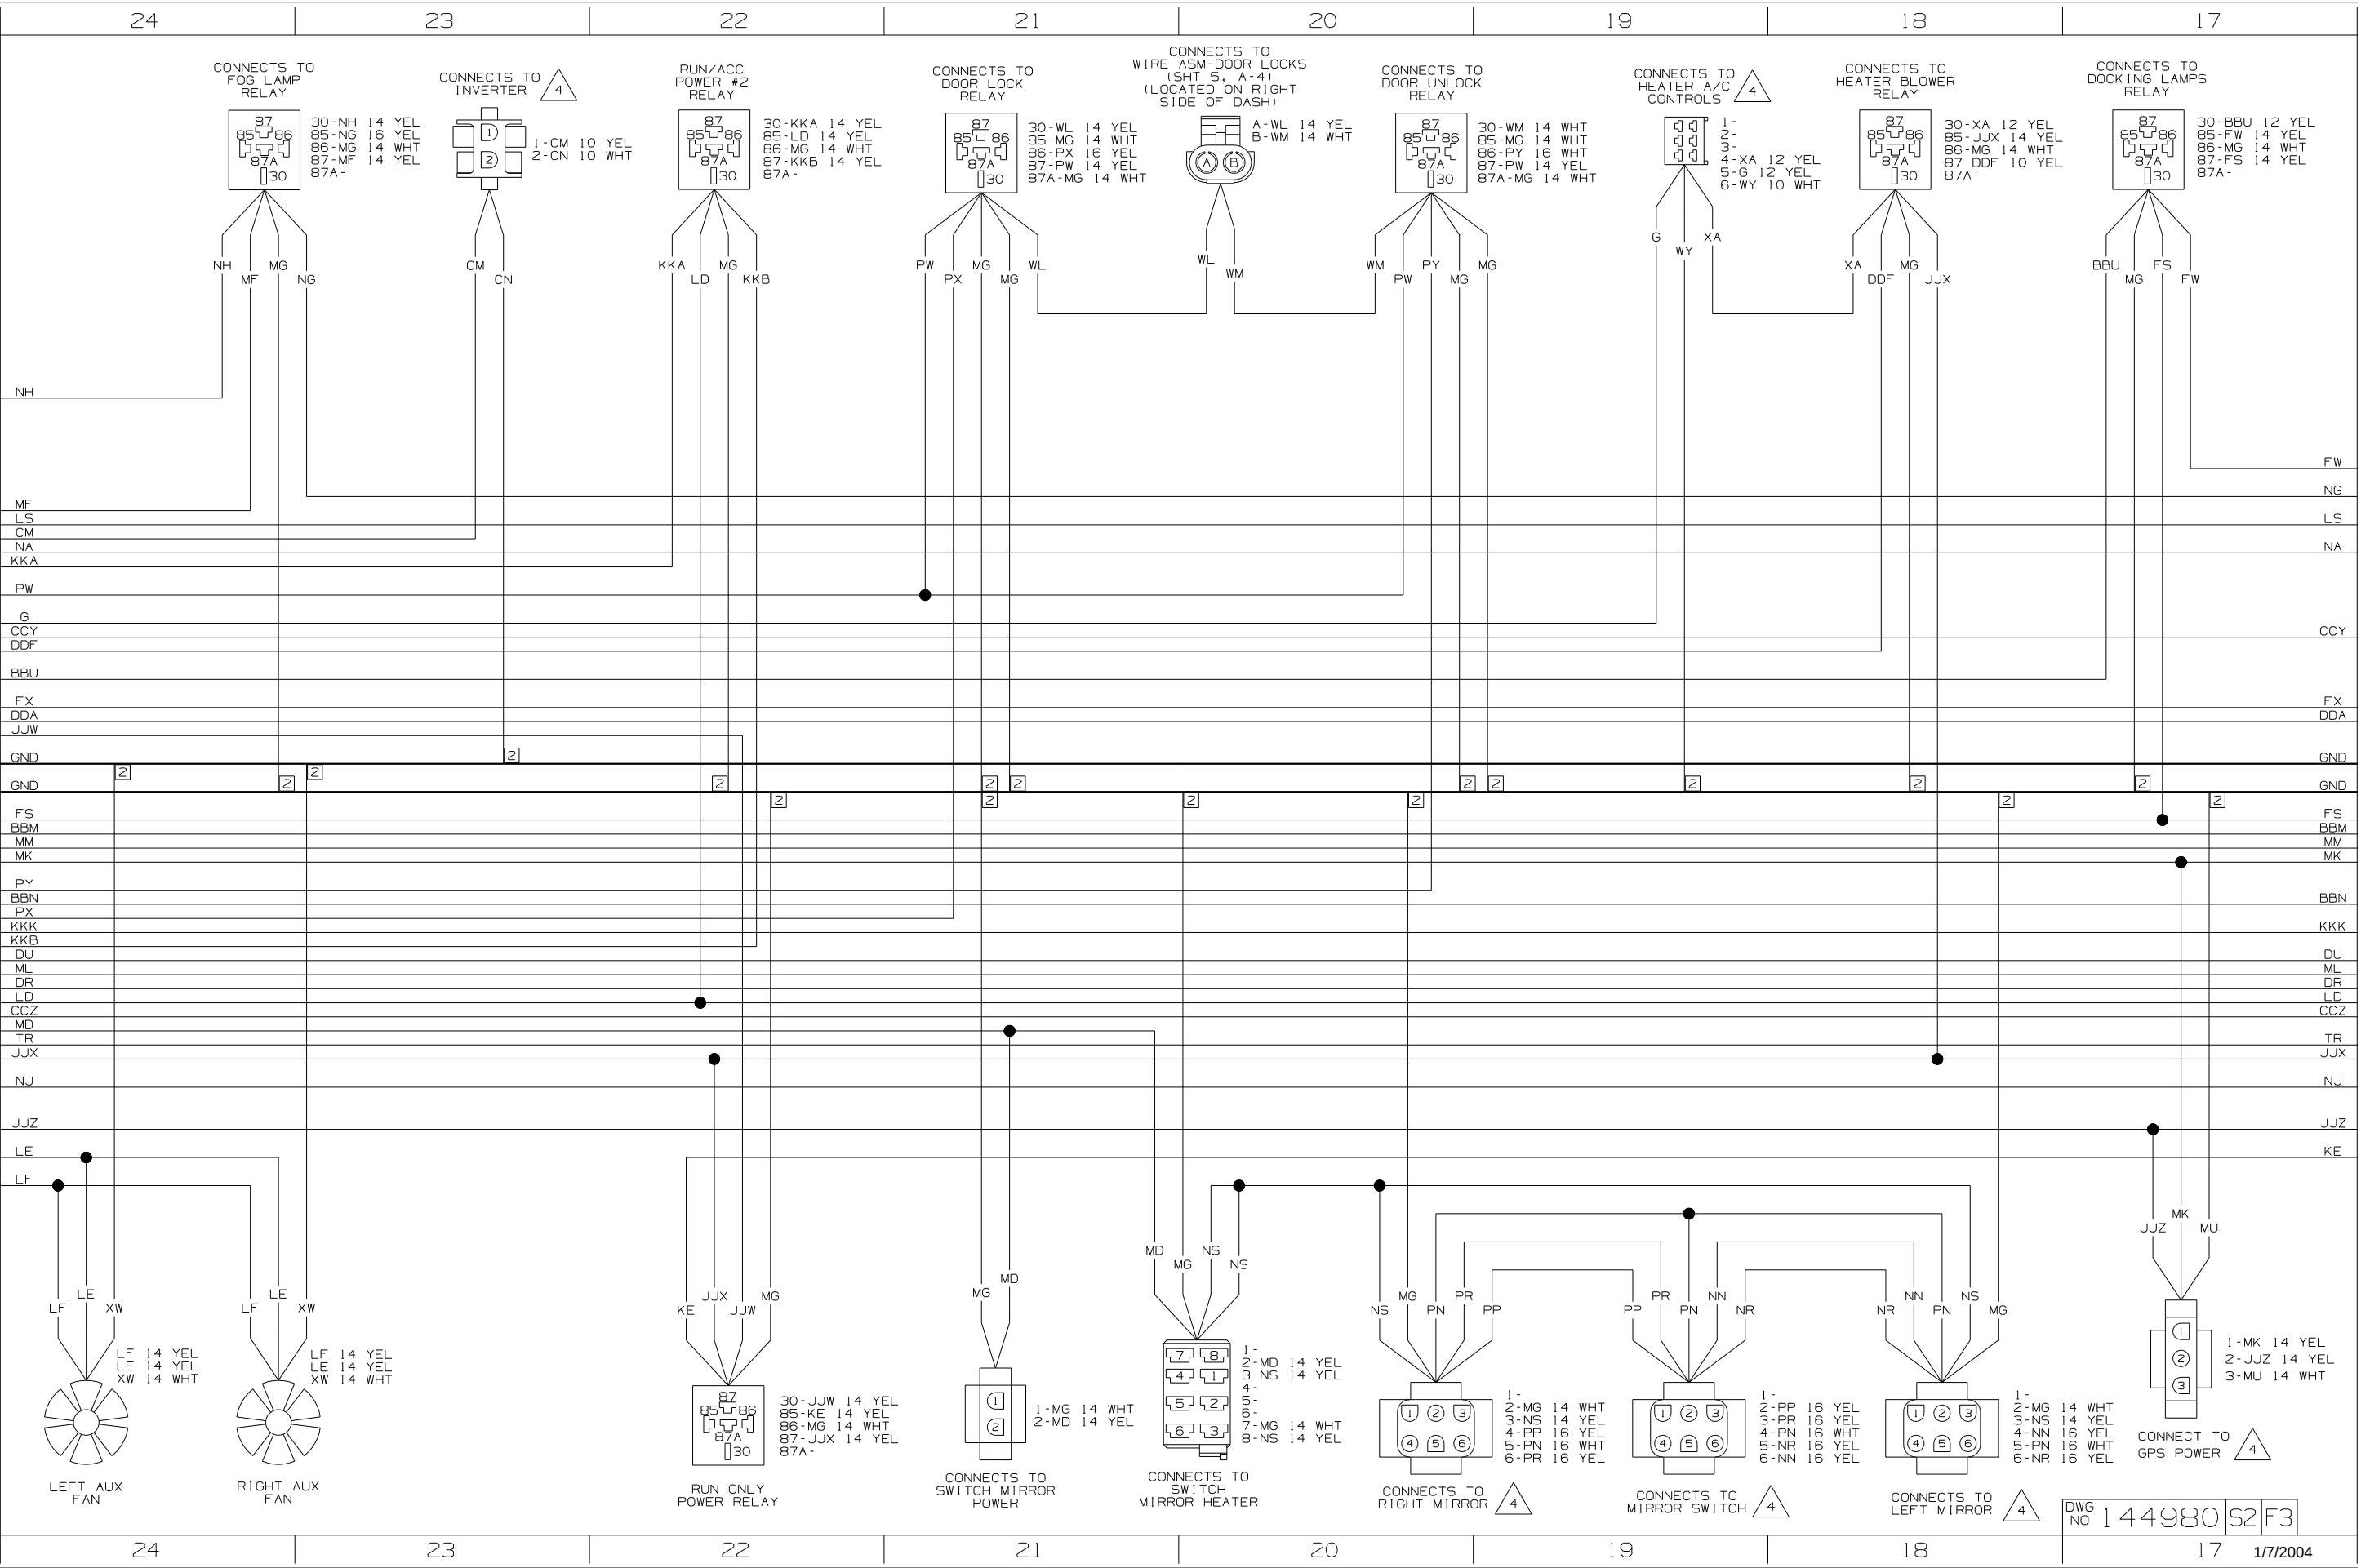


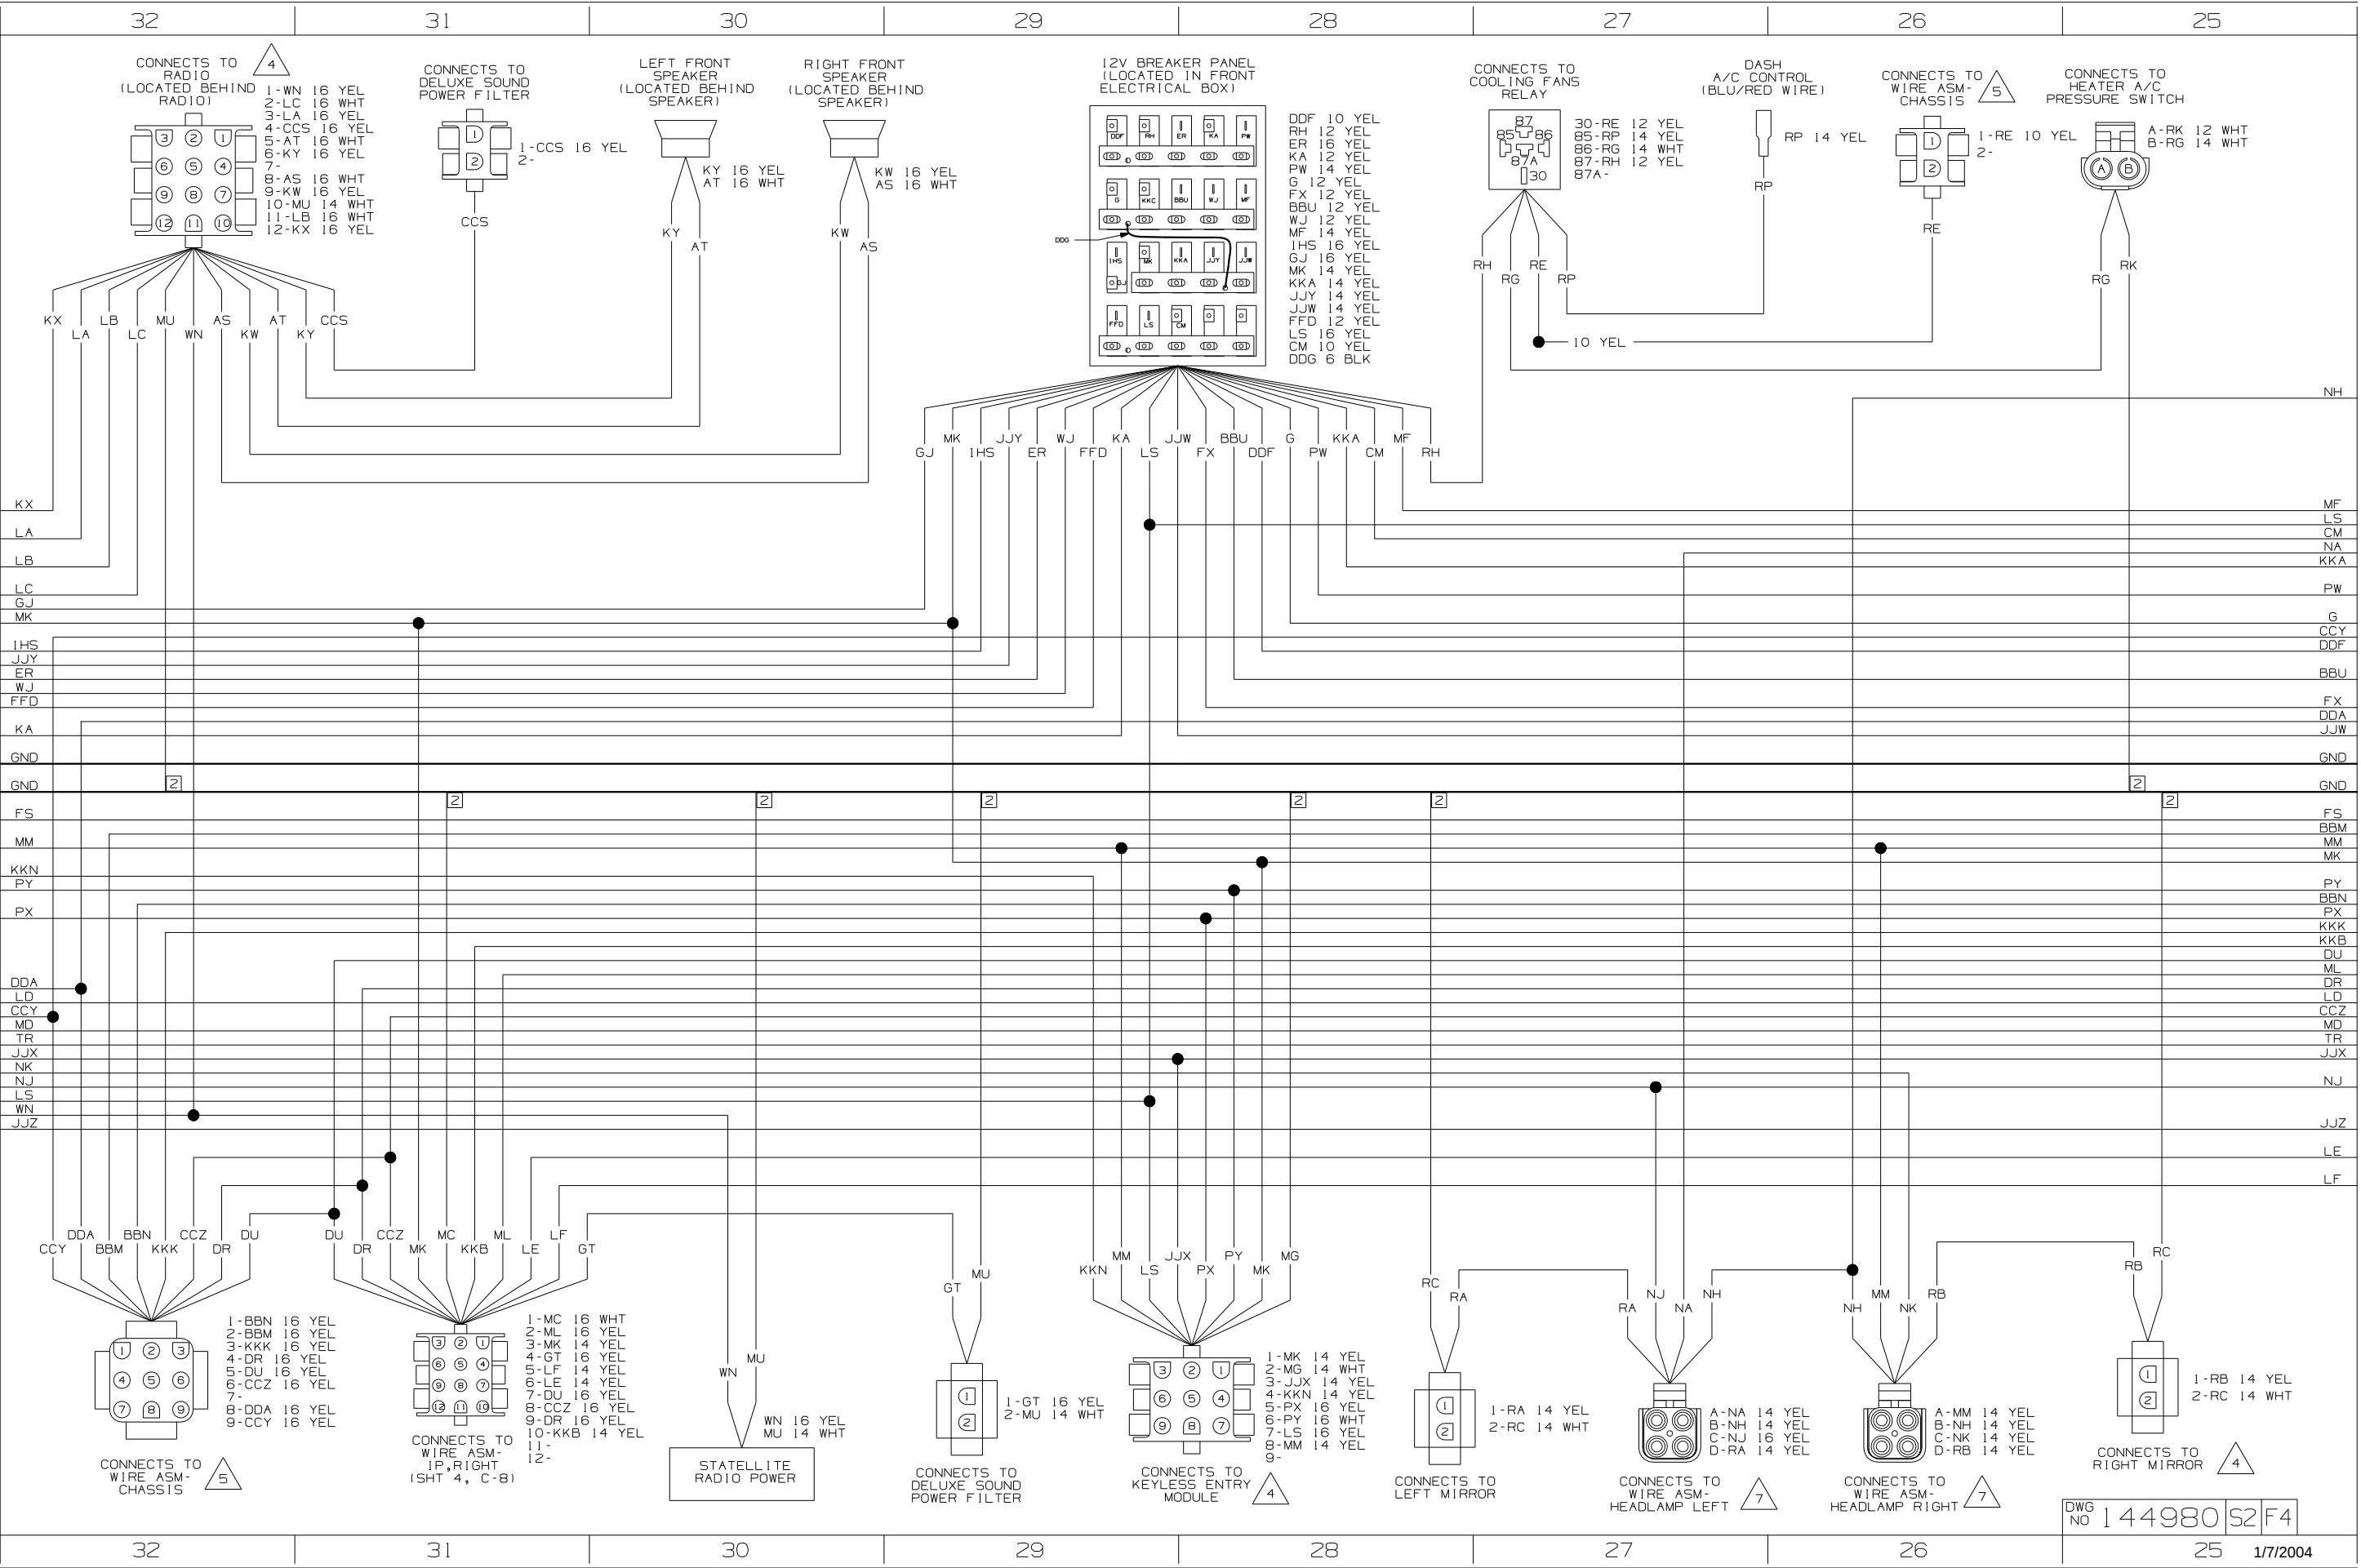


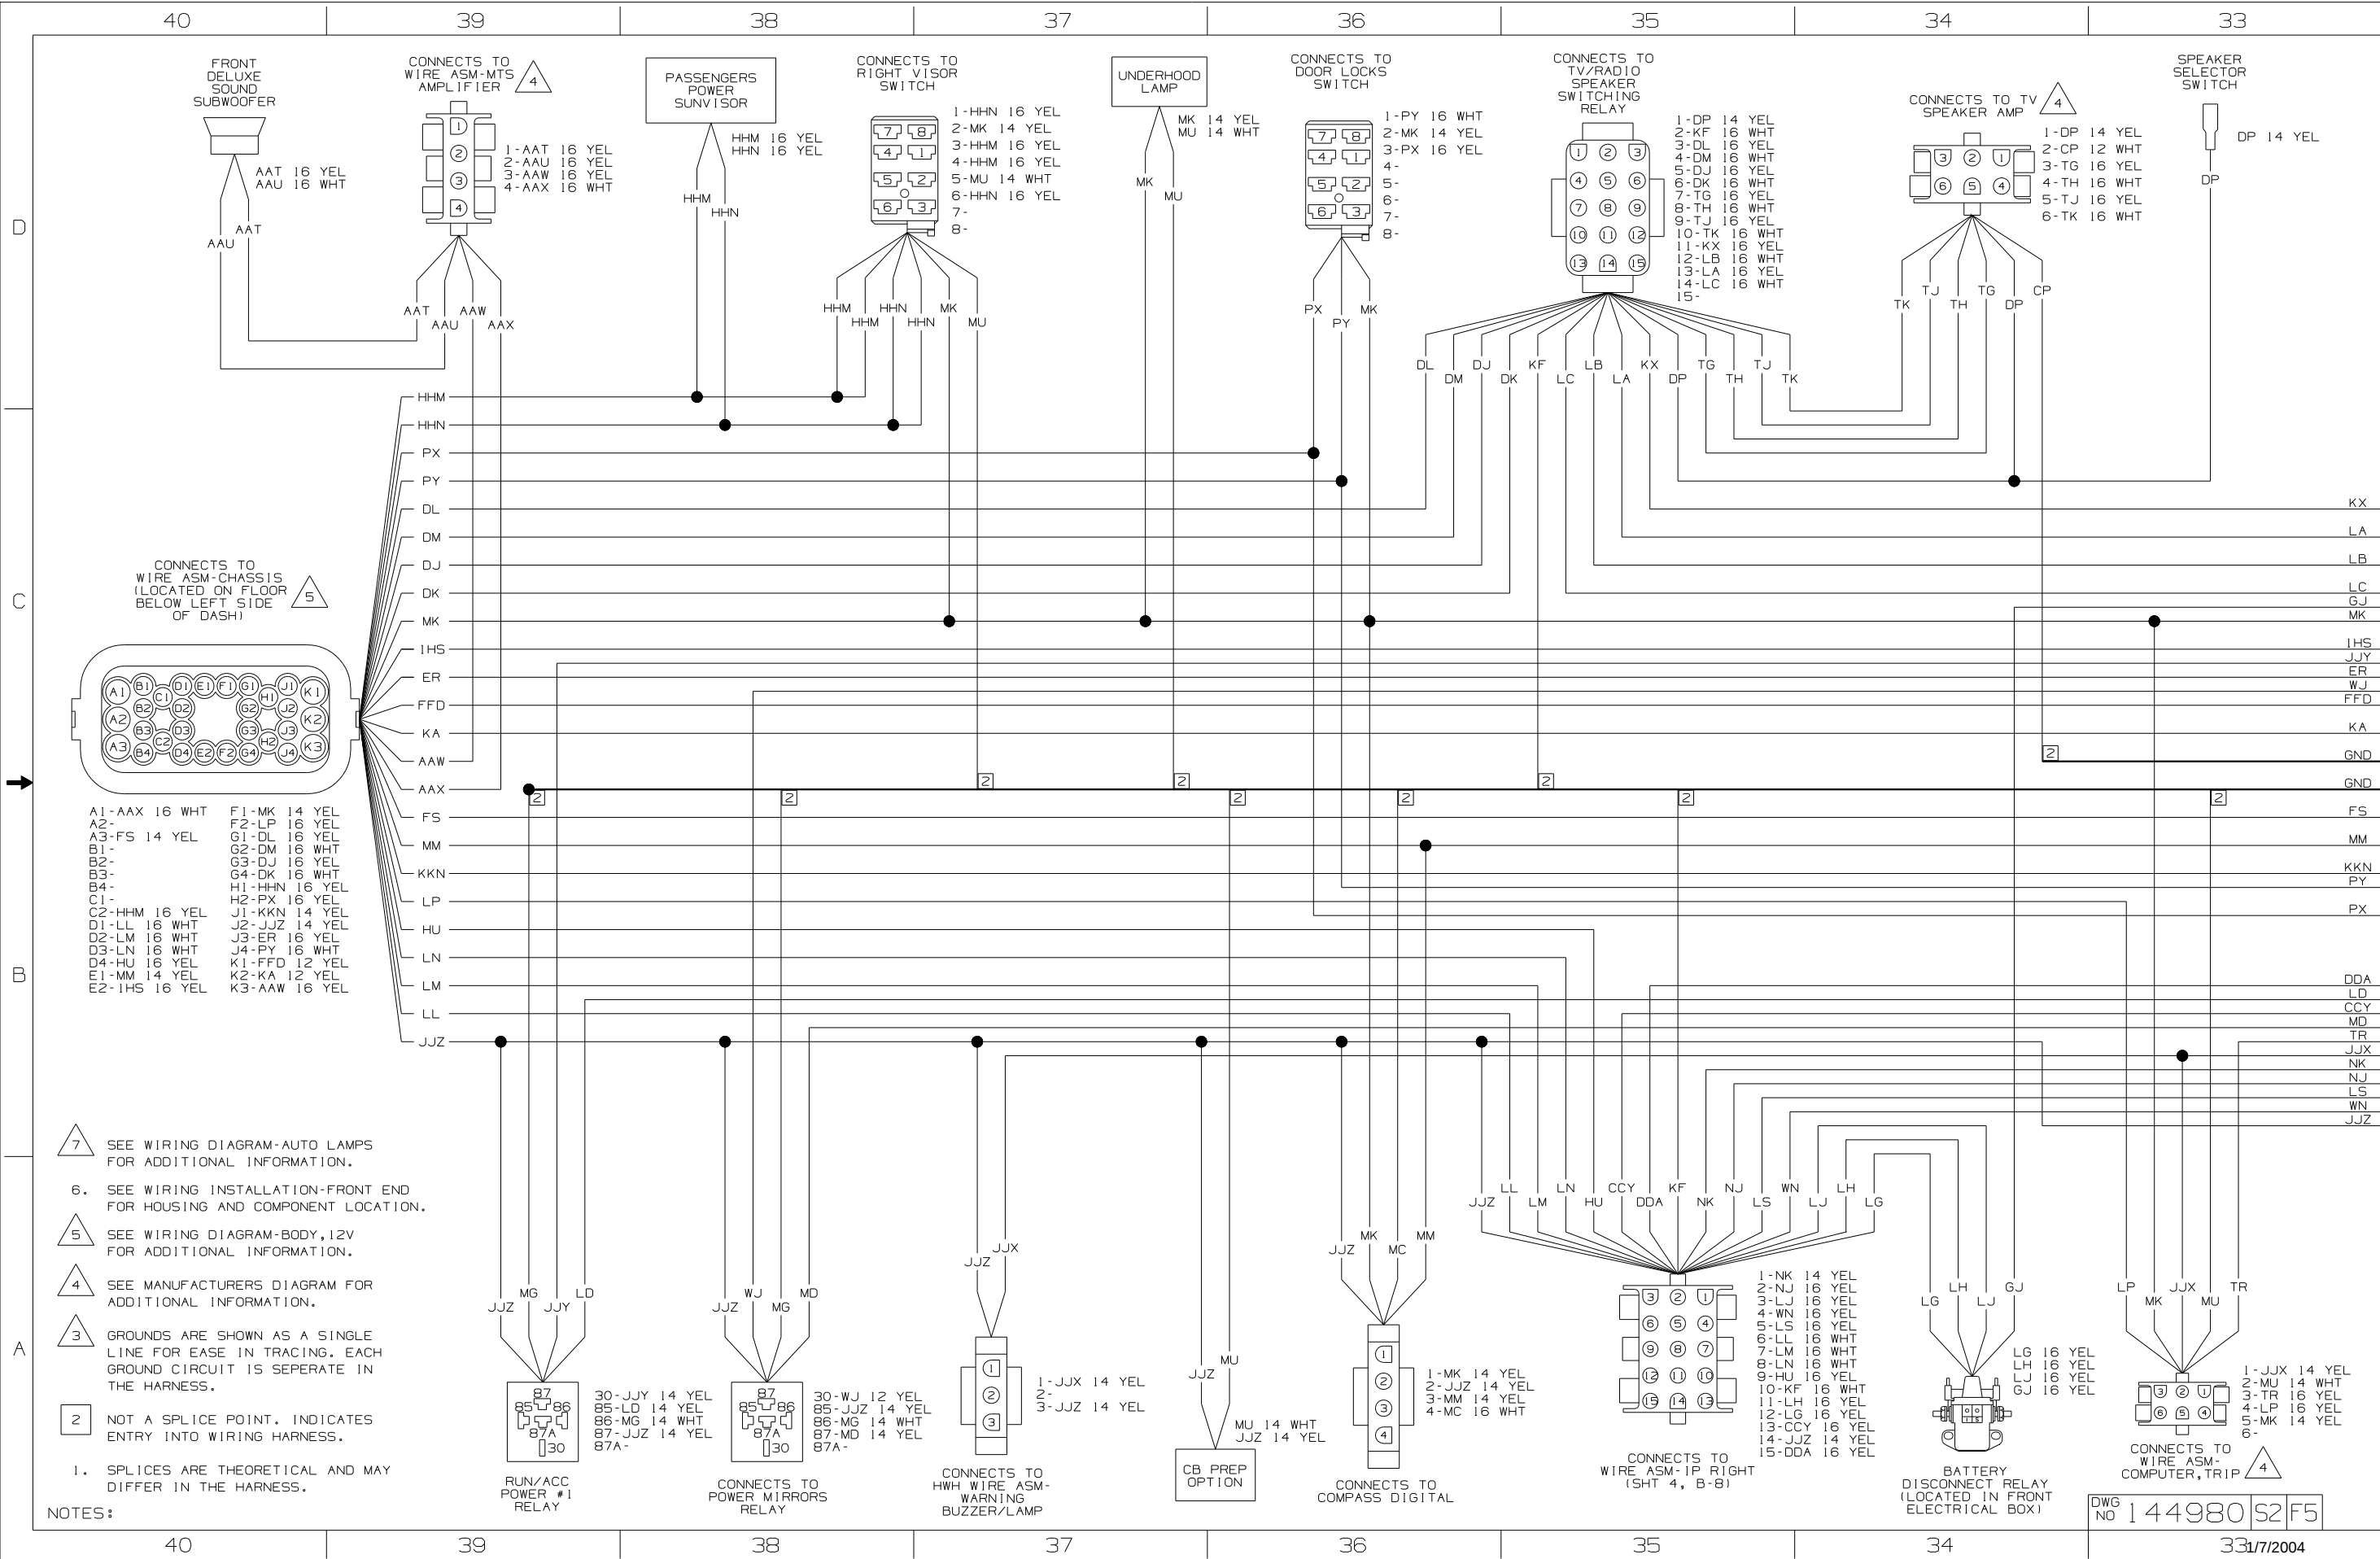


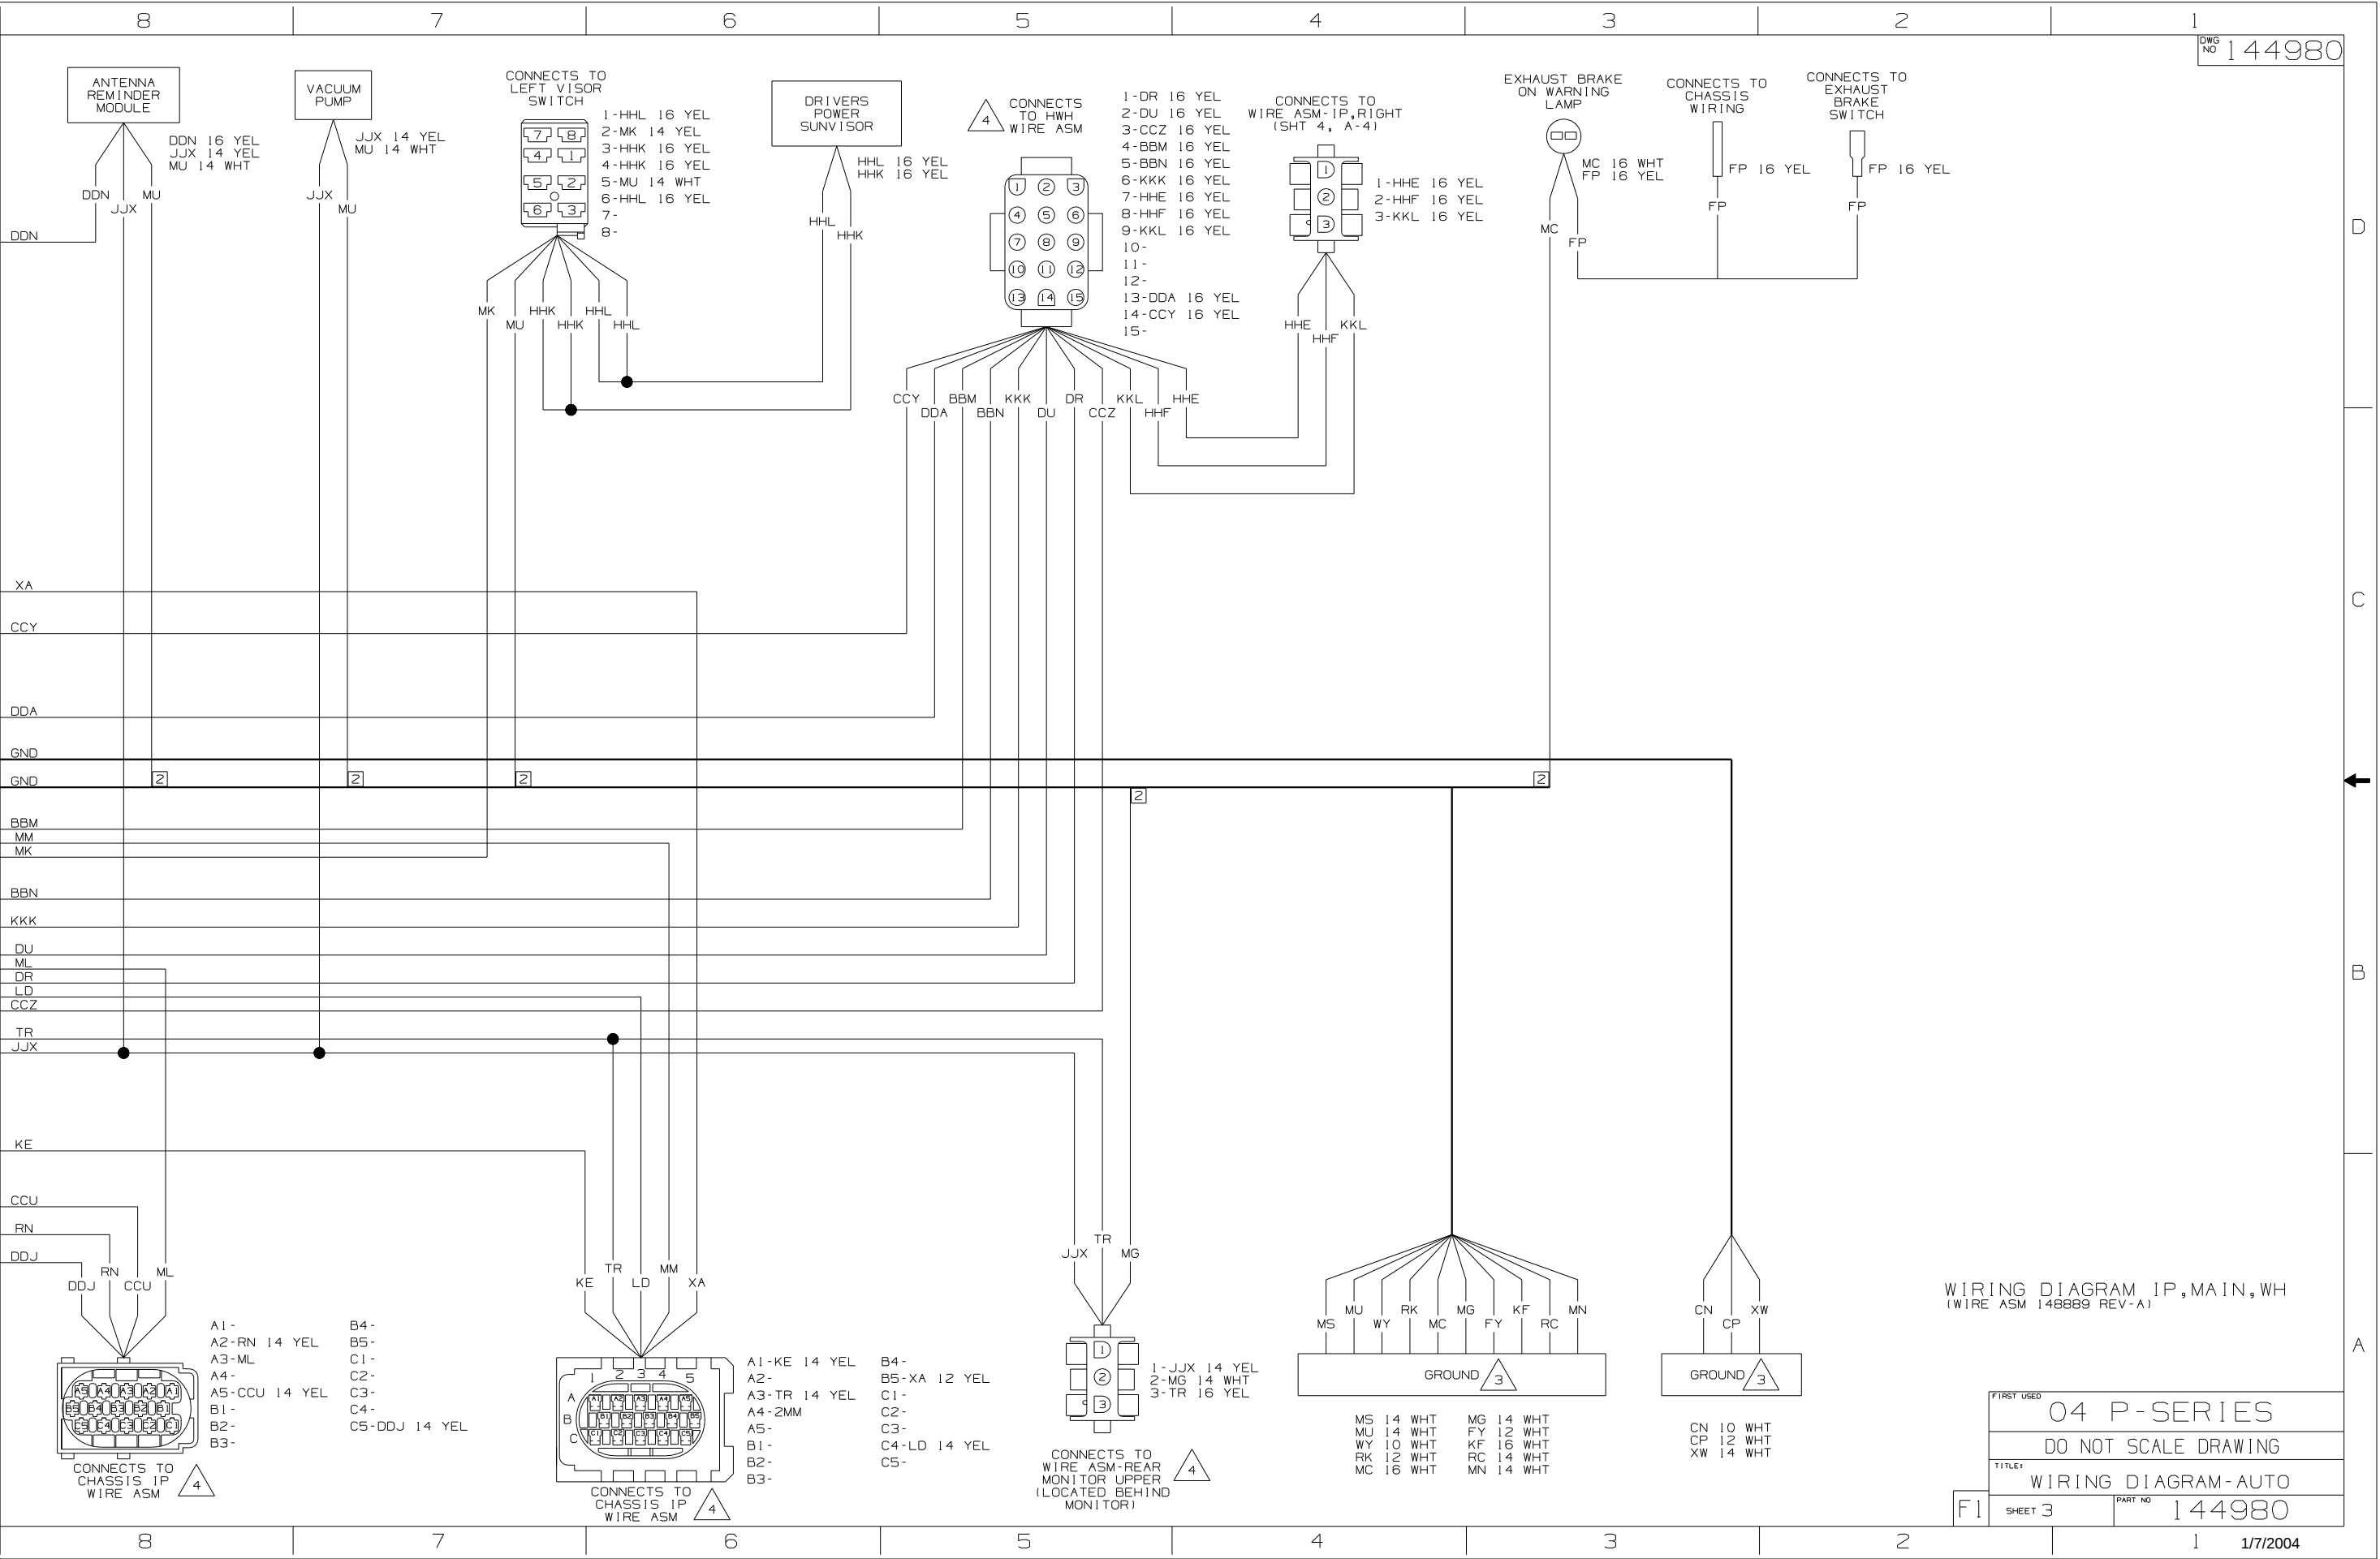


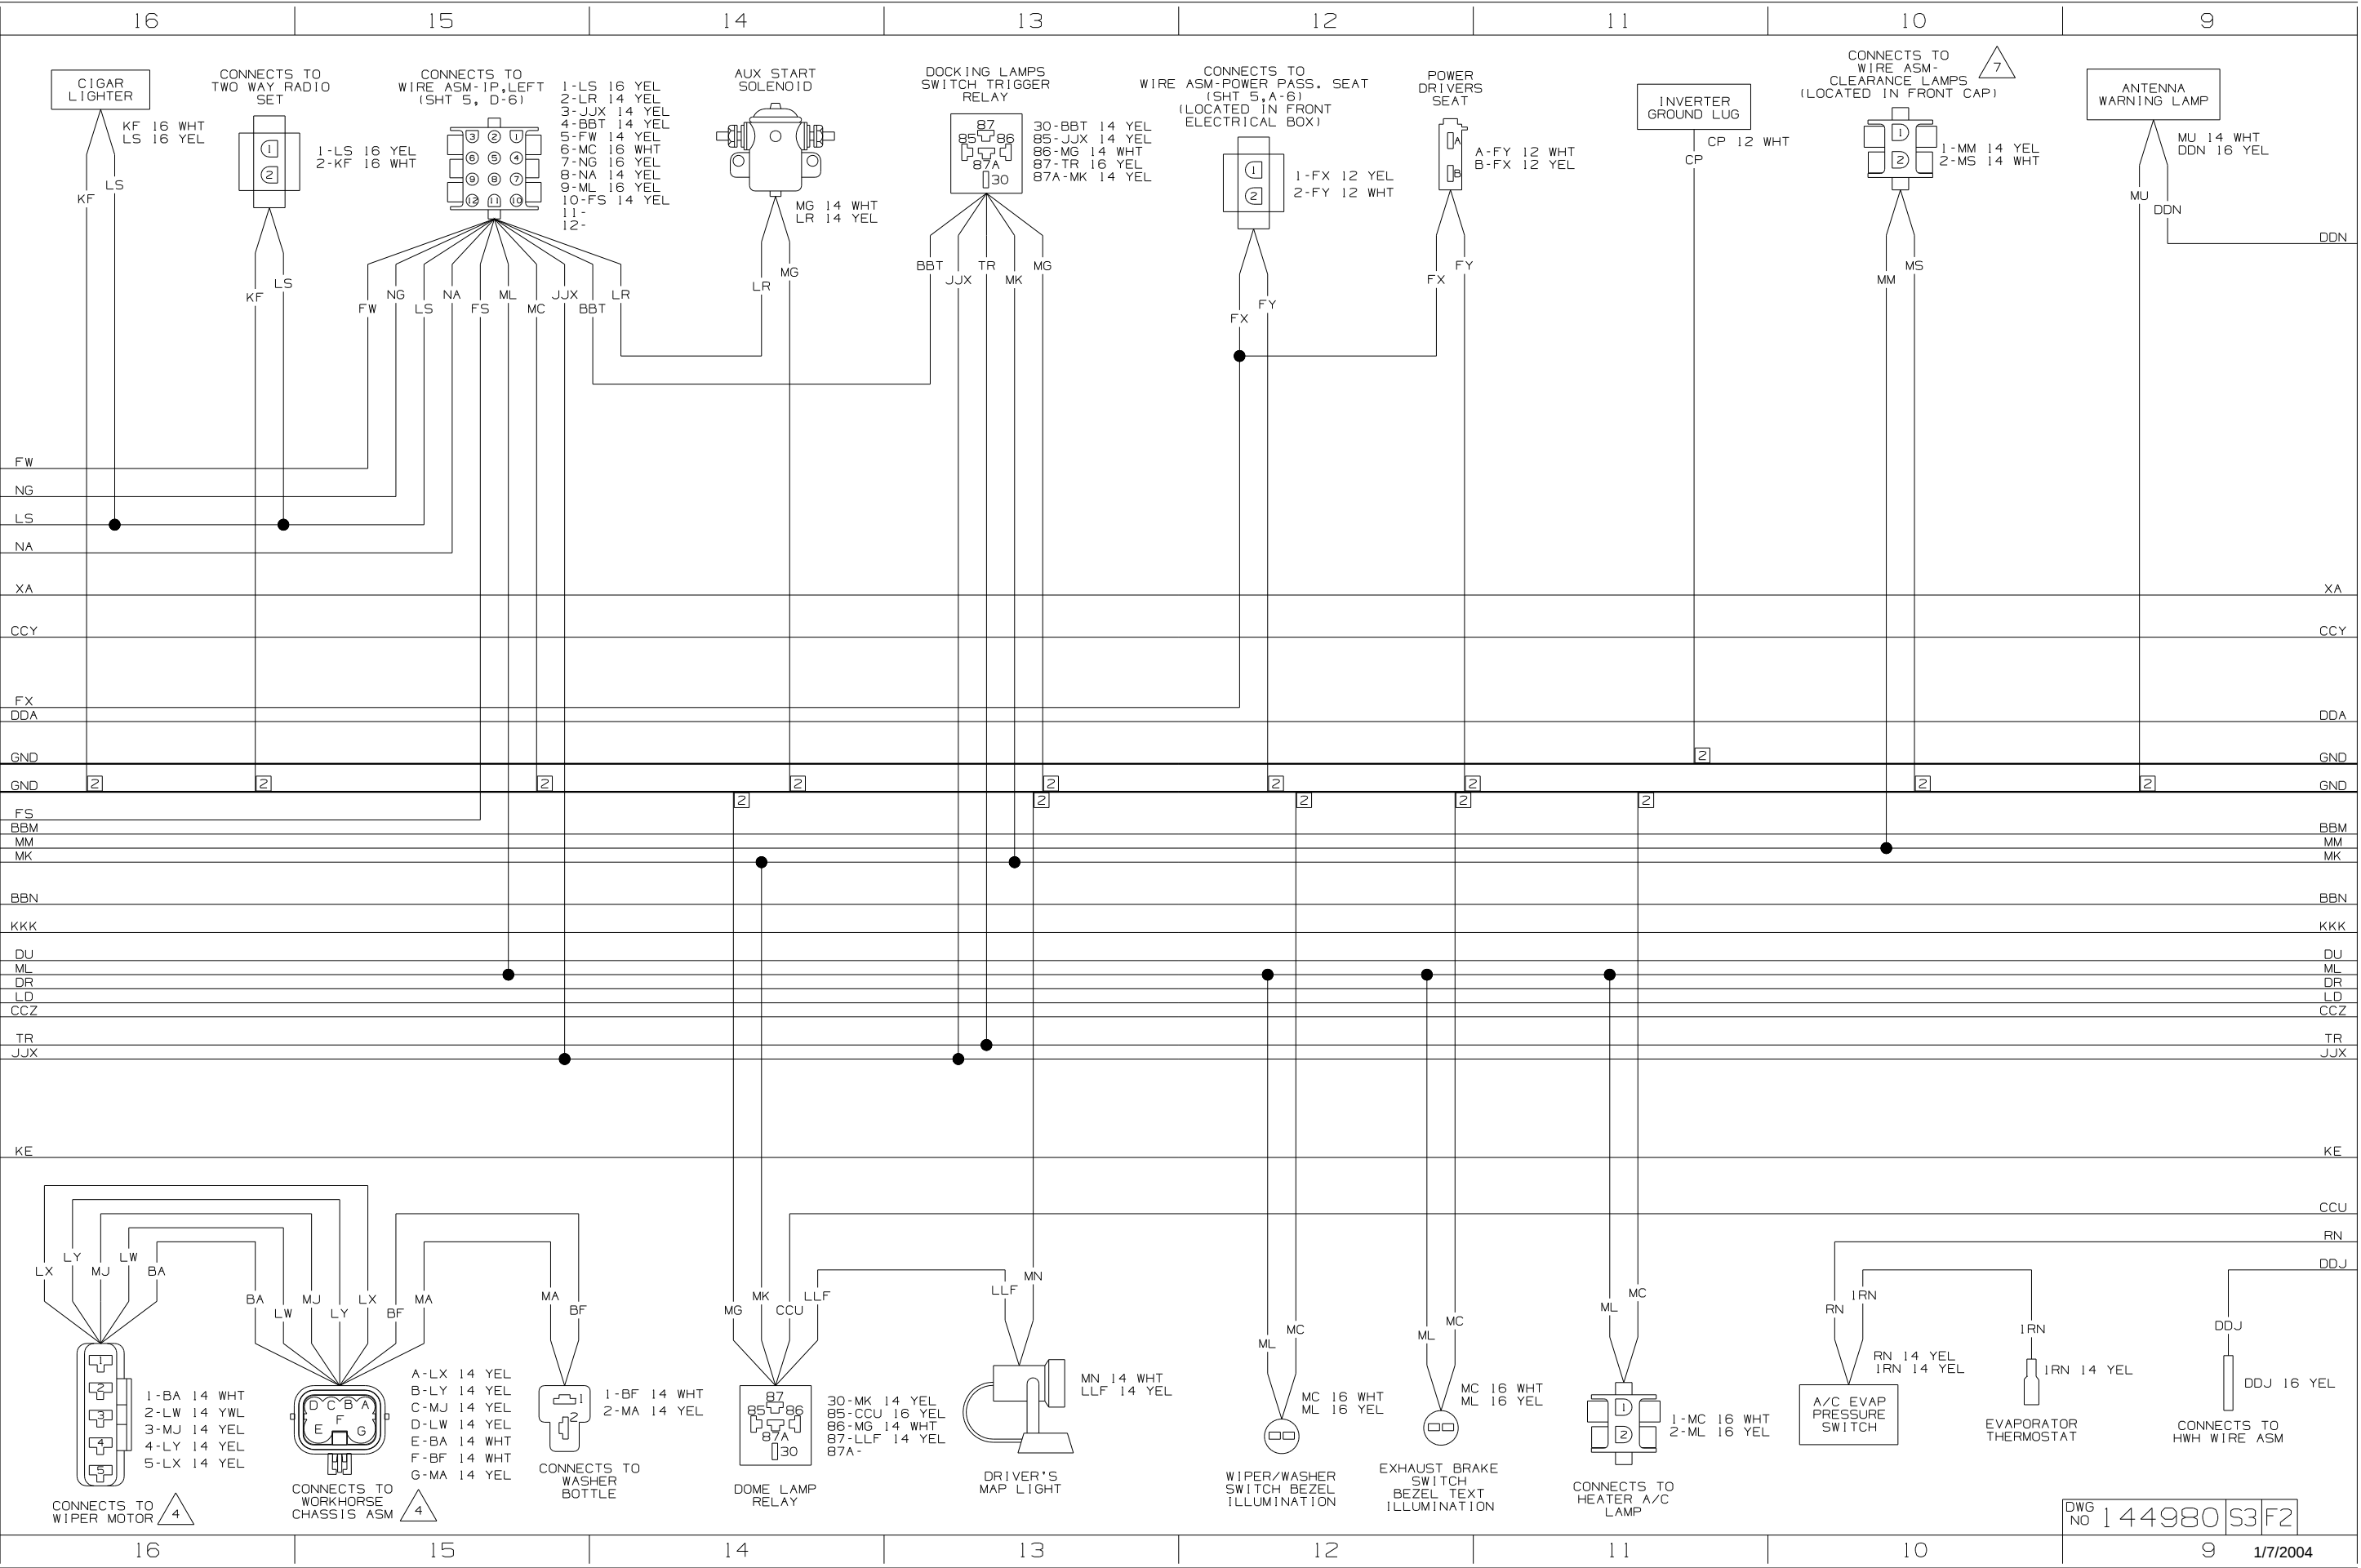

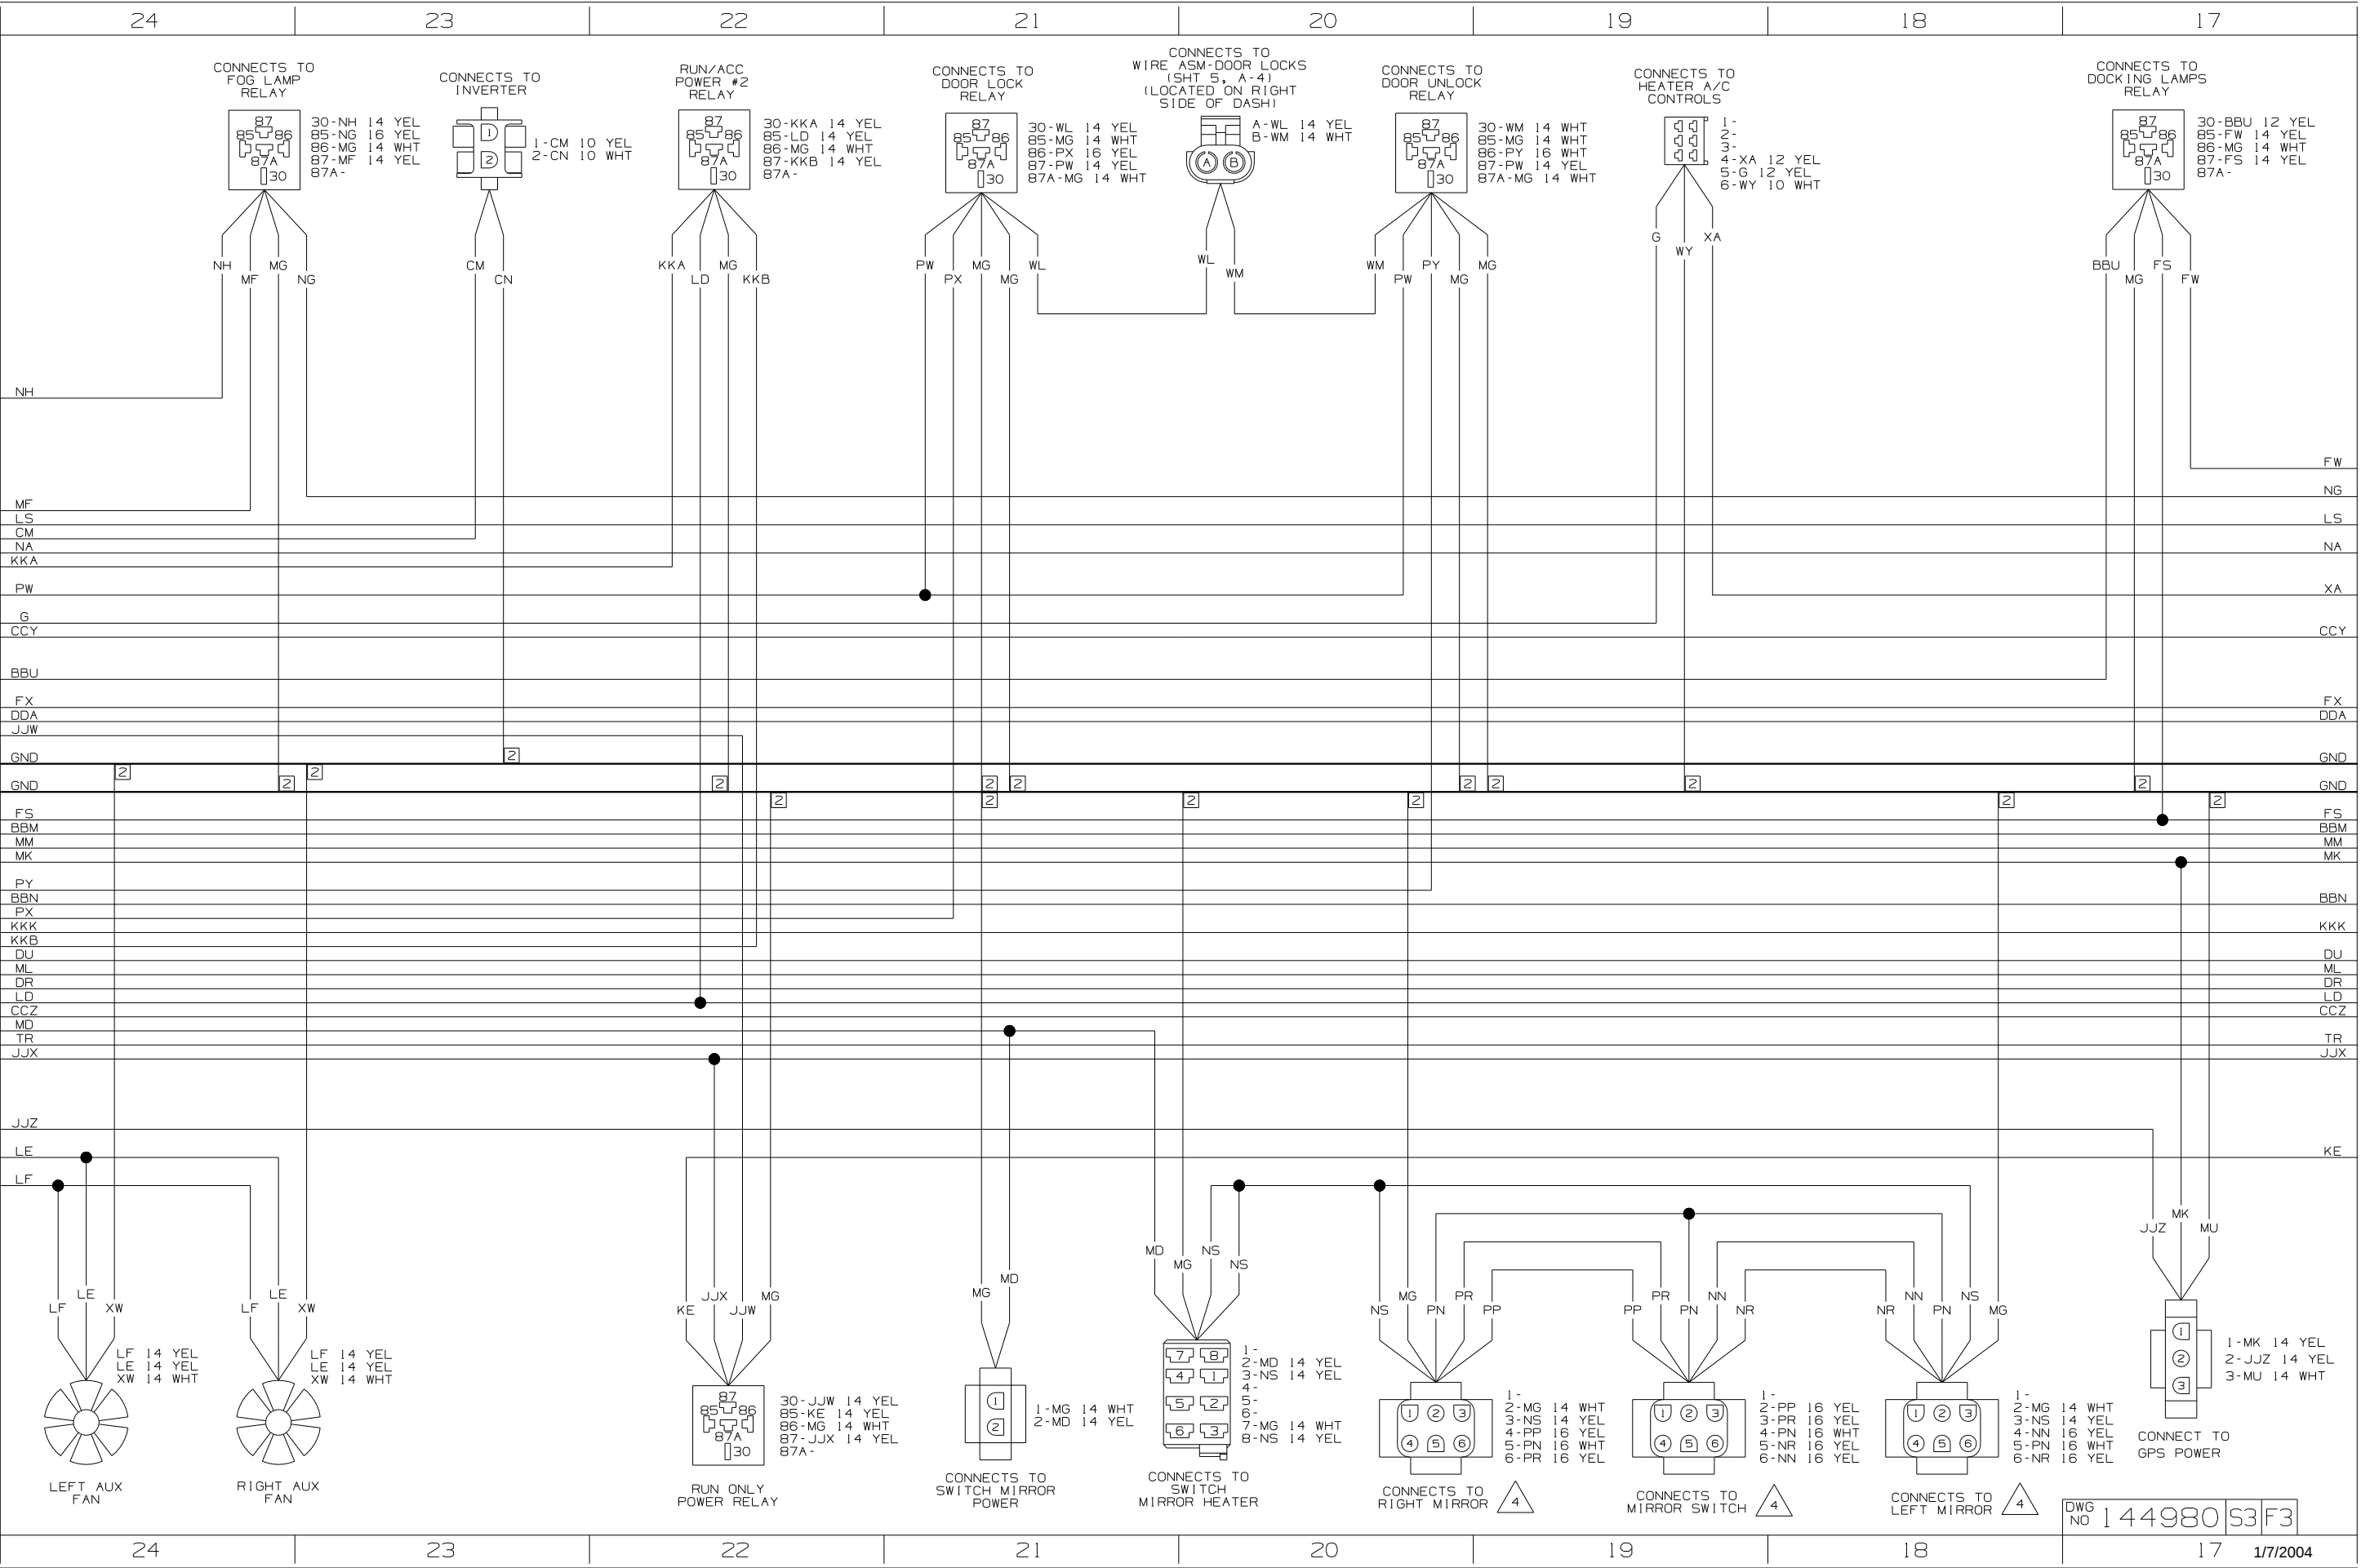

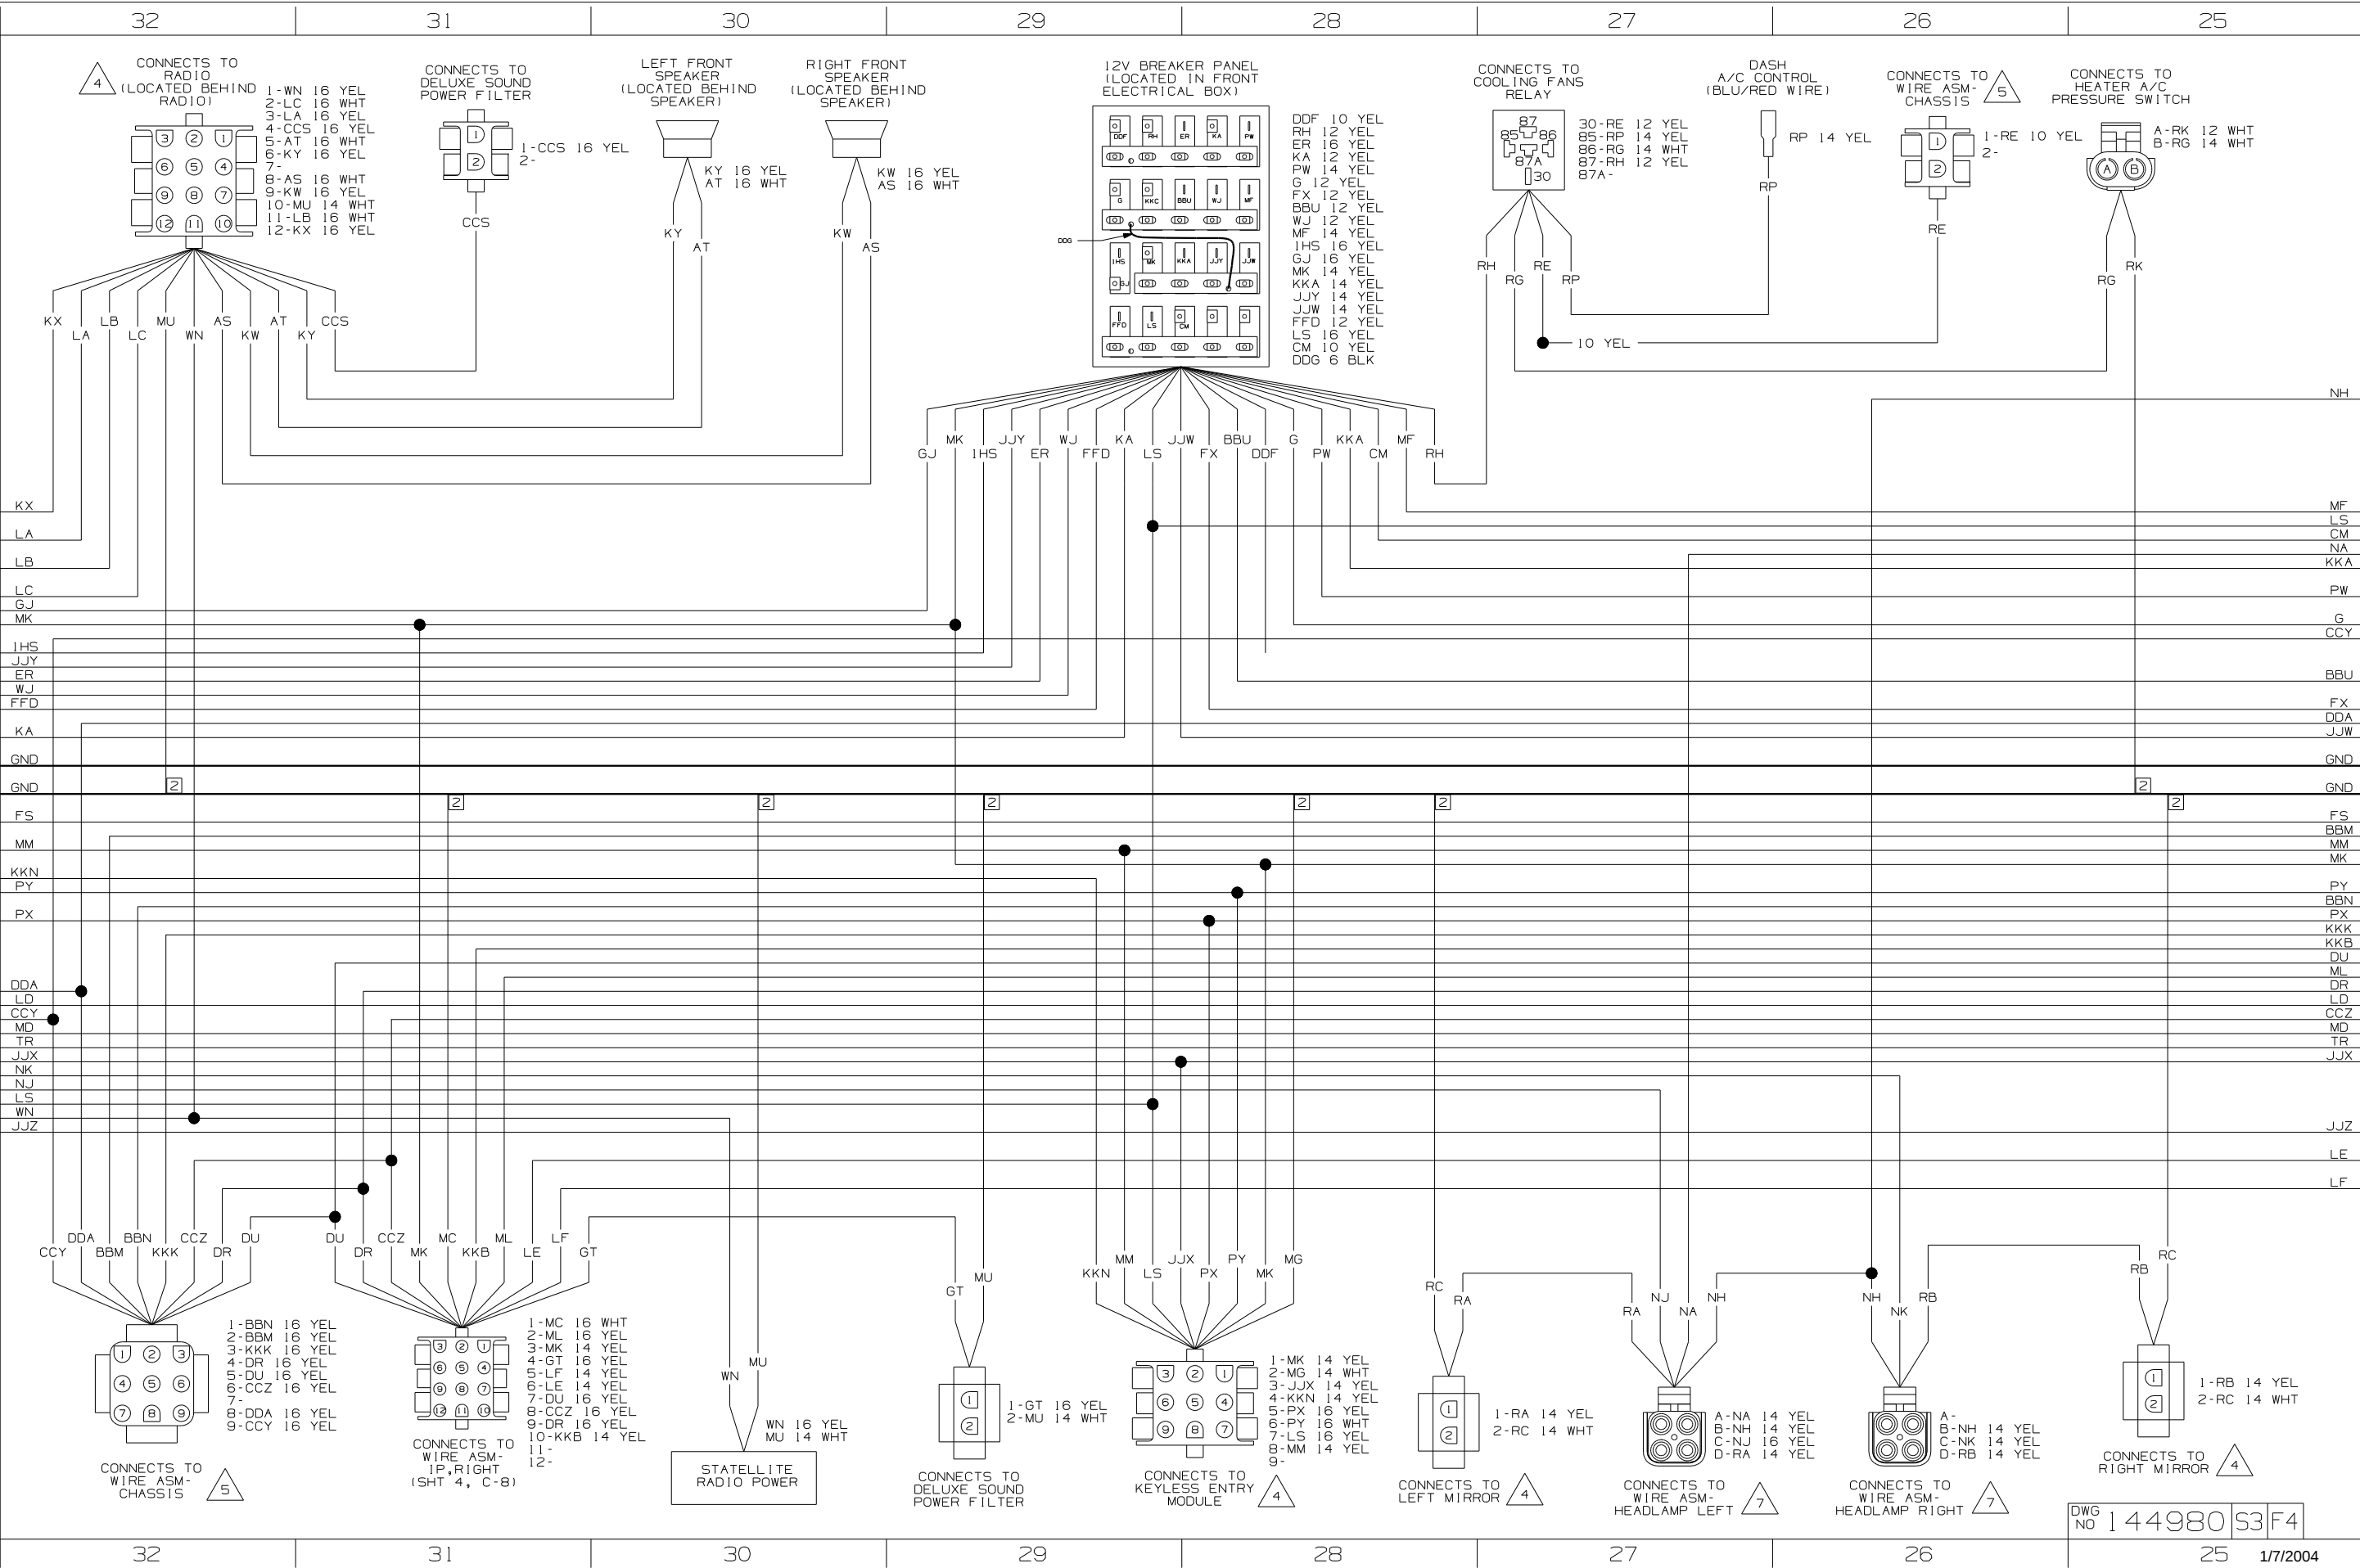

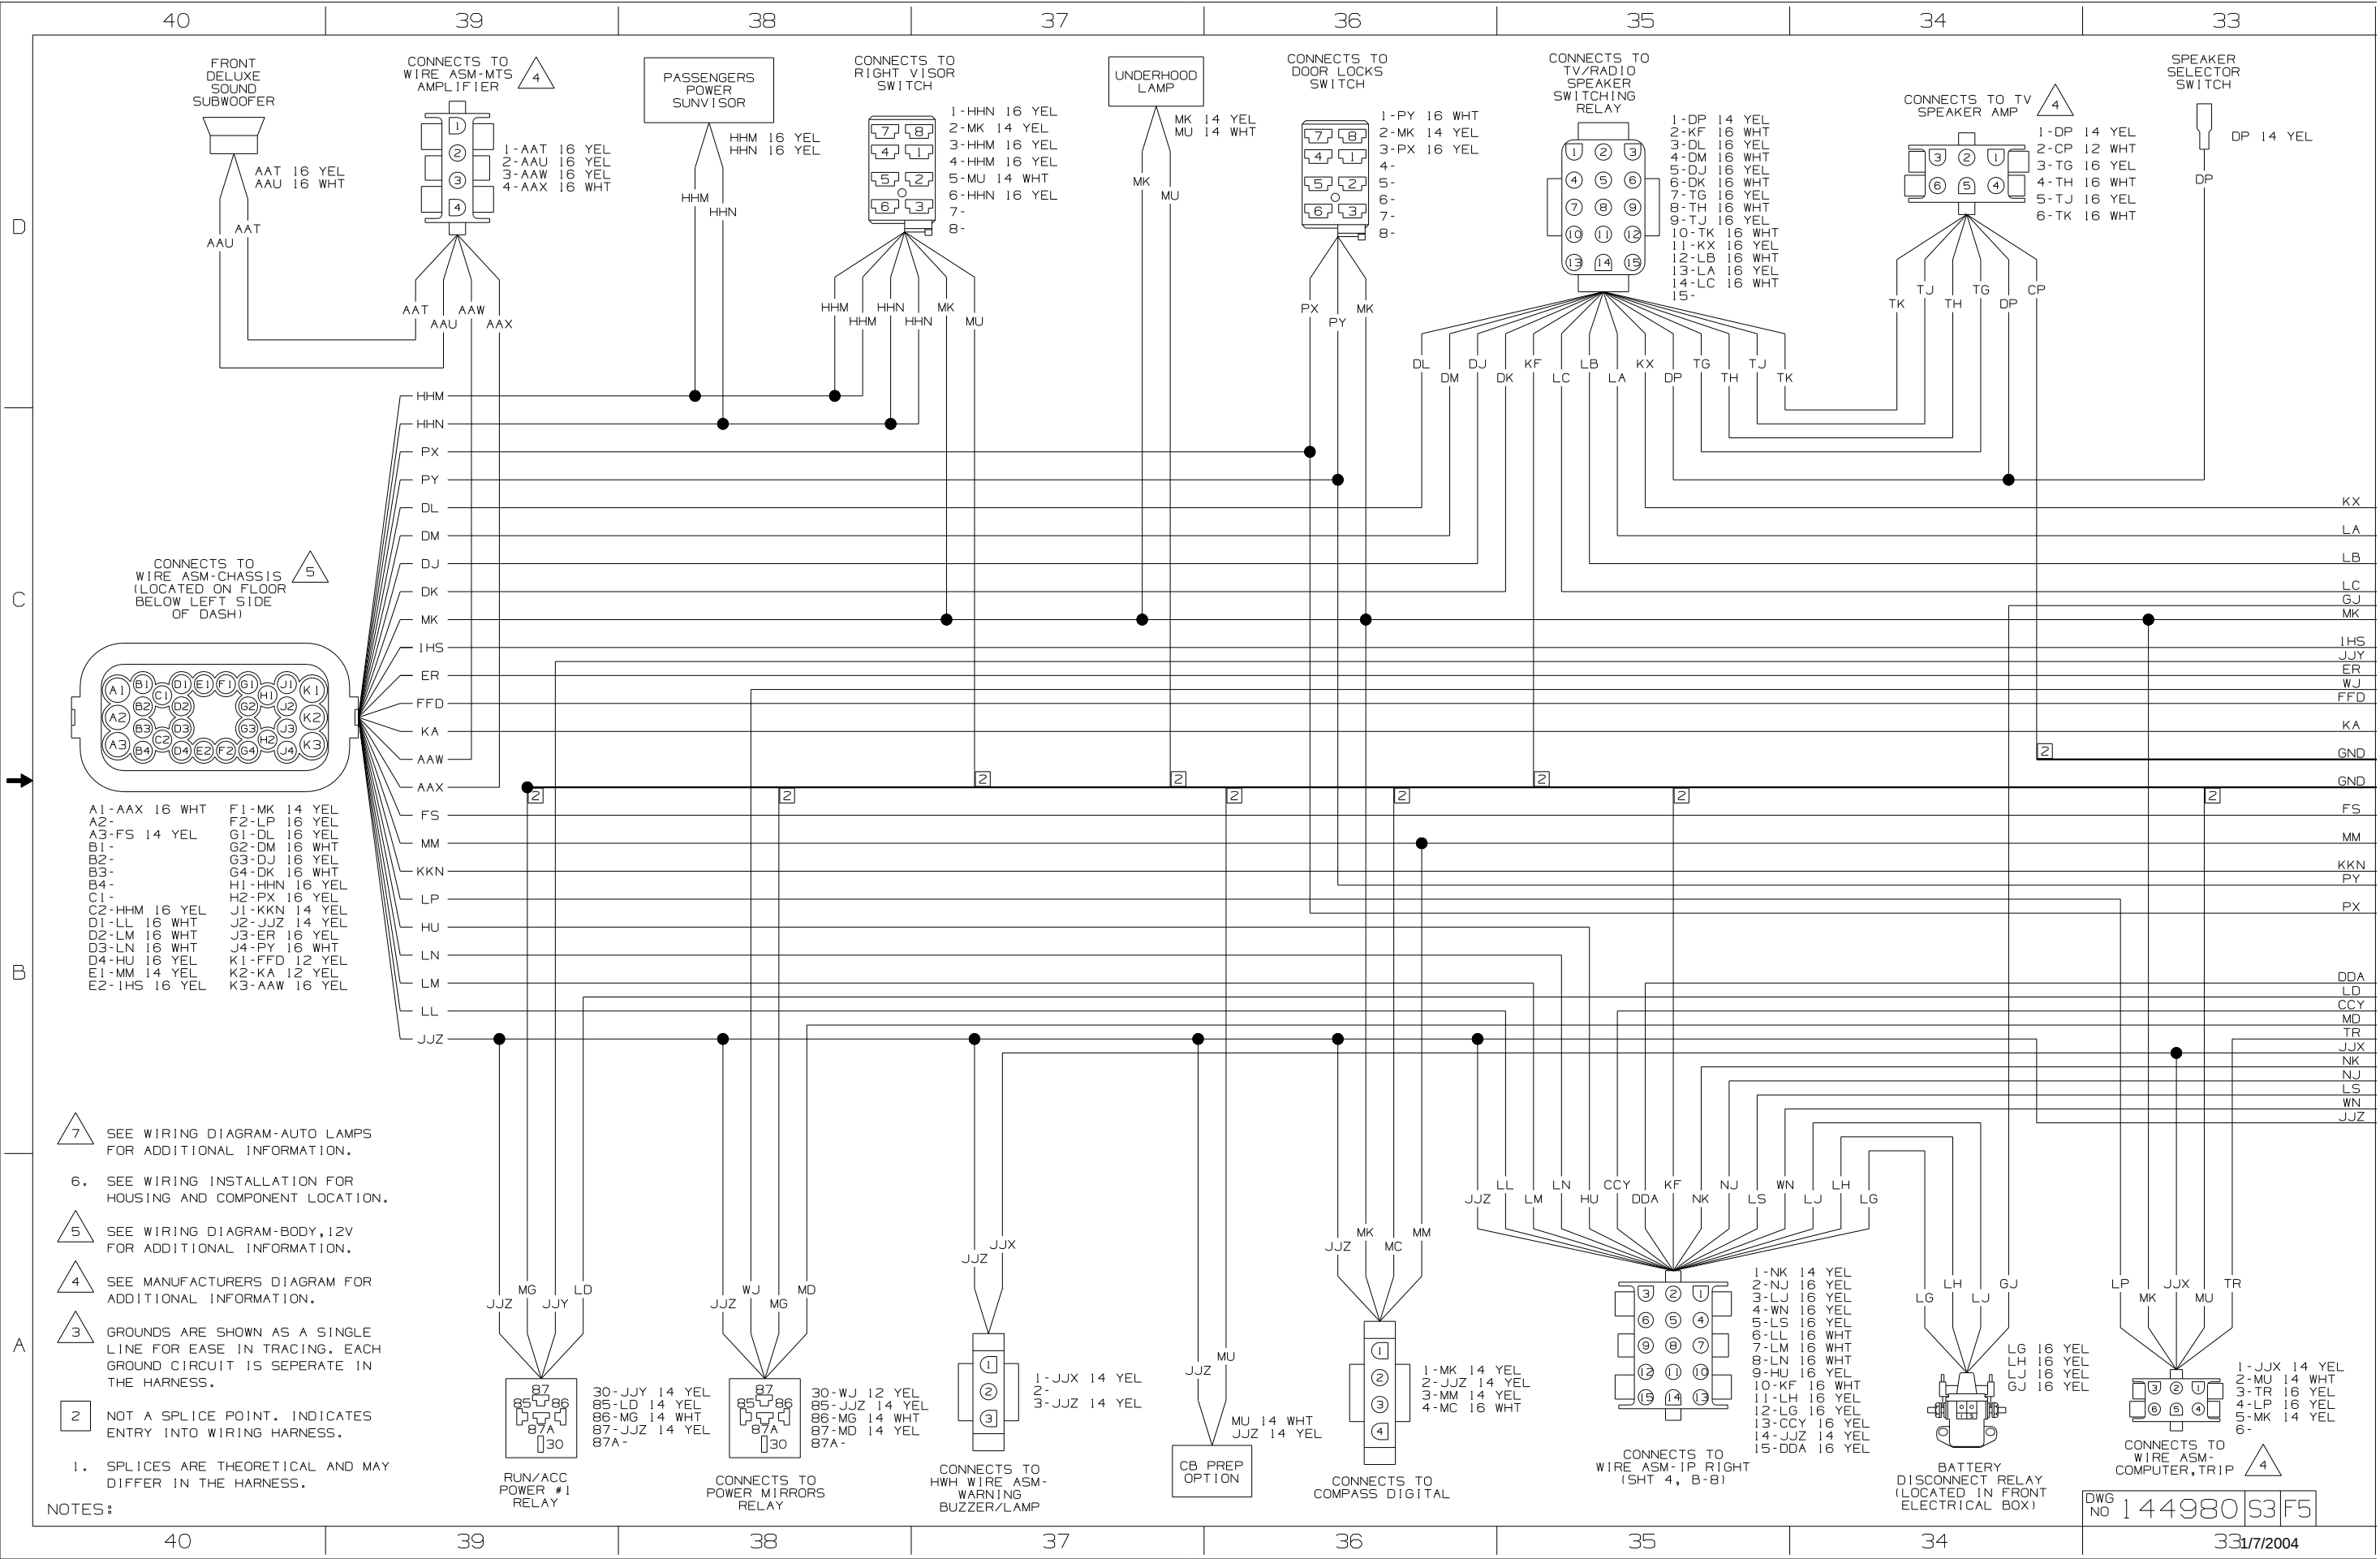

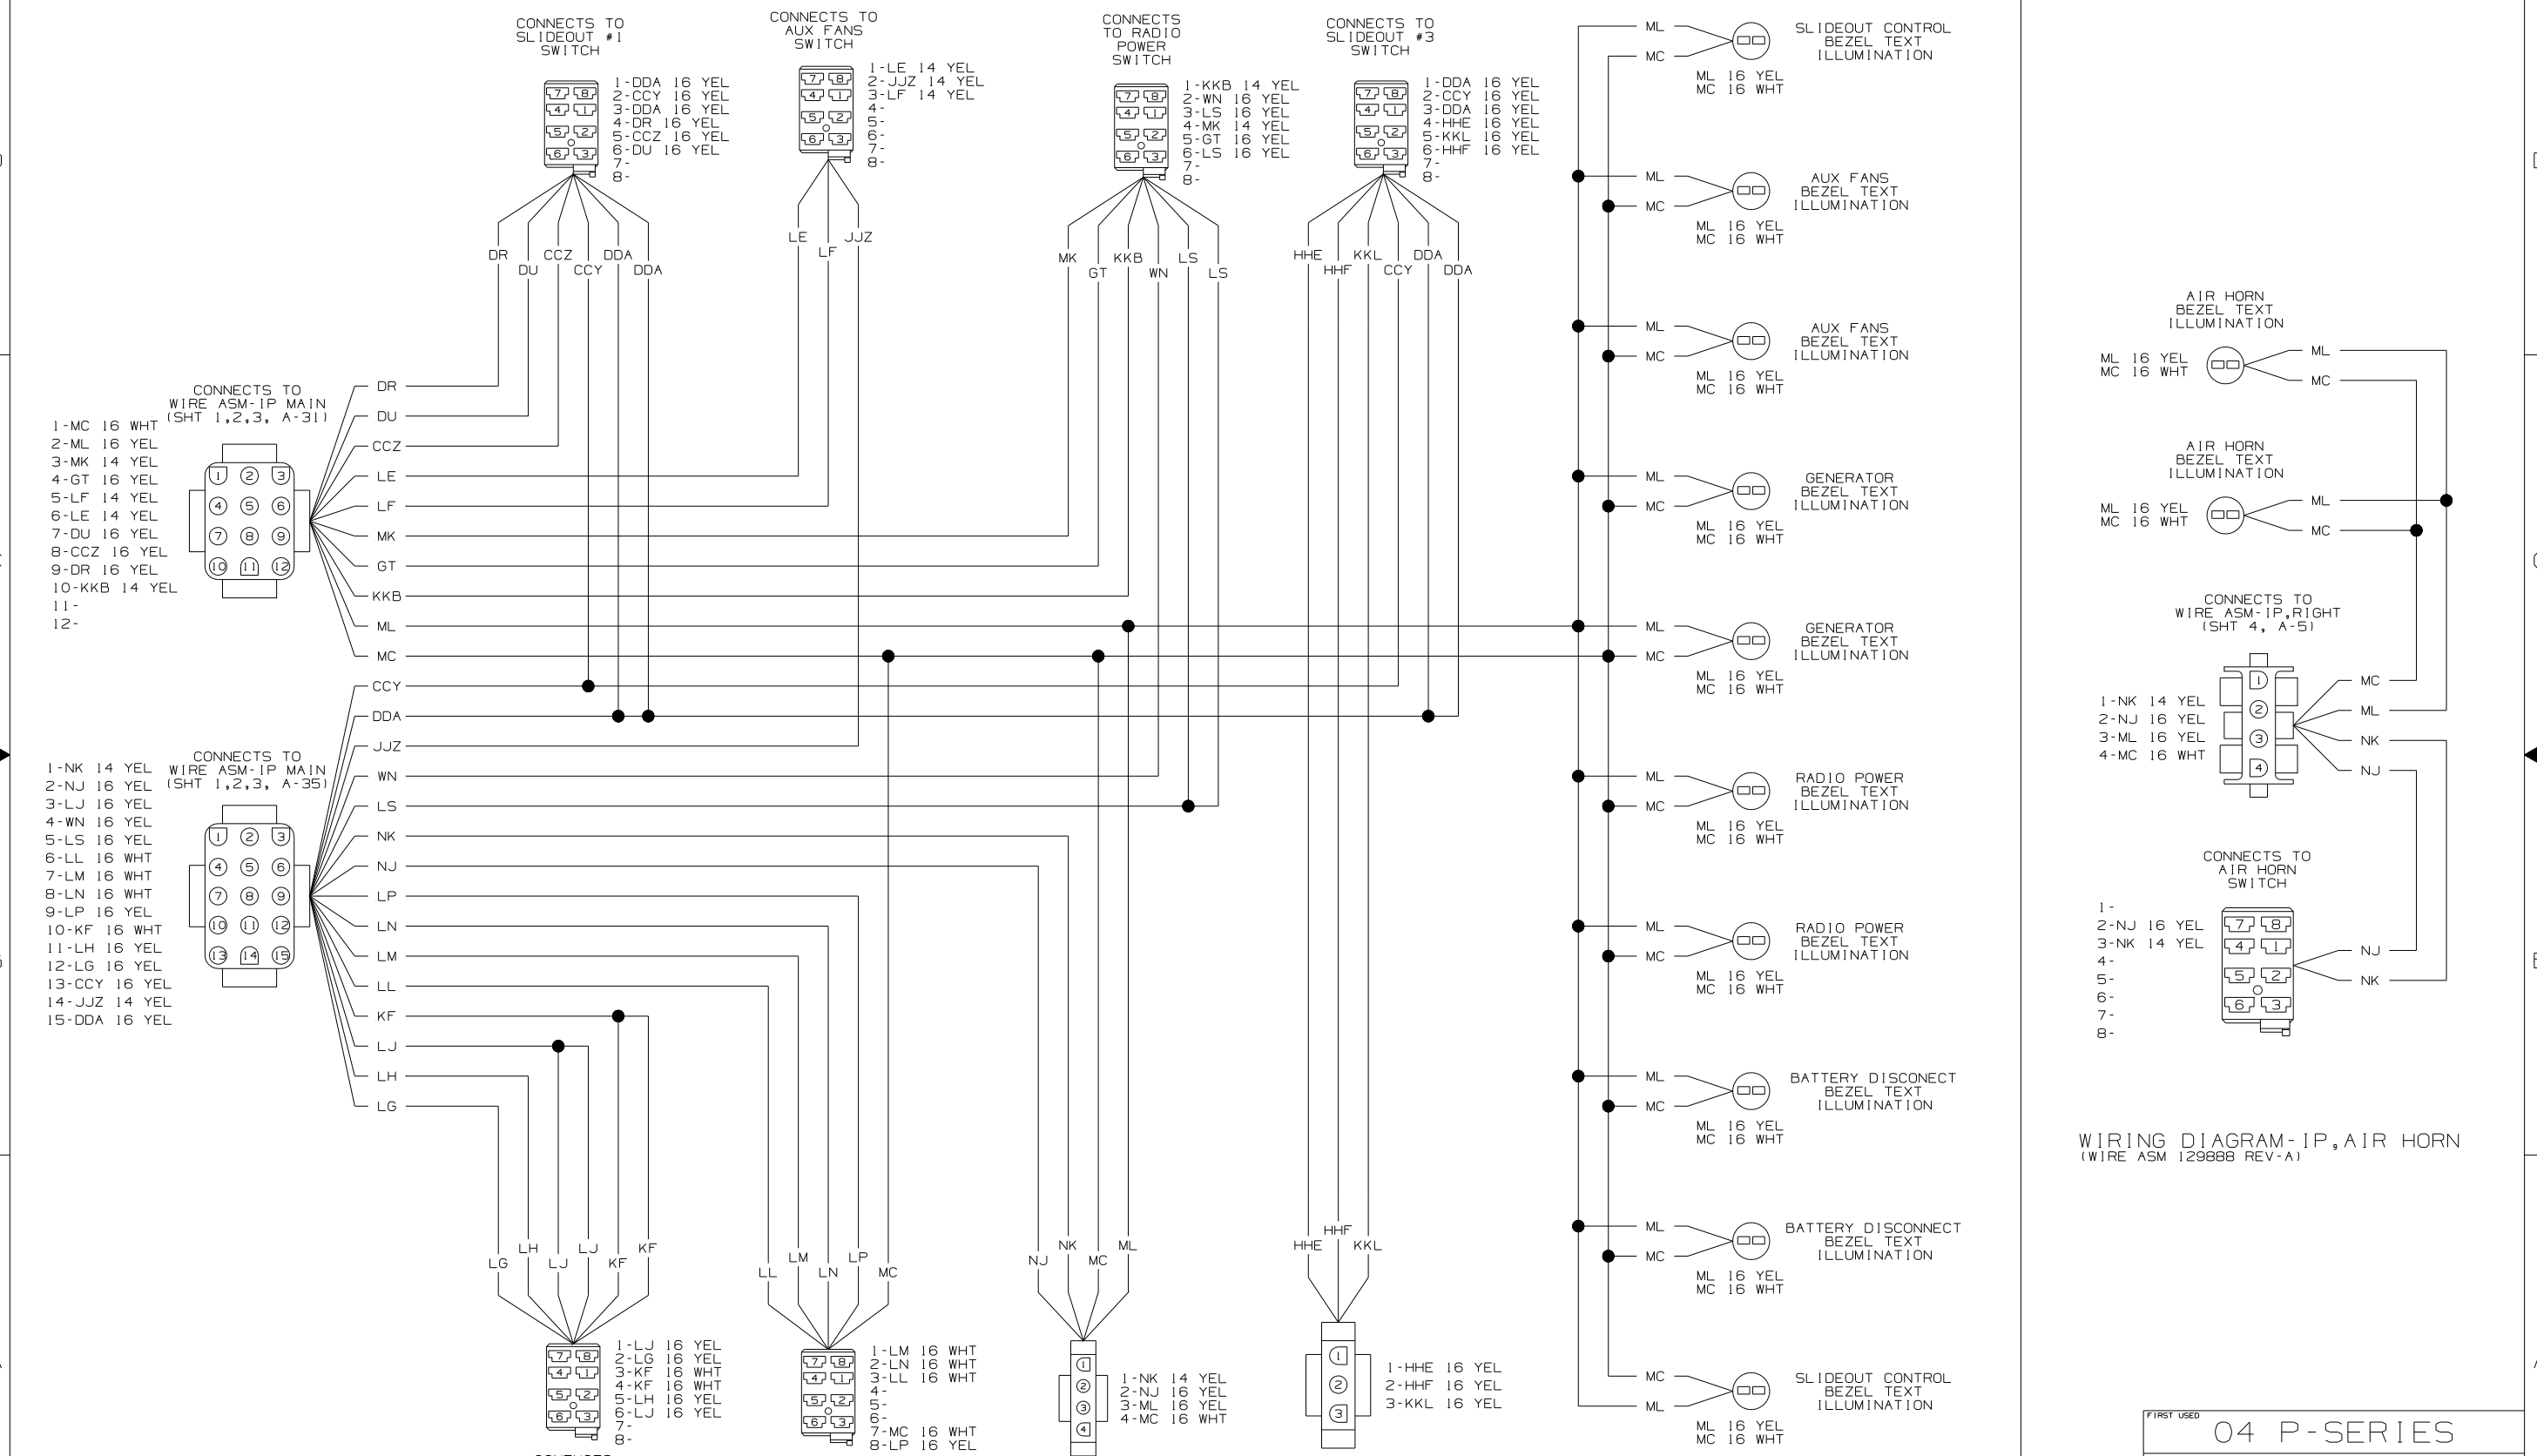

1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

NOTES:

WIRING DIAGRAM-IP,RIGHT
(WIRE ASM 145405 REV-D)

WIRING DIAGRAM-IP,AIR HORN
(WIRE ASM 129888 REV-A)

FIRST USED		04 P-SERIES	
		DO NOT SCALE DRAWING	
TITLE:		WIRING DIAGRAM-AUTO	
SHEET 4	PART NO	144980	

