



DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


CONNECTS TO WIRE ASM-BACKWALL (LOCATED BEHIND CIRCUIT BREAKERS)

CONNECTS TO WIRE ASM-WATER TANK (LOCATED BELOW RIGHT DINETTE SEAT)

CONNECTS TO WIRE ASM-BLACK HOLDING (LOCATED BELOW WARDROBE CABT)


CONNECTS TO WIRE ASM- GREY HOLDING (LOCATED BELOW GALLEY CABT)

CONNECTS TO MONITOR PANEL (LOCATED IN LH TRANSITION PANEL)

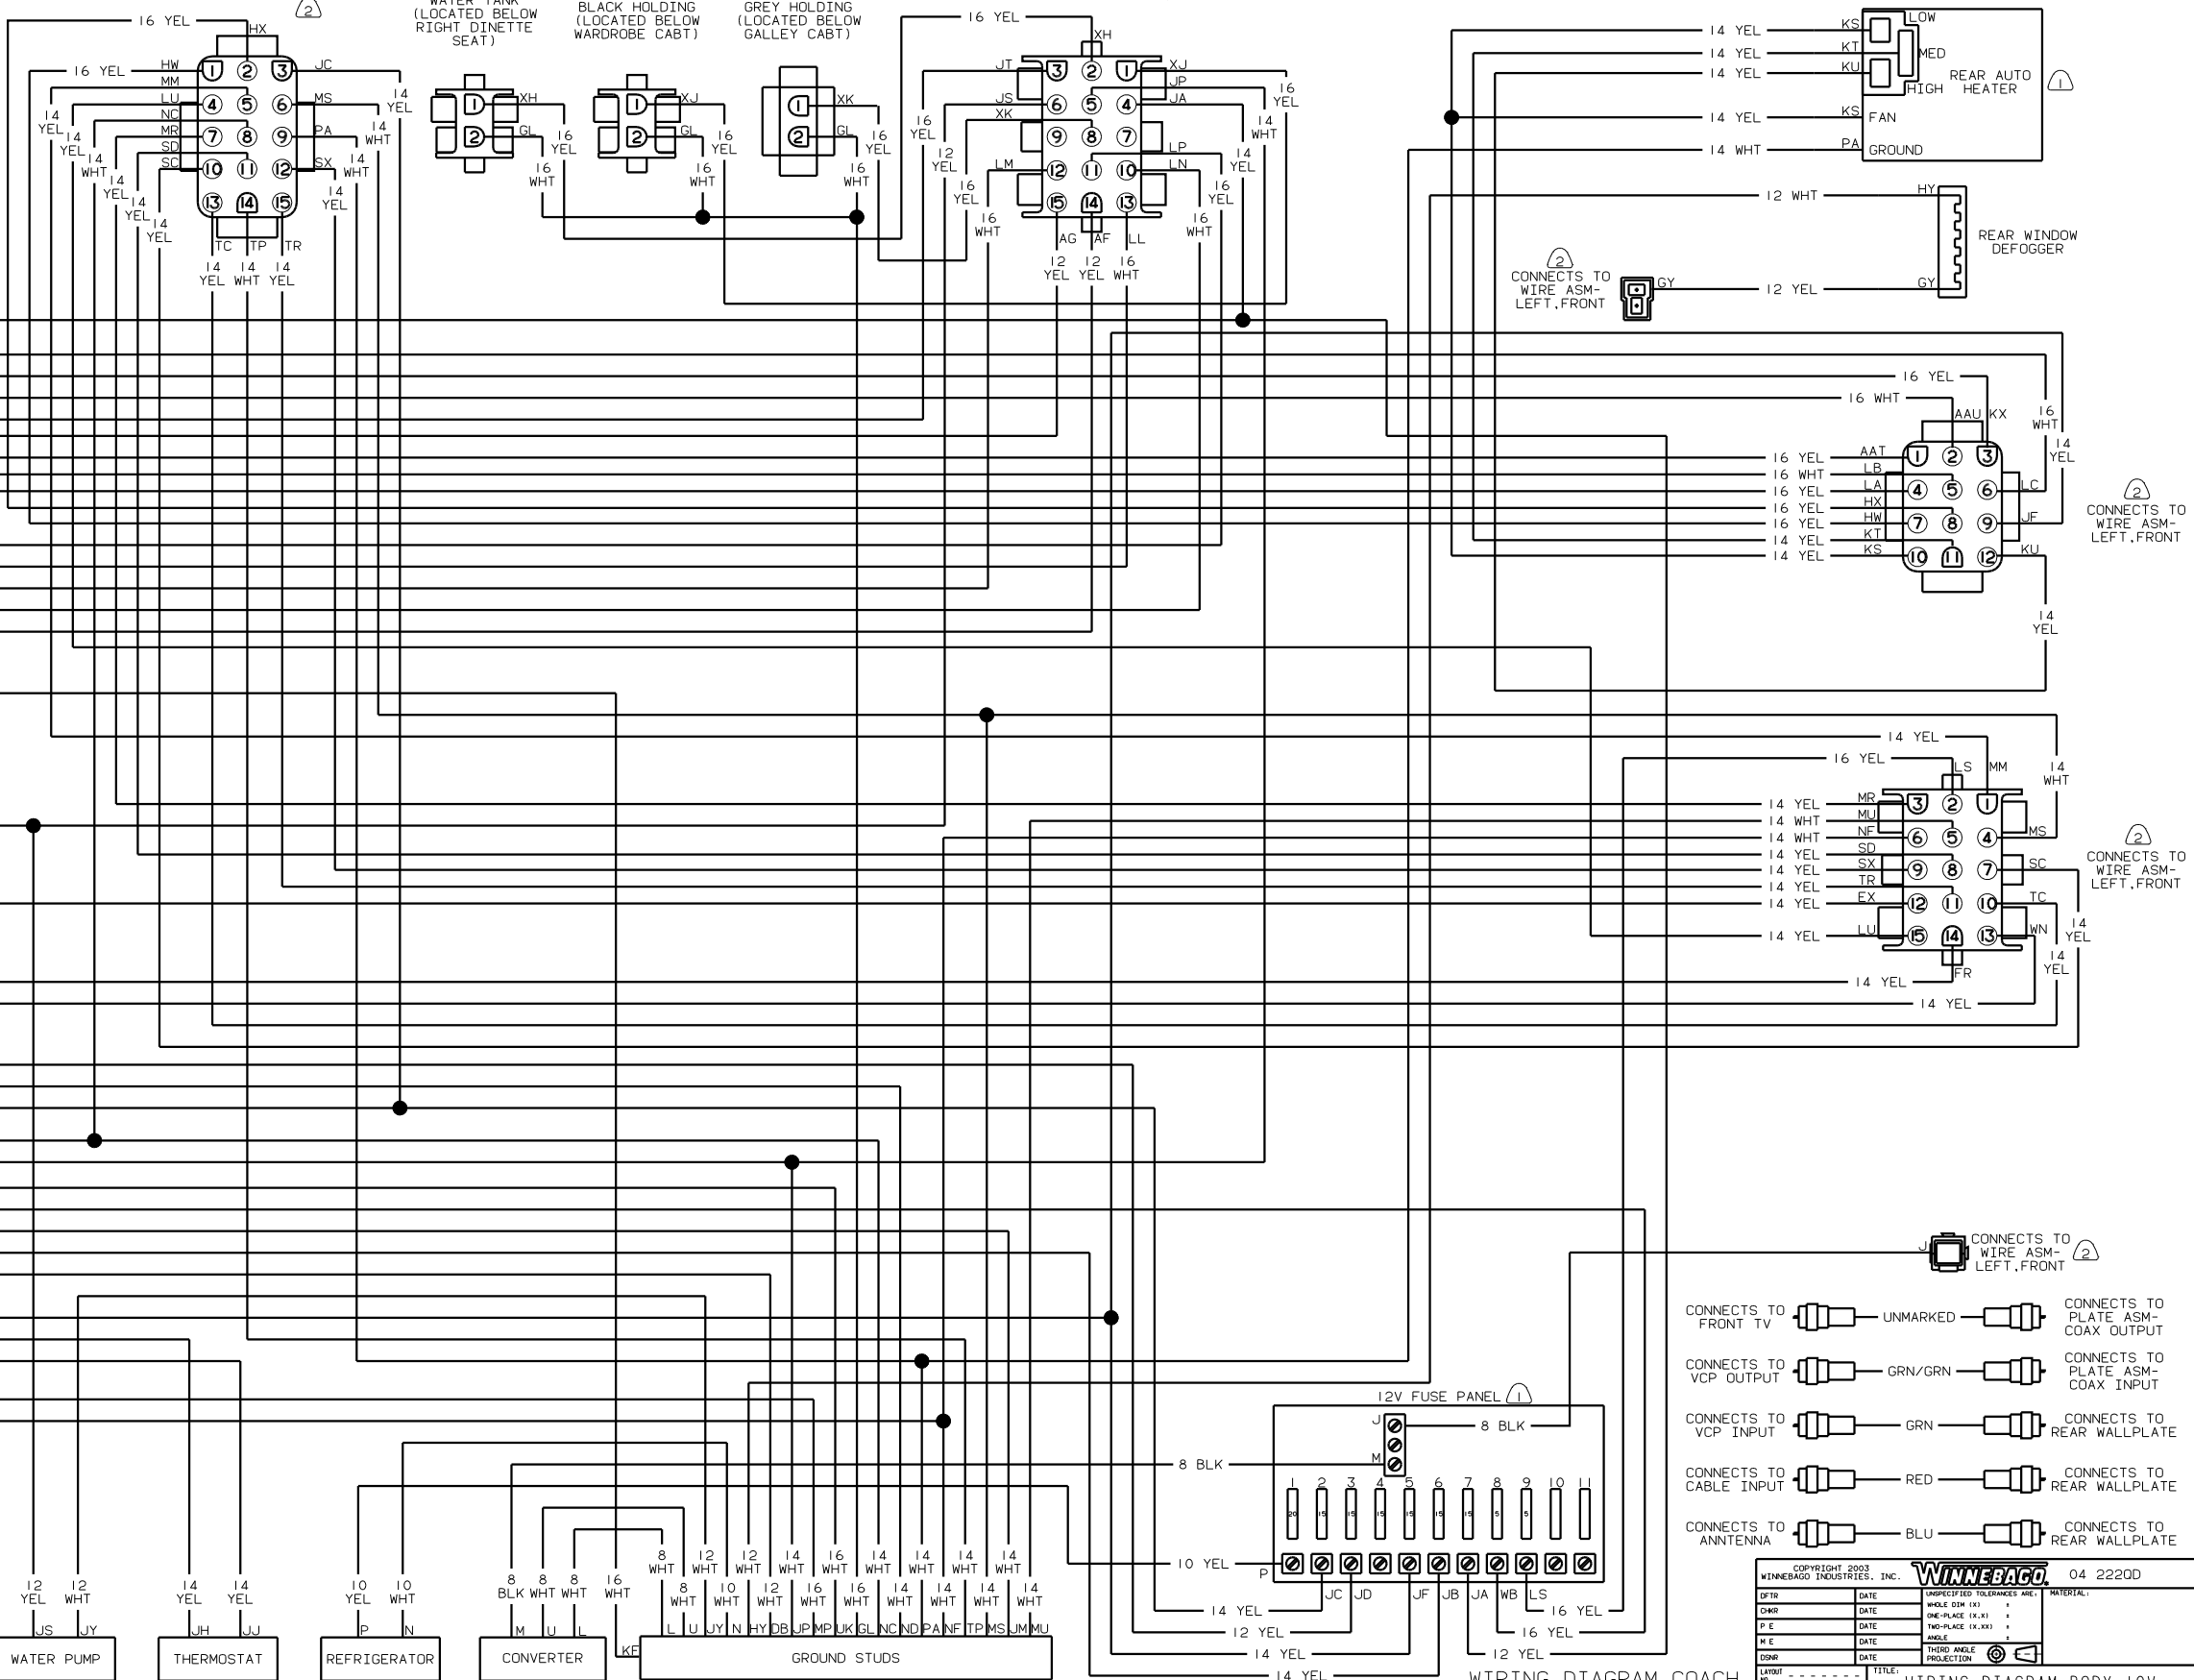


WIRING DIAGRAM COACH (WIRE ASM 144740)

COPYRIGHT 2003 WINNEBAGO INDUSTRIES, INC. WINNEBAGO 04 2220D	
DATE	UNSPECIFIED TOLERANCES ARE:
DATE	WHOLE DIM (X.X)
DATE	ONE-PLACE (X.XX)
DATE	TWO-PLACE (X.XXX)
DATE	ANGLE
DATE	THIRD ANGLE PROJECTION
DATE	TITLE: WIRING DIAGRAM-BODY, 12V
LAYOUT NO	DIA # SCALE: NOTE
DO NOT SCALE DRAWING	SIZE: 11 X 17
ALL DIMENSIONS ARE IN MILLIMETERS	SHEET 1 OF 2
	NO 144705

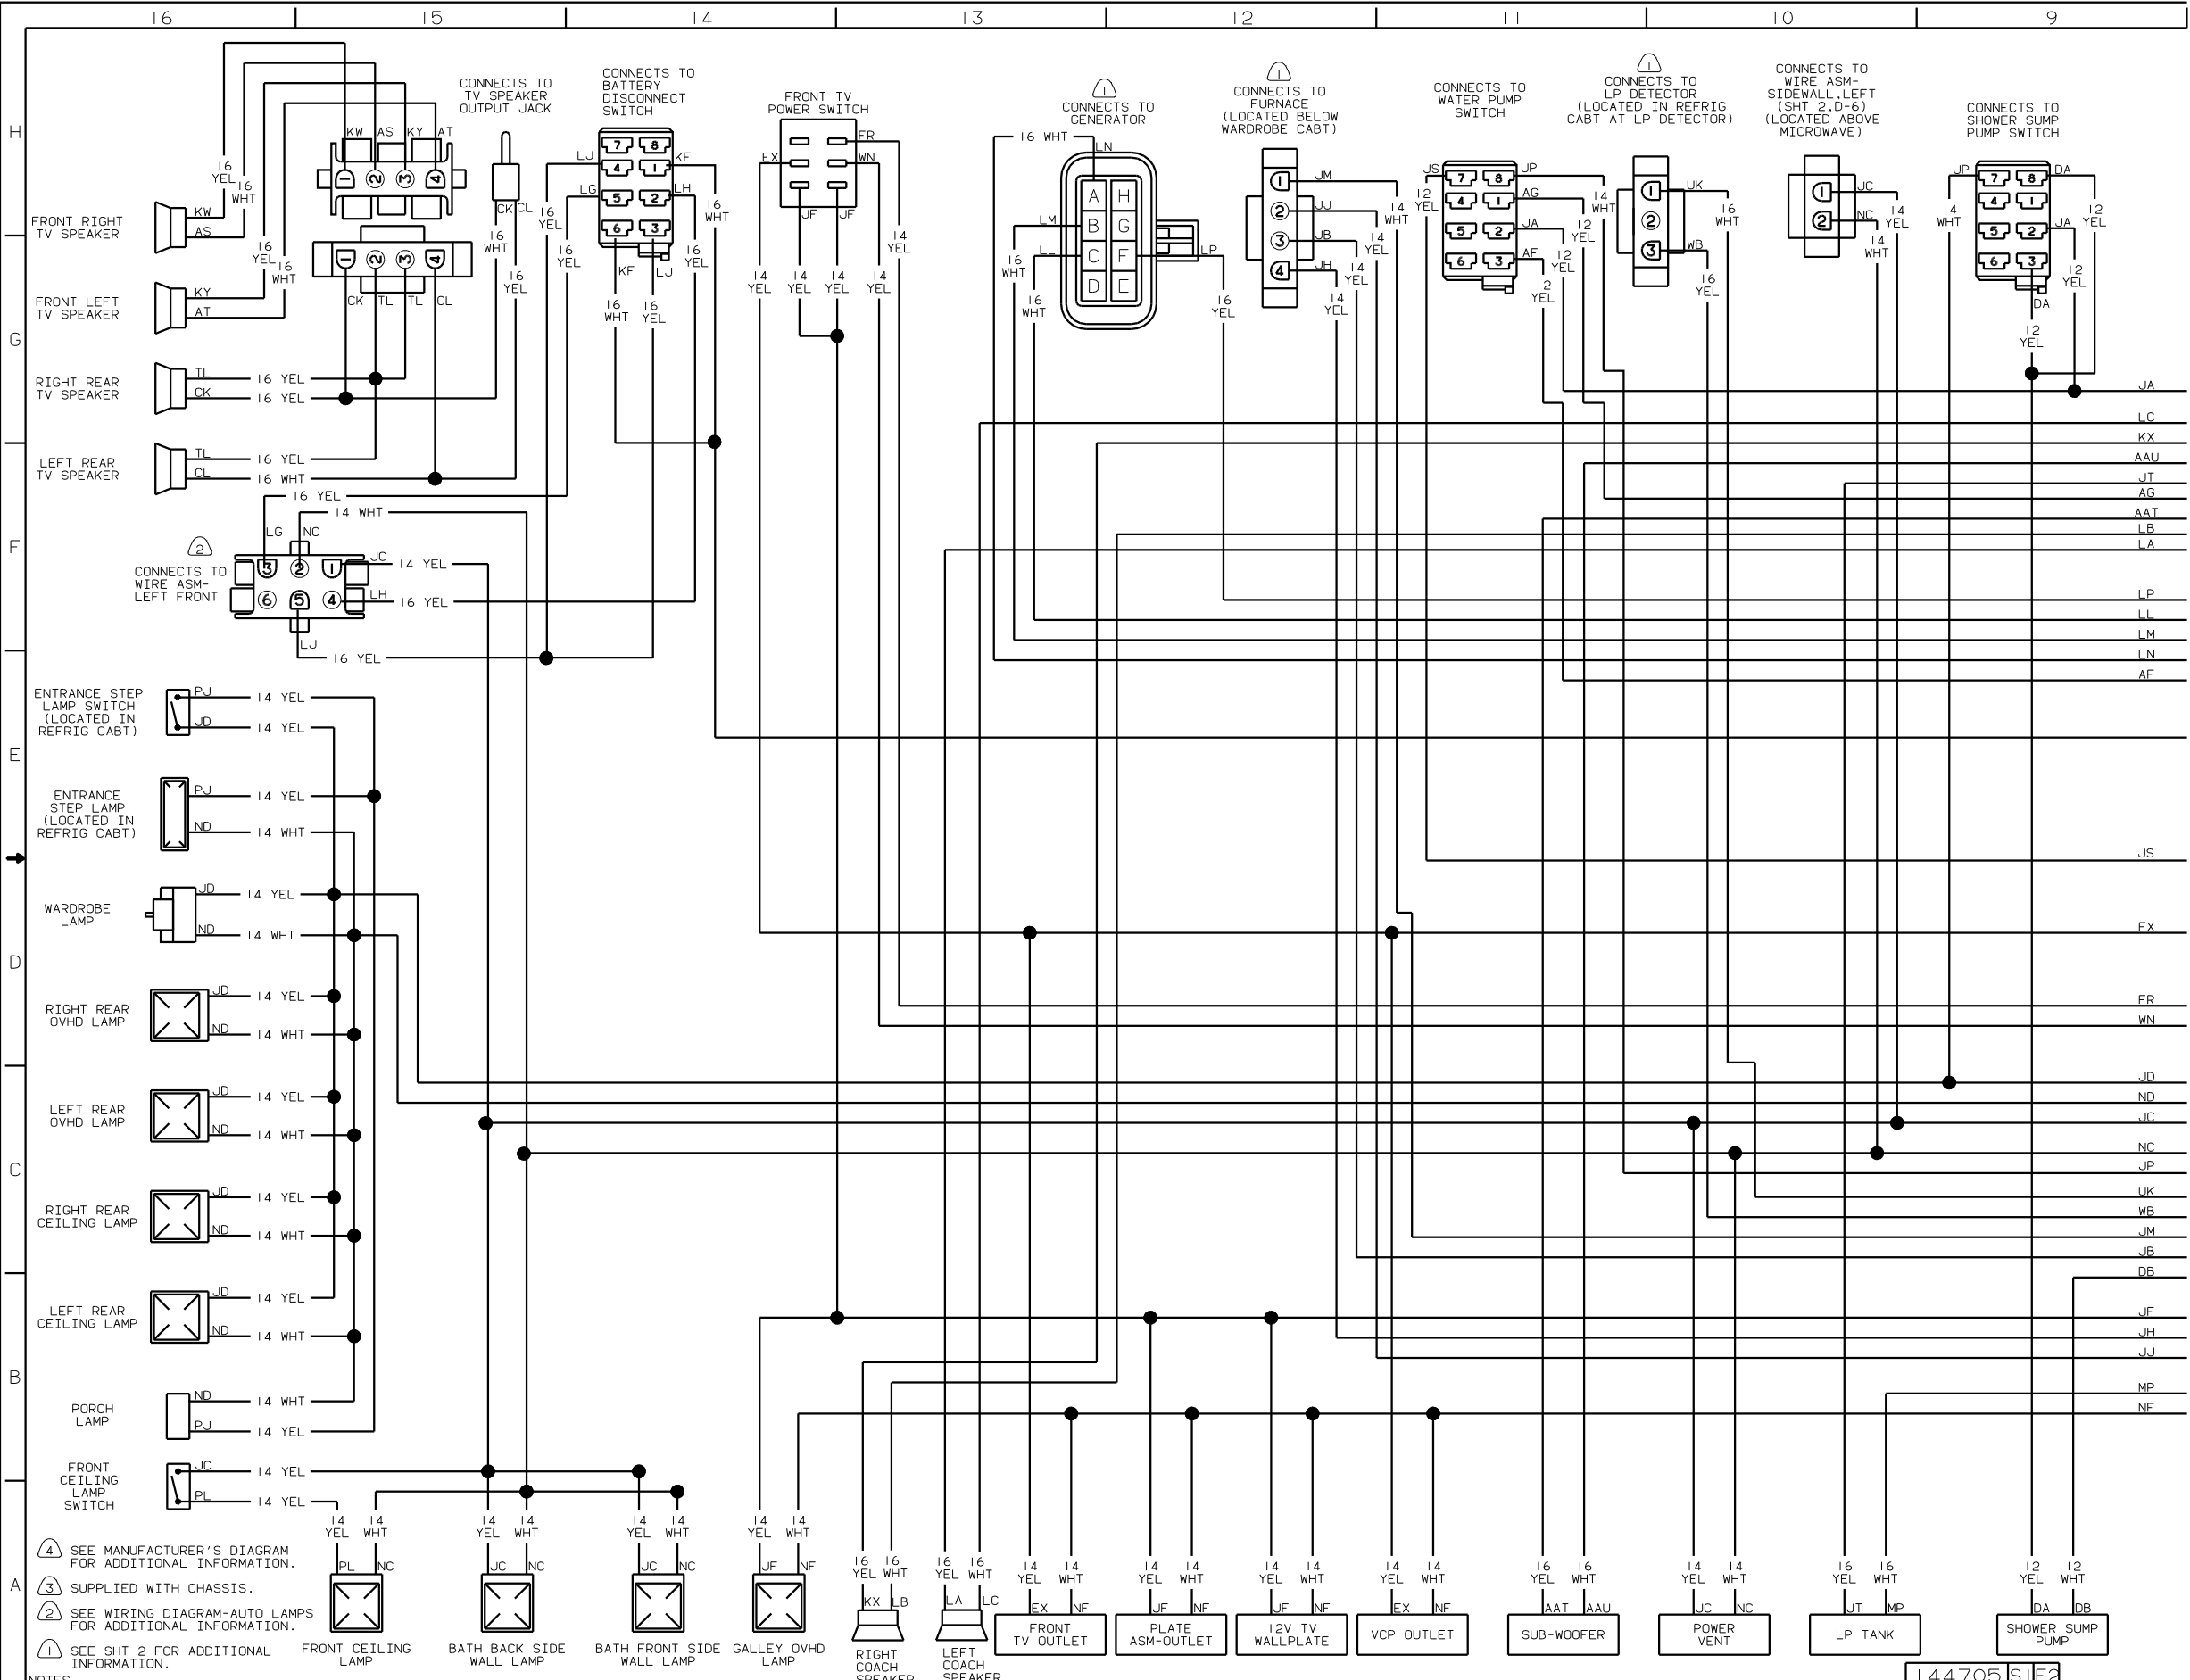

 - NOTES:
- ④ SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
 - ③ SUPPLIED WITH CHASSIS.
 - ② SEE WIRING DIAGRAM-AUTO LAMPS FOR ADDITIONAL INFORMATION.
 - ① SEE SHT 2 FOR ADDITIONAL INFORMATION.



CONNECTS TO
WIRE ASM-COACH
(SHT 1,H-10)
(LOCATED IN
MICROWAVE CABT)

WIRING DIAGRAM-ROOF,FRONT
(WIRE ASM 119112)