



**DANGER**


**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.



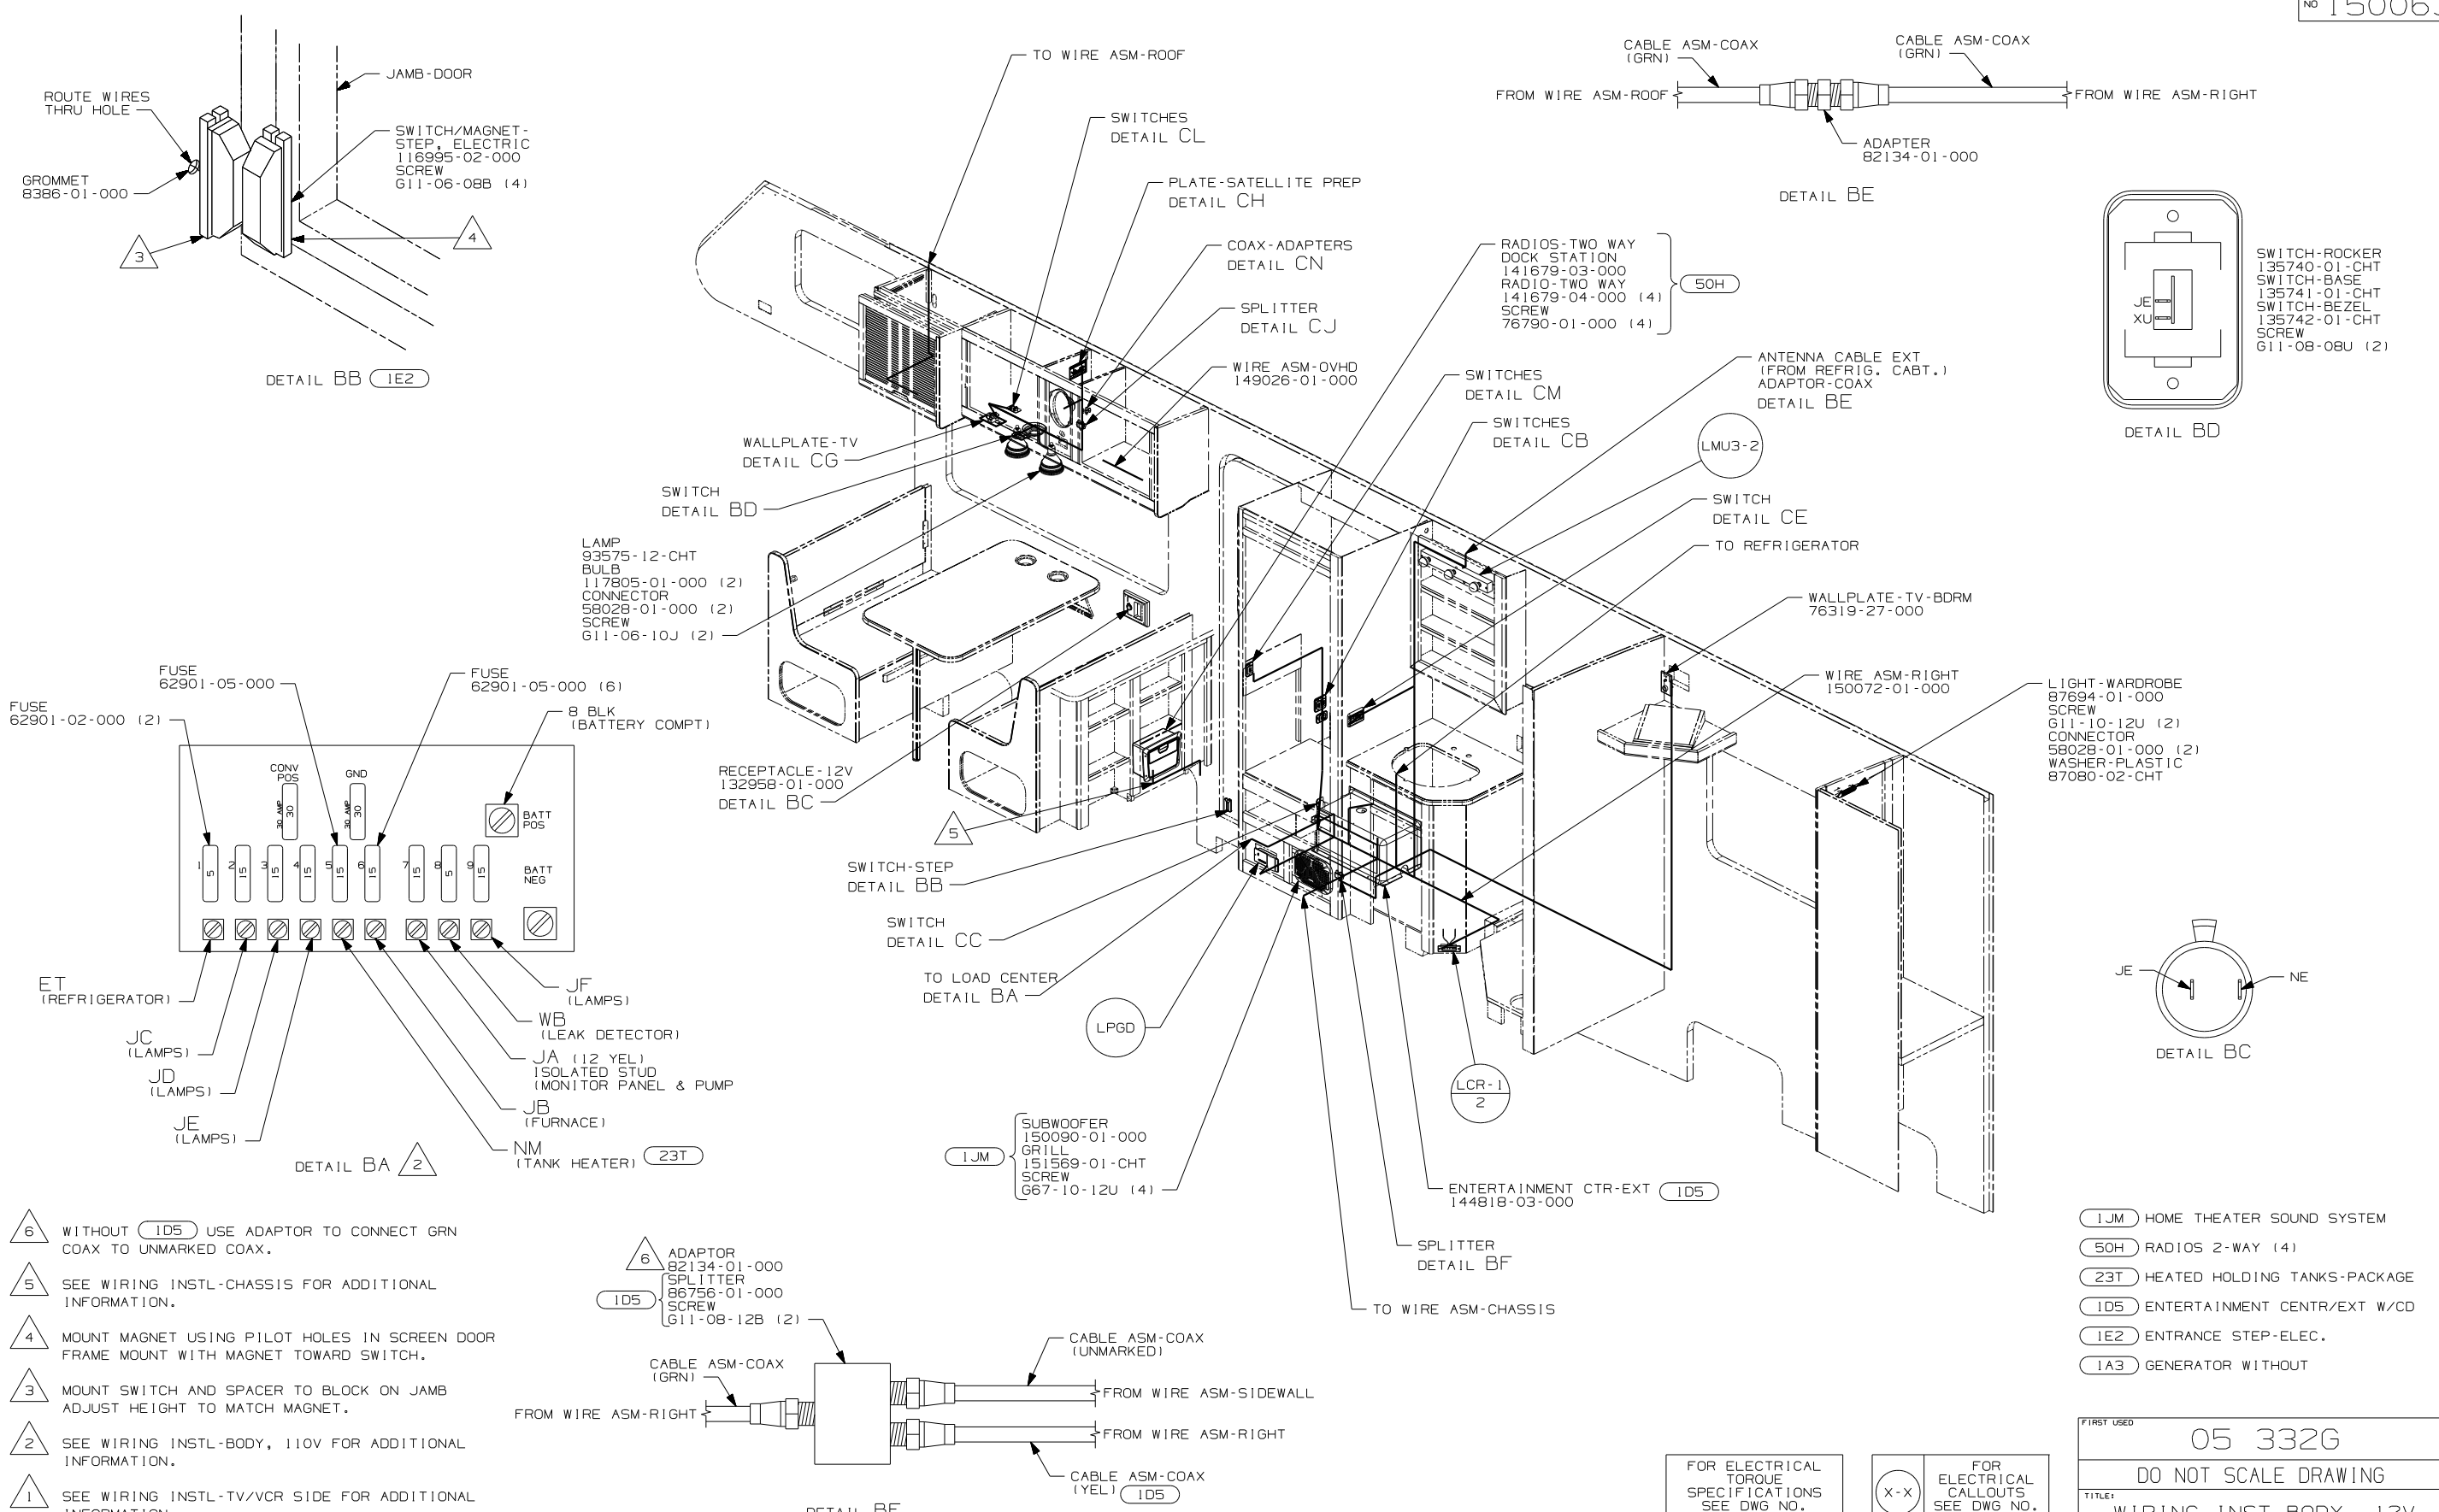


- NOTES:
- △ 6 WITHOUT (1D5) USE ADAPTOR TO CONNECT GRN COAX TO UNMARKED COAX.
  - △ 5 SEE WIRING INSTL-CHASSIS FOR ADDITIONAL INFORMATION.
  - △ 4 MOUNT MAGNET USING PILOT HOLES IN SCREEN DOOR FRAME MOUNT WITH MAGNET TOWARD SWITCH.
  - △ 3 MOUNT SWITCH AND SPACER TO BLOCK ON JAMB ADJUST HEIGHT TO MATCH MAGNET.
  - △ 2 SEE WIRING INSTL-BODY, 110V FOR ADDITIONAL INFORMATION.
  - △ 1 SEE WIRING INSTL-TV/VCR SIDE FOR ADDITIONAL INFORMATION.

- (1JM) HOME THEATER SOUND SYSTEM
- (50H) RADIOS 2-WAY (4)
- (23T) HEATED HOLDING TANKS-PACKAGE
- (1D5) ENTERTAINMENT CENTR/EXT W/CD
- (1E2) ENTRANCE STEP-ELEC.
- (1A3) GENERATOR WITHOUT

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000


(X-X) FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

FIRST USED	05 332G
DO NOT SCALE DRAWING	
TITLE:	WIRING INST-BODY, 12V
SHEET 2	PART NO 150063

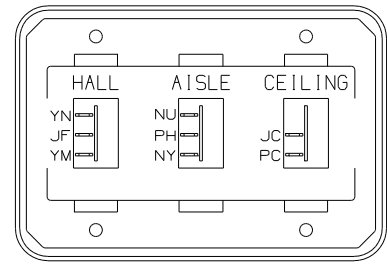

SWITCH-ROCKER  
135740-01-CHT  
135740-02-CHT (2)  
SWITCH-BASE  
135741-03-CHT  
SWITCH-BEZEL  
135742-25-CHT  
SCREW  
G11-08-08U (4)


DETAIL CA

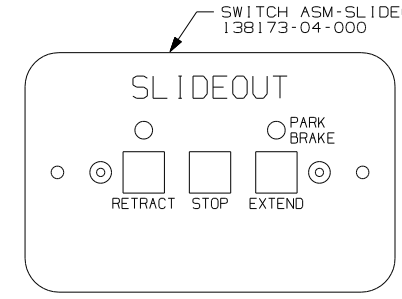


SWITCH ASM-SLIDEOUT  
138173-04-000

**WARNING** UNDERSTAND OPERATOR'S MANUAL BEFORE USING. KEEP PEOPLE AND OBSTRUCTIONS CLEAR OF SLIDEOUT ROOM WHEN OPERATING TO AVOID INJURY AND/OR PROPERTY DAMAGE.

DETAIL CD

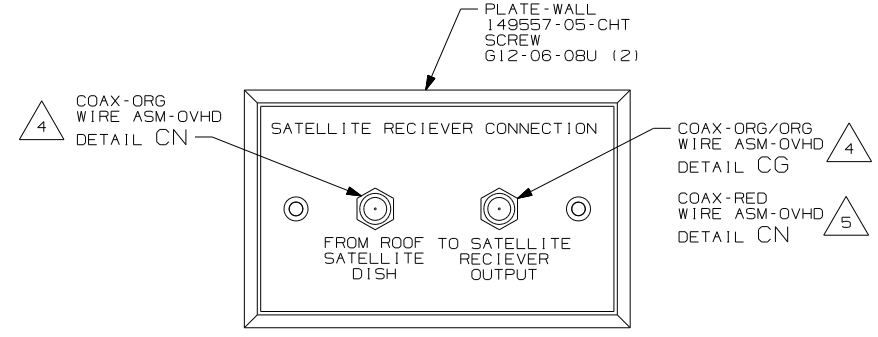


DETAIL CH (1JR) 1

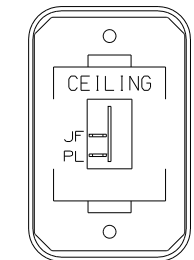


SWITCH-ROCKER  
135740-01-CHT  
SWITCH-BASE  
135741-01-CHT  
SWITCH-BEZEL  
135742-07-CHT  
SCREW  
G11-08-08U (2)

DETAIL CM

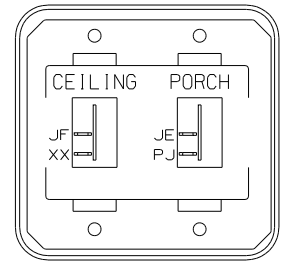


SWITCH-ROCKER  
135740-01-CHT (2)  
SWITCH-BASE  
135741-02-CHT  
SWITCH-BEZEL  
135742-19-CHT  
SCREW  
G11-08-08U (4)

DETAIL CB (1E2)

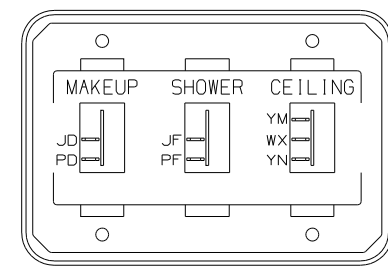


SWITCH-ROCKER  
135740-01-CHT (2)  
135740-02-CHT  
SWITCH-BASE  
135741-03-CHT  
SWITCH-BEZEL  
135742-28-CHT  
SCREW  
G11-08-08U (4)

DETAIL CE

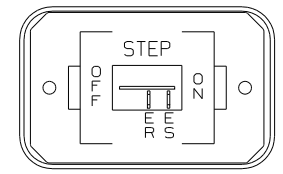


SWITCH-ROCKER  
135740-01-CHT  
SWITCH-BASE  
135741-01-CHT  
SWITCH-BEZEL  
135742-11-CHT  
SCREW  
G11-08-08U (2)

DETAIL CB (1E2)

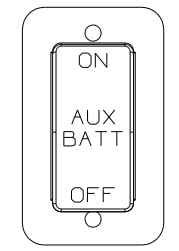


DETAIL CC (FRONT SIDE)

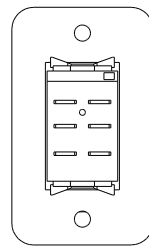


DETAIL CC (BACK SIDE)

SWITCH-BATTERY, DISC  
108357-06-000  
ACTUATOR-SWITCH  
108356-11-CHT  
PLATE-SWITCH  
98351-07-CHT  
SCREW  
G11-06-10U (2)

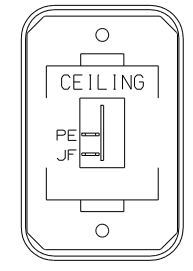


SWITCH-ROCKER  
135740-01-CHT  
SWITCH-BASE  
135741-01-CHT  
SWITCH-BEZEL  
135742-07-CHT  
SCREW  
G11-08-08U (2)

DETAIL CF

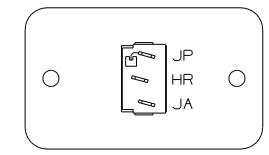


HOLDING TANK HEATER  
TURN OFF When Not In Use  
SEE OPERATORS MANUAL


DETAIL CK (23T)

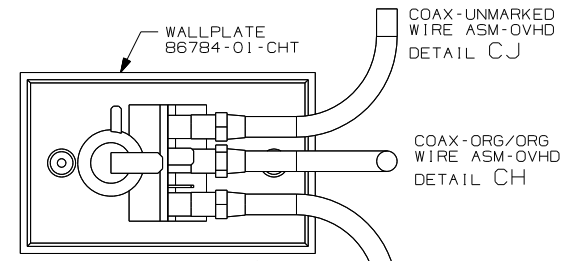

DETAIL CG (1JR) 1

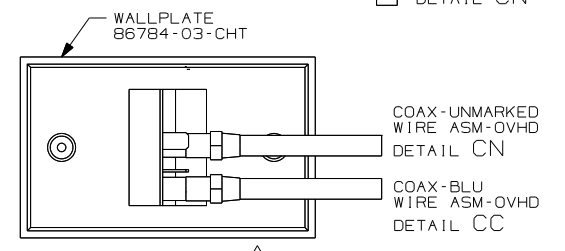


DETAIL CG (42J) 3

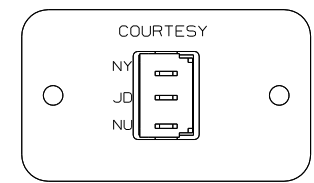


SWITCH-COURTESY  
132180-02-CHT  
SWITCH-PLATE  
98351-01-CHT  
SCREW  
G11-06-16U (2)

DETAIL CL

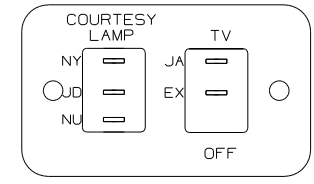


SWITCH-COURTESY  
132180-02-CHT  
SWITCH-TV  
132180-01-CHT  
SWITCH-PLATE  
98351-15-CHT  
SCREW  
G11-06-16U (2)


DETAIL CL (1JR)

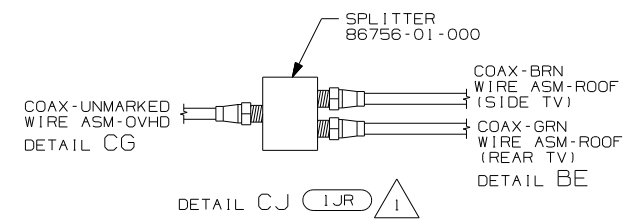


DETAIL CJ (1JR) 1

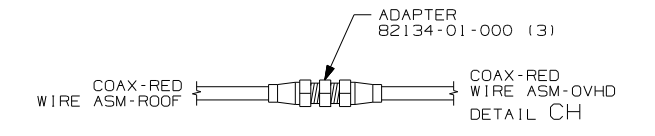

DETAIL CH

 


DETAIL CG

 


DETAIL CH


DETAIL CN (1JR) 1

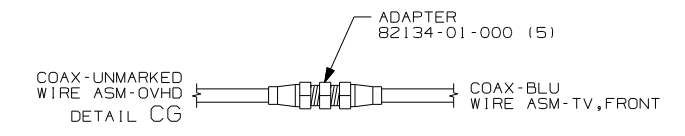


DETAIL CG

 


DETAIL CG

 

DETAIL CG

 

DETAIL CG

 

DETAIL CG

DETAIL CN (42J) 3


- NOTES:
- 5 CONNECT COAX TO FRONT SIDE OF WALLPLATE.
  - 4 CONNECT COAX TO BACK SIDE OF WALLPLATE.
  - 3 NOT USED WITH (1JR)
  - 2 WITHOUT (1D5) USE ADAPTOR TO CONNECT GRN COAX FROM WIRE ASM-ROOF TO GRN COAX FROM WIRE ASM-RIGHT.
  - 1 NOT USED WITH (42J)

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000


- (42J) TV-24" COLOR, STEREO W/REMOTE
- (1JR) TV-13" W/DVD-12V
- (23T) DRAINAGE SYSTEM-HEATED
- (1D5) ENTERTAINMENT CENTR/EXT W/CD
- (1E2) ENTRANCE STEP-ELEC.

FIRST USED	05 332G
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING INST-BODY, 12V
SHEET 3	PART NO 150063

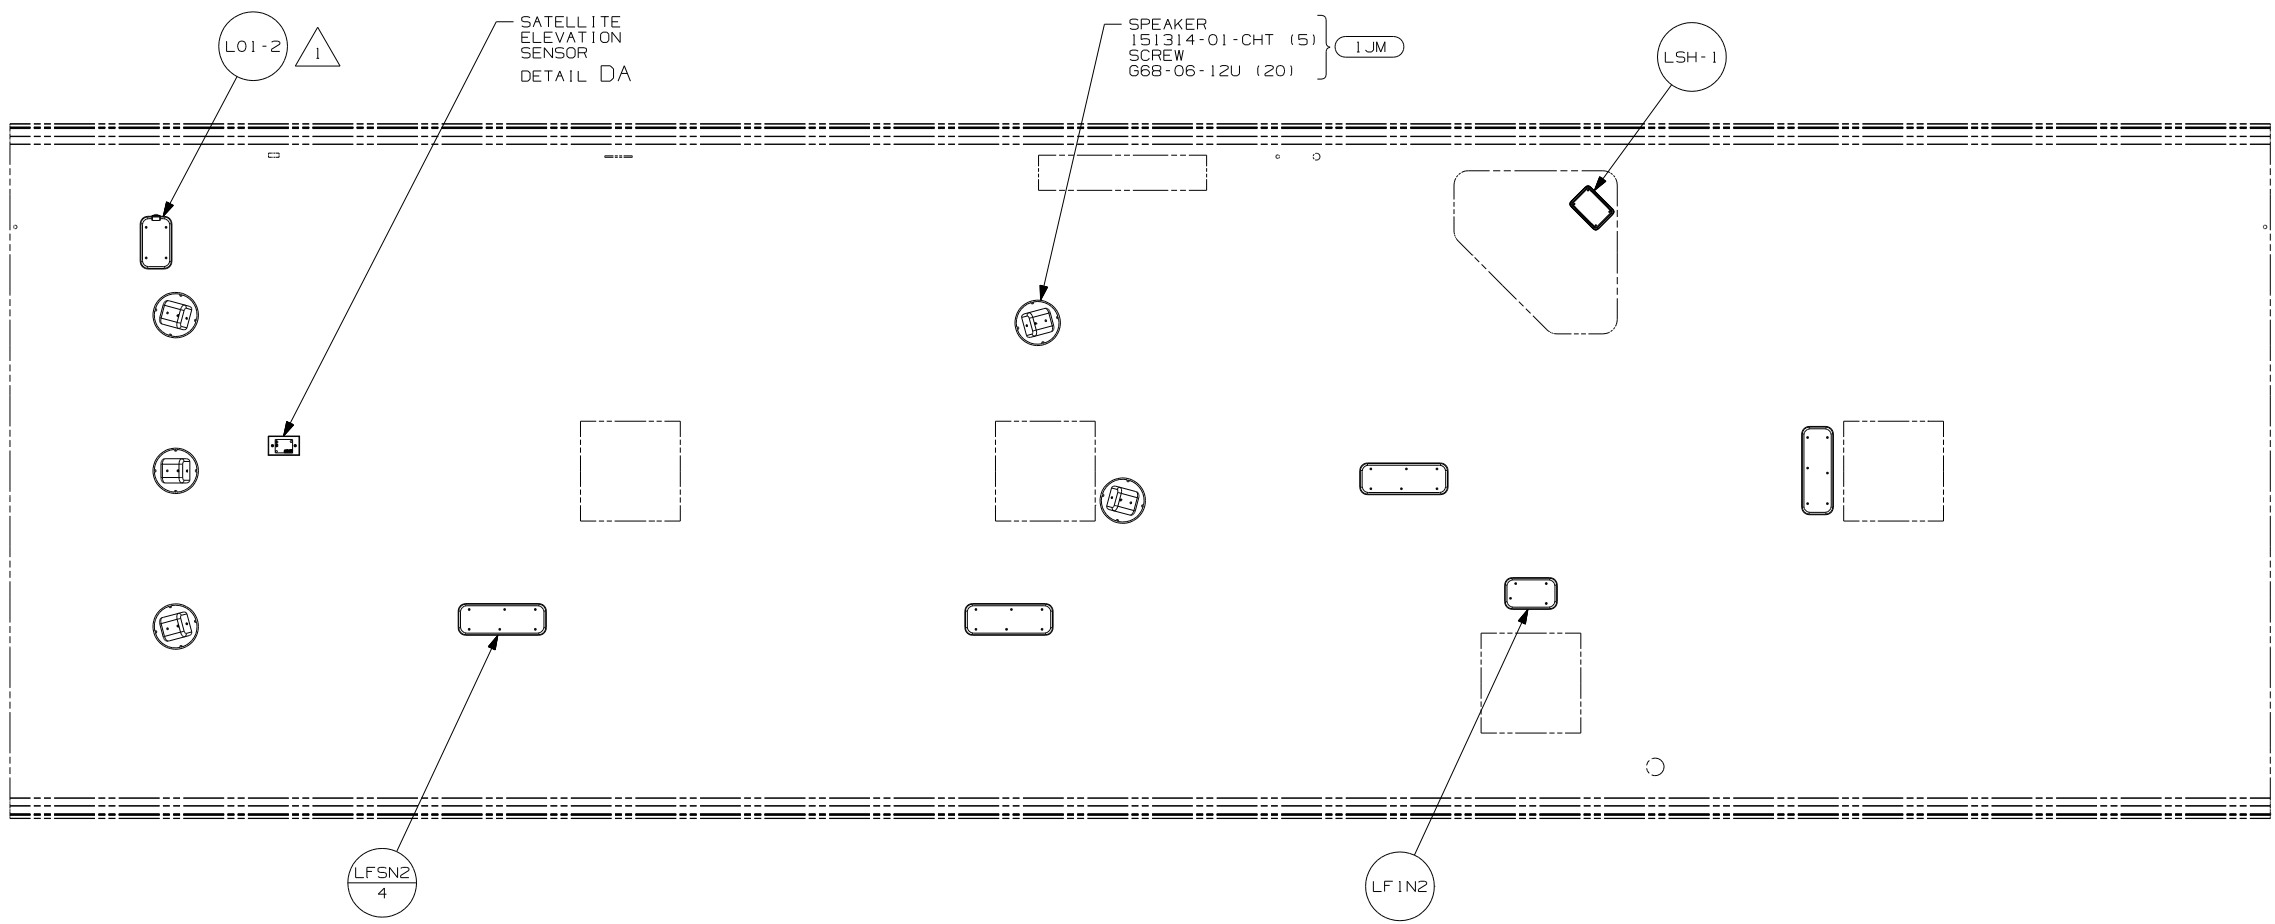

SATELLITE ELEVATION SENSOR  
DETAIL DA

SPEAKER  
151314-01-CHT (5)  
SCREW  
G68-06-12U (20) } 1JM

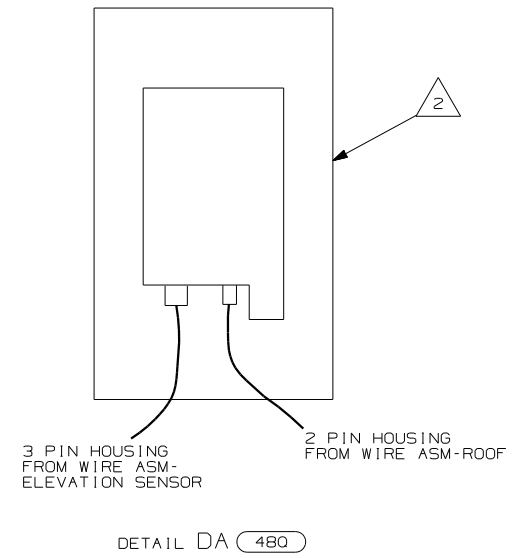

- 48Q SATELLITE DISH & ELEV. SENSOR
- 42J TV-24" COLOR, STEREO W/REMOTE
- 1JM HOME THEATER SOUND SYSTEM



NOTES:

- 2 SENSOR SUPPLIED WITH SATELLITE ASSEMBLY.
- 1 NOT USED WITH 42J

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

FIRST USED	05 332G
DO NOT SCALE DRAWING	
TITLE:	WIRING INST-BODY, 12V
SHEET 4	PART NO 150063

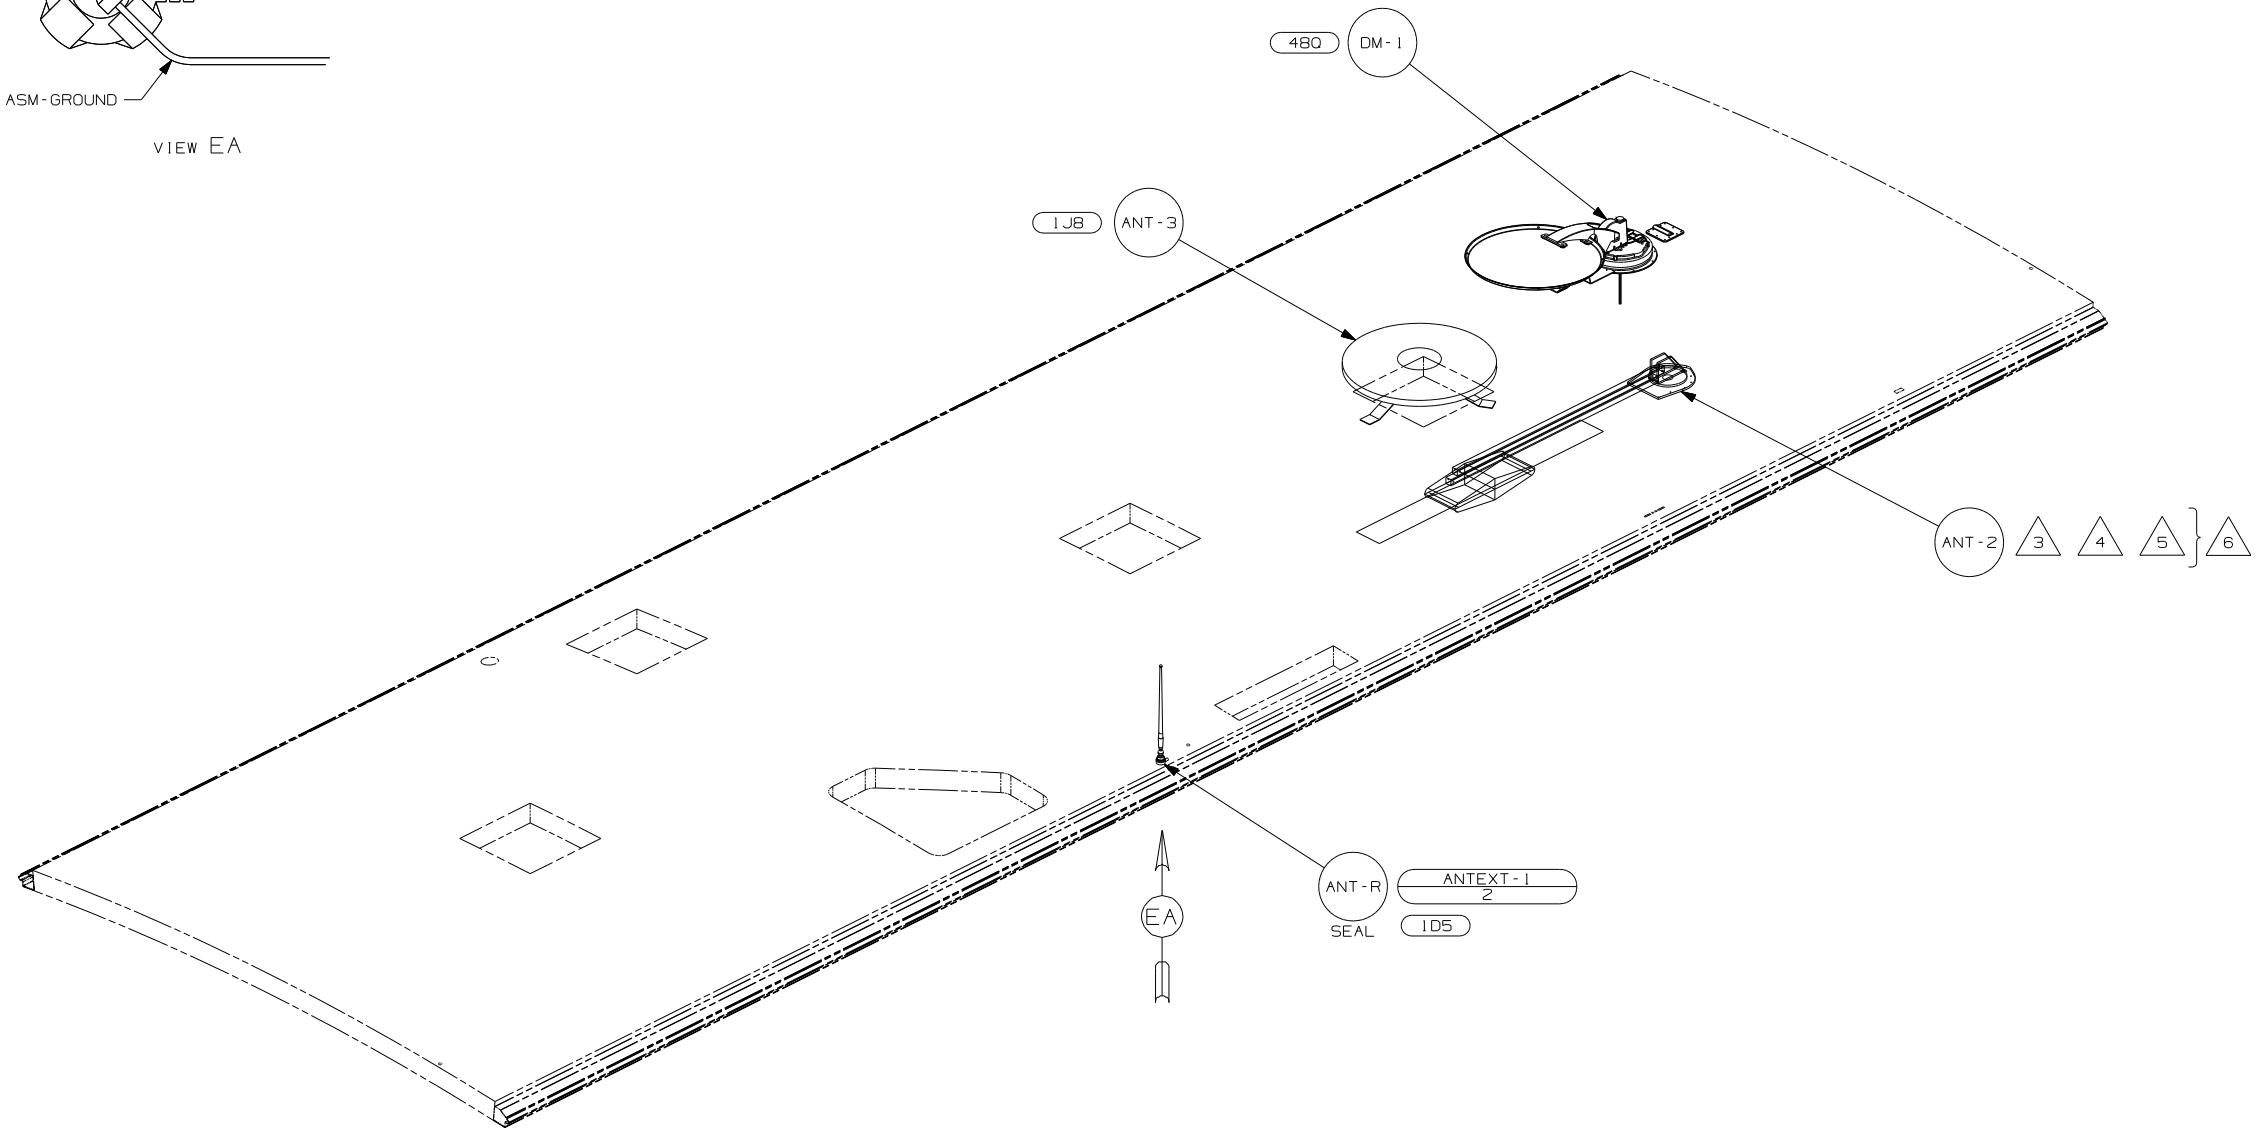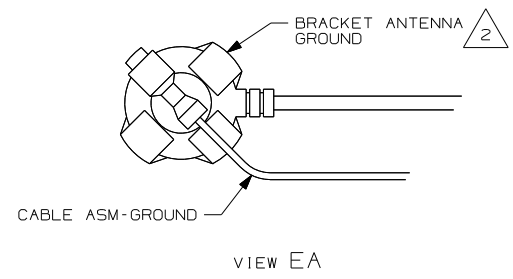

- $\triangle 6$  NOT USED WITH 1JB
- $\triangle 5$  ADD RUBBER BUMPER TO ROOF UNDER EACH END OF ANTENNA IN DOWN POSITION.
- $\triangle 4$  LOCATE CLAMP TO RETAIN CABLE BUT NOT TO RESTRICT ANTENNA TRAVEL.
- $\triangle 3$  SEE DRAWING 76319-01-000 FOR INSTALLATION OF TV ANTENNA.
- $\triangle 2$  WRAP BRACKET LEGS AROUND ANTENNA BASE.

NOTES:  
1. CONNECTOR-PLUG, TRAILER 113589-01-000 TO BE SUPPLIED LOOSE IN COACH WITH TRAILER TOW PACKAGE.

- 1JB TV ANTENNA-OMNIDIRECTIONAL
- 480 SATELLITE DISH & ELEV.SENSOR
- 105 ENTERTAINMENT CENTR/EXT W/CD
- 193 TV ANTENNA-AMPLIFIED SYSTEM

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

FIRST USED	05 332G
DO NOT SCALE DRAWING	
TITLE:	WIRING INST-BODY, 12V
SHEET 5	PART NO 150063