





**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.







**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

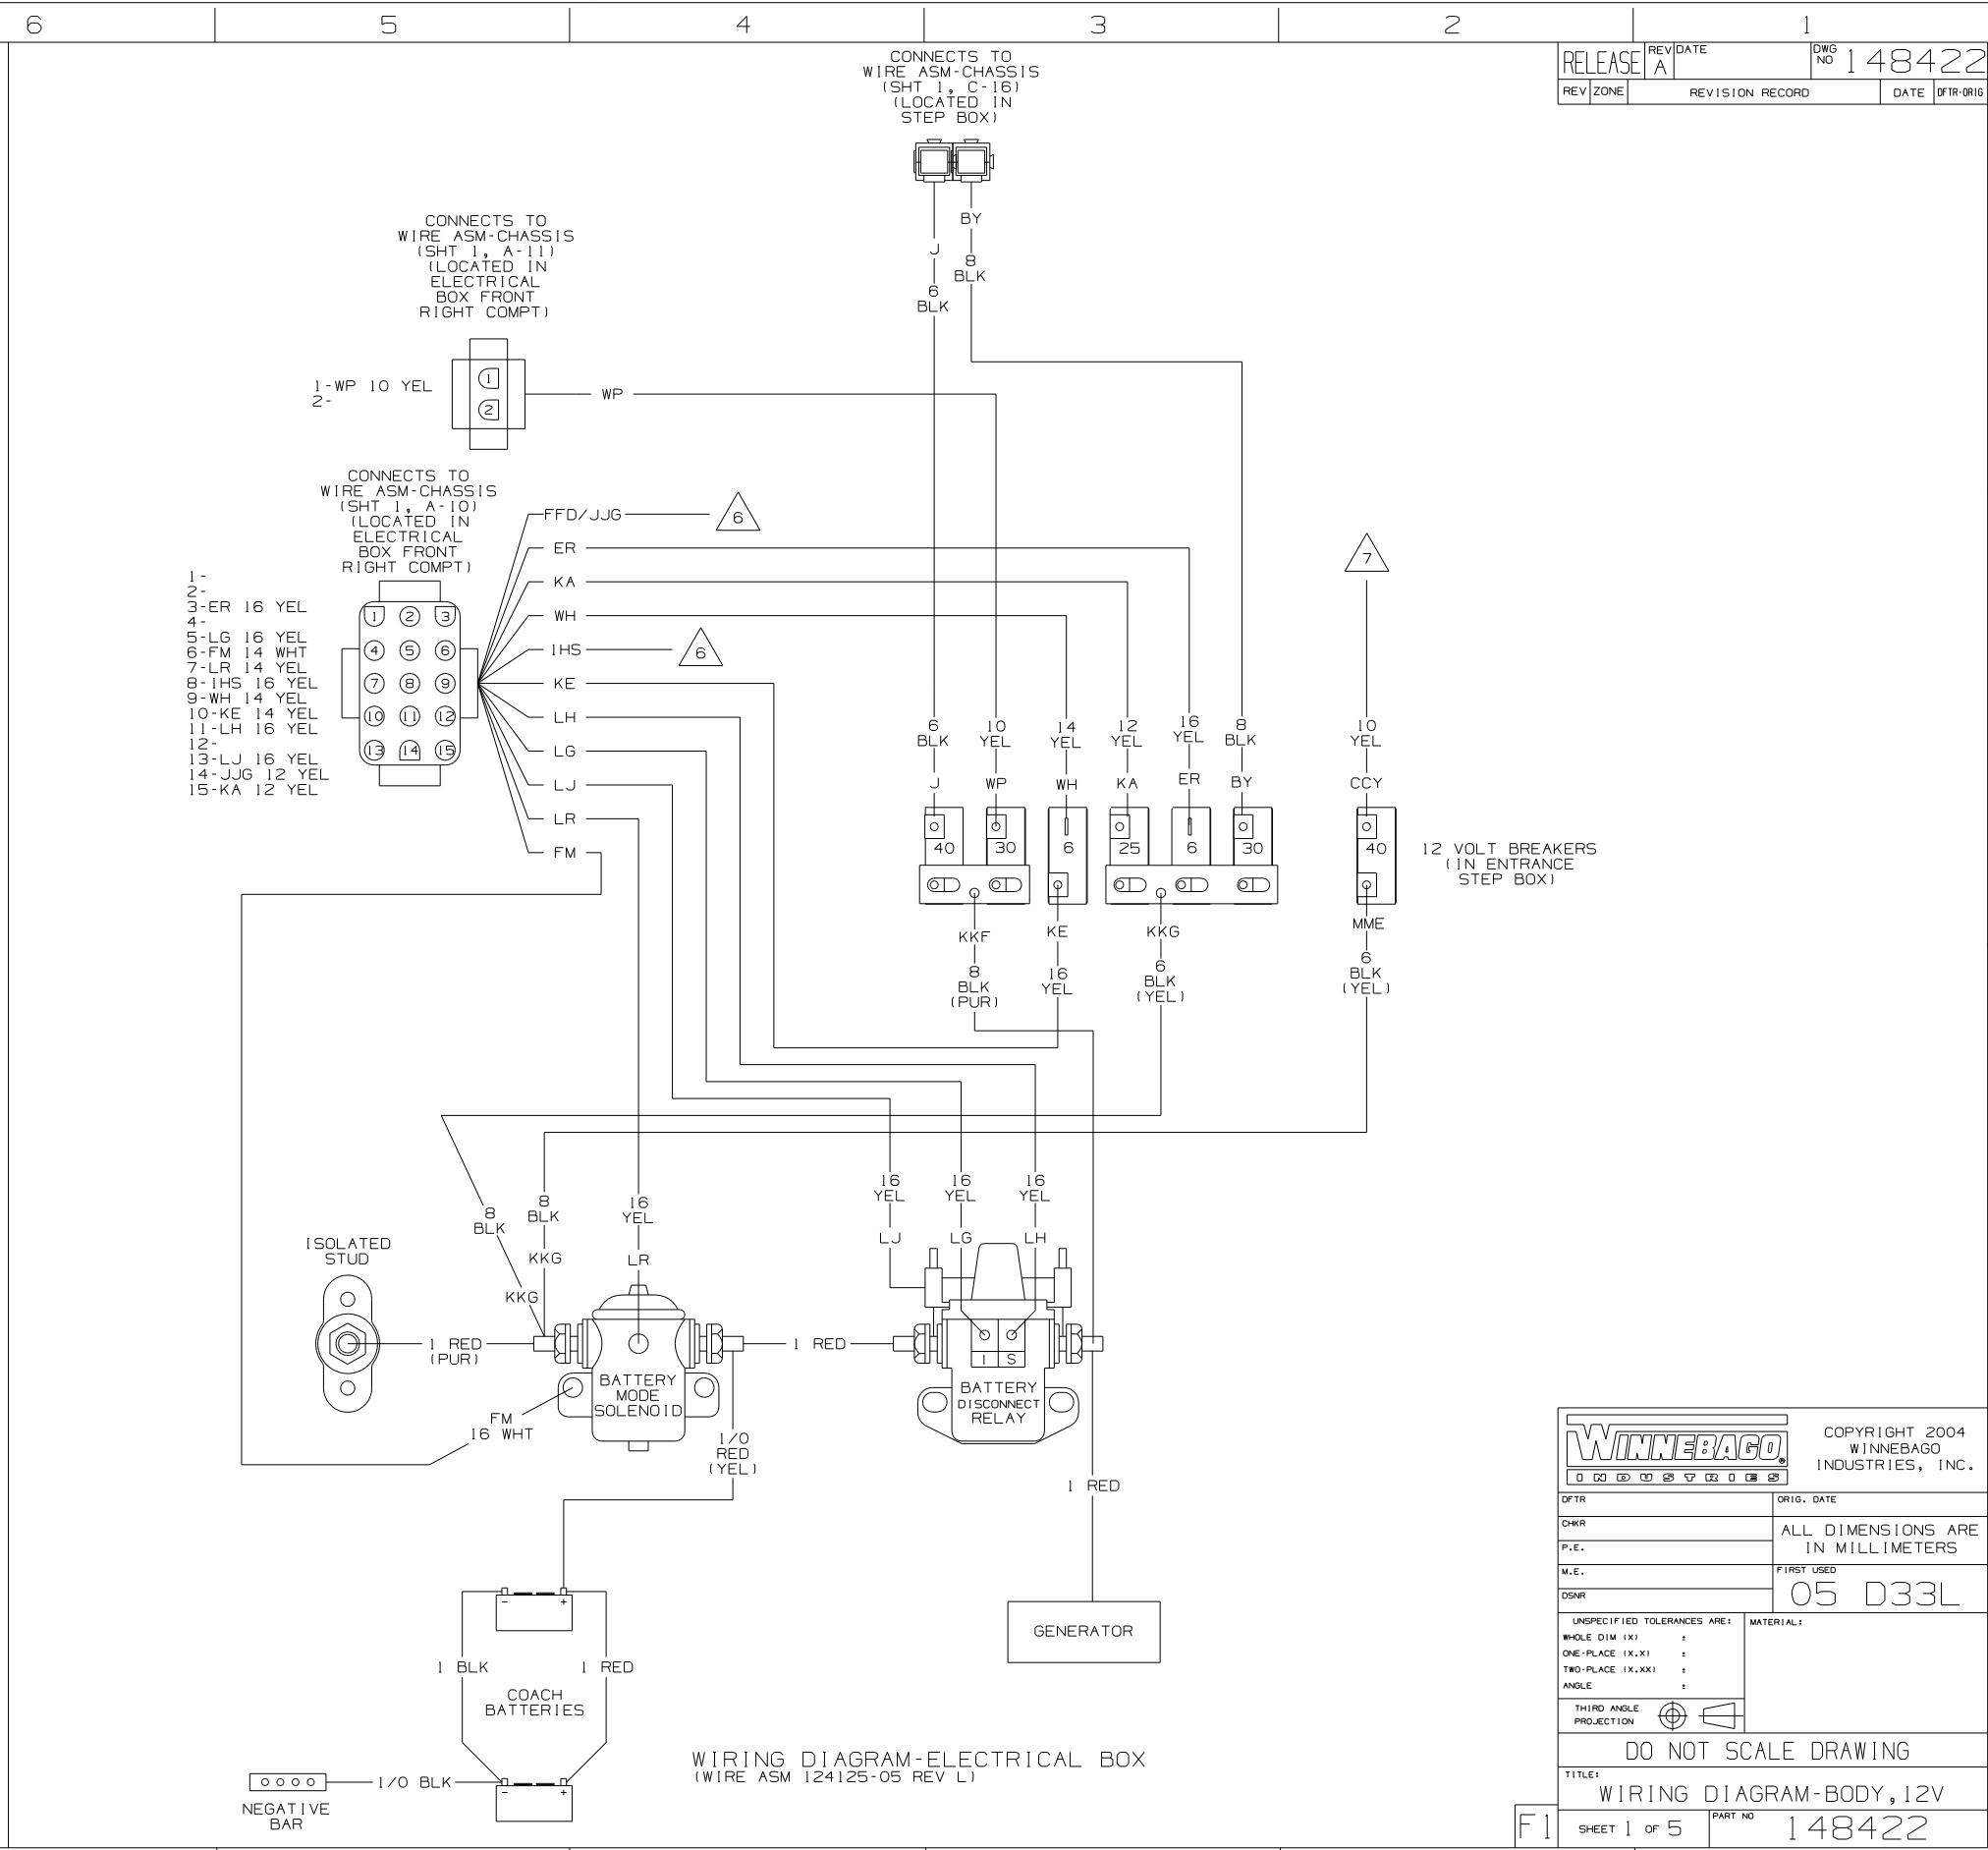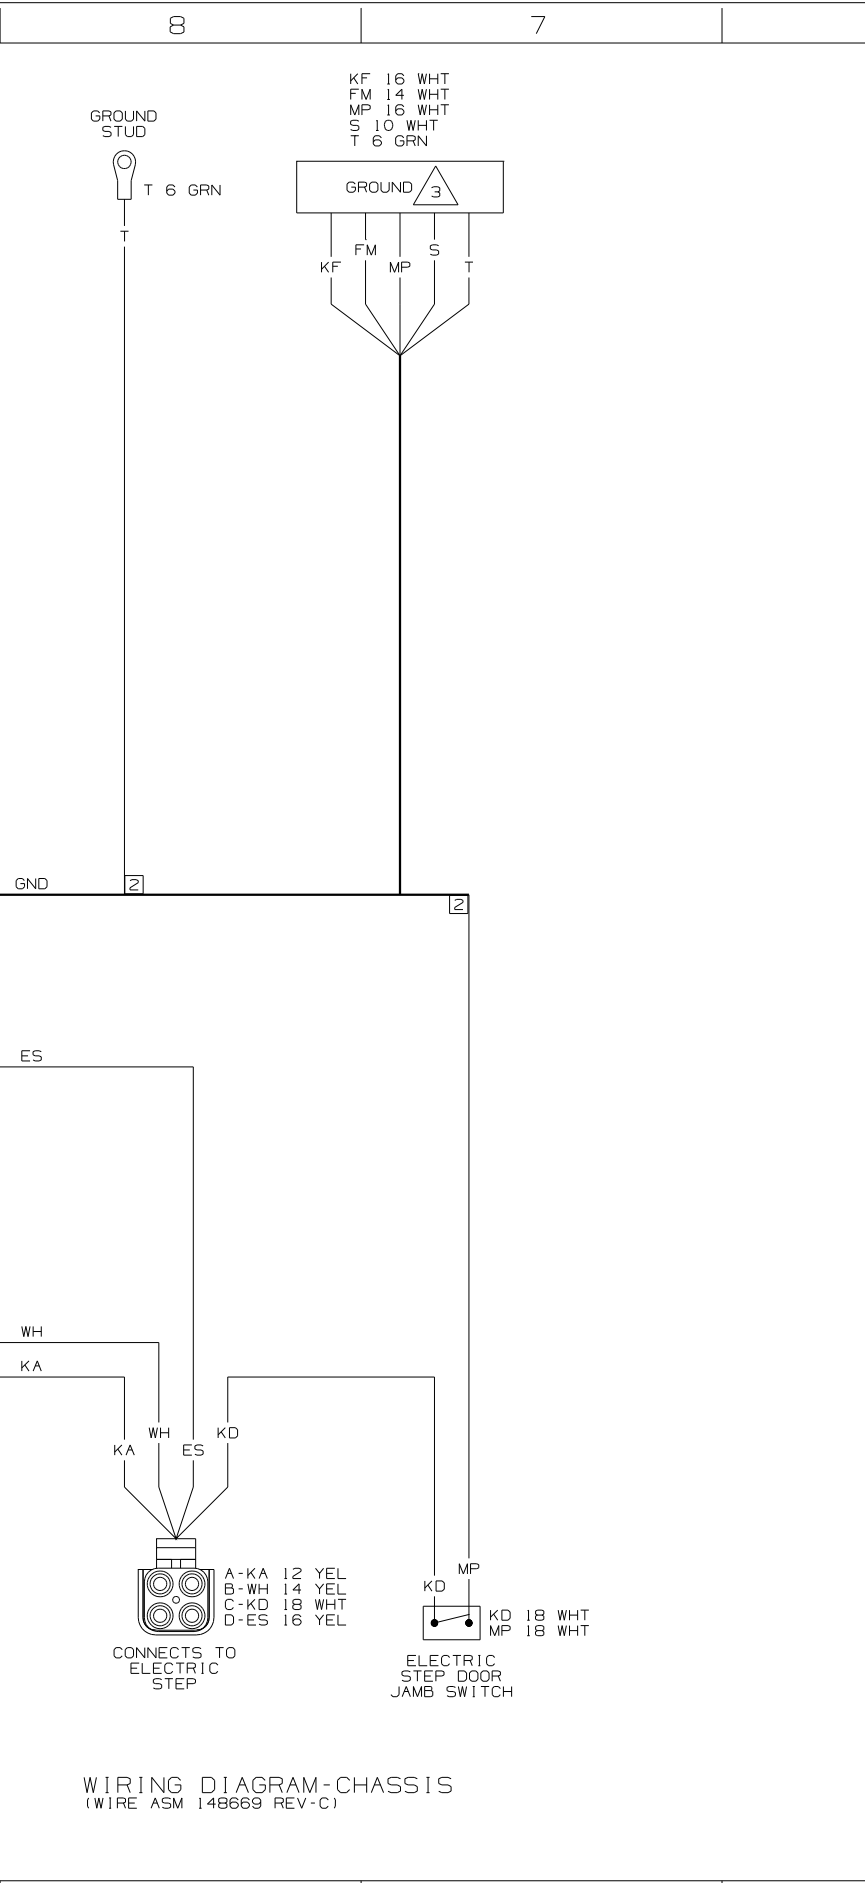



<b>WINNEBAGO</b>		COPYRIGHT 2004 WINNEBAGO INDUSTRIES, INC.	
DFTR	ORIG. DATE	ALL DIMENSIONS ARE IN MILLIMETERS	
CHR		M.E.	
P.E.		FIRST USED	
M.E.		05 D33L	
DSNR		UNSPECIFIED TOLERANCES ARE:	
		MATERIAL:	
		HOLE DIM (X) :	
		ONE-PLACE (X, X) :	
		TWO-PLACE (X, XX) :	
		ANGLE :	
		THIRD ANGLE PROJECTION	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-BODY, 12V			
SHEET 1 of 5		PART NO 148422	
REF: 1		04/22/2004	

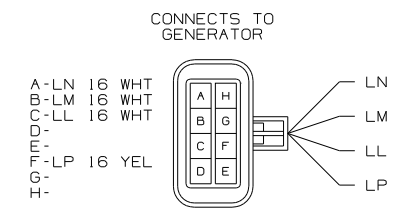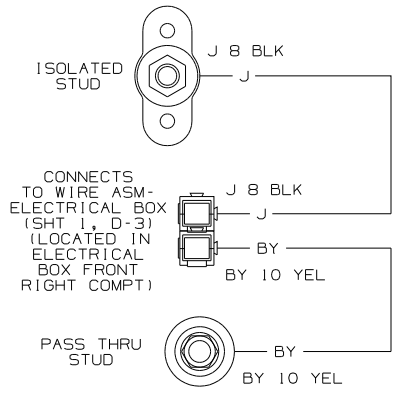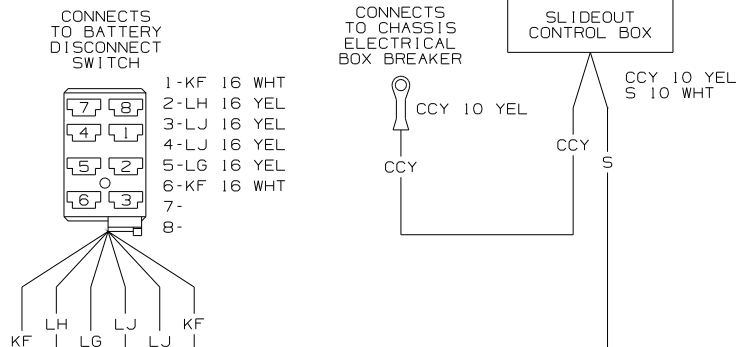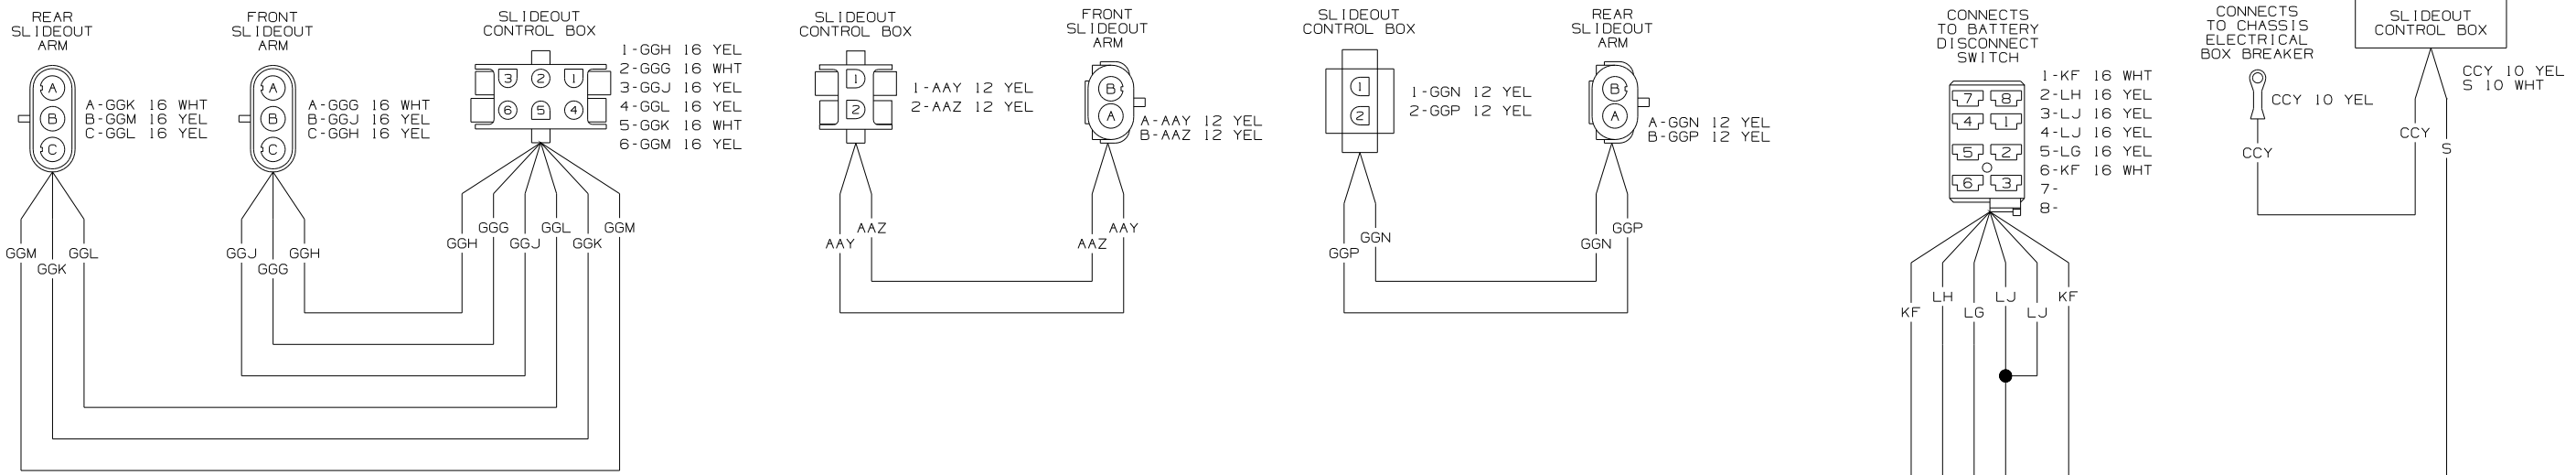

- 7 WIRE IS PART OF WIRE ASM-CHASSIS.
- 6 UNUSED WIRES TAPED BACK TO HARNESS.
- 5 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
- 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
- 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
- 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.

NOTES:  
 1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

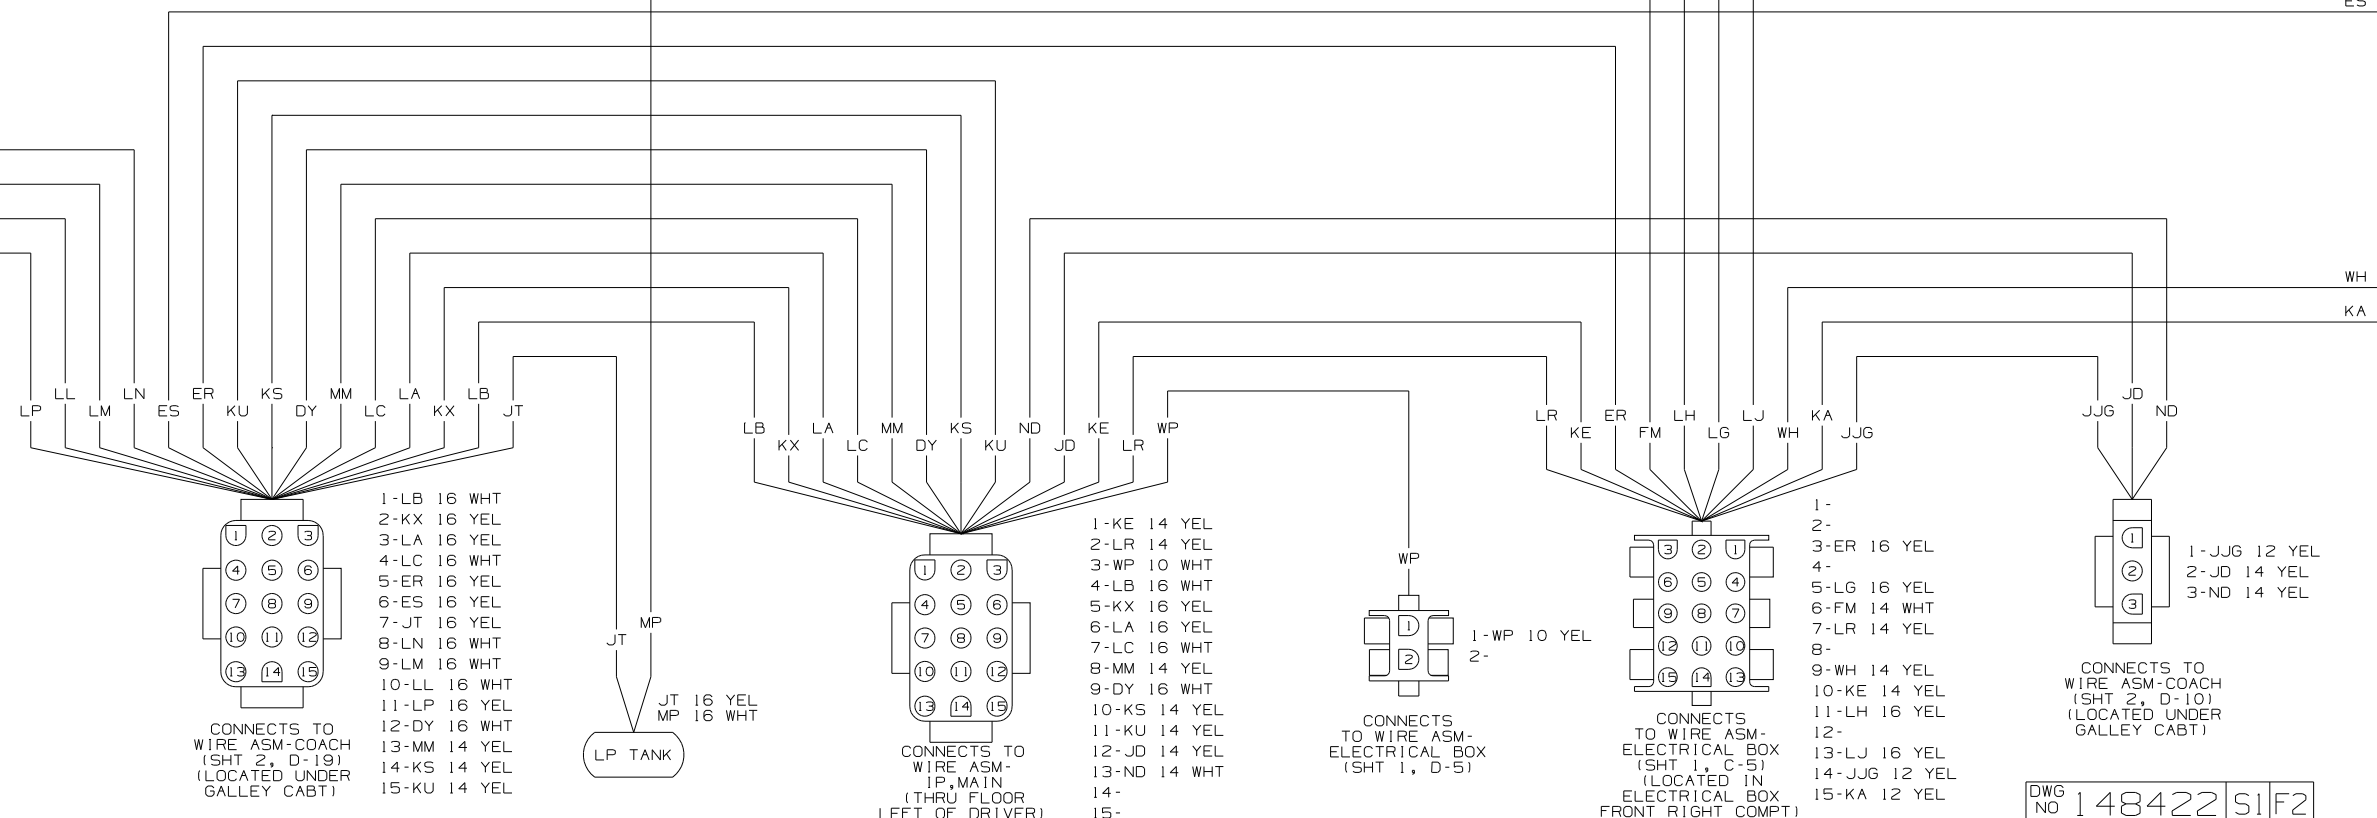

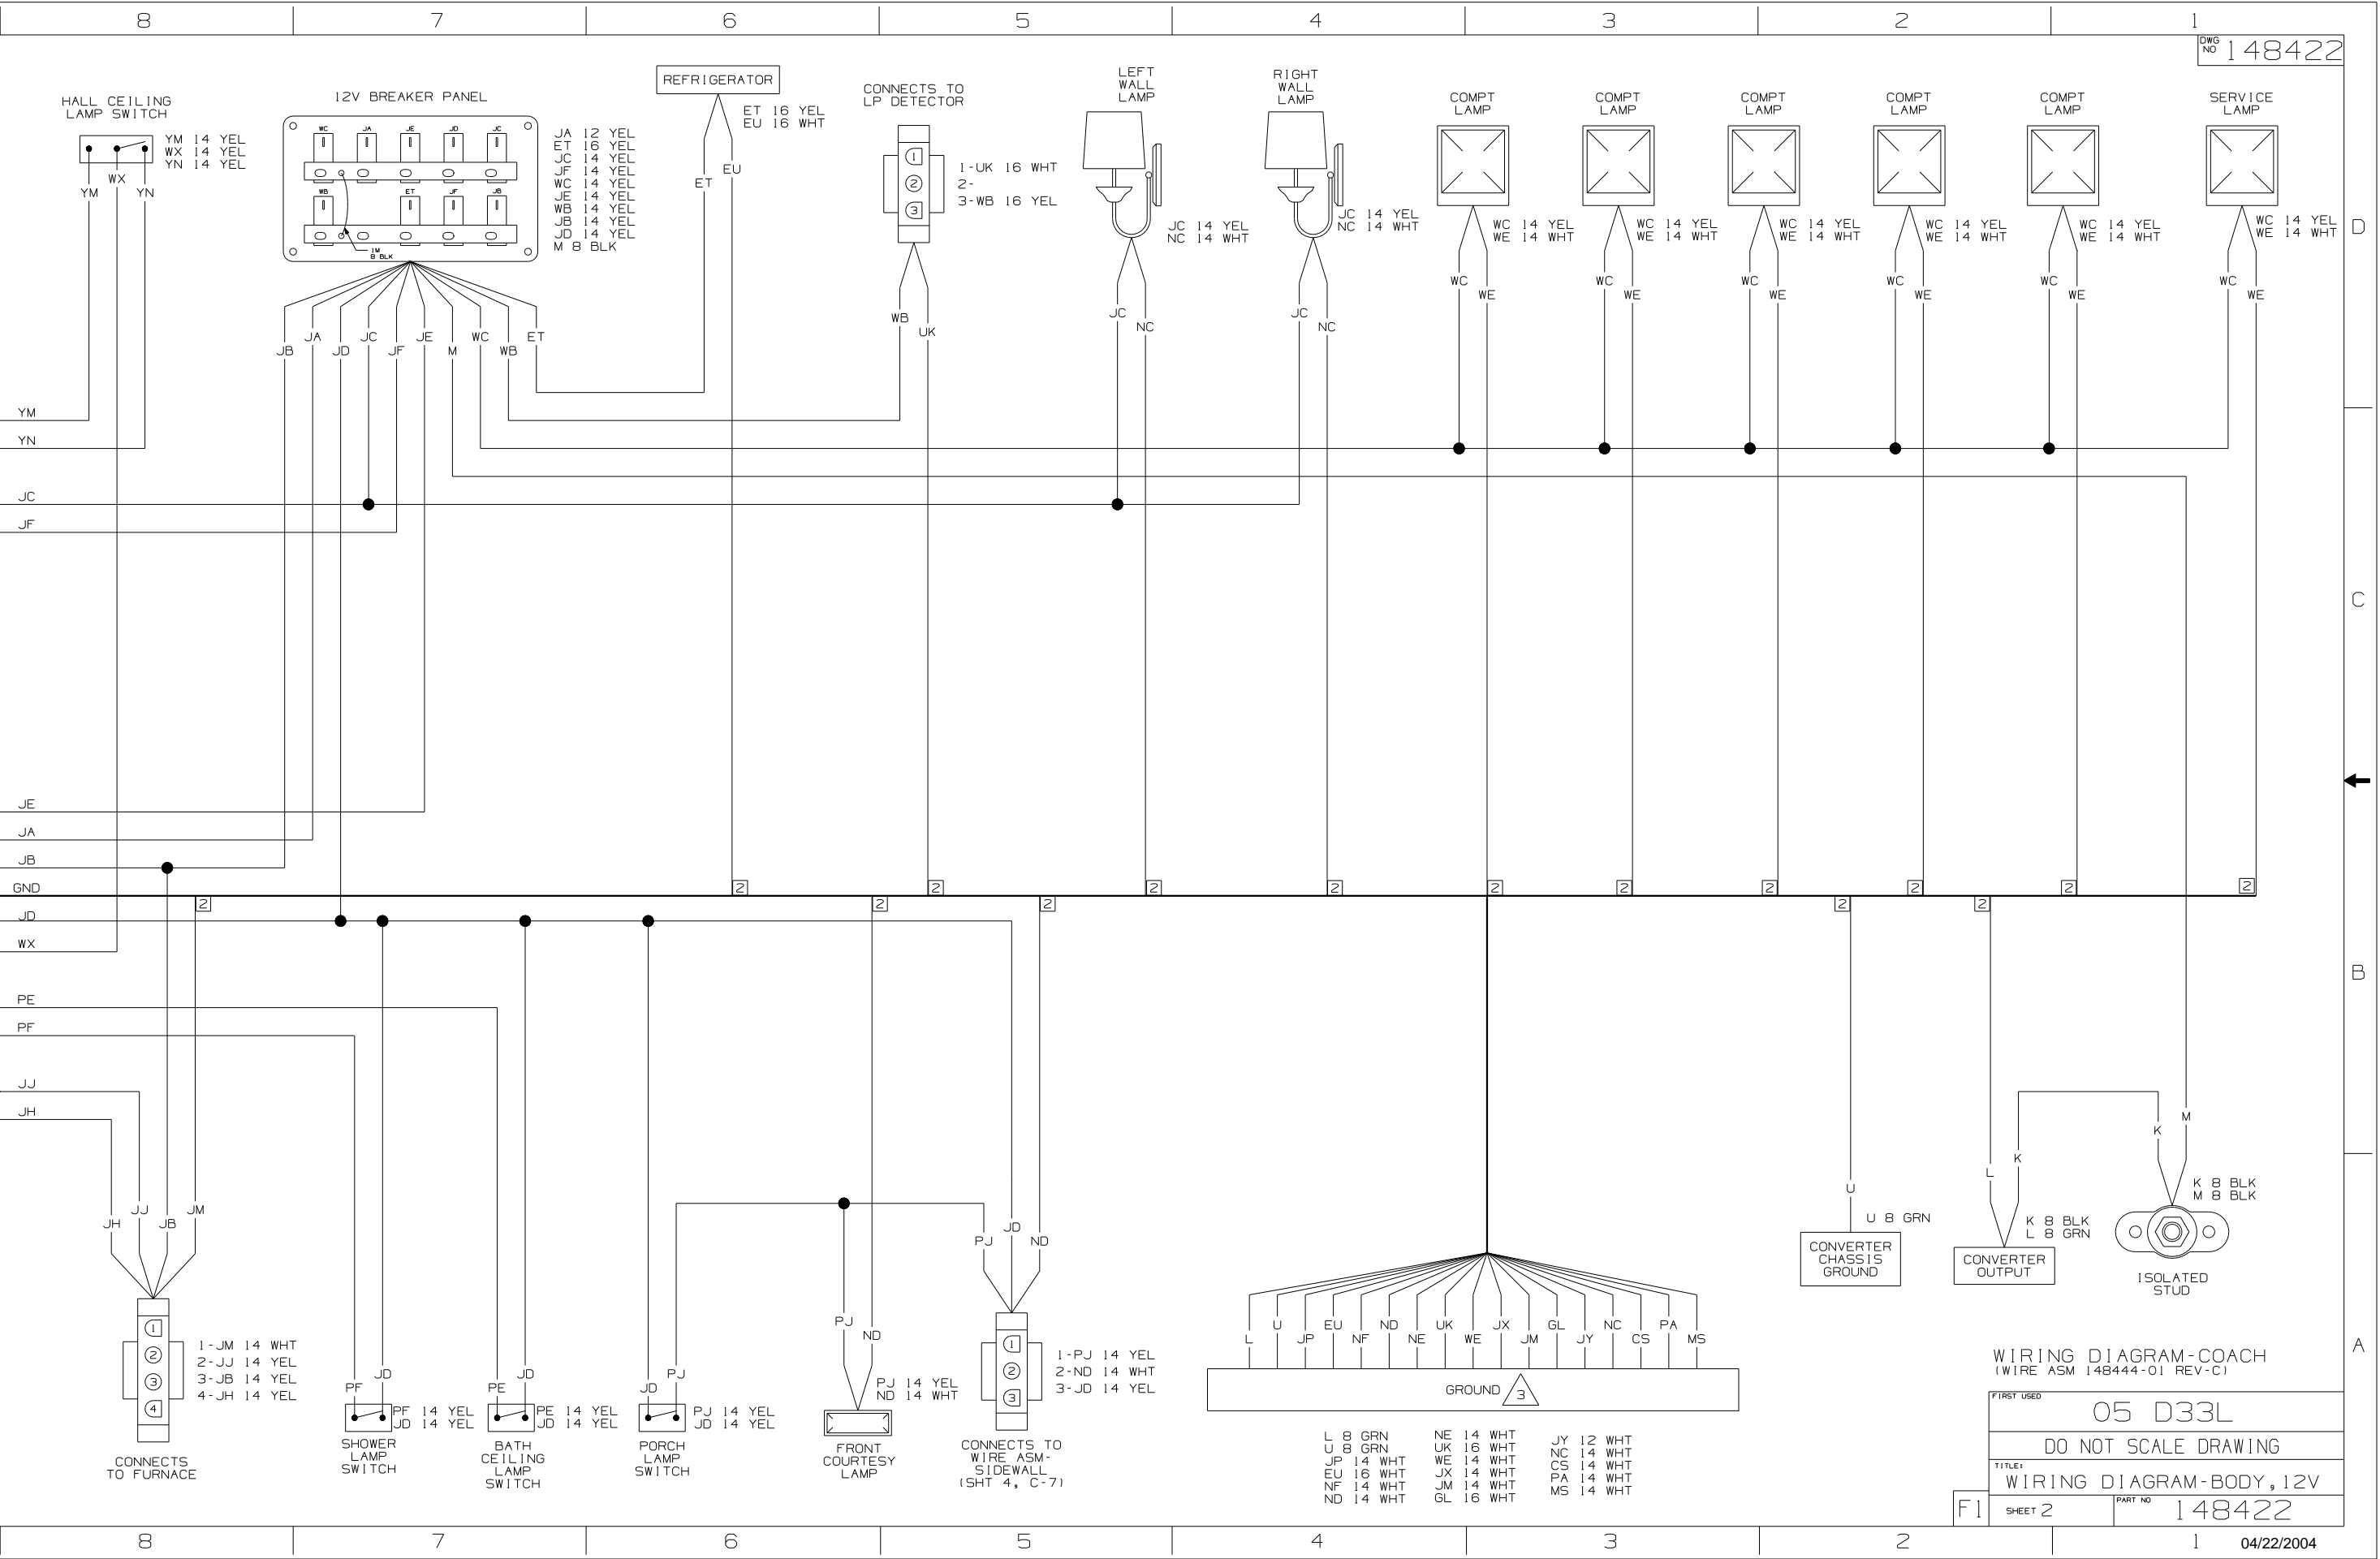

12V BREAKER PANEL

REFRIGERATOR

CONNECTS TO LP DETECTOR

LEFT WALL LAMP

RIGHT WALL LAMP

COMPT LAMP

COMPT LAMP


COMPT LAMP

COMPT LAMP

COMPT LAMP

SERVICE LAMP

HALL CEILING LAMP SWITCH

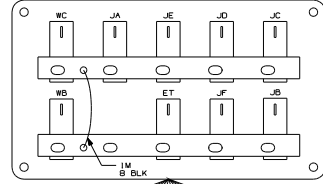

ET 16 YEL  
EU 16 WHT

1-UK 16 WHT  
2- 3-WB 16 YEL

JC 14 YEL  
NC 14 WHT

JC 14 YEL  
NC 14 WHT

WC 14 YEL  
WE 14 WHT

WC 14 YEL  
WE 14 WHT

WC 14 YEL  
WE 14 WHT

WC 14 YEL  
WE 14 WHT

WC 14 YEL  
WE 14 WHT

WC 14 YEL  
WE 14 WHT

YM 14 YEL  
WX 14 YEL  
YN 14 YEL

JB JA JD JC JF JE M WC WB ET

WB UK

JC NC

JC NC

WC WE

WC WE

WC WE

WC WE

WC WE

WC WE

YM  
YN

JC  
JF

JE  
JA  
JB

GND  
JD  
WX

PE  
PF  
JJ  
JH

JH JJ JB JM

1-JM 14 WHT  
2-JJ 14 YEL  
3-JB 14 YEL  
4-JH 14 YEL

PF JD PF 14 YEL  
JD JD 14 YEL


PE JD PE 14 YEL  
JD JD 14 YEL

JD PJ PD 14 YEL  
JD JD 14 YEL

PJ ND PJ 14 YEL  
ND ND 14 WHT


1-PJ 14 YEL  
2-ND 14 WHT  
3-JD 14 YEL

CONNECTS TO WIRE ASM-SIDEWALL (SHT 4, C-7)

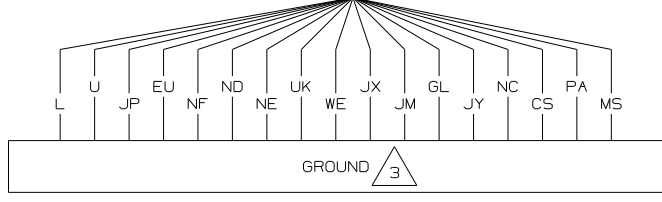

L 8 GRN  
U 8 GRN  
JP 14 WHT  
EU 16 WHT  
NF 14 WHT  
ND 14 WHT  
NE 14 WHT  
UK 16 WHT  
WE 14 WHT  
JX 14 WHT  
JM 14 WHT  
GL 16 WHT  
JY 12 WHT  
NC 14 WHT  
CS 14 WHT  
PA 14 WHT  
MS 14 WHT

U 8 GRN  
CONVERTER CHASSIS GROUND

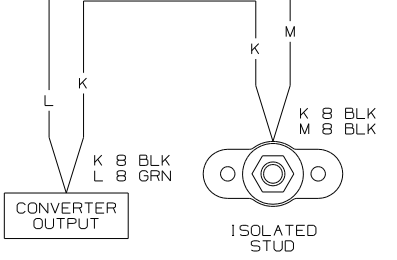

WIRING DIAGRAM-COACH (WIRE ASM 148444-01 REV-C)


FIRST USED 05 D33L


DO NOT SCALE DRAWING

TITLE: WIRING DIAGRAM-BODY, 12V


F1 SHEET 2

PART NO 148422

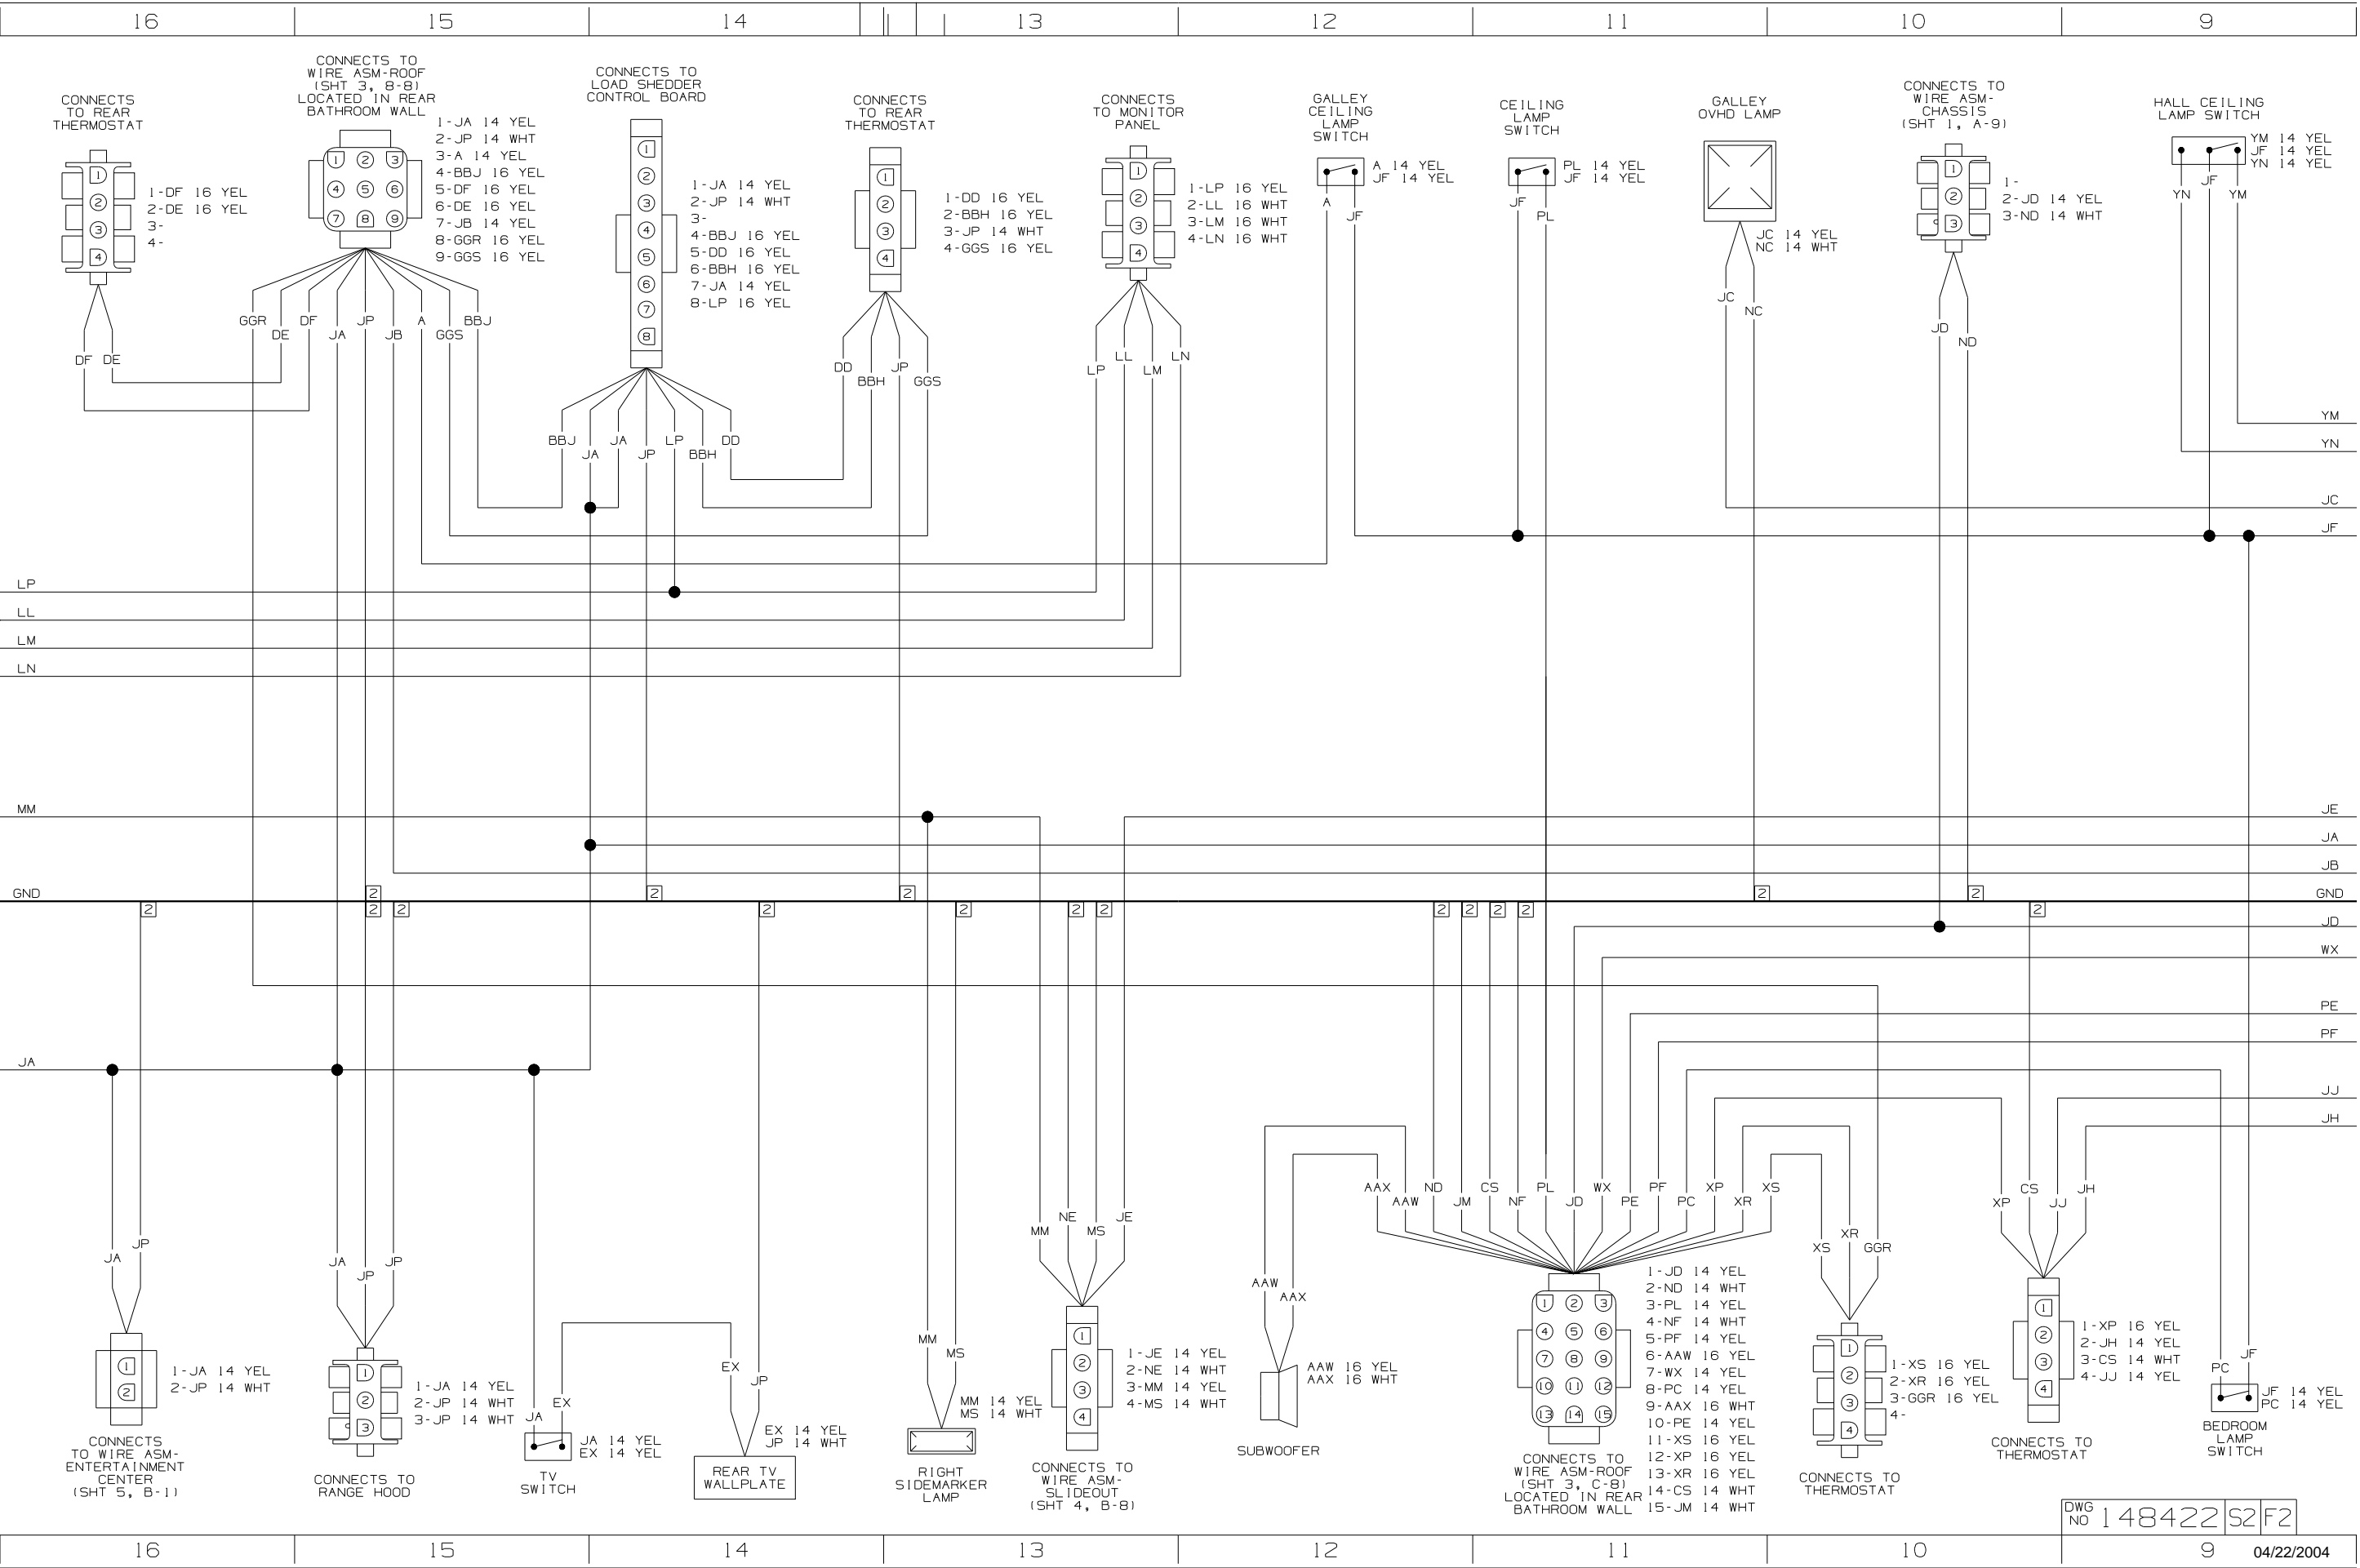

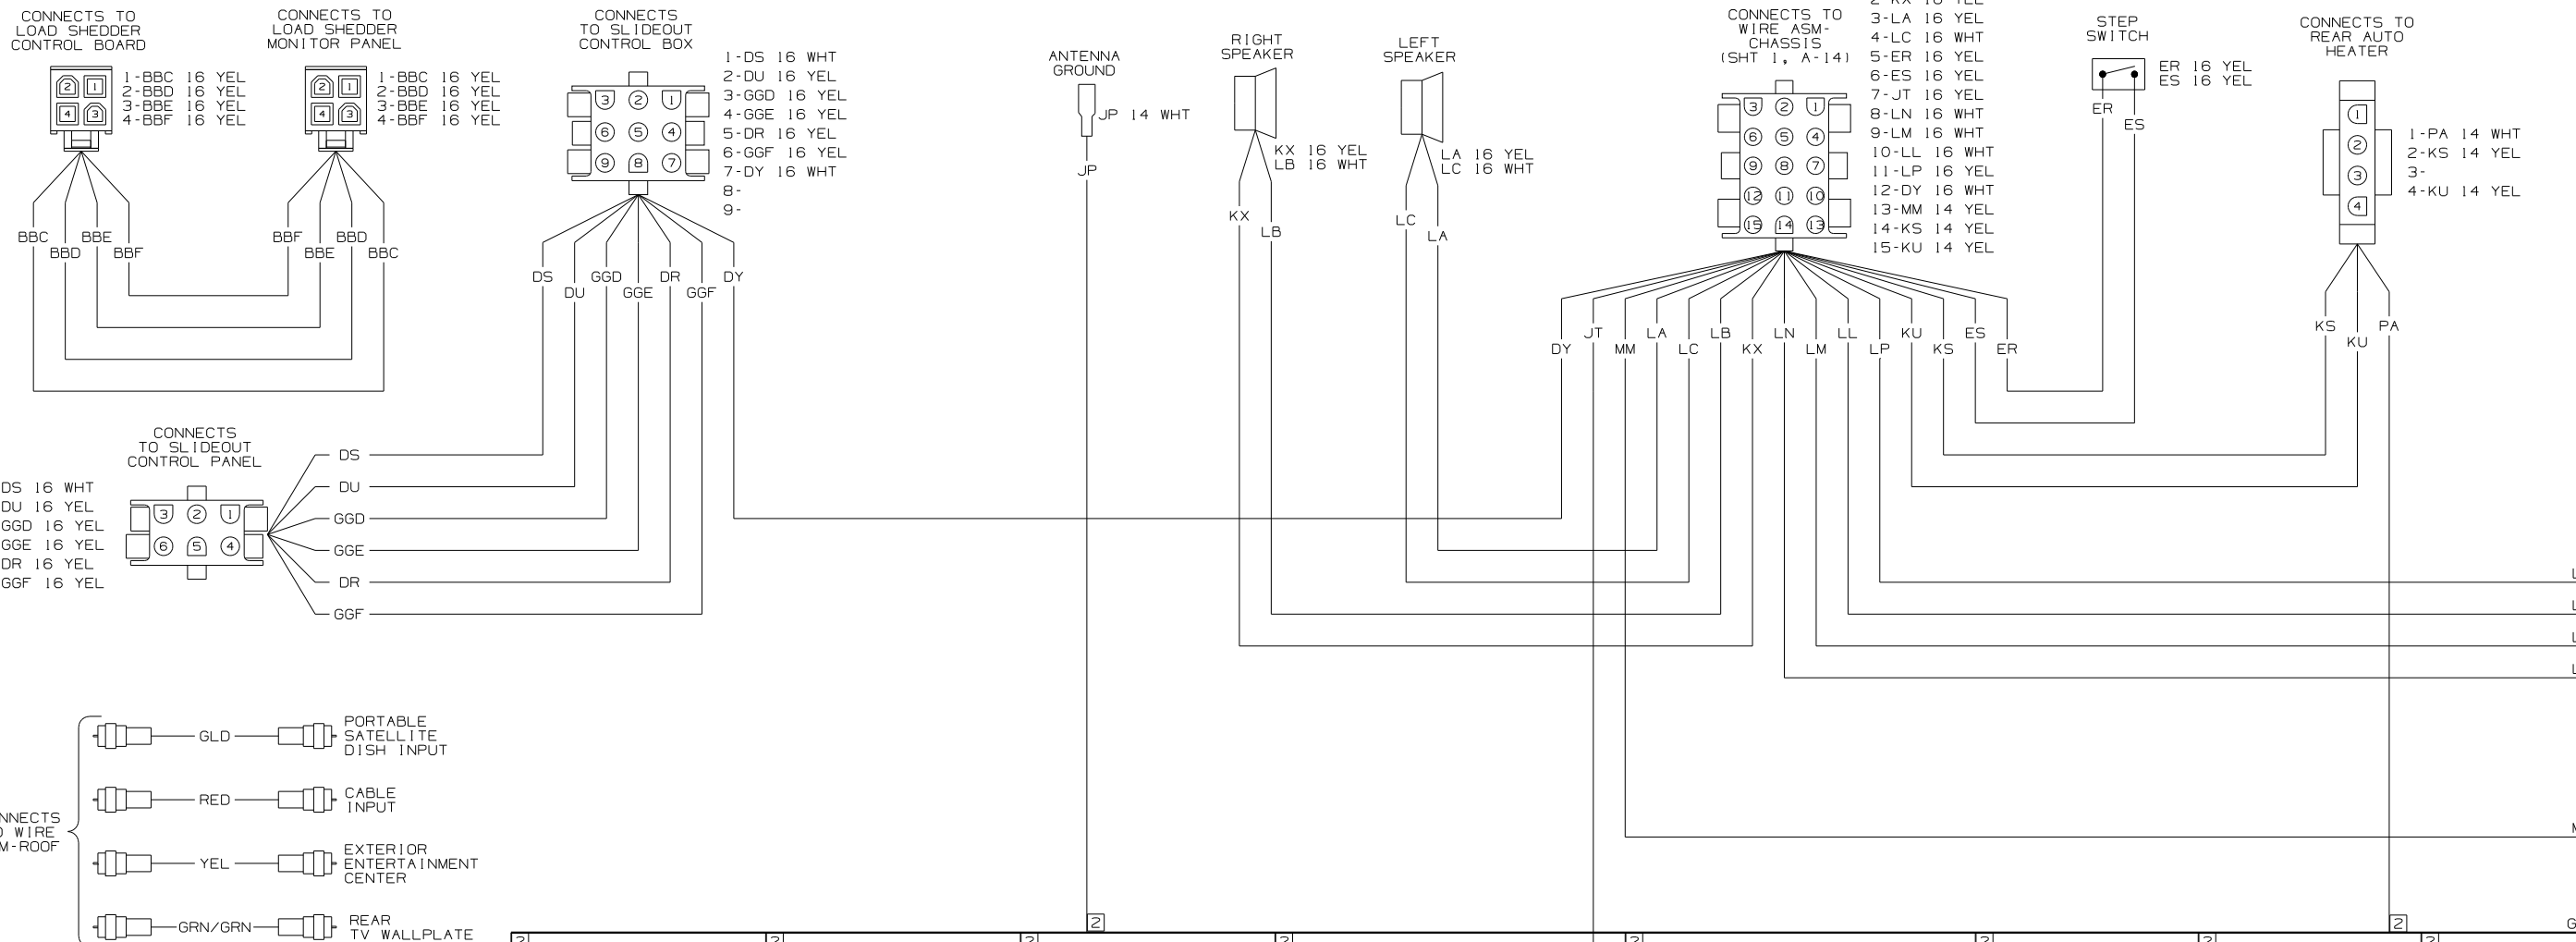


- 5 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
- 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
- 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
- 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

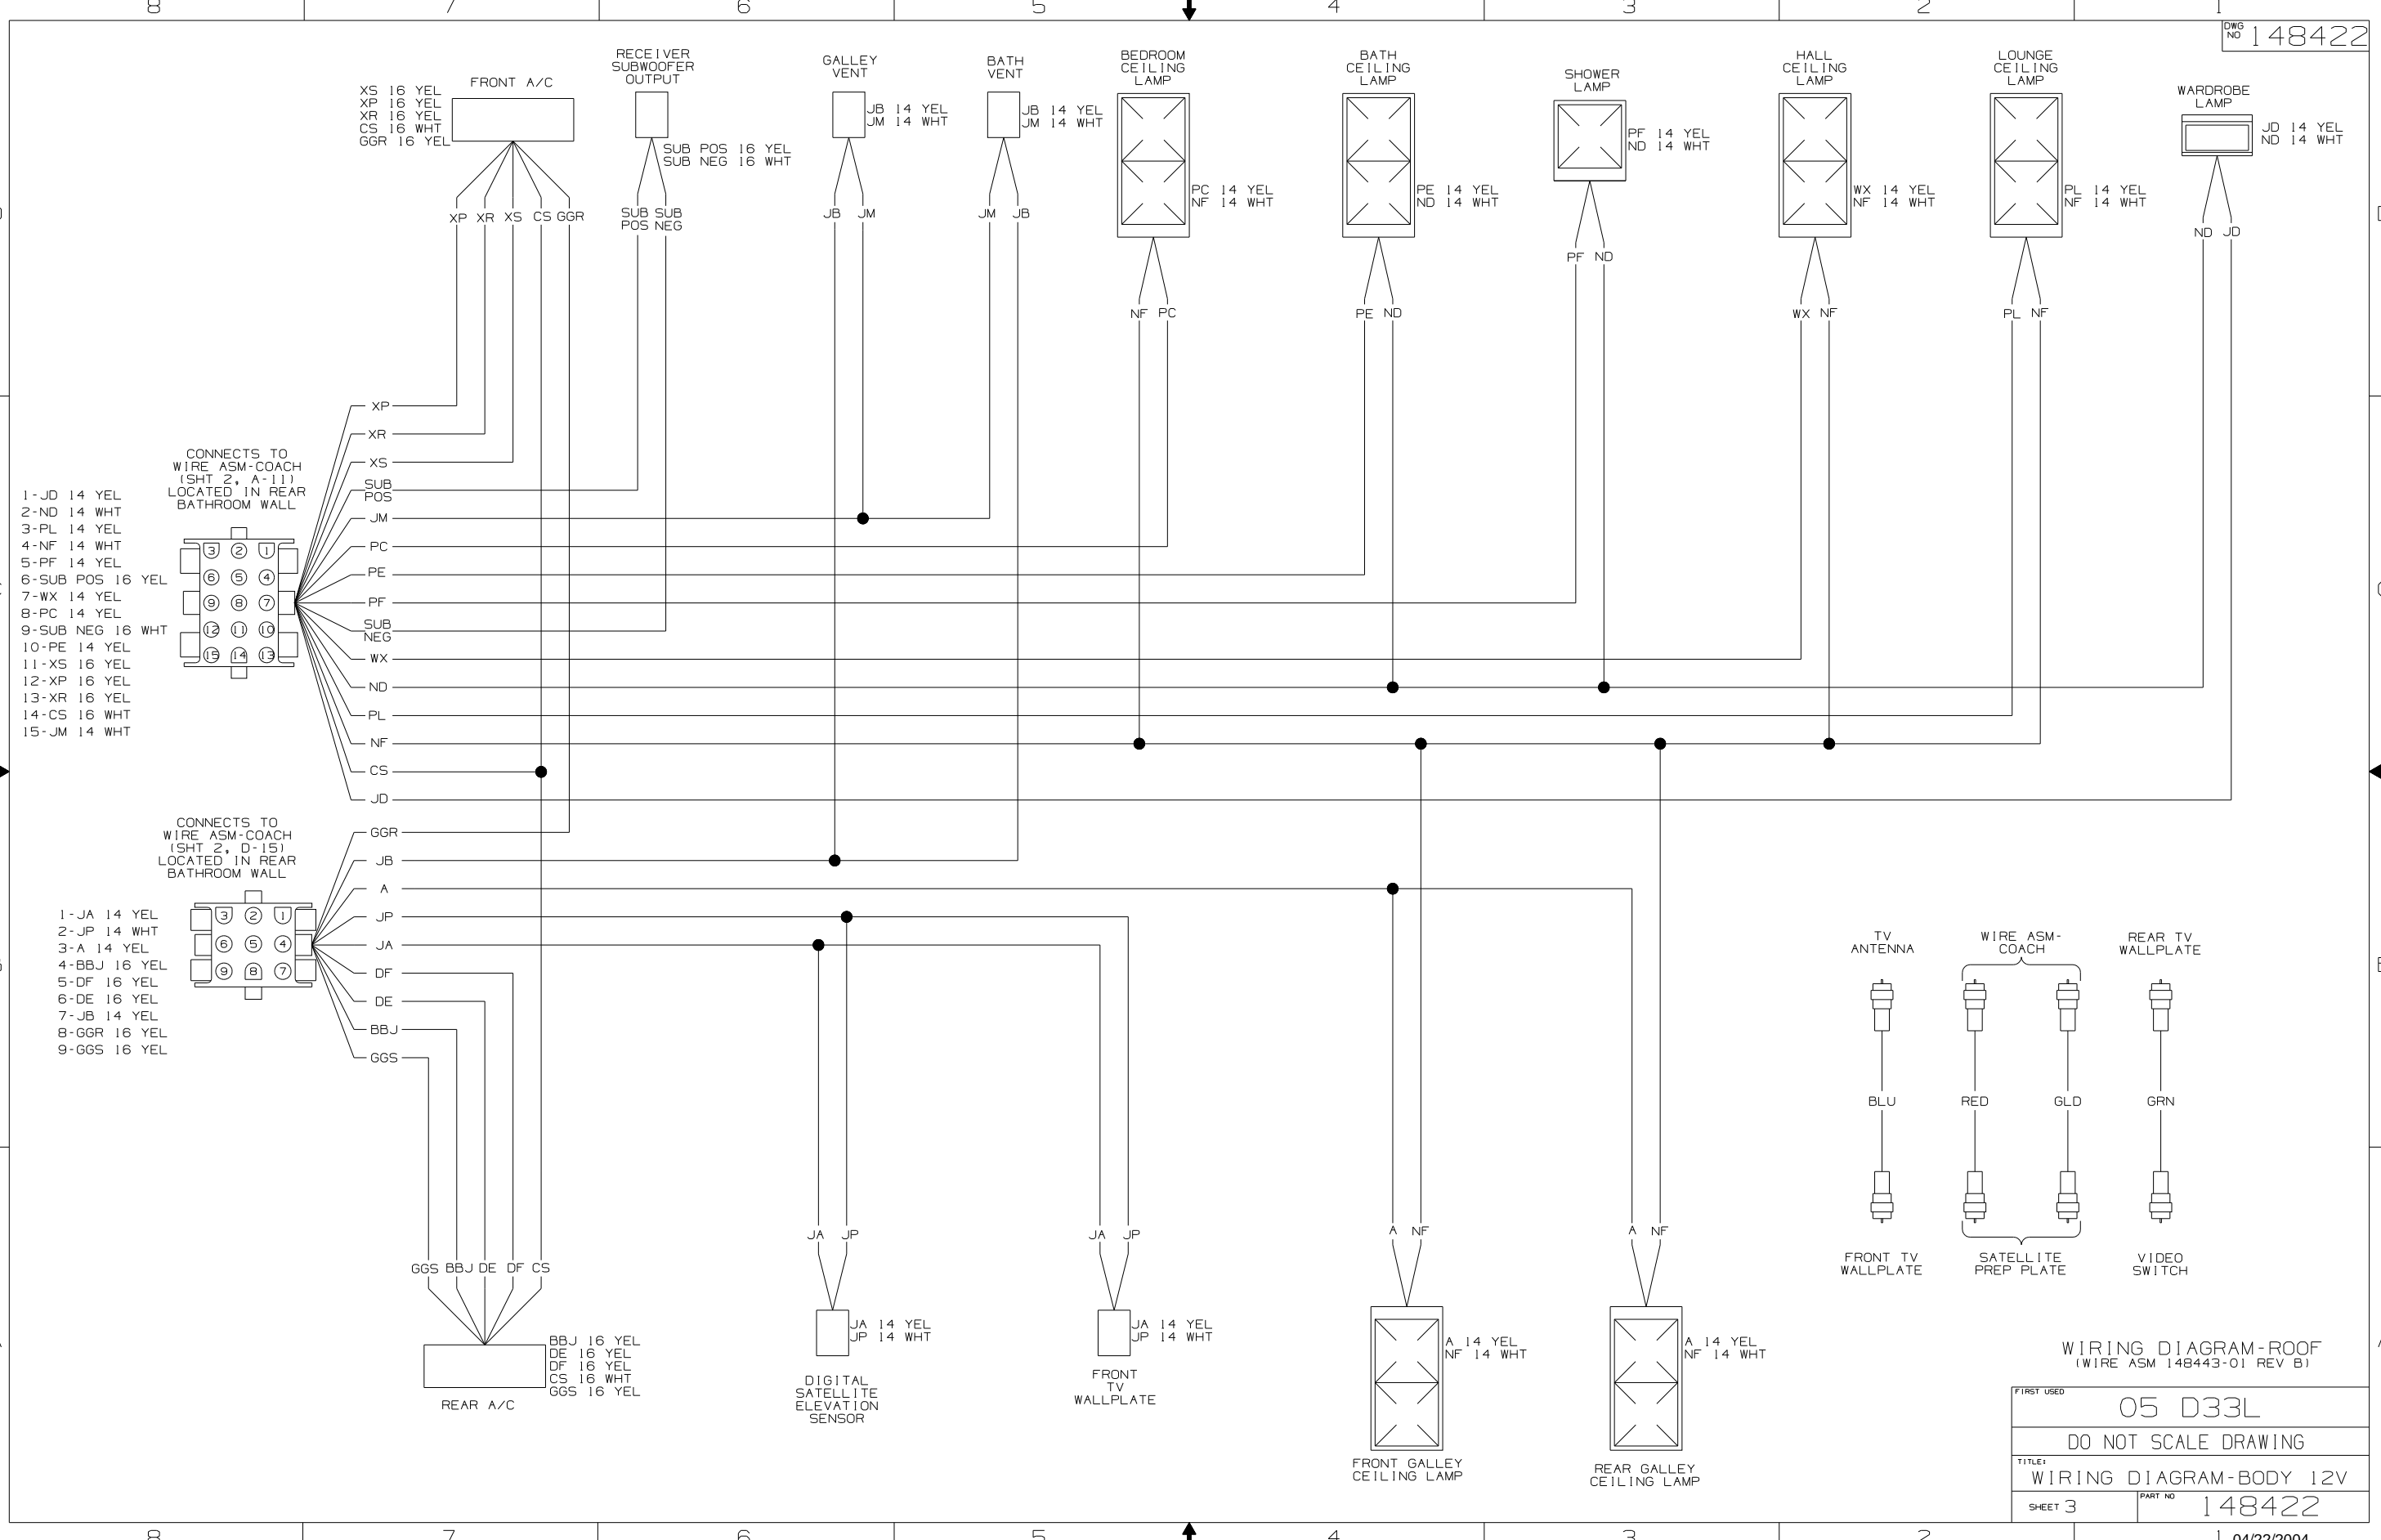


WIRING DIAGRAM-ROOF  
(WIRE ASM 148443-01 REV B)


FIRST USED	05 D33L
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY 12V
SHEET 3	PART NO 148422

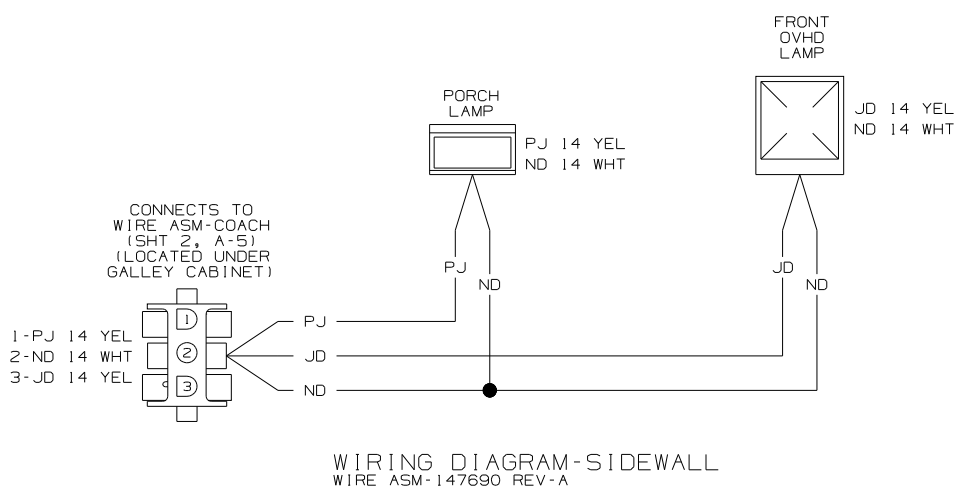


WIRING DIAGRAM-SIDEWALL  
(WIRE ASM-147690 REV-A)

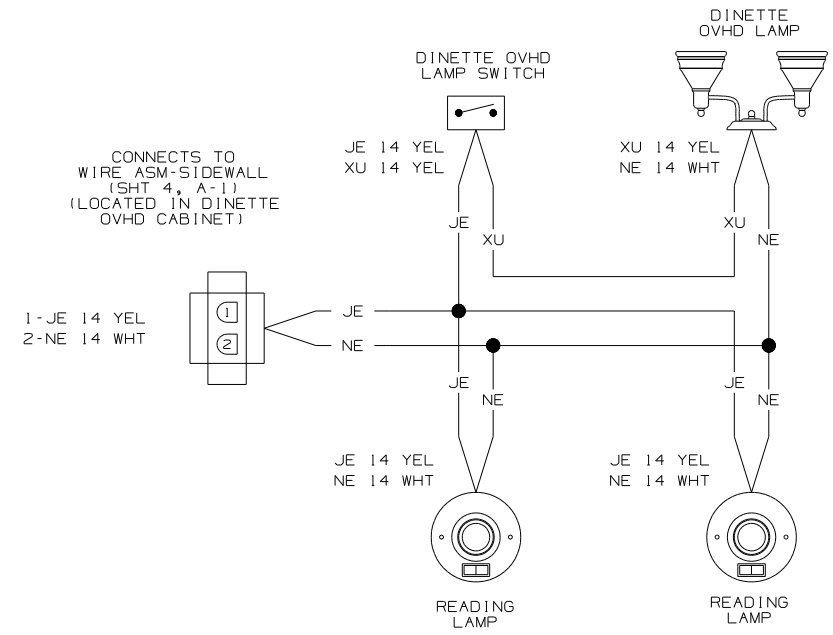

WIRING DIAGRAM-OVHD  
(WIRE ASM-148704 REV A)

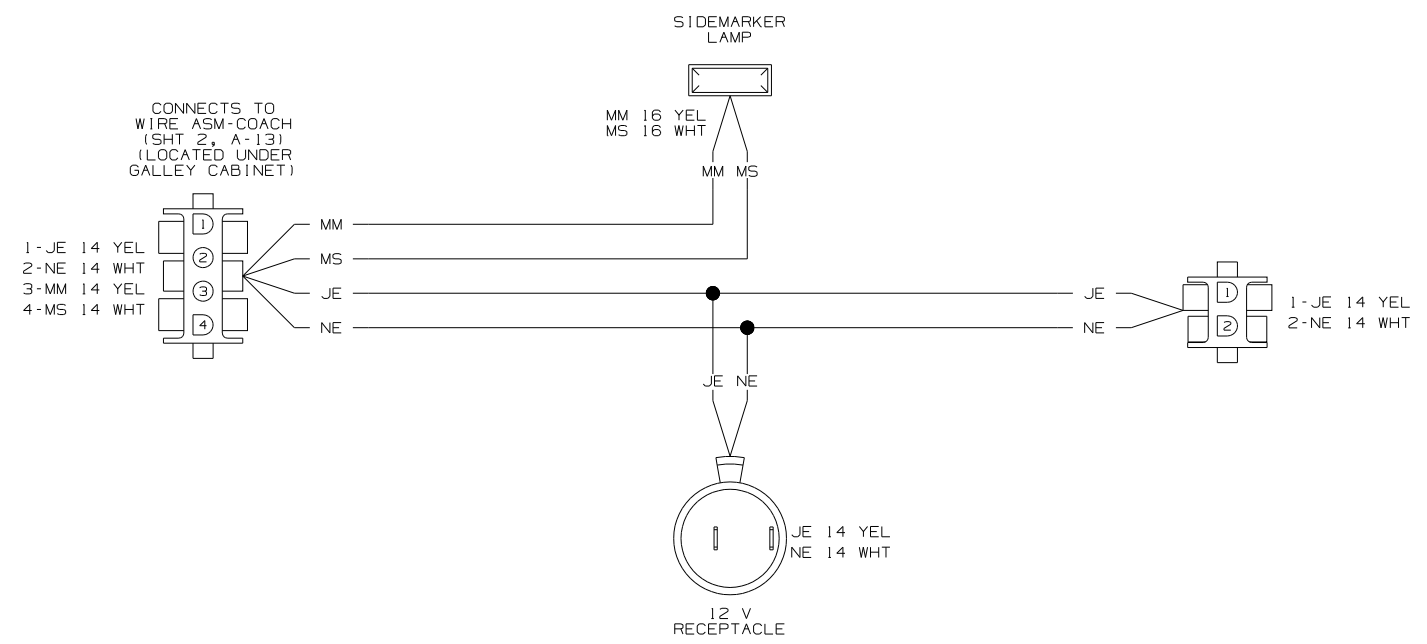

WIRING DIAGRAM-SIDEWALL  
(WIRE ASM-148590 REV-A)

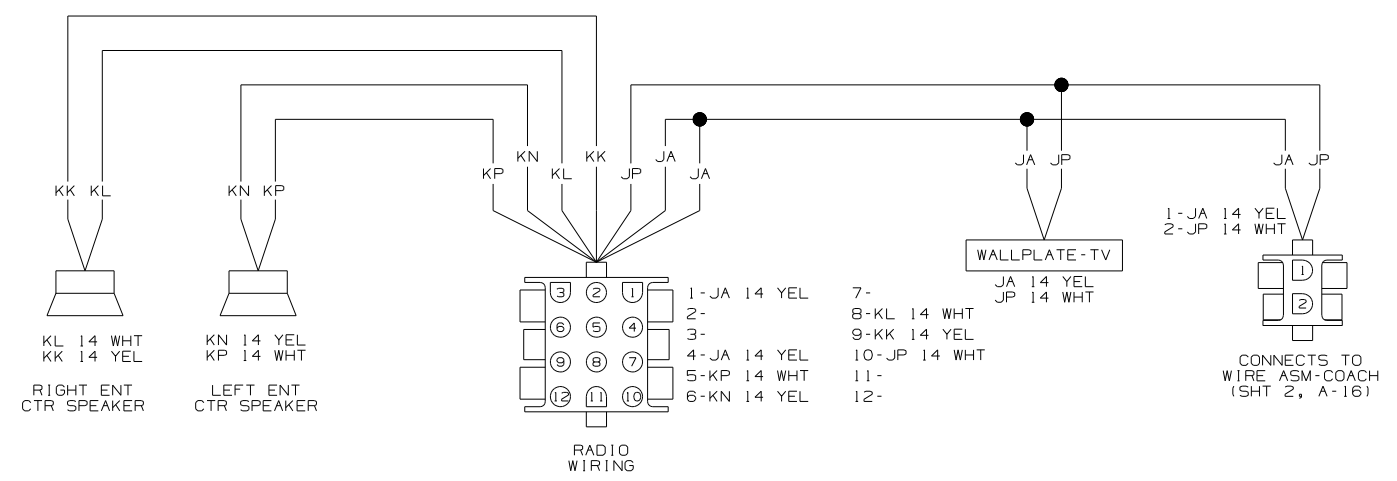

WIRING DIAGRAM-ENTERTAINMENT CENTER  
(WIRE ASM 125853-04 REV-L)

FIRST USED	05 D33L
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 4	PART NO 148422