



DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

PA 14 WHT
 JN 14 WHT WE 14 WHT
 EED 12 WHT FM 14 WHT
 MP 16 WHT MS 14 WHT
 MP-1 18 WX PM 14 WHT

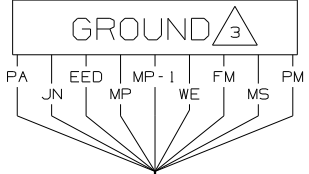


 CONNECTS TO
 WIRE ASM SIDEWALL
 (SHT 4, B-3)
 LOCATED BEHIND
 SOFA




1-DJ 16 YEL
 2-DK 16 WHT
 3-JG 14 YEL
 4-JN 14 WHT
 5-MM 14 YEL
 6-MS 14 WHT

CONNECTS TO
 WIRE ASM
 ELECTRICAL BOX
 (SHT 5, C-4)
 LOCATED IN
 STEP BOX

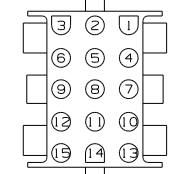


1-
 2-
 3-ER 16 YEL
 4-
 5-LG 16 YEL
 6-FM 14 WHT
 7-LR 14 YEL
 8-HS 16 YEL


9-WH 14 YEL
 10-KE 14 YEL
 11-LH 16 YEL
 12-
 13-LJ 16 YEL
 14-FFD 12 YEL
 15-KA 12 YEL

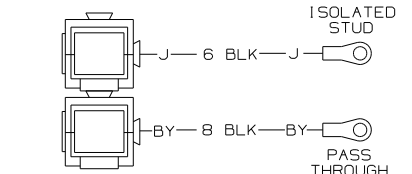




CONNECTS TO
 WIRE ASM-
 ELECTRICAL BOX
 (SHT 6, D-2)
 LOCATED IN
 STEP BOX

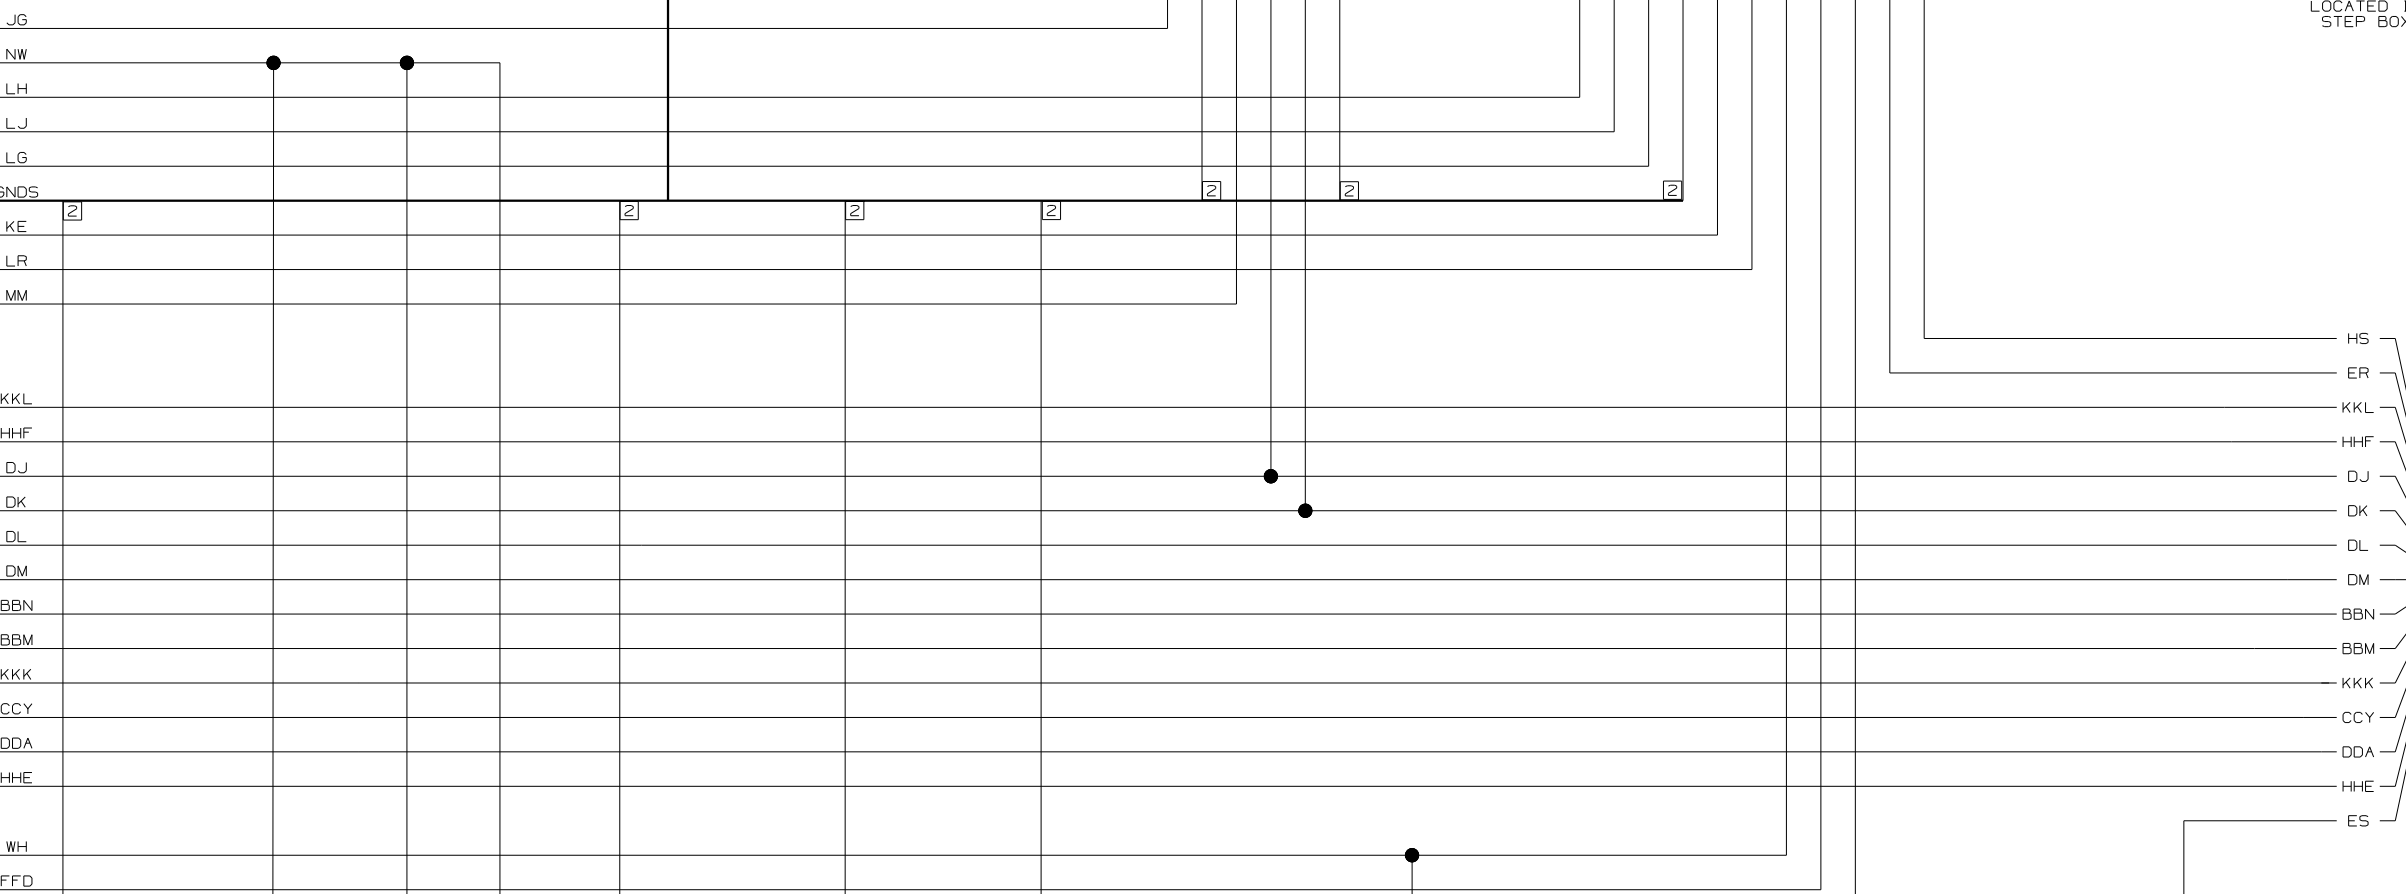

CONNECTS TO
 WIRE ASM-COACH
 (SHT 2, C-32)
 LOCATED BELOW
 GALLEY CABTS





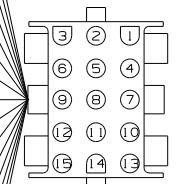


 1-BBM 16 YEL
 2-BBN 16 YEL
 3-DDA 16 YEL
 4-CCY 16 YEL
 5-KKK 16 YEL
 6-HHE 16 YEL
 7-HHF 16 YEL
 8-KKL 16 YEL
 9-DJ 16 YEL
 10-DK 16 WHT
 11-DL 16 YEL
 12-DM 16 WHT
 13-ER 16 YEL
 14-ES 16 YEL
 15-HS 16 YEL





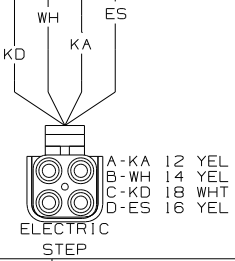

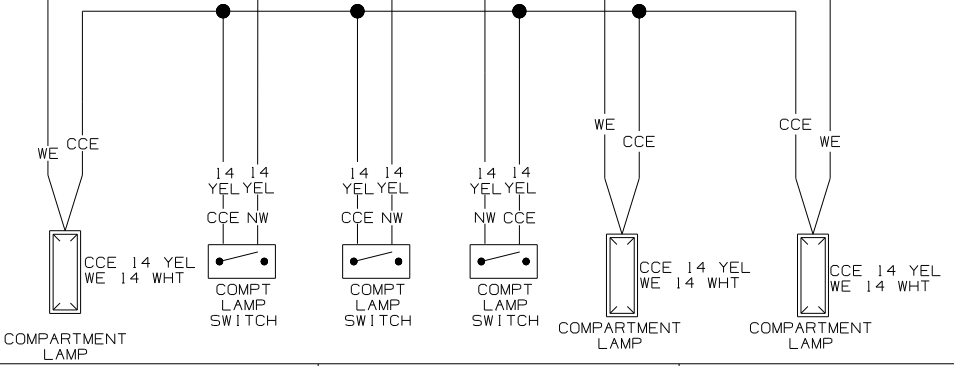


WIRING DIAGRAM-CHASSIS
 (WIRE ASM-150889 REV B)


WINNEBAGO		COPYRIGHT 2004 WINNEBAGO INDUSTRIES, INC.	
DFTR	ORIG. DATE	ALL DIMENSIONS ARE IN MILLIMETERS	
CHNR		FIRST USED 05 G38G	
P.E.		UNSPECIFIED TOLERANCES ARE:	
M.E.		MATERIAL:	
DSNR		HOLE DIM (X) :	
		ONE-PLACE (X, X) :	
		TWO-PLACE (X, XX) :	
		ANGLE :	
		THIRD ANGLE PROJECTION	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-BODY, 12V			
SHEET 1 of 6	PART NO	151275	
REF: NONE		1	7/23/2004

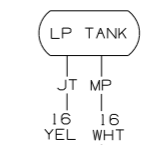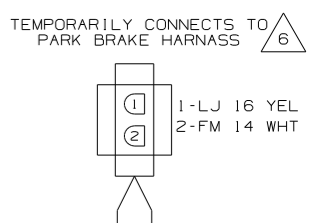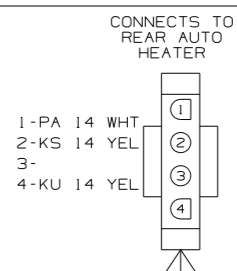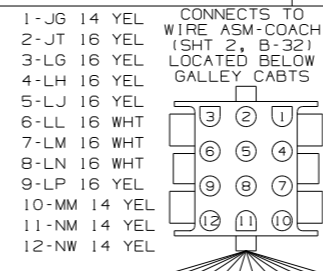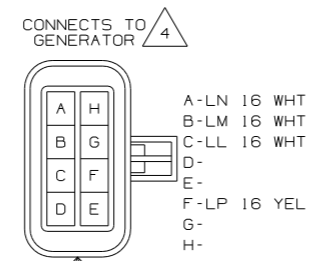

- A1-WP 10 YEL
- A2-KS 14 YEL
- A3-RA 14 YEL
- B1-DJ 16 YEL
- B2-DK 16 WHT
- B3-DL 16 YEL
- B4-DM 16 WHT
- C1-KE 14 YEL
- C2-RB 14 YEL
- D1-LL 16 WHT
- D2-LM 16 WHT
- D3-LN 16 WHT
- D4-LP 16 YEL
- E1-MM 14 YEL
- E2-BBN 16 YEL
- F1-BBM 16 YEL
- F2-KKK 16 YEL
- G1-DDA 16 YEL
- G2-CCY 16 YEL
- G3-LR 14 YEL
- G4-NA 14 YEL
- H1-KU 14 YEL
- H2-NH 14 YEL
- J1-AAT 16 YEL
- J2-AAU 16 WHT
- J3-AAW 16 YEL
- J4-AAX 16 WHT
- K1-HHE 16 YEL
- K2-HHF 16 YEL
- K3-KKL 16 YEL

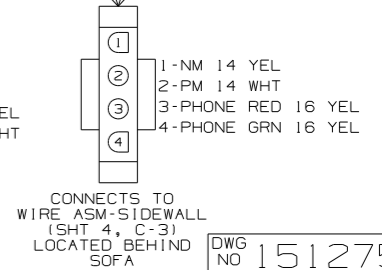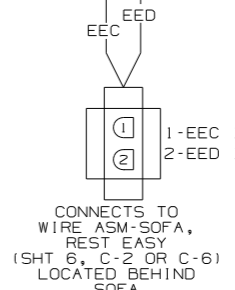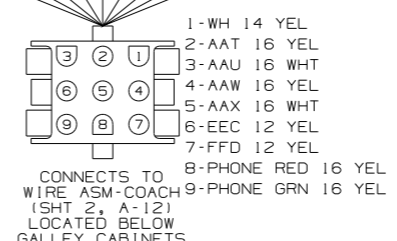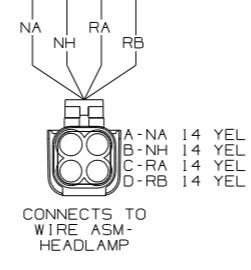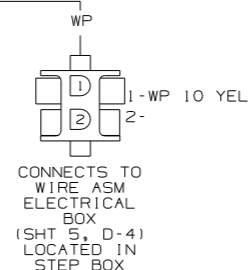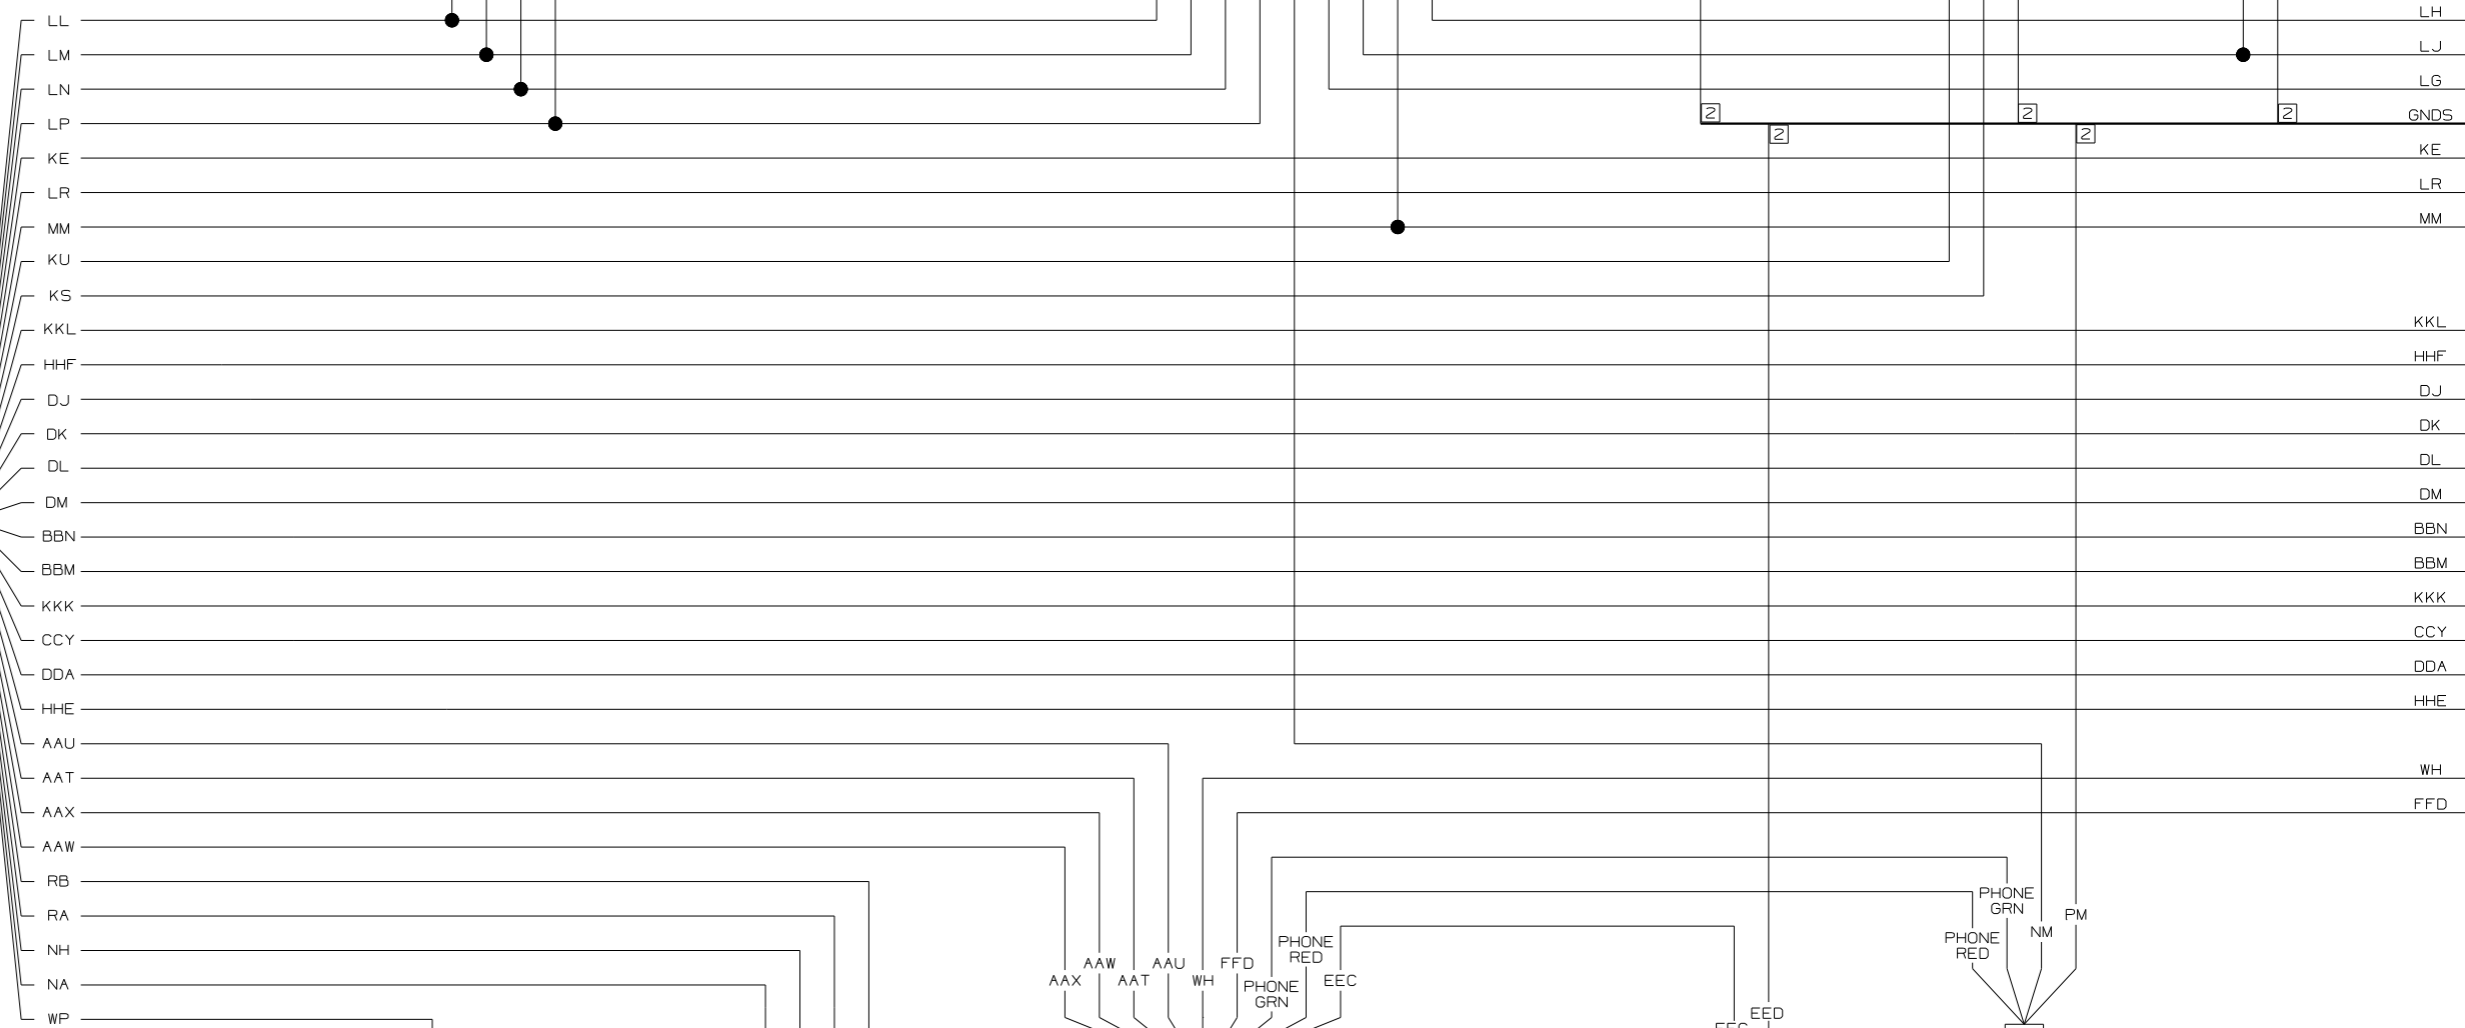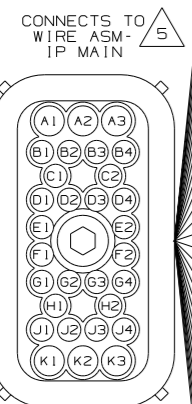

- 6 FOR PRODUCTION PURPOSES ONLY.
 - 5 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
 - 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
 - 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
 - 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
- NOTES:
 1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

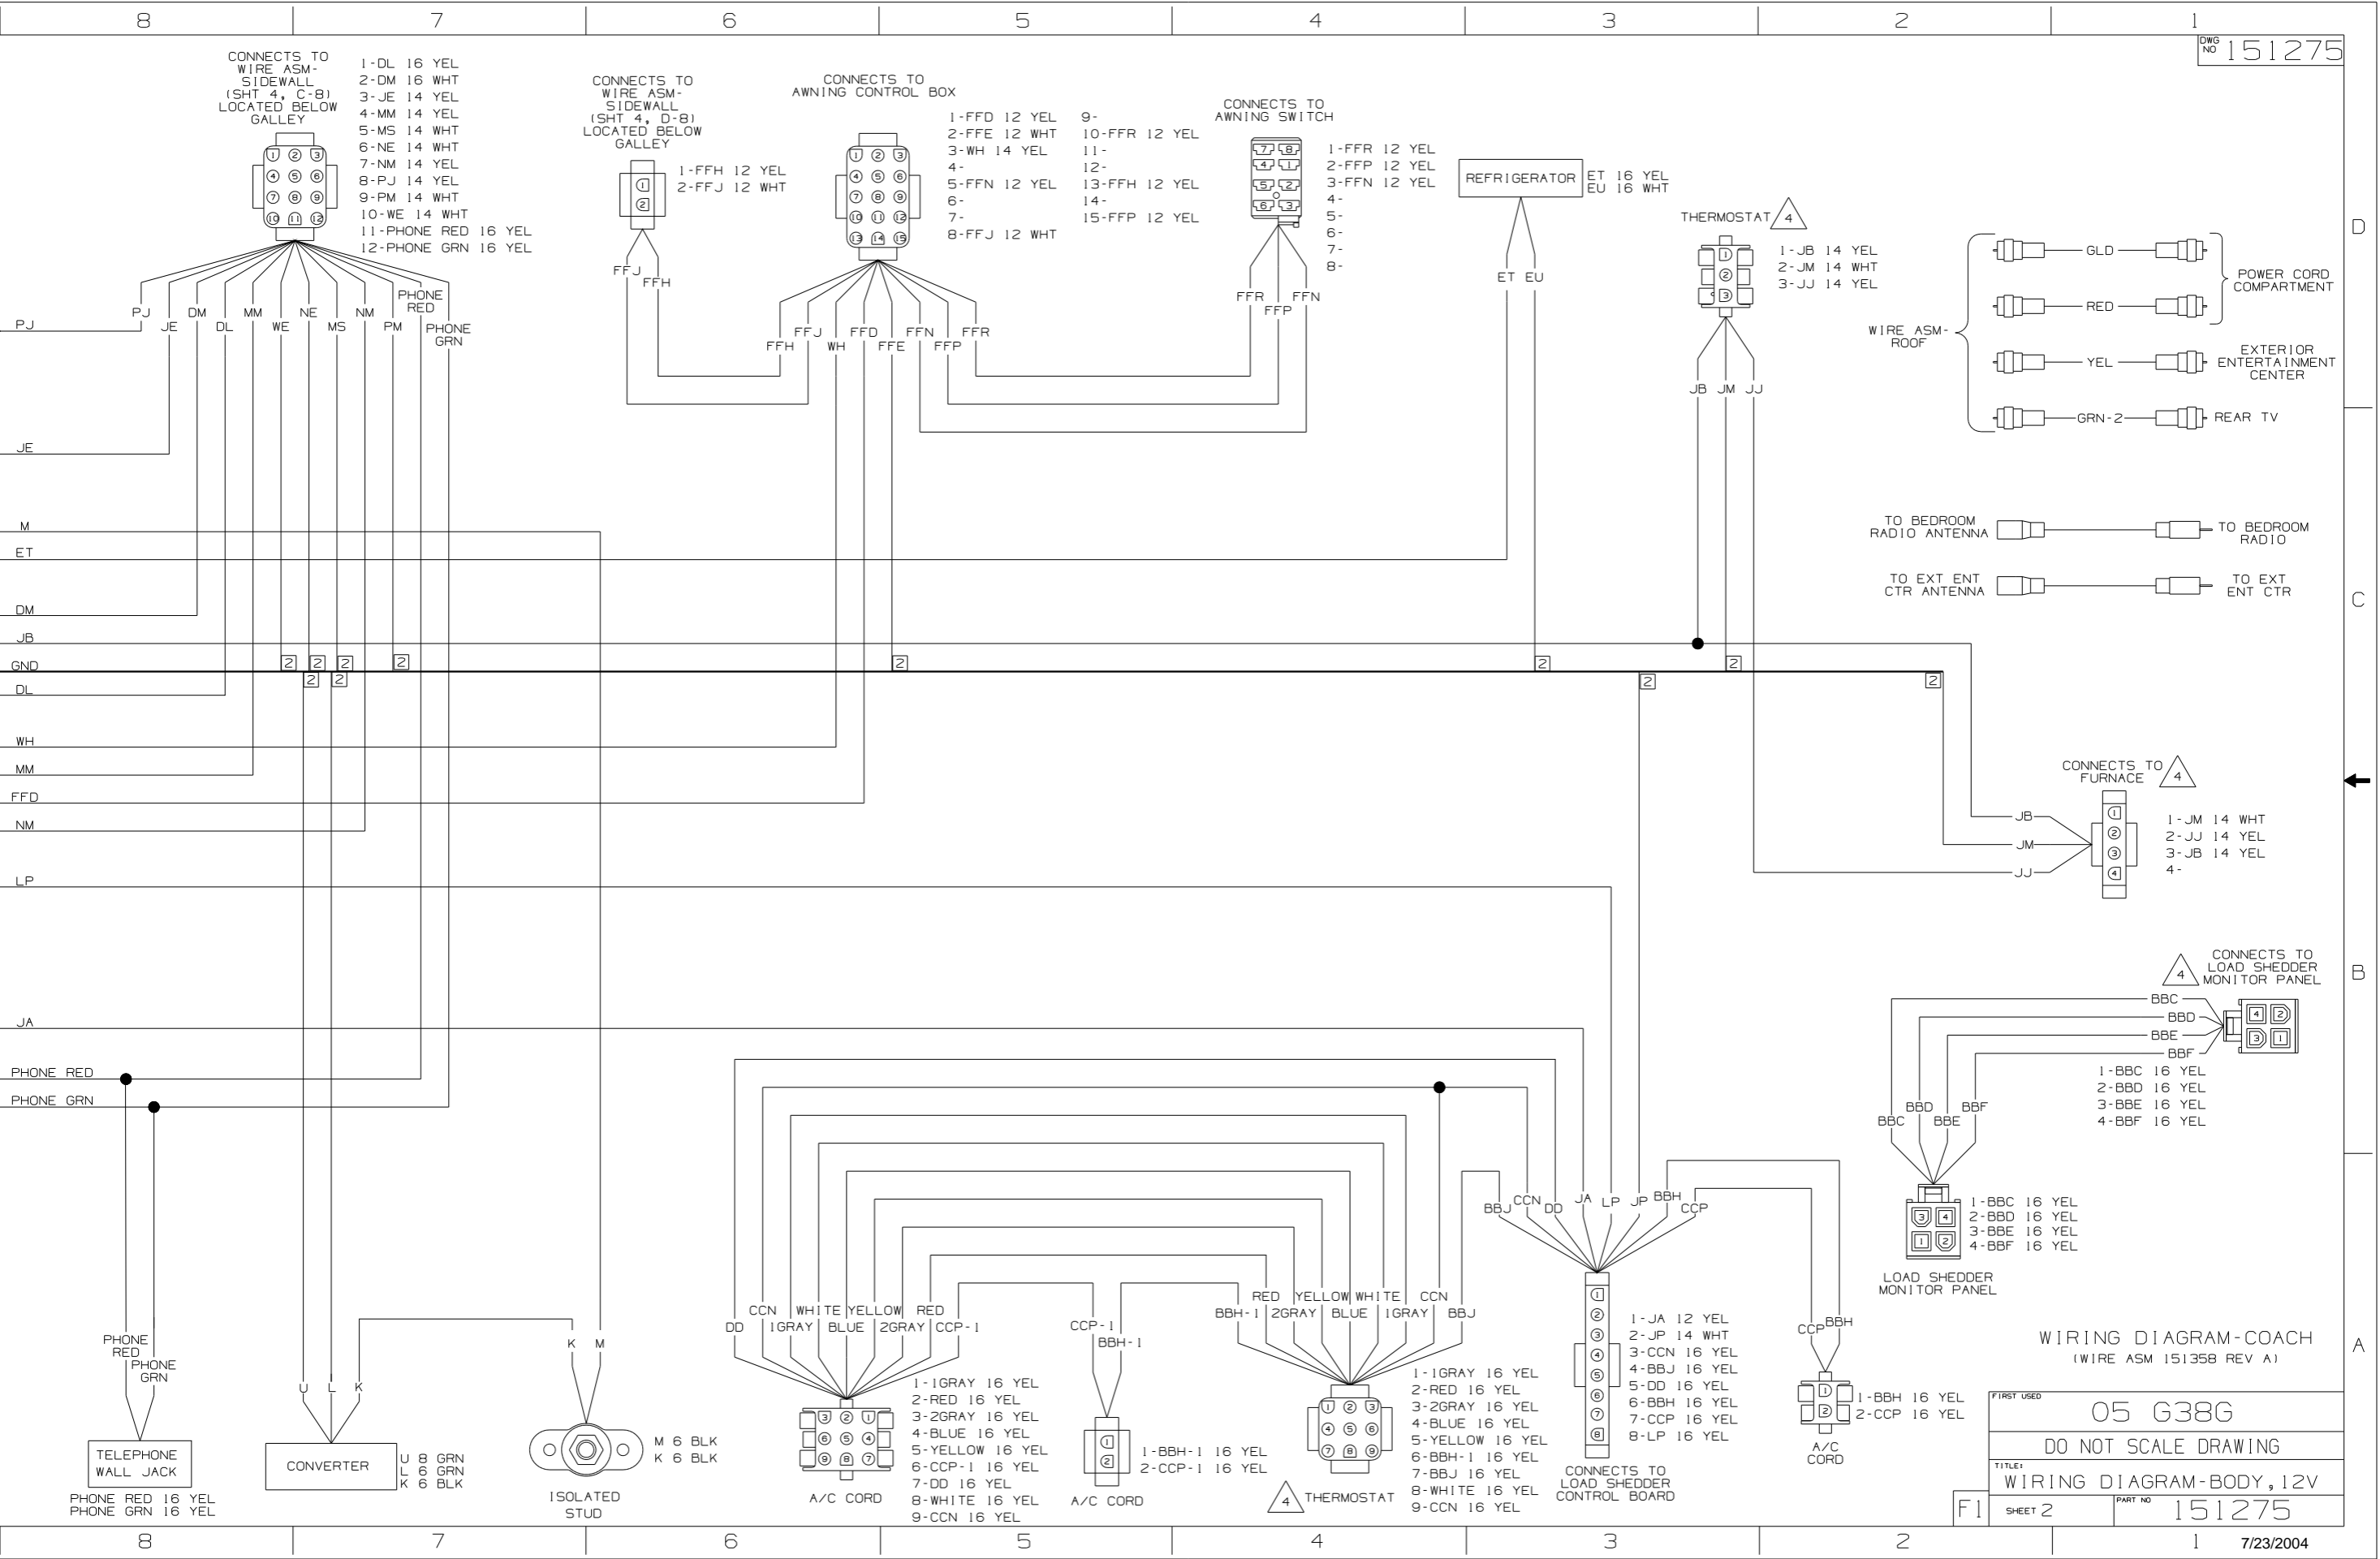

CONNECTS TO WIRE ASM-SIDEWALL (SHT 4, C-8) LOCATED BELOW GALLEY

- 1-DL 16 YEL
- 2-DM 16 WHT
- 3-JE 14 YEL
- 4-MM 14 YEL
- 5-MS 14 WHT
- 6-NE 14 WHT
- 7-NM 14 YEL
- 8-PJ 14 YEL
- 9-PM 14 WHT
- 10-WE 14 WHT
- 11-PHONE RED 16 YEL
- 12-PHONE GRN 16 YEL

CONNECTS TO WIRE ASM-SIDEWALL (SHT 4, D-8) LOCATED BELOW GALLEY

- 1-FFH 12 YEL
- 2-FFJ 12 WHT

CONNECTS TO AWNING CONTROL BOX

- 1-FFD 12 YEL
- 2-FFE 12 WHT
- 3-WH 14 YEL
- 4-
- 5-FFN 12 YEL
- 6-
- 7-FFJ 12 WHT
- 9-
- 10-FFR 12 YEL
- 11-
- 12-
- 13-FFH 12 YEL
- 14-
- 15-FFP 12 YEL

CONNECTS TO AWNING SWITCH

- 1-FFR 12 YEL
- 2-FFP 12 YEL
- 3-FFN 12 YEL
- 4-
- 5-
- 6-
- 7-
- 8-

REFRIGERATOR ET 16 YEL EU 16 WHT

THERMOSTAT 4

- 1-JB 14 YEL
- 2-JM 14 WHT
- 3-JJ 14 YEL

WIRE ASM-ROOF

- GLD
- RED
- YEL
- GRN-2

POWER CORD COMPARTMENT
EXTERIOR ENTERTAINMENT CENTER
REAR TV

TO BEDROOM RADIO ANTENNA
TO EXT ENT CTR ANTENNA

TO BEDROOM RADIO
TO EXT ENT CTR

CONNECTS TO FURNACE 4

- 1-JM 14 WHT
- 2-JJ 14 YEL
- 3-JB 14 YEL
- 4-


CONNECTS TO LOAD SHEDDER MONITOR PANEL

LOAD SHEDDER MONITOR PANEL


- 1-BBC 16 YEL
- 2-BBD 16 YEL
- 3-BBE 16 YEL
- 4-BBF 16 YEL

WIRING DIAGRAM-COACH (WIRE ASM 151358 REV A)


FIRST USED	05 G38G
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 2	PART NO 151275

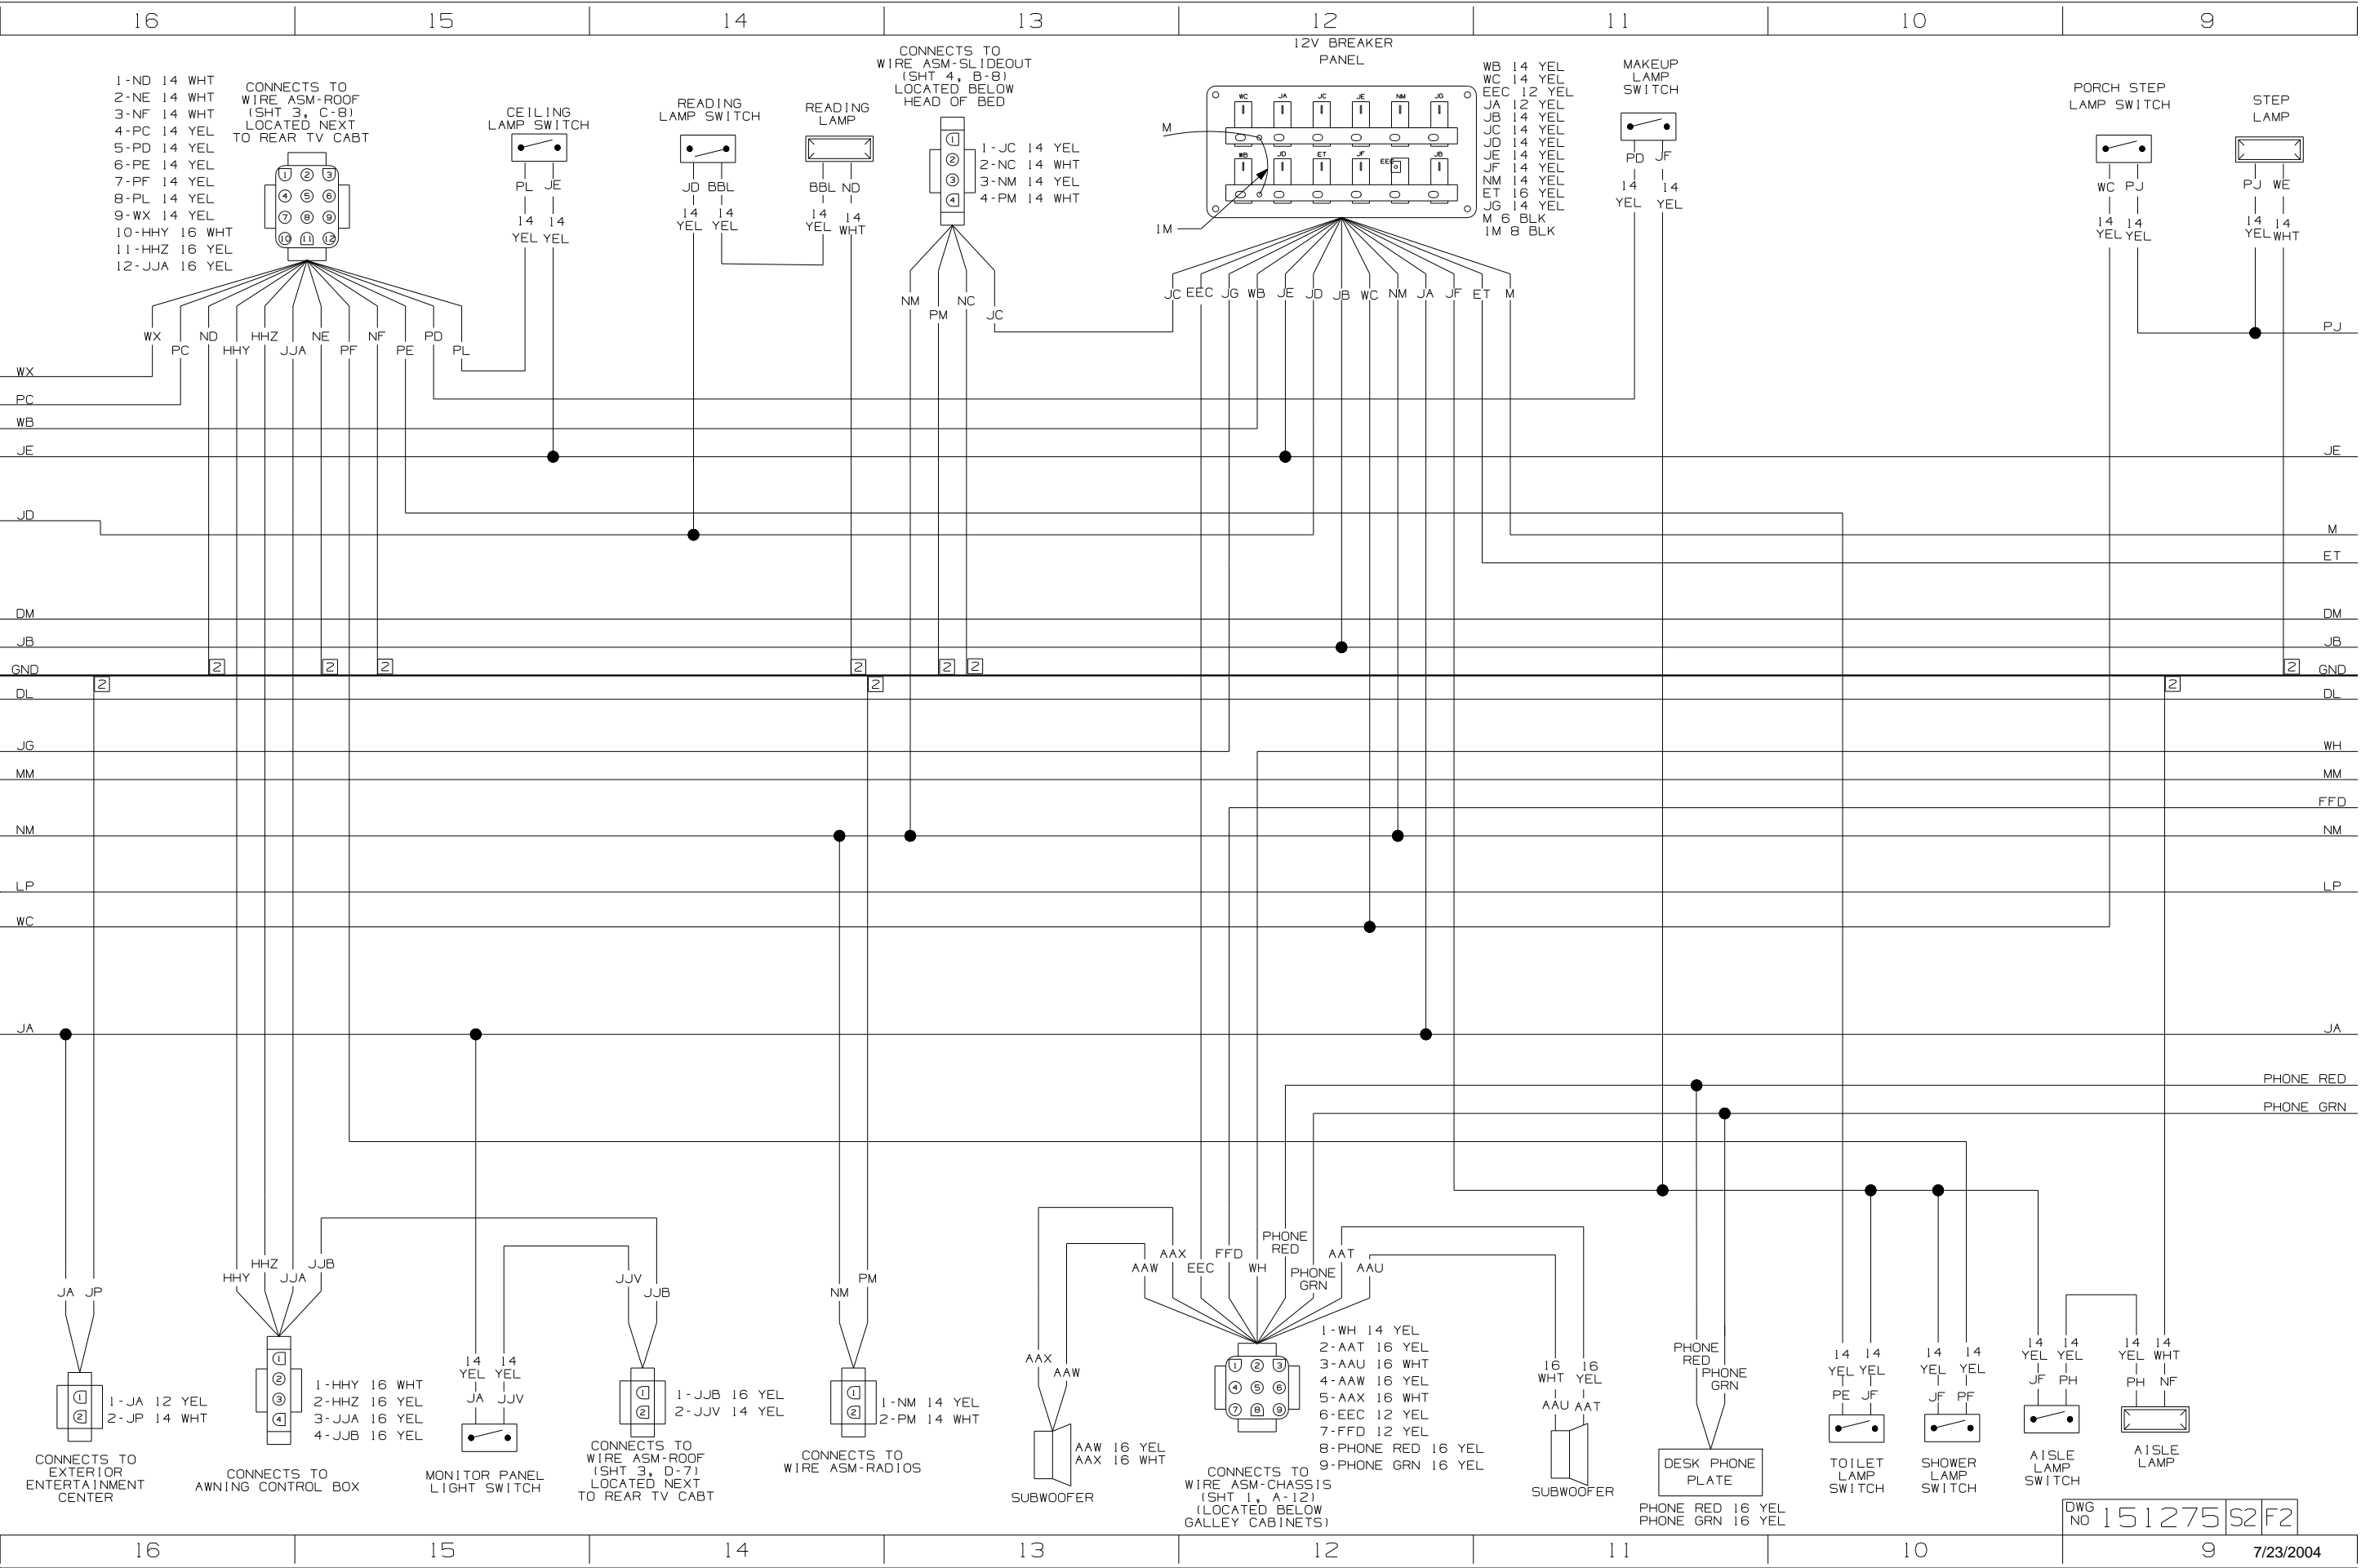


CONNECTS TO DRAINAGE COMP LAMP SWITCH

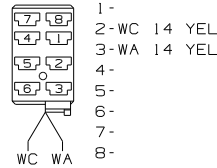


CONNECTS TO WIRE ASM-SIDEWALL (SHT 5, C-8) LOCATED BELOW LAVATORY SINK

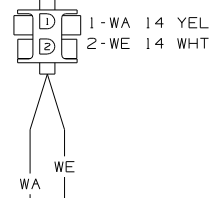


HALL LAMP SWITCH

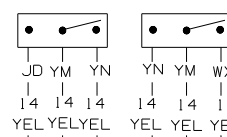


HALL LAMP SWITCH

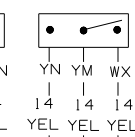


COMPARTMENT LAMP SWITCH

 


COMPARTMENT LAMP

 


GALLEY LAMP SWITCH

 








12V RECPTACLE

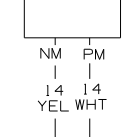


CONNECTS TO LP DETECTOR

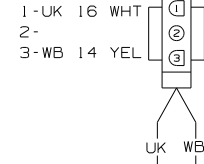


BEDROOM LAMP SWITCH

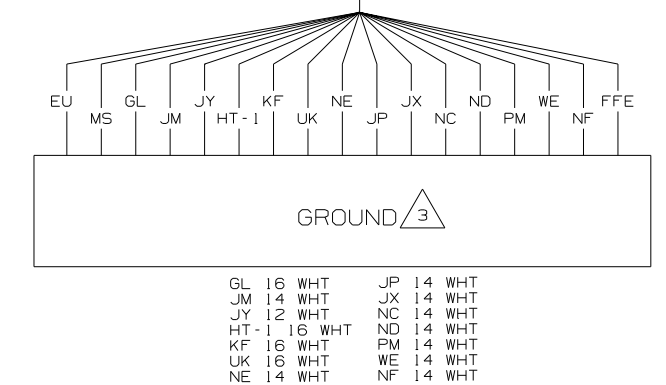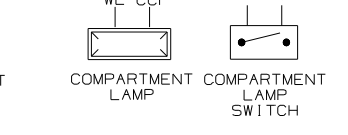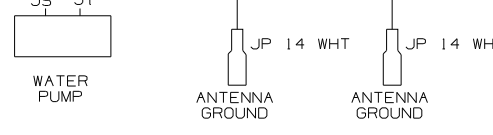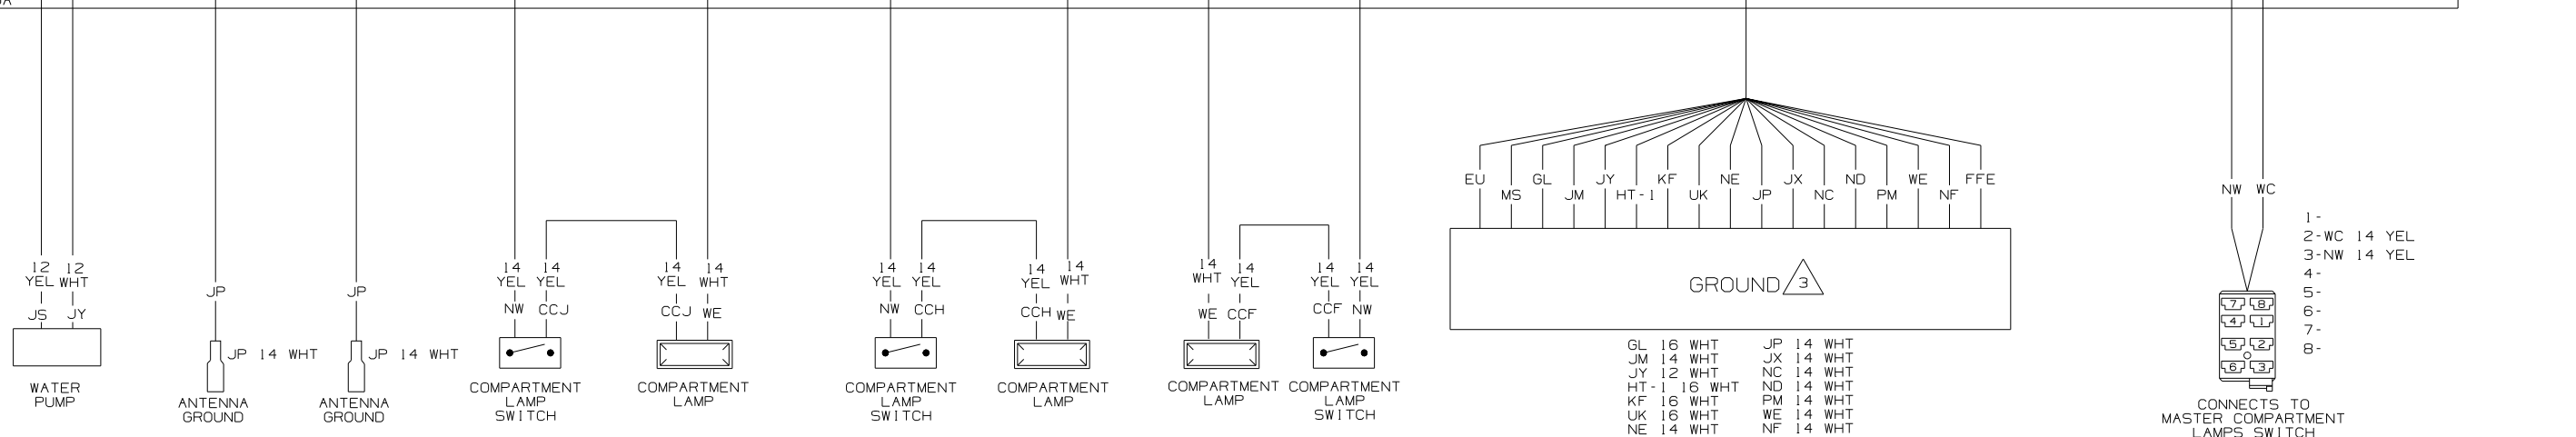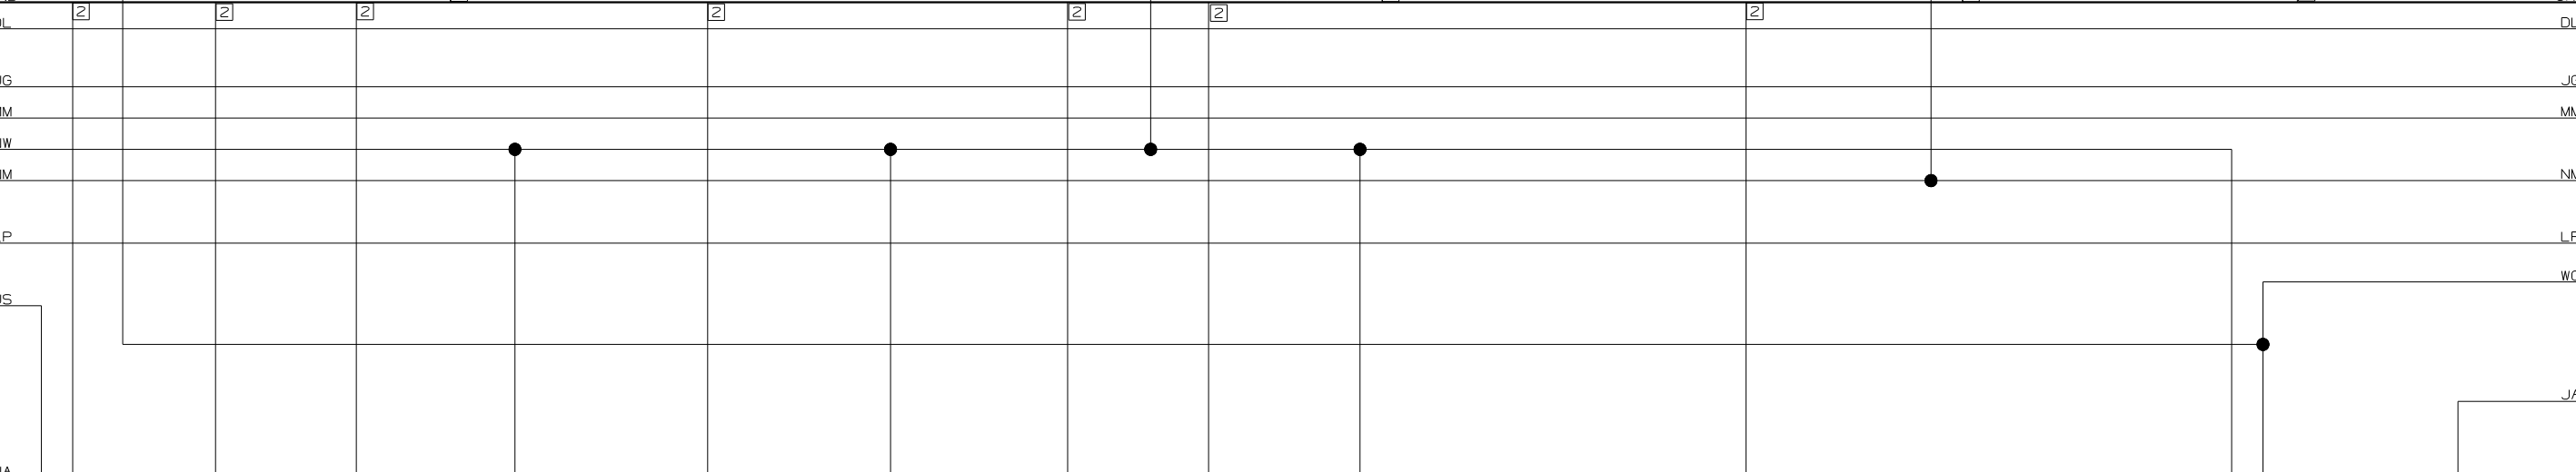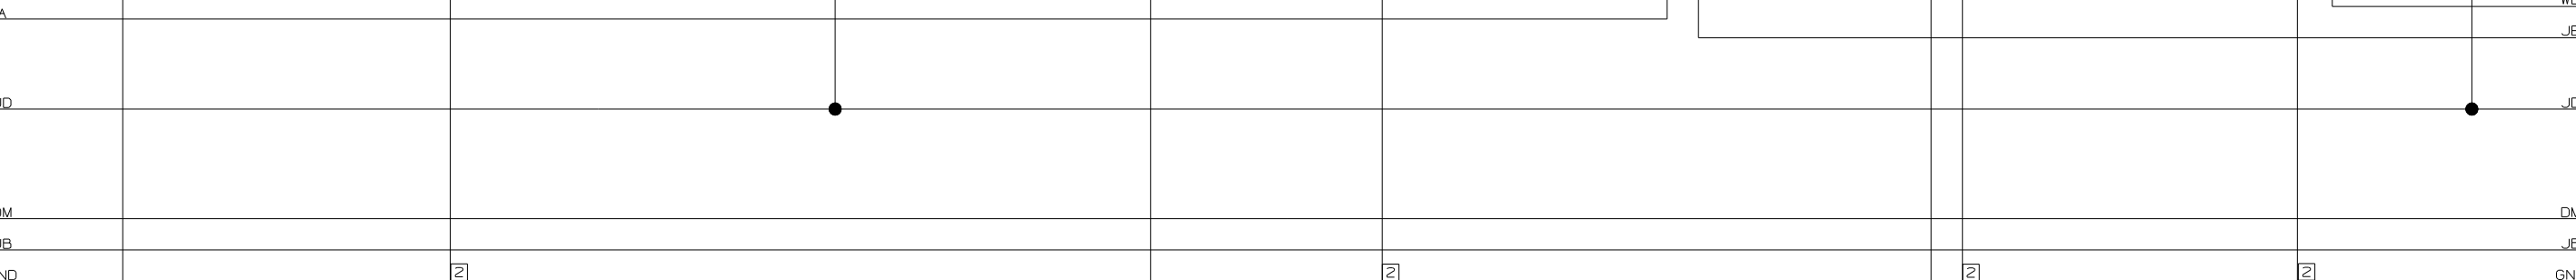 

- GL 16 WHT
- JM 14 WHT
- JY 12 WHT
- HT-1 16 WHT
- KF 16 WHT
- UK 16 WHT
- NE 14 WHT
- EU 16 WHT
- MS 14 WHT
- JP 14 WHT
- JX 14 WHT
- NC 14 WHT
- ND 14 WHT
- PM 14 WHT
- WE 14 WHT
- NF 14 WHT
- FFE 12 WHT
- U 8 G
- L 6 G

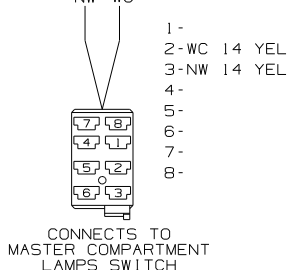

CONNECTS TO MASTER COMPARTMENT LAMPS SWITCH

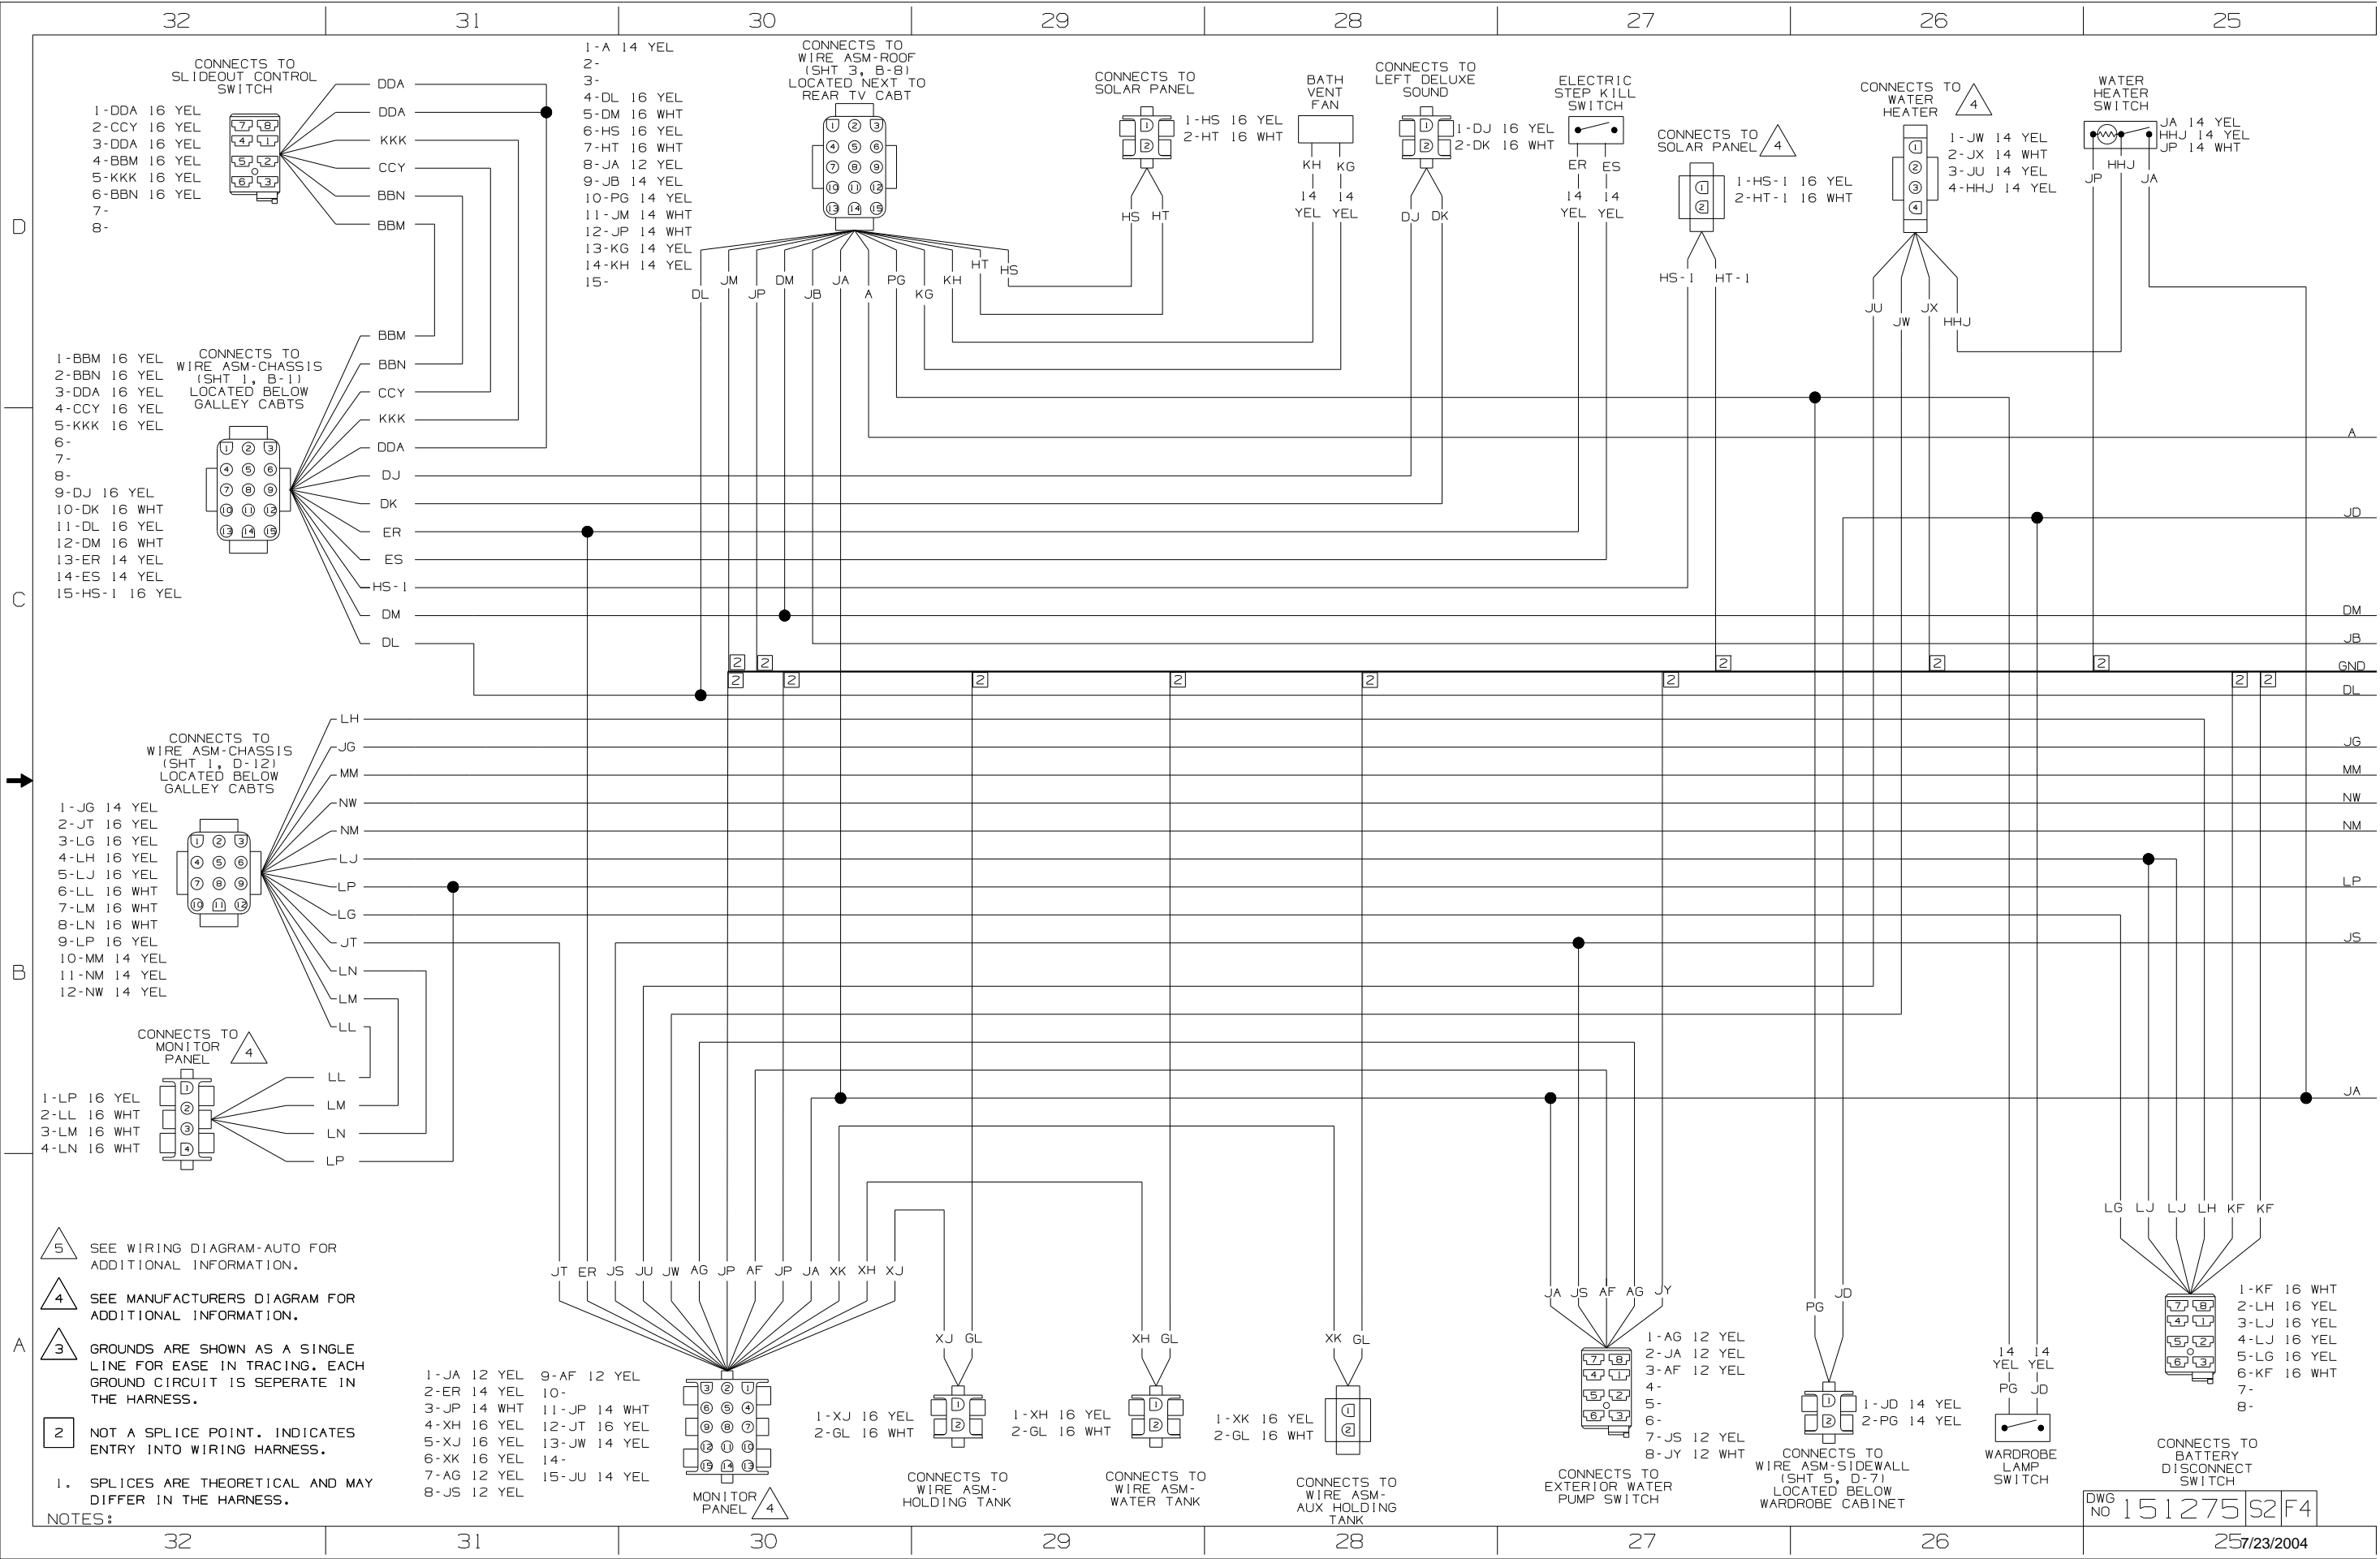


- 1-A 14 YEL
- 2-
- 3-
- 4-DL 16 YEL
- 5-DM 16 WHT
- 6-HS 16 YEL
- 7-HT 16 WHT
- 8-JA 12 YEL
- 9-JB 14 YEL
- 10-PG 14 YEL
- 11-JM 14 WHT
- 12-JP 14 WHT
- 13-KG 14 YEL
- 14-KH 14 YEL
- 15-

- 1-JA 12 YEL
- 2-ER 14 YEL
- 3-JP 14 WHT
- 4-XH 16 YEL
- 5-XJ 16 YEL
- 6-XK 16 YEL
- 7-AG 12 YEL
- 8-JS 12 YEL
- 9-AF 12 YEL
- 10-
- 11-JP 14 WHT
- 12-JT 16 YEL
- 13-JW 14 YEL
- 14-
- 15-JU 14 YEL

NOTES:

- 1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.






5 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.

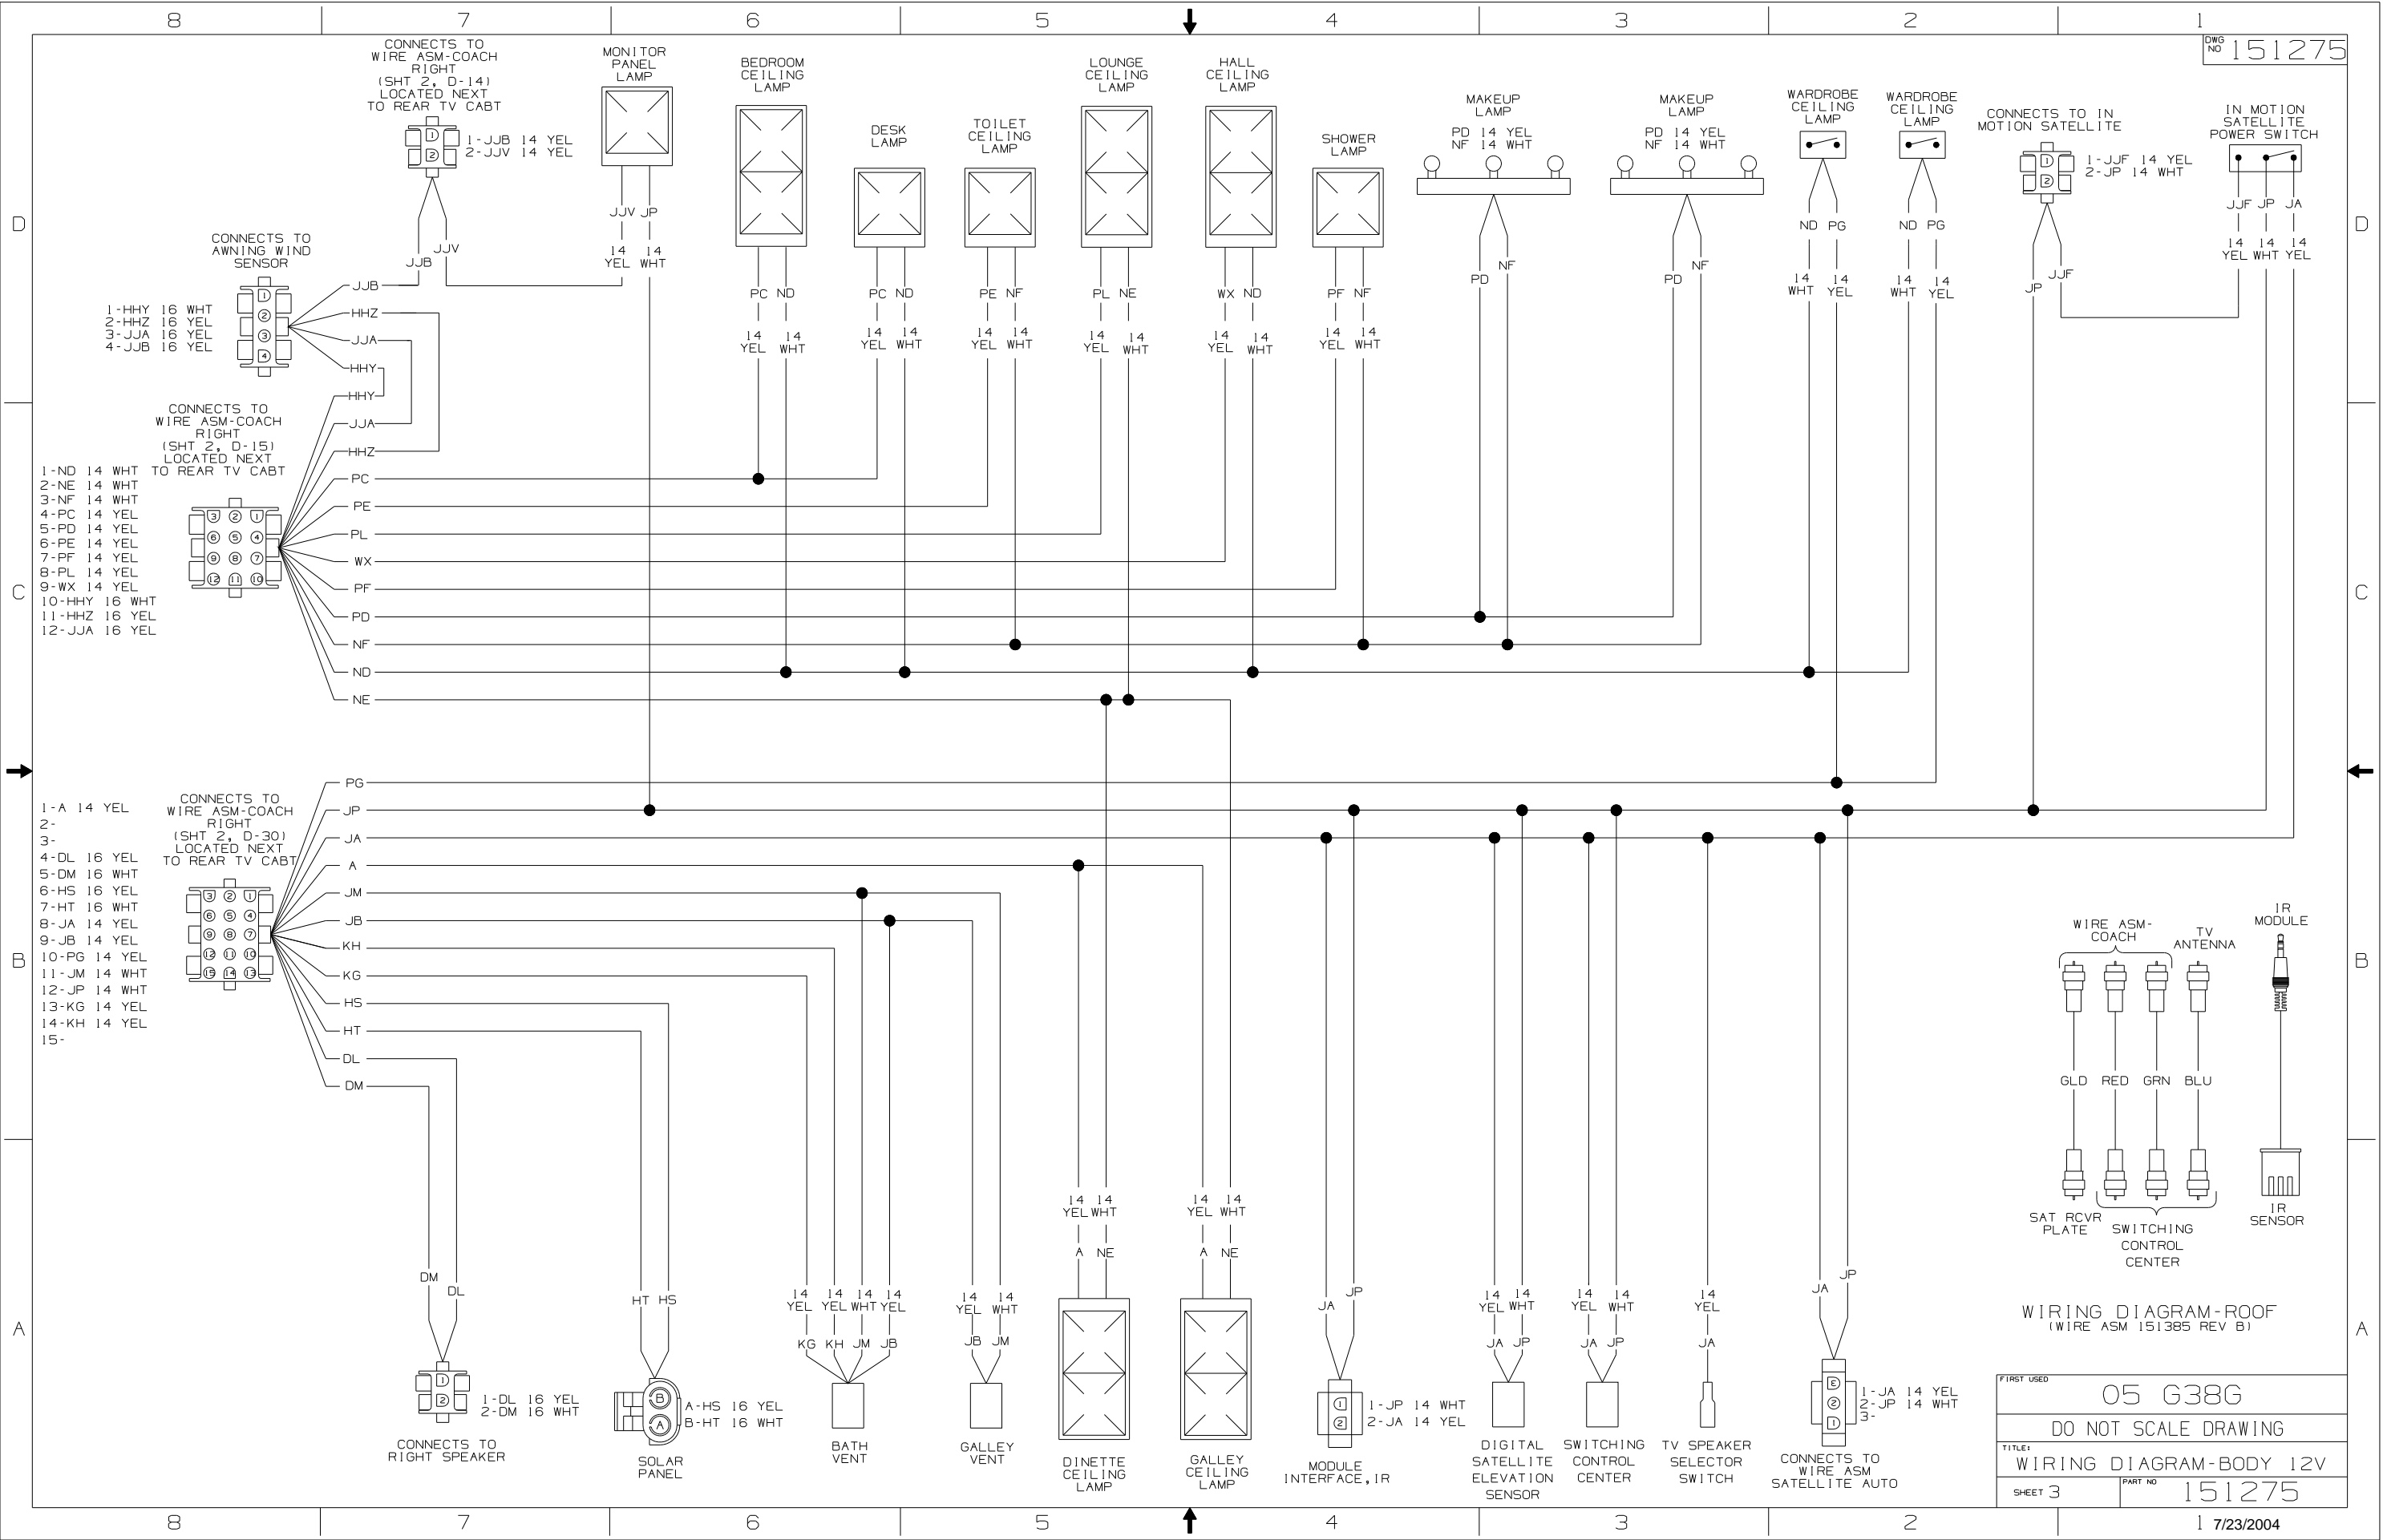


WIRING DIAGRAM-ROOF
(WIRE ASM 151385 REV B)

FIRST USED	05 G38G
TITLE	DO NOT SCALE DRAWING
WIRING DIAGRAM-BODY 12V	
SHEET 3	PART NO 151275


1 7/23/2004

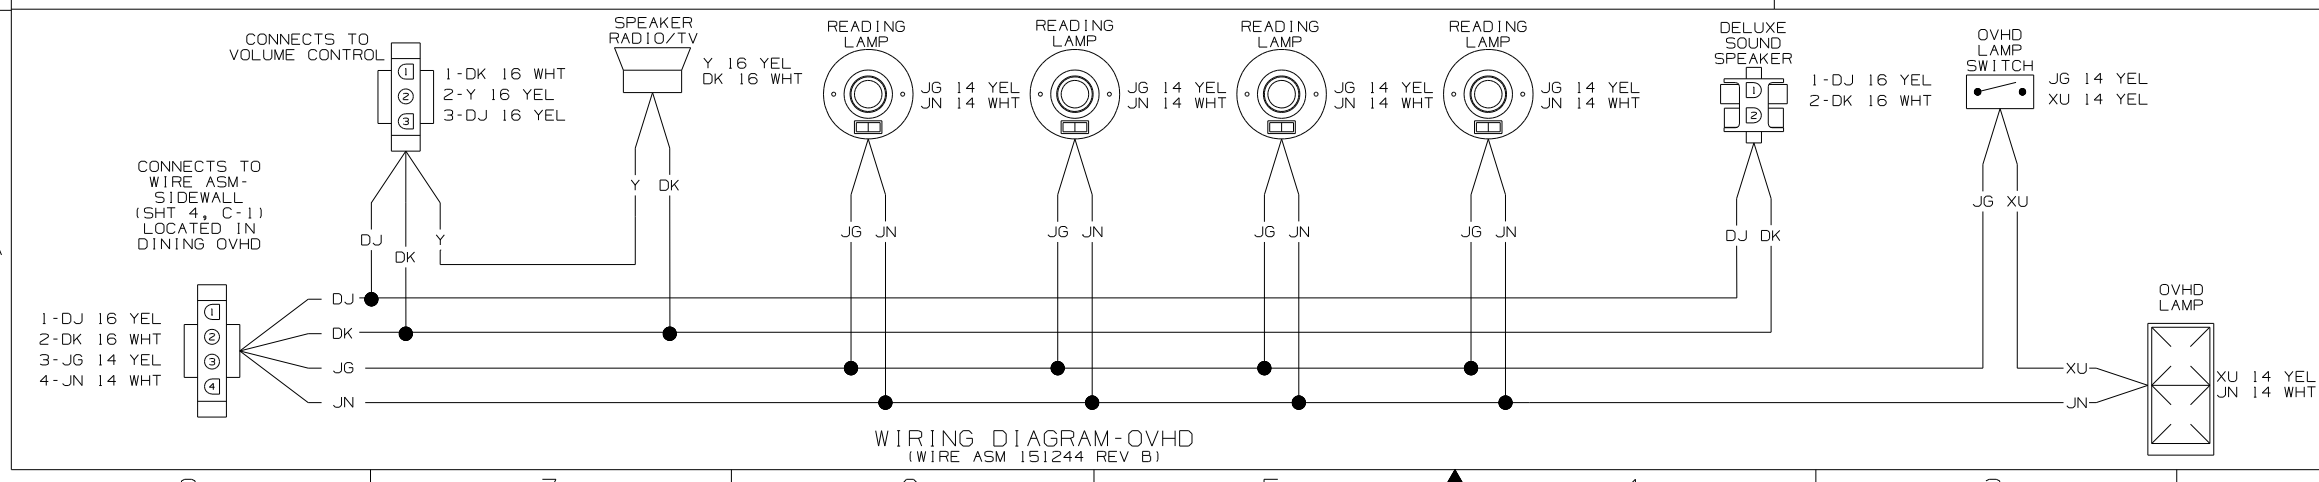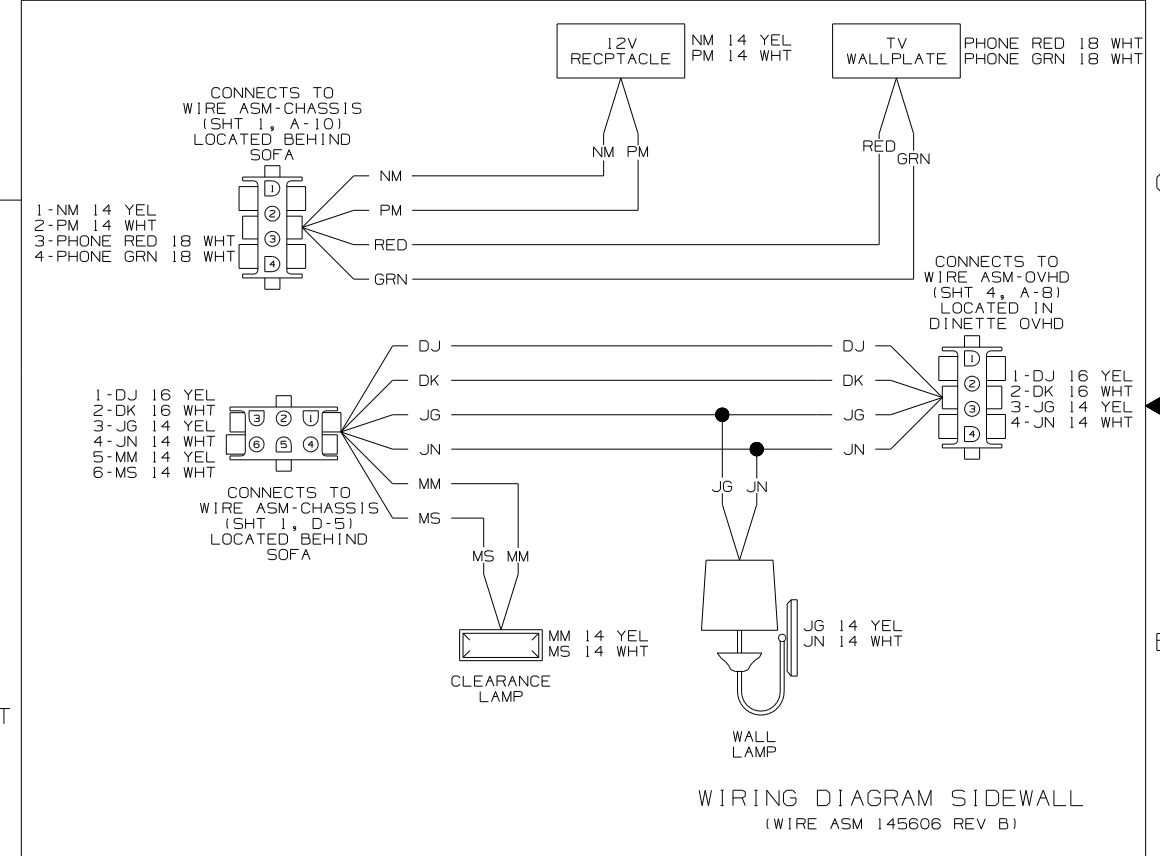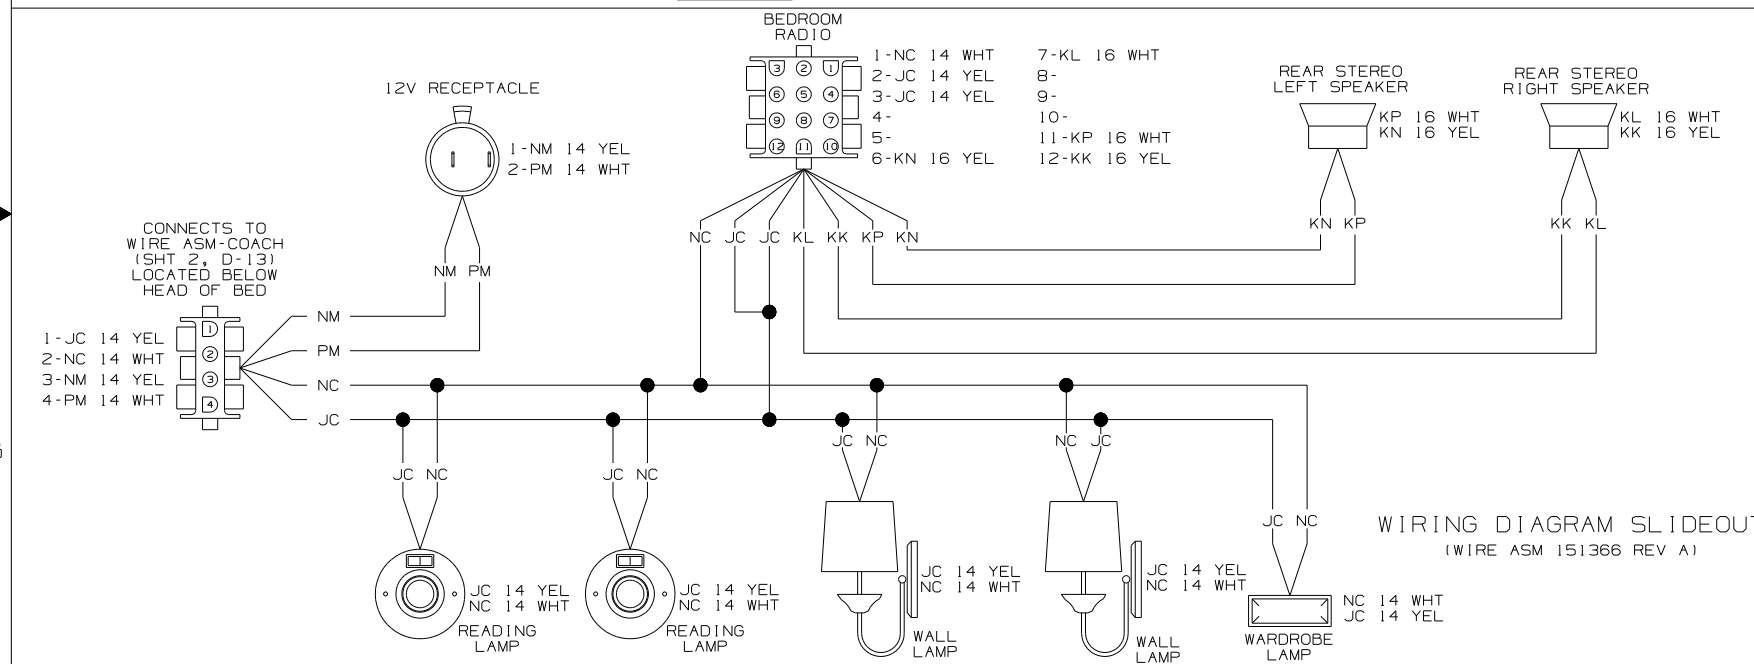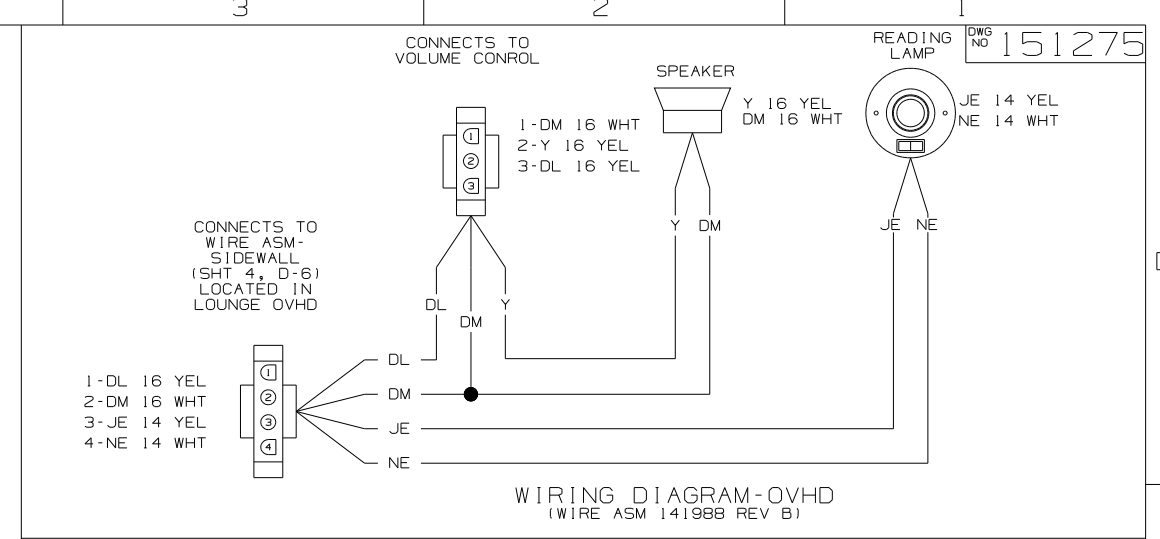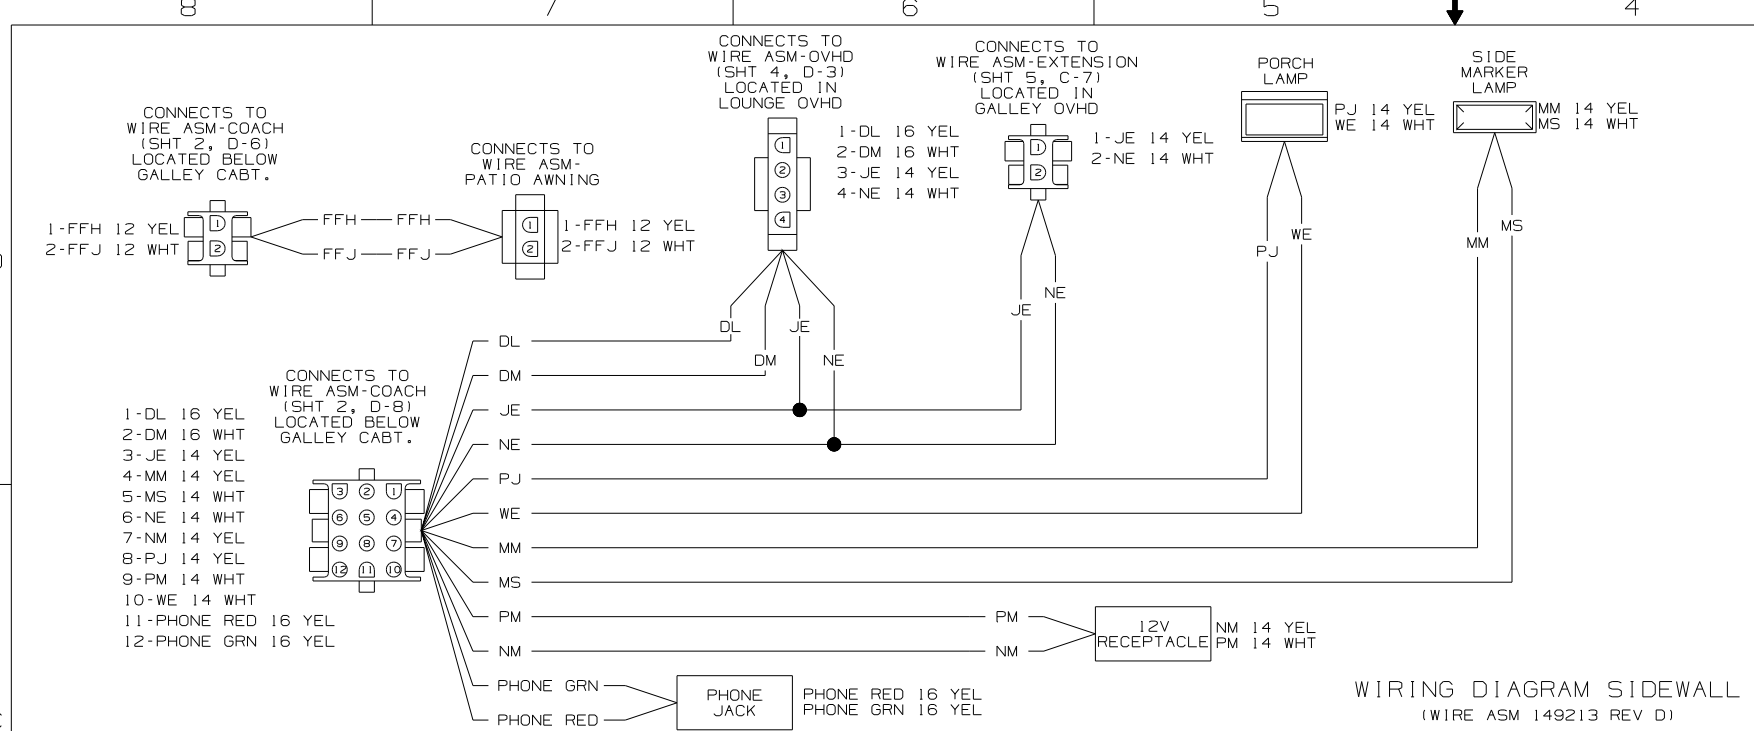


FIRST USED	05 G38G
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 4	PART NO 151275

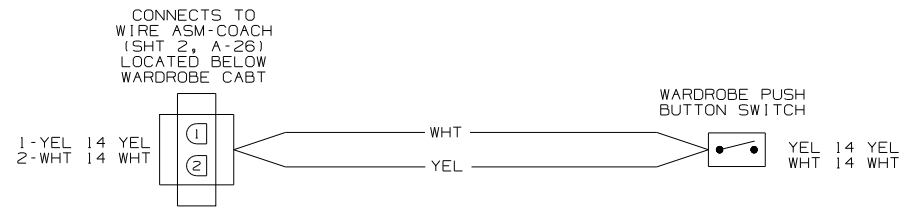


WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 133572-03 REV F)

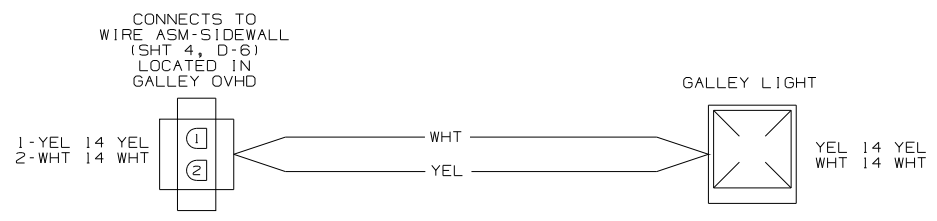

WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 133572-01 REV F)



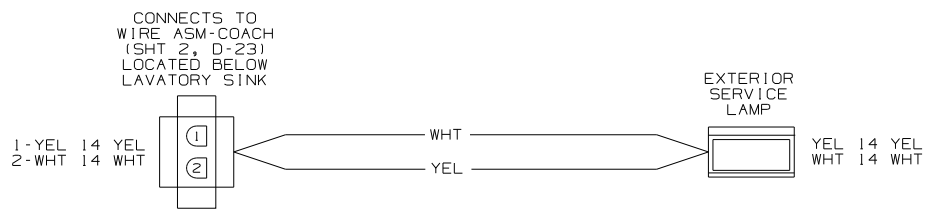


WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 133572-01 REV F)

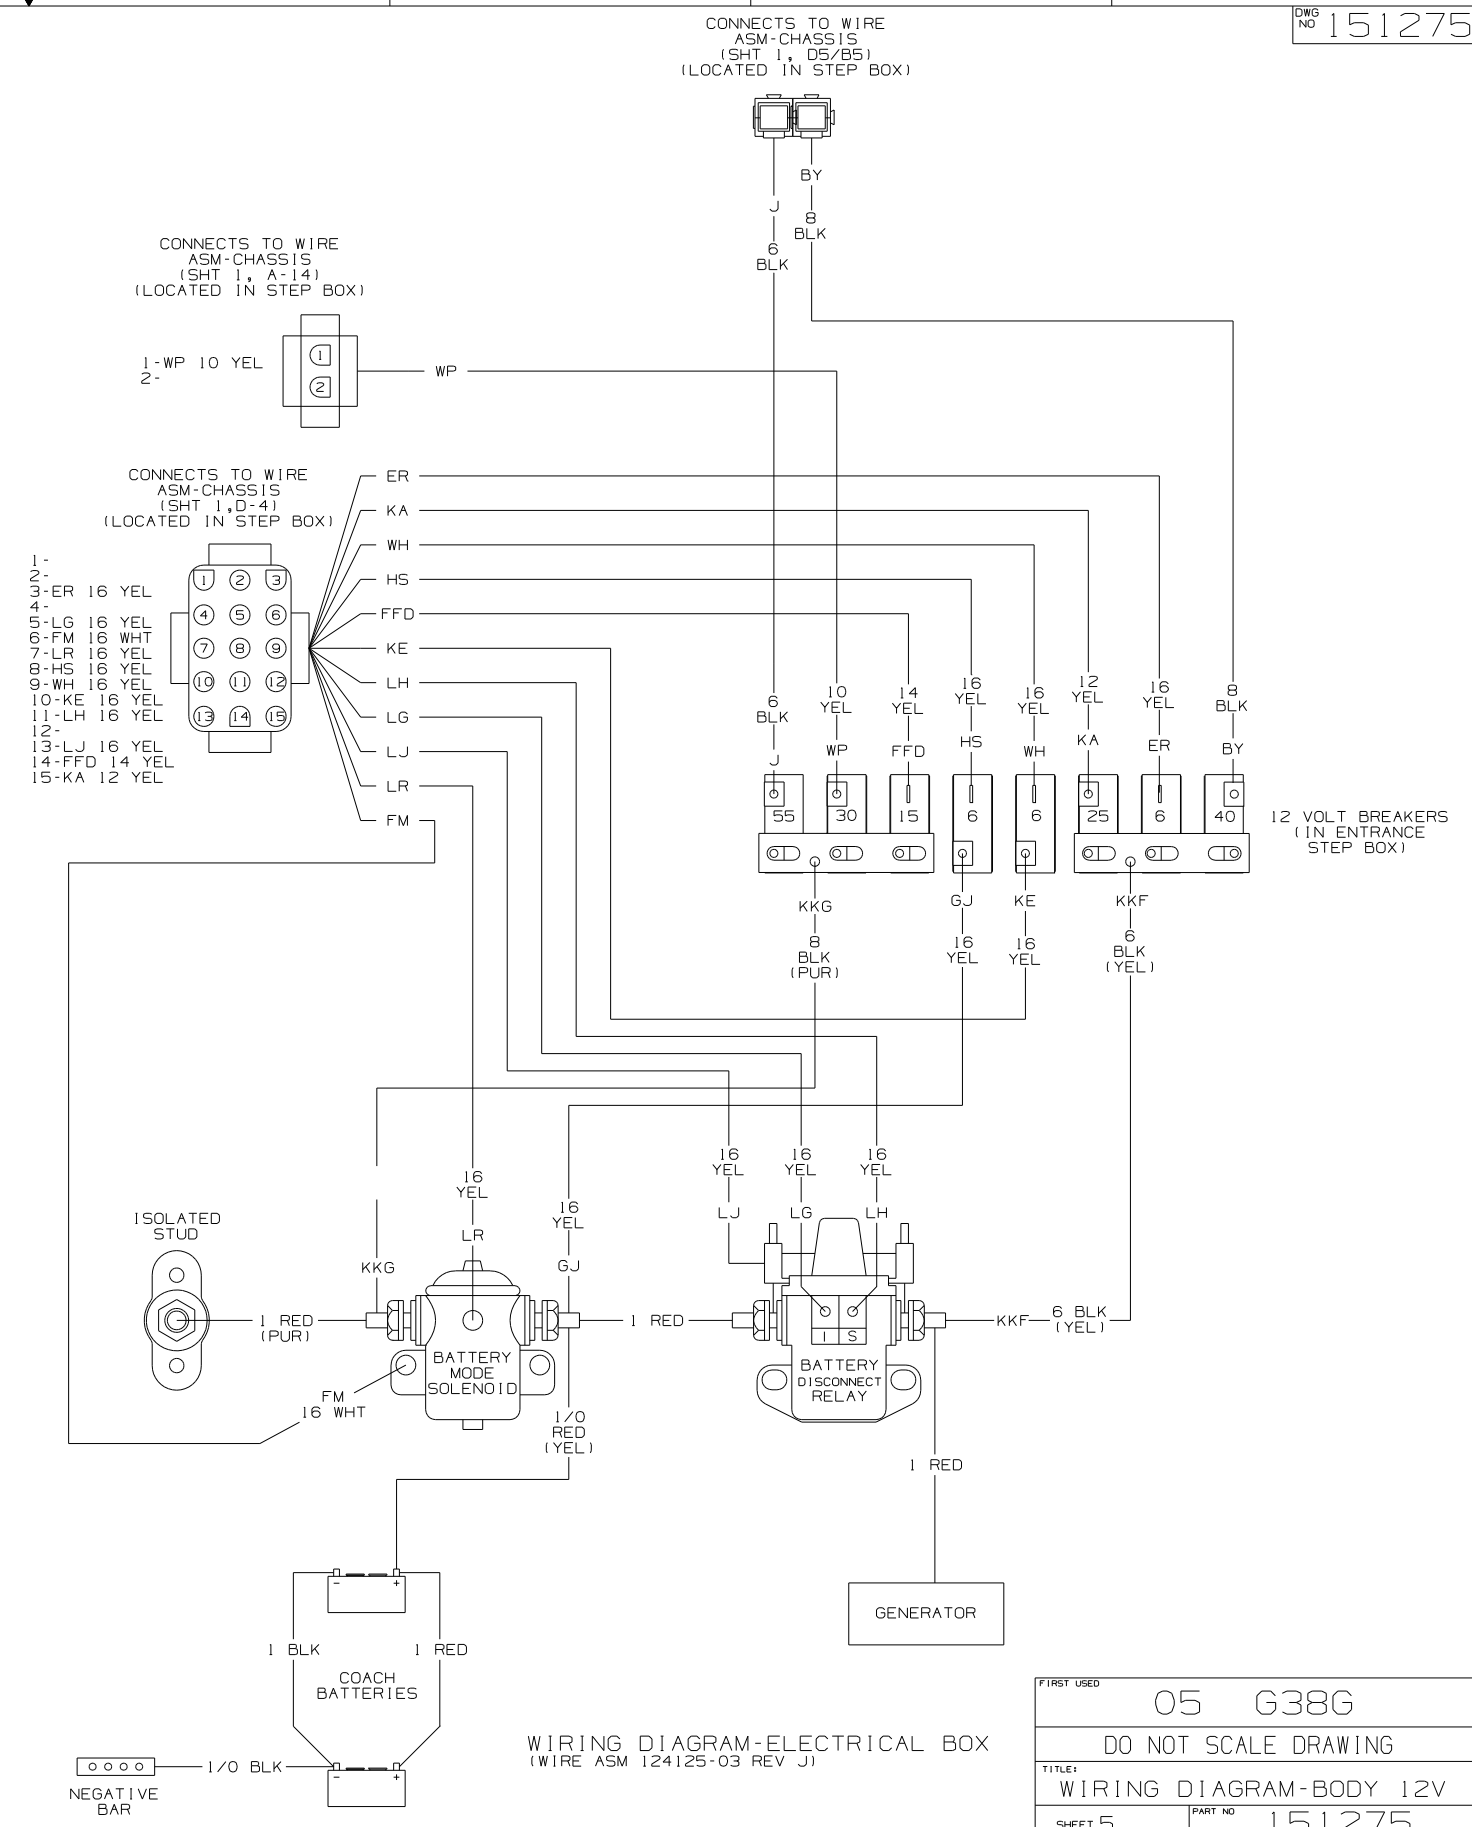

DWG NO 151275

FIRST USED	05 G38G
TITLE	DO NOT SCALE DRAWING
	WIRING DIAGRAM-BODY 12V
SHEET 5	PART NO 151275

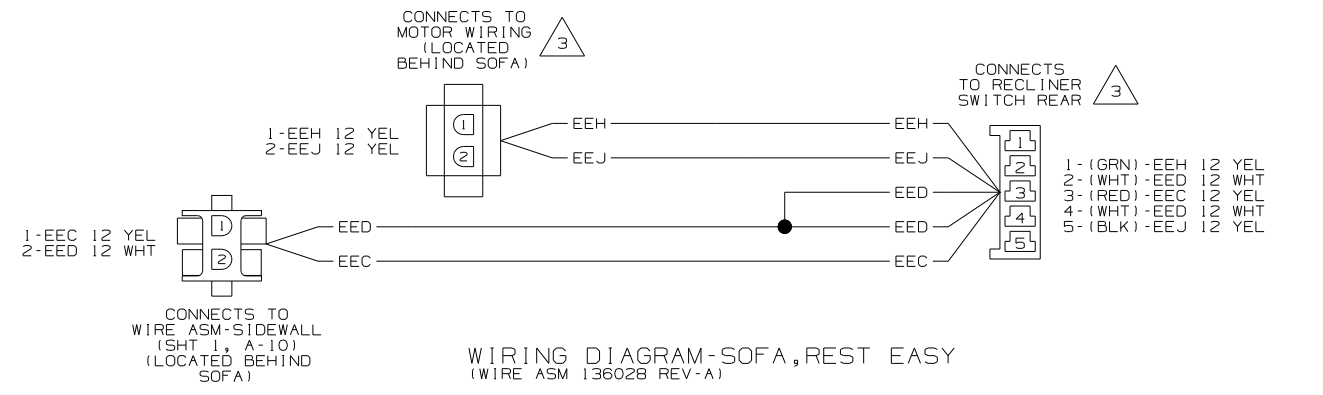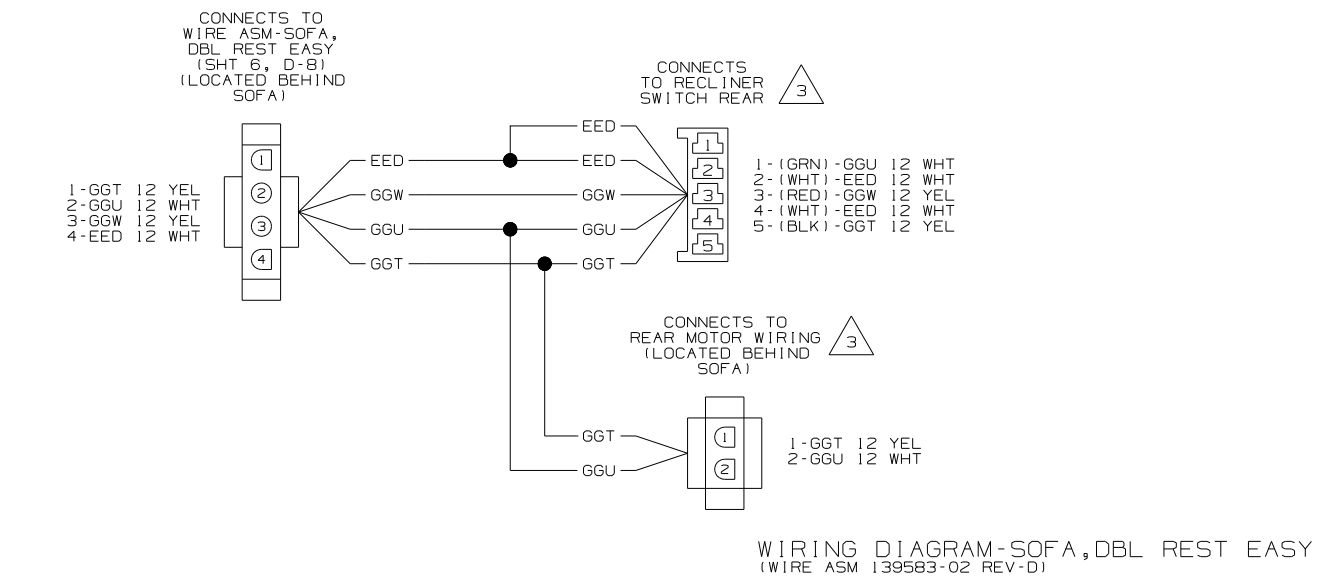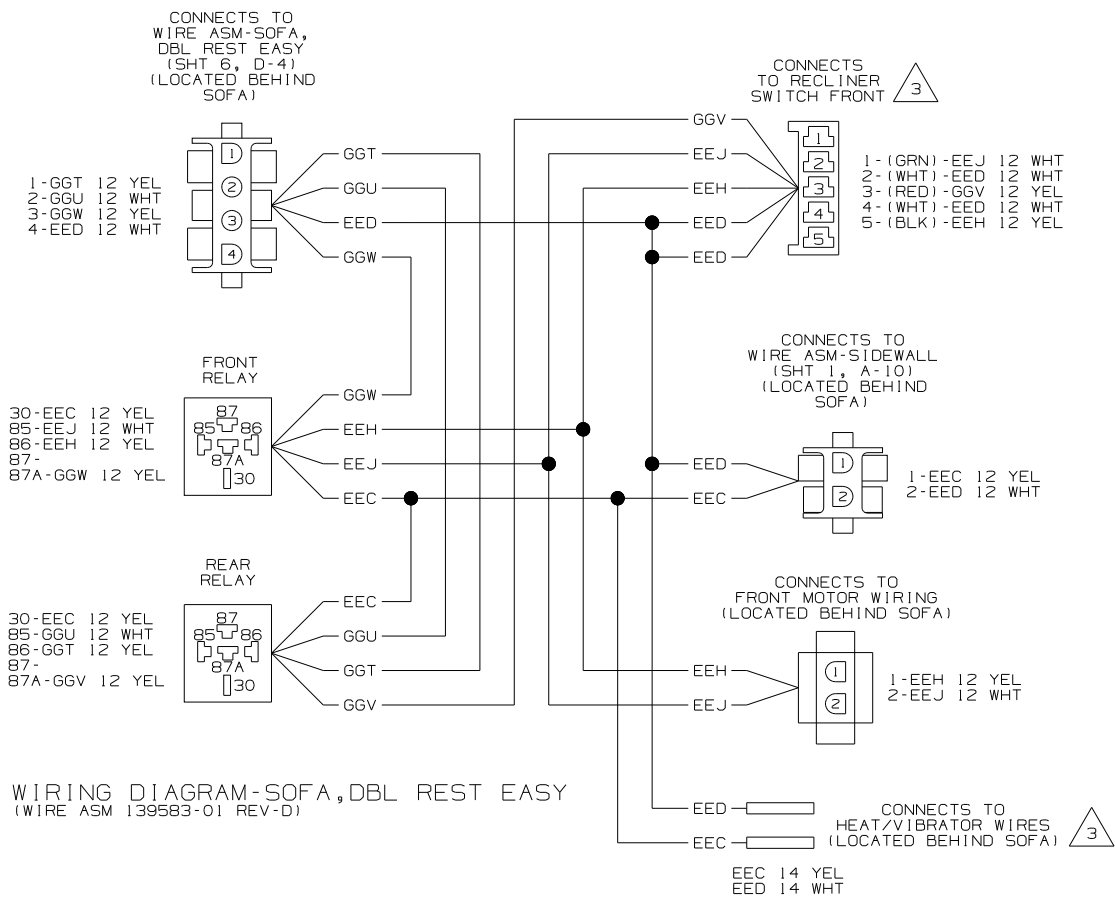

- 3 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
- 2 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

NOTES:

FIRST USED	05 G38G
DO NOT SCALE DRAWING	
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 6	PART NO 151275